

## Setting time in a ProMark2 receiver

7 March 2007

Beginning in 2007, Daylight Saving Time in the United States and Canada will begin on the second Sunday in March and end on the first Sunday in November. ProMark2 receiver firmware does not automatically support this change. Therefore customers in the US and Canada, as well as any other country that will change from the old Daylight Saving Time start/end dates, should set the correct time manually. The following instructions tell how to do this in the ProMark2 receiver.

1. Turn the receiver on and press the **ENTER** button
2. Highlight **Navigation** on the **Mode** screen and press **ENTER**
3. Press **ENTER** to accept the agreement screen
4. Press **MENU**, highlight the **Setup** option and press **ENTER**
5. Scroll down to the **Time Format** option and press **ENTER**
6. On the **Time Format** screen, you have the option to use UTC time which never varies. To set local time, highlight either the **24 Hrs** format or the **AM/PM** format and press **ENTER**
7. Press **ENTER** to highlight the first digit in the time window. Use the up/down arrow cursor to increment/decrement this number. Then press the right arrow cursor to move to the next digit. When you have set the correct time, press **ENTER**
8. This highlights the **Done** button. Press **ENTER** to save your changes and return to the **Setup** menu
9. Press **ESC** to exit the **Setup** menu