

# Z-Xtreme Quick Reference

## Main Menu

SysInfo

Survey:mode

SurvConf

Session

Settings

### Sub Menus

Rcvr Version  
VER:\*\*\*\*

Rcvr S/N  
S/N:\*\*\*\*\*

Options:\*\*\*\*

BAT:\*\*min

MEM:\*\*\*%

Survey: *STATIC*  
SITE:\*\*\*\*  
ANT HT:\*\*.\*\*\*\*\*m  
STATUS

Survey: *KINEMATIC*  
SITE:\*\*\*\*  
ANT HT:\*\*.\*\*\*\*\*m  
STATUS

Survey: *RTK BASE*  
SITE:\*\*\*\*  
ANT HT:\*\*.\*\*\*\*\*m  
ANT RAD:\*.\*\*\*\*\*\*m  
BASE POS  
STATUS

Survey: *STATIC*  
REC INT:\*\*\*.S  
ELEV MASK\*\*°  
MODE:\*\*\*\*\*

Survey: *KINEMATIC*  
EPOCH COUNTER:\*\*\*  
MIN SV:\*  
REC INT:\*\*\*.S  
ELEV MASK\*\*°  
MODE:\*\*\*\*\*

Survey: *RTK BASE*  
PORT/TYPE  
REC INT:\*\*\*.S  
ELEV MASK\*\*°  
MODE:\*\*\*\*\*

Stop  
Session

Start  
Session

List  
Session

New  
Session

Delete  
All

Memory  
Reset

Baud  
Rate

Language:\*\*\*\*

Beep: On

Save

## Button Interface

| Mode    | Function                 | Press   |
|---------|--------------------------|---------|
| Display | Scroll Through Menu      | ↑ 1 sec |
|         | Return to Upper Menu     | ↑ 3 sec |
|         | Set Display in Edit Mode | ↓ 1 sec |
|         | Move to Lower Menu       | ↓ 3 sec |

| Mode | Function                 | Press   |
|------|--------------------------|---------|
| Edit | Scroll Through Menu      | ↑ 1 sec |
|      | Fast Scroll Through Menu | ↑ 3 sec |
|      | Accept Changes           | ↓ 1 sec |
|      | Cancel Changes           | ↓ 3 sec |