

Z-Xtreme Quick Reference

Main Menu

SysInfo

Survey:mode

SurvConf

Session

Settings

Sub Menus

Rcvr Version
VER:****

Rcvr S/N
S/N:****

Options:****

BAT:**min

MEM:***%

Survey: *STATIC*
SITE:****
ANT HT:**.****m
STATUS

Survey: *KINEMATIC*
SITE:****
ANT HT:**.****m
STATUS

Survey: *RTK BASE*
SITE:****
ANT HT:**.****m
ANT RAD:**.****m
BASE POS
STATUS

Survey: *STATIC*
REC INT:***.S
ELEV MASK***°
MODE:*****

Survey: *KINEMATIC*
EPOCH COUNTER:***
MIN SV:*
REC INT:***.S
ELEV MASK***°
MODE:*****

Survey: *RTK BASE*
PORT/TYPE
REC INT:***.S
ELEV MASK***°
MODE:*****

Stop
Session

Start
Session

List
Session

New
Session

Delete
All

Memory
Reset

Baud
Rate

Language:****

Beep: On

Save

Button Interface

Mode	Function	Press
Display	Scroll Through Menu	↑ 1 sec
	Return to Upper Menu	↑ 3 sec
	Set Display in Edit Mode	↓ 1 sec
	Move to Lower Menu	↓ 3 sec

Mode	Function	Press
Edit	Scroll Through Menu	↑ 1 sec
	Fast Scroll Through Menu	↑ 3 sec
	Accept Changes	↓ 1 sec
	Cancel Changes	↓ 3 sec