## THALES

## MobileMapper

MobileMapper Office Tech Note: Importing/Exporting ESRI PRJ Files

To ensure that a job exported from MobileMapper Office will be imported seamlessly into your ArcGIS software application (ArcView, ArcMap, ArcPad, etc.), you should export the MobileMapper job using the same .prj definitions used by your GIS. To do this, please follow these simple steps:

1. Click the **Options** tab in MobileMapper Office and select the **Browse Coordinate System** option.

MobileMapper •	Office - OCT09A*	
File View Tools	Options Help	
🗅 🖻 🖬 🙆 🖄	Select Coordinate System	
	<u>B</u> rowse Coordinate Systems	
	Units V	
	GPS Position Display Filter	
	GPS Se <u>t</u> tings	
	✓ Show <u>G</u> rid	
	🔽 Show <u>S</u> cale Interval	
	🔽 Show Quick Info	
	Show Eeatures Labels	
	Show Waypoint Labels	
	Show Feature Points	

2. Click the **Import** icon.

Coordinate Systems	<u> </u>
1 🕞 WGS 84	M SAIK /
t⊈ <local></local>	t Impor
LeUTM/WGS 84/UTM zone 13S	t <mark>™</mark> ≩USA
LNc UTM/WGS 84/UTM zone 19S	t <mark>ľ</mark> ≩USA
LNc UTM/WGS 84/UTM zone 15N	t≌≩USA
LeUTM/WGS 84/UTM zone 12N	t <sup>™</sup> ≩USA
L™⊊ USA/NAD83/North Carolina	t <mark>n</mark> ≩ Colo
LIE UTM/WGS 84/UTM zone 10N	t <sup>™</sup> ≩UTM
t_̃isWGS84-EGM96-meters	t <sup>™</sup> ≩USA
CANADA/NAD83/UTM zone 11N	t <sup>™</sup> ≩USA
Le USA/NAD83/Ohio (North)	L <sup>N</sup> ≩DEN
EUSA/NAD83/New York (Central)	t <sup>™</sup> ⊊ Gau:
LN € USA/NAD83/Puerto Rico and Virgin Islands	L <sup>™</sup> ≩USA
JAPAN/JGD2000/Japan Plane Rectangular CS I	t <sup>™</sup> ≩ Born
AUSTRALIA/AGD84/AMG zone 52	L USA
•	Þ

3. Select ESRI Projections Definition Files (\*.prj) in Files of Type.

🎯 Coordir	nate Systems			×
Import		Ver I	<u>?</u>	×
Look in: 🔂	Europe 💌 🗲	£	➡ 🎟 🕇	
				I
				I
		_		
File name:			Open	] ]
Files of type:	CSL Files (.csl)	•	Cancel	
•	ESE Projections Definition Files (*.prj) All Files (*.*)		•	

- 4. Then browse to a directory on your PC containing the prj files used by your ESRI software, e.g.: C:\Program Files\ArcPad \Coordinate Systems.
- 5. Select the desired coordinate system's prj and click **Open**.

6. Exit the **Browse Coordinate Systems** dialog box and click **Options**>**Select Coordinate Systems.** 

MobileMapper Office - OCT09A*					
File View Tools	Options Help				
🗅 🗃 🖬 🔕 🔔	Select Coordinate Syste <u>m</u> . 🚬				
	Browse Coordinate Systems				
	<u>U</u> nits ▶				
	GPS Position Display Filter				
	GPS Se <u>t</u> tings				
	Show <u>G</u> rid				
	✓ Show Scale Interval				
	Show Quick Info				
	Show Eeatures Labels				
	Show Waypoint Labels				
	Show Feature Points				

7. Click the down arrow to the right of the spatial reference system field and select the coordinate system you just imported (it will be at the bottom of the list).

Se	lect Coordinate System	×
Г	Spatial Reference System	
	t <sup>™</sup> € Europe_Lambert_Conformal_Conic	<b>.</b>
	Left USA/NAD83/Alaska (Zone 7)	
	Le USA/NAD83/Florida (North)	
	La USA/NAD83/Georgia (West)	
	t ↓ UTM/WGS 84/UTM zone 16N	
~	t∐e USA/NAD83/Georgia (East)	
	1 c UTM/WGS 84/UTM zone 17N	
	L <sup>NC</sup> WOS 44/UTM zone 30N	
	LEUIM/WGS 84/UIM zone I3N	
	LE USA/NAD83/Lolorado (Lentral)	
	ILE NAD_1303_MTM_7	
	NAD 1983 UTM Zone 17N	
	Reference Lambert Conformal Conic	
	New>	•

- 8. Now click the **OK** button.
- 9. When you are done processing your job in MobileMapper Office, export the job to shapefile format. When you import this shapefile into your ESRI project, the same coordinate system definition will be used and the import should proceed without any problems.