

Resetting a ProMark3

19 December 2006

1. Close all applications and return to the desktop.
2. Reset the GPS receiver:
 - a. Double-tap **Utilities > GpsReset**
 - b. Tap **Cold Reset**
 - c. Tap **OK** on pop-up saying “Reset successful.”
3. If you are in North, Central or South America, turn off WAAS reception. Otherwise proceed to Step 4.
 - a. On the Utilities screen double-tap **DGPS Configuration**
 - b. Select **None** in the **Differential Mode** field
 - c. Tap **OK** at the upper right of the screen
 - d. Tap **OK** in pop-up screen saying “Uncorrected GPS only”
 - e. Tap **X** in upper right of **Utilities** screen
4. Turn off the receiver by pressing the power button and tapping **OK** on the **Shut Down** screen. If the power LED on the front panel turns off within 10 seconds, proceed to Step 6.
5. If the power LED on the front panel remains on for more than 10 seconds:
 - a. Simultaneously press the **ESC**, **ENTER** and **power** buttons until the LED goes off
 - b. Turn the receiver back on
 - c. Turn off the receiver by pressing the power button and tapping **OK** on the **Shut Down** screen
6. Turn the receiver back on and initialize it:
 - a. Double-tap **Utilities > GpsInit**
 - b. Double-tap your region
 - c. Double-tap your state or country
 - d. Set the date and time
 - e. Tap **OK** on the **Position and Time** screen
7. Double-tap **DGPSConfig** to turn on WAAS reception if you wish. Then double-tap **GPSStatus** on the **Utilities** screen and make sure the receiver has calculated a position before you log any data.