

Static Survey Quick Guide

Survey:mode

Survey:STATIC

SITE:****

ANT HT:**.****m

STATUS

SurvConf

Survey:STATIC

REC INT:** *S

ELEV MASK**°

MODE:*****

STATUS

- Configure Survey
 - Set Survey Mode to STATIC
 - Scroll Main Menu To SURVCONF [↑ 1 sec]
 - Enter SURVCONF Submenu [↓ 3 sec]
 - Scroll To MODE:**** [↑ 1 sec]
 - Enter MODE Submenu [↓ 1 sec]
 - Scroll To STATIC [↑ 1 sec]
 - Select STATIC [↓ 1 sec]
 - Set Recording Interval
 - Scroll To REC INT:**.*s [↑ 1 sec]
 - Enter REC INT Submenu [↓ 1 sec]
 - Scroll To Value [↑ or ↓ 1 sec]
 - Select Value [↓ 1 sec]
 - Set Elevation Mask
 - Scroll to ELEV MASK:**° [↑ 1 sec]
 - Enter ELEV MASK Submenu [↓ 1 sec]
 - Scroll To Value [↑ or ↓ 1 sec]
 - Select Value [↓ 1 sec]
 - Return To Main Menu [↑ 3 sec]
- Conduct Survey
 - Proceed to SURVEY:STATIC
 - Scroll Main Menu To SURVEY:STATIC [↑ 1 sec]
 - Enter SURVEY:STATIC Submenu [↓ 3 sec]
 - Set Antenna Height
 - Scroll to ANT HT:**.****m [↑ 1 sec]
 - Enter ANT HT Submenu [↓ 1 sec]
 - Scroll to Value [↑ or ↓ 1 sec]
 - Select Value [↓ 1 sec]
 - Set SITE Identification
 - Scroll to SITE:**** [↑ 1 sec]
 - Enter SITE Submenu [↓ 1 sec]
 - Scroll to Value [↑ or ↓ 1 sec]
 - Select Value [↓ 1 sec]
 - Turn the Z-Xtreme Off to Conclude the Survey

