

# GG24™ Board, GPS + GLONASS



## Reference Manual

**Copyright Notice**

Copyright © 2004-2007 Magellan Navigation, Inc. All rights reserved.

Part Number: 630098, Revision E  
June 2007

**Trademarks**

GG24, GPS+GLONASS, GPS-RTK, REMOTE, EVALUATE, GPS TOPO, WinPRISM, Survey Control Software and Mine Surveyor are trademarks of Magellan Navigation, Inc. Pentium is a registered trademark of Intel Corporation. Husky and FS/2 are registered trademarks of Husky Computers Limited. All other product and brand names are trademarks or registered trademarks of their respective holders.

**FCC Notice**

The equipment described in this manual has been tested pursuant to Part 15 of the FCC Rules and found to comply with the limits for a Class A digital device for use in commercial business, and industrial environments. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio and television reception. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, you can try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the receiver relative to the equipment which it interferes.
- Power the equipment from a different AC receptacle so that this equipment and the interfered equipment are on different branch circuits. If necessary, contact the Magellan customer service department or an authorized representative for additional advice.

## **Magellan Professional Products - Limited Warranty (North, Central and South America)**

Magellan Navigation warrants their GPS receivers and hardware accessories to be free of defects in material and workmanship and will conform to our published specifications for the product for a period of one year from the date of original purchase. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER OF THIS PRODUCT.

In the event of a defect, Magellan Navigation will, at its option, repair or replace the hardware product with no charge to the purchaser for parts or labor. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. Magellan Navigation warrants that software products or software included in hardware products will be free from defects in the media for a period of 30 days from the date of shipment and will substantially conform to the then-current user documentation provided with the software (including updates thereto). Magellan Navigation's sole obligation shall be the correction or replacement of the media or the software so that it will substantially conform to the then-current user documentation. Magellan Navigation does not warrant the software will meet purchaser's requirements or that its operation will be uninterrupted, error-free or virus-free. Purchaser assumes the entire risk of using the software.

PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT MAGELLAN NAVIGATION'S OPTION, OF ANY DEFECTIVE PART OF THE RECEIVER OR ACCESSORIES WHICH ARE COVERED BY THIS WARRANTY. REPAIRS UNDER THIS WARRANTY SHALL ONLY BE MADE AT AN AUTHORIZED MAGELLAN NAVIGATION SERVICE CENTER. ANY REPAIRS BY A SERVICE CENTER NOT AUTHORIZED BY MAGELLAN NAVIGATION WILL VOID THIS WARRANTY.

To obtain warranty service the purchaser must obtain a Return Materials Authorization (RMA) number prior to shipping by calling 1-800-229-2400 (press option #1) (U.S.) or 1-408-615-3981 (International), or by submitting a repair request on-line at: <http://professional.magellangps.com/en/support/rma.asp>. The purchaser must return the product postpaid with a copy of the original sales receipt to the address provided by Magellan Navigation with the RMA number. Purchaser's return address and the RMA number must be clearly printed on the outside of the package.

Magellan Navigation reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number is altered or removed. Magellan Navigation will not be responsible for any losses or damage to the product incurred while the product is in transit or is being shipped for repair. Insurance is recommended. Magellan Navigation suggests using a trackable shipping method such as UPS or FedEx when returning a product for service.

EXCEPT AS SET FORTH IN THIS LIMITED WARRANTY, ALL OTHER EXPRESSED OR IMPLIED WARRANTIES, INCLUDING THOSE OF FITNESS FOR ANY PARTICULAR PURPOSE, MERCHANTABILITY OR NON-INFRINGEMENT, ARE HEREBY DISCLAIMED AND IF APPLICABLE, IMPLIED WARRANTIES UNDER ARTICLE 35 OF THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS. Some national, state, or local laws do not allow limitations on implied warranty or how long an implied warranty lasts, so the above limitation may not apply to you.

The following are excluded from the warranty coverage: (1) periodic maintenance and repair or replacement of parts due to normal wear and tear; (2) batteries and finishes; (3) installations or defects resulting from installation; (4) any damage caused by (i) shipping, misuse, abuse, negligence, tampering, or improper use; (ii) disasters such as fire, flood, wind, and lightning; (iii) unauthorized

attachments or modification; (5) service performed or attempted by anyone other than an authorized Magellan Navigations Service Center; (6) any product, components or parts not manufactured by Magellan Navigation; (7) that the receiver will be free from any claim for infringement of any patent, trademark, copyright or other proprietary right, including trade secrets; and (8) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS. (Note: Magellan Navigation GPS receivers use GPS or GPS+GLONASS to obtain position, velocity and time information. GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies which could require modifications to the receiver. Examples of such conditions include but are not limited to changes in the GPS or GLONASS transmission.) Opening, dismantling or repairing of this product by anyone other than an authorized Magellan Navigation Service Center will void this warranty.

MAGELLAN NAVIGATION SHALL NOT BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES RESULTING FROM DELAY OR LOSS OF USE, LOSS OF OR DAMAGES ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN THOUGH CAUSED BY NEGLIGENCE OR OTHER FAULT OF MAGELLAN NAVIGATION OR NEGLIGENT USAGE OF THE PRODUCT. IN NO EVENT WILL MAGELLAN NAVIGATION BE RESPONSIBLE FOR SUCH DAMAGES, EVEN IF MAGELLAN NAVIGATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This written warranty is the complete, final and exclusive agreement between Magellan Navigation and the purchaser with respect to the quality of performance of the goods and any and all warranties and representations. This warranty sets forth all of Magellan Navigation's responsibilities regarding this product. This limited warranty is governed by the laws of the State of California, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods, and shall benefit Magellan Navigation, its successors and assigns.

This warranty gives the purchaser specific rights. The purchaser may have other rights which vary from locality to locality (including Directive 1999/44/EC in the EC Member States) and certain limitations contained in this warranty, including the exclusion or limitation of incidental or consequential damages may not apply.

For further information concerning this limited warranty, please call or write:

Magellan Navigation, Inc., 960 Overland Court, San Dimas, CA 91773, Phone: +1 909-394-5000, Fax: +1 909-394-7050 or

Magellan Navigation SAS - ZAC La Fleuriaye - BP 433 - 44474 Carquefou Cedex - France Phone: +33 (0)2 28 09 38 00, Fax: +33 (0)2 28 09 39 39.

## **Magellan Professional Products Limited Warranty (Europe, Middle East, Africa)**

All Magellan Navigation global positioning system (GPS) receivers are navigation aids, and are not intended to replace other methods of navigation. Purchaser is advised to perform careful position charting and use good judgment. READ THE USER GUIDE CAREFULLY BEFORE USING THE PRODUCT.

### **1. MAGELLAN NAVIGATION WARRANTY**

Magellan Navigation warrants their GPS receivers and hardware accessories to be free of defects in material and workmanship and will conform to our published specifications for the product for a period of one year from the date of original purchase or such longer period as required by law. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER OF THIS PRODUCT.

In the event of a defect, Magellan Navigation will, at its option, repair or replace the hardware product with no charge to the purchaser for parts or labor. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. Magellan Navigation warrants that software products or software included in hardware products will be free from defects in the media for a period of 30 days from the date of shipment and will substantially conform to the then-current user documentation provided with the software (including updates thereto). Magellan Navigation's sole obligation shall be the correction or replacement of the media or the software so that it will substantially conform to the then-current user documentation. Magellan Navigation does not warrant the software will meet purchaser's requirements or that its operation will be uninterrupted, error-free or virus-free. Purchaser assumes the entire risk of using the software.

## 2. PURCHASER'S REMEDY

PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT MAGELLAN NAVIGATION'S OPTION, OF ANY DEFECTIVE PART OF THE RECEIVER OR ACCESSORIES WHICH ARE COVERED BY THIS WARRANTY. REPAIRS UNDER THIS WARRANTY SHALL ONLY BE MADE AT AN AUTHORIZED MAGELLAN NAVIGATION SERVICE CENTER. ANY REPAIRS BY A SERVICE CENTER NOT AUTHORIZED BY MAGELLAN NAVIGATION WILL VOID THIS WARRANTY.

## 3. PURCHASER'S DUTIES

To obtain service, contact and return the product with a copy of the original sales receipt to the dealer from whom you purchased the product.

Magellan Navigation reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number is altered or removed. Magellan Navigation will not be responsible for any losses or damage to the product incurred while the product is in transit or is being shipped for repair. Insurance is recommended. Magellan Navigation suggests using a trackable shipping method such as UPS or FedEx when returning a product for service.

## 4. LIMITATION OF IMPLIED WARRANTIES

EXCEPT AS SET FORTH IN ITEM 1 ABOVE, ALL OTHER EXPRESSED OR IMPLIED WARRANTIES, INCLUDING THOSE OF FITNESS FOR ANY PARTICULAR PURPOSE OR MERCHANTABILITY, ARE HEREBY DISCLAIMED AND IF APPLICABLE, IMPLIED WARRANTIES UNDER ARTICLE 35 OF THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS.

Some national, state, or local laws do not allow limitations on implied warranty or how long an implied warranty lasts, so the above limitation may not apply to you.

## 5. EXCLUSIONS

The following are excluded from the warranty coverage:

- (1) periodic maintenance and repair or replacement of parts due to normal wear and tear;
- (2) batteries;

- (3) finishes;
- (4) installations or defects resulting from installation;
- (5) any damage caused by (i) shipping, misuse, abuse, negligence, tampering, or improper use; (ii) disasters such as fire, flood, wind, and lightning; (iii) unauthorized attachments or modification;
- (6) service performed or attempted by anyone other than an authorized Magellan Navigations Service Center;
- (7) any product, components or parts not manufactured by Magellan Navigation,
- (8) that the receiver will be free from any claim for infringement of any patent, trademark, copyright or other proprietary right, including trade secrets
- (9) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS. (Note: Magellan Navigation GPS receivers use GPS or GPS+GLONASS to obtain position, velocity and time information. GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies which could require modifications to the receiver. Examples of such conditions include but are not limited to changes in the GPS or GLONASS transmission.).

Opening, dismantling or repairing of this product by anyone other than an authorized Magellan Navigation Service Center will void this warranty.

## 6. EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES

MAGELLAN NAVIGATION SHALL NOT BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES RESULTING FROM DELAY OR LOSS OF USE, LOSS OF OR DAMAGES ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN THOUGH CAUSED BY NEGLIGENCE OR OTHER FAULT OF MAGELLAN NAVIGATION OR NEGLIGENT USAGE OF THE PRODUCT. IN NO EVENT WILL MAGELLAN NAVIGATION BE RESPONSIBLE FOR SUCH DAMAGES, EVEN IF MAGELLAN NAVIGATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some national, state, or local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## 7. COMPLETE AGREEMENT

This written warranty is the complete, final and exclusive agreement between Magellan Navigation and the purchaser with respect to the quality of performance of the goods and any and all warranties and representations. THIS WARRANTY SETS FORTH ALL OF MAGELLAN NAVIGATION'S RESPONSIBILITIES REGARDING THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM LOCALITY TO LOCALITY (including Directive 1999/44/EC in the EC Member States) AND CERTAIN LIMITATIONS CONTAINED IN THIS WARRANTY MAY NOT APPLY TO YOU.

## 8. CHOICE OF LAW.

This limited warranty is governed by the laws of France, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods, and shall benefit Magellan Navigation, its successors and assigns.

THIS WARRANTY DOES NOT AFFECT THE CUSTOMER'S STATUTORY RIGHTS UNDER APPLICABLE LAWS IN FORCE IN THEIR LOCALITY, NOR THE CUSTOMER'S RIGHTS AGAINST THE DEALER ARISING FROM THEIR SALES/PURCHASE CONTRACT (such as the guarantees in France for latent defects in accordance with Article 1641 et seq of the French Civil Code).

For further information concerning this limited warranty, please call or write:

Magellan Navigation SAS - ZAC La Fleuriaye - BP 433 - 44474 Carquefou Cedex - France.

Phone: +33 (0)2 28 09 38 00, Fax: +33 (0)2 28 09 39 39



---

# Table of Contents

<b>Chapter 1. Introduction</b>	1
Functional Description	1
Technical Specifications	2
Performance Specifications	3
Receiver Options	4
[5,2,1] Position Update Rate	5
[5,2,1] Raw Measurement Update Rate	5
[O] Raw Data Output	5
[P] Carrier Phase	5
[U] RTCM Remote	5
[B] RTCM Base	6
[I] RAIM Availability	6
[L] Pulse Per Second (1PPS)	6
[E] Event Marker	6
[G] Geoid Height	6
[M] Magnetic Variation	6
[J] Phase Differential Mode	6
[-] Reserved for Future Use	6
[S] GLONASS	6
<b>Chapter 2. Equipment</b>	7
Configurations	7
OEM Board	7
Hardware Description	7
Power/Input/Output Connections	8
Power Requirements	10
Environmental Specifications	10
RF Connector	10
Antenna	11
Sensor	11
Hardware Description	11
Mounting Dimensions	13
Power/Input/Output Connector	14
Power Requirements	15
Environmental Specifications	15
RF Connector	15
Serial/Power Cable	16
Antenna	16

Spread Spectrum Radio Antenna Connection (Option, Sensor Only)	17
Radio Interference	17
Inventory of GG24 Evaluation Kits	17
<b>Chapter 3. Standard Operation</b>	23
Power Connection Procedures	23
OEM Board	23
Sensor	24
Receiver Communication	24
Receiver Monitoring	25
Satellite Tracking	25
Position	25
Saving Parameter Settings	26
Receiver Initialization	26
<b>Chapter 4. Advanced Operation</b>	27
Receiver Communications	27
Input Messages to the GG24	27
Output Messages From the GG24	27
Serial Port Configuration	28
Parameter Settings and Status	28
Default Parameters	31
Position Mode/ALT Fix Mode	33
Altitude Definition	33
Time Shift Hold Definition	34
Daisy Chain Mode	34
Pulse Generation (1PPS) and Strobe	35
Photogrammetry Event Marking	37
Time Tagging the Shutter Signal	38
Closed-Loop Technique (Advanced Trigger)	39
Data Output	39
5 Hz Output	40
NMEA Outputs	40
Raw Data Outputs	41
Signal to Noise Ratio	41
Satellite Search Algorithm	42
Ionospheric and Tropospheric Models	42
RAIM	43
External Frequency	44
Datums	44
Point Positioning	46
<b>Chapter 5. Differential and RTK Operations</b>	49

Base Stations	49
Setting Up a Differential Base Station	49
Setting Up an RTK Base Station	50
Advanced Base Station Operation	52
Recommended Advanced Parameter Settings for Base Stations	52
Antenna	52
Message Rate	52
Required Differential Update Rates	53
Mask Angle	55
Base Station Position	56
Base Station Antenna Offset	56
Using Reference Station ID	56
Reference Station Health	57
Other RTCM Messages	57
Using a PC Interface	57
Using a Handheld Interface	57
Remote Stations	58
Setting Up a Differential Remote Station	58
Setting Up an RTK Remote Station	58
Advanced Remote Station Operation	59
Recommended Advanced Parameter Settings for Differential Remote Stations	59
Recommended Advanced Parameter Settings for RTK Remote Stations	60
Base Station RTCM Data	60
Base Data Latency	61
Differential Accuracy vs. Base Data Latency	62
RTK Accuracy and Update Rates vs. Base Data Latency	62
Synchronized RTK	63
Fast RTK	63
Position Latency	63
Float and Fixed Solutions	64
Carrier Phase Initialization	64
Reliability	65
Monitoring Accuracy	67
Required Number of Satellites	68
Mask Angles	69
Auto Differential Mode	69
RTCM Messages	70
RTCM 104 Format, Version 2.2	70
Operational Hints	72
<b>Chapter 6. Command/Response Formats</b>	<b>73</b>
Receiver Commands	74

Set Commands	74
Query Commands	75
AIM: RAIM Availability	78
ALT: Set Ellipsoid Height	78
ANT: Set Antenna Offsets	79
CLK: Clock Status	81
CTS: Port Protocol	82
DSY: Daisy Chain	82
DTG: GLONASS Time Shift	83
DTM: Datum Selection	83
DUG: UTC-GPS Time Difference	84
ELM: Raw Data Elevation Mask	85
EPG: Set Kinematic Epoch Counter	85
ERM: Set Position Error Mask For Autonomous & DGPS Modes	86
EXF: Set Frequency Input - Sensor Only	87
FIX: Altitude Fix Mode	88
GTF: Set GLONASS Time Shift	88
GTM: GLONASS Time Shift Relative or Fixed	89
GTP: Set Priority of GLONASS Time Shift	89
HDP: Horizontal Dilution of Precision	90
INI: Receiver Initialization	90
ION: Set Ionospheric Models	91
LPS: Loop Tracking	93
LTZ: Set Local Time Zone	94
MRX: Set Transformation Matrix from PZ-90 to WGS-84	95
MSV: Set Minimum Satellites	96
PAR: Query Receiver Parameters	96
PDP: Position Dilution of Precision	98
PEM: Position Elevation Mask	98
PHE: Photogrammetry Edge	99
PMD: Position Mode	99
POP: Position Fix Rate	100
POS: Set Antenna Position	100
POS CUR: Set Antenna to Current Computed Position	100
POW: Battery Parameters	101
PPO: Point Positioning	102
PPS: 1 PPS Pulse Output	103
PRR: Ephemeris & Almanac Upload	104
PRT: Port Setting	105
PSM: Position/Velocity Filter Control	106
RCI: Recording Interval	107
RID:Receiver ID	108

RIO: Request for Receiver ID .....	109
RSO: Receiver Serial Number and Installed Options .....	110
RST: Reset Receiver to Default Parameters .....	110
SAV: Save User Parameters .....	110
SEM: Secondary Elevation Mask Zone .....	111
SIT: Set Site Name .....	112
SMI: Code Measurement Smoothing .....	112
SMV: Speed Filtering .....	112
SNR: Set Signal-to-Noise Ratio .....	113
SPD: Serial Port Baud Rate .....	113
STA: Show Status of Satellites .....	114
STB: Measurement Strobe Parameters .....	115
SYS: Set Navigational System .....	116
TDP: Time Shift Dilution of Precision .....	116
TSC: Set Type of Time Scale .....	116
UDD: Set User-Defined Datum .....	117
USE: Use Satellites .....	119
USP: Select Satellite to Use in Position Computation .....	119
UTS: Synchronize with GPS Time .....	120
VDP: Vertical Dilution of Precision .....	120
Raw Data Commands .....	121
Set Commands .....	121
Query Commands .....	122
MCA: Enable/Disable MCA Message .....	123
PBN: Enable/Disable PBN Message .....	126
RAW: Setting Query Command .....	128
SAG: Enable/Disable GLONASS Satellite Almanac Message .....	129
SAL: Enable/Disable GPS Satellite Almanac Message .....	131
SNG: Enable/Disable GLONASS Ephemeris Data .....	133
SNV: Enable/Disable GPS Ephemeris Data .....	135
NMEA Data Message Commands .....	138
Set Commands .....	138
Query Commands .....	139
Response message .....	139
ALL: Disable All NMEA Messages .....	141
AIM: Receiver Autonomous Integrity Monitor Message .....	142
DCR: Rover Delta Position in a Format Similar to CRT .....	145
DPO: Rover Delta Position in a Format Similar to POS .....	146
GGA: GPS Position Message .....	147
GLL: Latitude, Longitude Message .....	150
GNS: GPS+GLONASS Navigation Solution .....	152
GRS: Satellite Range Residual Message .....	155

GSA: DOP and Active Satellites Message	158
GSN: Signal Strength/Satellite Number Message	162
GST: Position Error	165
GSV: Satellite Data	168
LTN: Latency Message	170
MSG: RTCM Message	171
PER: Set NMEA Send Interval	184
POS: Position Message	184
RMC: Recommended Minimum Course	187
RRE: Satellite Residual and Position Error Message	189
SAT: Satellite Status Message	192
TCM: Enables/Disables RTCM Rover Data Message	195
TTT: Event Marker Message	197
VTG: Velocity/Course Message	199
ZDA: Time and Date Message	201
RTCM Response Message Commands	203
Set Commands	203
Query Commands	203
AUT: Enable/Disable Auto Differential Mode	204
BAS: Set Receiver as Differential Base Station	205
M36: RTCM Type 36 Message	205
MAX: Set Maximum Age of RTCM Differential Corrections	205
MSG: RTCM Type 16 Message	205
OFF: Disable Differential Mode	205
REM: Set Receiver as Differential Remote	206
RTC: RTCM Differential Parameters	206
SEQ: Check Sequence Number	208
SPD: Set RTCM Bit Rate	209
STH: Health of Reference Station	209
STI: Set Station Identification	210
TYP: Enable Type of Message	210
CPD Commands	212
Set Commands	212
Query Commands	212
AFP: Ambiguity Fixing	215
ANT: Antenna Parameters	216
BAS: Base Mode	217
DLK: Data Link Status	218
FST: Fast CPD Mode	221
INF: CPD Information	222
KPI: Initialization Time Reduction	224
MAX: Maximum Age	226

MOD: CPD Mode .....	226
POS: Set Base Position .....	228
RST: Reset CPD .....	229
UBP: Use Base Position .....	229
Projection / Grid Commands .....	230
UTM: Universal Transverse Mercator .....	230
NME,UTM .....	230
FZN .....	231
FUM .....	232
Grids: Predefined and User-defined .....	232
UDG .....	232
GRD .....	236
GDC .....	236
<b>Appendix A. GPS and GLONASS Concepts .....</b>	<b>239</b>
Background .....	239
Availability .....	239
Integrity .....	239
Accuracy .....	240
Differential Position Accuracy .....	240
Basic Concepts .....	240
Signal Structure .....	241
Differences in Signal Structure .....	241
Differences in Implementation .....	241
Satellite orbits .....	242
Geoid Model .....	242
Magnetic Model .....	243
Comparison of GPS and GLONASS .....	243
GPS and GLONASS System Time .....	244
GPS+GLONASS Standards .....	244
RTCM SC-104 .....	244
NMEA 0183 .....	245
Navigation Modes (Availability & Accuracy) .....	246
<b>Appendix B. Reference Datums and Ellipsoids .....</b>	<b>249</b>
<b>Appendix C. Multipath Mitigation .....</b>	<b>255</b>
Overview .....	255
Evaluating Correlator Performance .....	255
<b>Appendix D. Floating Point Data Representation .....</b>	<b>259</b>
Sign Bit Field .....	259
Exponent Field .....	259
Fraction Field .....	259

The Represented Value .....	259
Single-Precision Float .....	260
Double-Precision Float .....	261

---

# List of Figures

<b>Figure 2.1:</b>	GG24 OEM Board . . . . .	8
<b>Figure 2.2:</b>	GG24 OEM Board Interface Connector . . . . .	8
<b>Figure 2.3:</b>	GG24 Sensor . . . . .	11
<b>Figure 2.4:</b>	GG24 Sensor Mounting Dimensions . . . . .	13
<b>Figure 2.5:</b>	GG24 DB25 Connector . . . . .	14
<b>Figure 2.6:</b>	Serial/Power Cable . . . . .	16
<b>Figure 2.7:</b>	GG24 Sensor Evaluation Kit . . . . .	18
<b>Figure 2.8:</b>	GG24 Sensor Evaluation Kit Continued . . . . .	19
<b>Figure 2.9:</b>	GG24 OEM Board Evaluation Kit . . . . .	20
<b>Figure 2.10:</b>	GG24 OEM Board Evaluation Kit Continued . . . . .	21
<b>Figure 4.1:</b>	\$PASHR,PAR Default Response Message . . . . .	29
<b>Figure 4.2:</b>	\$PASHR,RAW Default Response Message . . . . .	29
<b>Figure 4.3:</b>	\$PASHR,RTC Default Response Message . . . . .	30
<b>Figure 4.4:</b>	\$PASHR,CPD Default Response Message . . . . .	30
<b>Figure 4.5:</b>	Relationship of GPS Time in PBN Record to 1 PPS Pulse . . . . .	36
<b>Figure 4.6:</b>	1PPS Characteristics . . . . .	36
<b>Figure 4.7:</b>	Photogrammetry Timing . . . . .	38
<b>Figure 4.8:</b>	Closed Loop Technique . . . . .	39
<b>Figure 4.9:</b>	Rotation and Translation Between Coordinate Systems . . . . .	46
<b>Figure 4.10:</b>	Point Positioning Mode Position Error - GPS Only . . . . .	47
<b>Figure 5.1:</b>	Combined Differential/RTK Base Station and Remote Operation	61
<b>Figure 5.2:</b>	DGPS and GLONASS Accuracy . . . . .	62
<b>Figure 5.3:</b>	Convergence of Float Solution Following Reset . . . . .	67
<b>Figure 5.4:</b>	Typical GST Performance . . . . .	68
<b>Figure 6.1:</b>	Typical \$PASHR,PAR Response Message . . . . .	96
<b>Figure 6.2:</b>	Rotation and Translation Between Coordinate Systems . . . . .	118
<b>Figure A.1:</b>	GG24 Code Differential Horizontal Position Decay . . . . .	247
<b>Figure C.1:</b>	Relative Performance of Multipath Mitigation Techniques . . . . .	256



---

# List of Tables

<b>Table 1.1:</b>	Technical Specifications . . . . .	2
<b>Table 1.2:</b>	Accuracy as Function of Mode . . . . .	3
<b>Table 1.3:</b>	GG24 Receiver Options . . . . .	4
<b>Table 2.1:</b>	Connector Pinout, OEM Board. . . . .	9
<b>Table 2.2:</b>	GG24 Front Panel Description . . . . .	12
<b>Table 2.3:</b>	GG24 DB25 Connector Pinout . . . . .	15
<b>Table 2.4:</b>	Spread Spectrum Parameters . . . . .	17
<b>Table 4.1:</b>	Default Receiver Parameters . . . . .	31
<b>Table 4.2:</b>	PPS and Photogrammetry Accuracy. . . . .	37
<b>Table 4.3:</b>	Raw Data Messages . . . . .	41
<b>Table 4.4:</b>	External Frequency Parameters . . . . .	44
<b>Table 4.5:</b>	Ellipsoid Parameters for WGS-72 and WGS-84 . . . . .	45
<b>Table 5.1:</b>	Differential Base Station Commands . . . . .	49
<b>Table 5.2:</b>	RTK Base Station Commands . . . . .	50
<b>Table 5.3:</b>	Base Station Commands . . . . .	51
<b>Table 5.4:</b>	Message Size for RTCM Messages 18 and 19 . . . . .	54
<b>Table 5.5:</b>	Minimum Baud Rates for RTCM Messages 18 and 19 . . . . .	54
<b>Table 5.6:</b>	Maximum Number of Satellites Above a 4° Mask Angle . . . . .	55
<b>Table 5.7:</b>	Differential Remote Station Commands. . . . .	58
<b>Table 5.8:</b>	RTK Remote Station Command. . . . .	59
<b>Table 5.9:</b>	Actual achieved reliability results with AFP settings of 99 and 99.966	
<b>Table 5.10:</b>	Auto Differential Modes and Position Output . . . . .	69
<b>Table 5.11:</b>	RTCM Message Types . . . . .	70
<b>Table 6.1:</b>	Command Parameter Symbols . . . . .	74
<b>Table 6.2:</b>	Receiver Set/Query Commands . . . . .	75
<b>Table 6.3:</b>	Antenna Offsets Settings . . . . .	79
<b>Table 6.4:</b>	ANT Message Structure . . . . .	80
<b>Table 6.5:</b>	CLK Response Format . . . . .	81
<b>Table 6.6:</b>	Daisy Chain Commands . . . . .	82
<b>Table 6.7:</b>	GPS-UTC Time Codes . . . . .	84
<b>Table 6.8:</b>	EXF Structure . . . . .	87
<b>Table 6.9:</b>	EXF Response Structure. . . . .	87
<b>Table 6.10:</b>	Reset Memory Codes . . . . .	90
<b>Table 6.11:</b>	Ionosphere Data Format . . . . .	91
<b>Table 6.12:</b>	MRX (PZ-90 to WGS-84) Structure. . . . .	95
<b>Table 6.13:</b>	\$PASHR,PAR Response Message Parameters. . . . .	97
<b>Table 6.14:</b>	Position Mode Settings . . . . .	99
<b>Table 6.15:</b>	POS Structure . . . . .	100

<b>Table 6.16:</b>	POW Parameter Table . . . . .	101
<b>Table 6.17:</b>	POW Message Structure . . . . .	102
<b>Table 6.18:</b>	PPS Parameters . . . . .	103
<b>Table 6.19:</b>	PPS Response Structure . . . . .	104
<b>Table 6.20:</b>	Serial Port Baud Rate Codes . . . . .	105
<b>Table 6.21:</b>	Raw Data Update Rate Options . . . . .	107
<b>Table 6.22:</b>	RIO Structure . . . . .	109
<b>Table 6.23:</b>	Baud Rate Codes . . . . .	113
<b>Table 6.24:</b>	STB Structure . . . . .	115
<b>Table 6.25:</b>	UDD Structure . . . . .	117
<b>Table 6.26:</b>	Ellipsoid Parameters for WGS-72 and WGS-84 . . . . .	117
<b>Table 6.27:</b>	Raw Data Commands . . . . .	122
<b>Table 6.28:</b>	MCA Structure . . . . .	124
<b>Table 6.29:</b>	PBN Structure . . . . .	127
<b>Table 6.30:</b>	\$PASHQ,RAW Response Parameters . . . . .	128
<b>Table 6.31:</b>	SAG (GLONASS Almanac) Structure . . . . .	129
<b>Table 6.32:</b>	SAL (Almanac) Structure . . . . .	131
<b>Table 6.33:</b>	SNG GLONASS Ephemeris Data Structure . . . . .	134
<b>Table 6.34:</b>	SNV (Ephemeris) Structure . . . . .	136
<b>Table 6.35:</b>	NMEA Response Structure . . . . .	139
<b>Table 6.36:</b>	GLL Structure . . . . .	140
<b>Table 6.37:</b>	NMEA Data Message Commands . . . . .	140
<b>Table 6.38:</b>	RAIM Response Message Structure . . . . .	143
<b>Table 6.39:</b>	GGA Structure . . . . .	147
<b>Table 6.40:</b>	Typical GGA Response Message . . . . .	149
<b>Table 6.41:</b>	GLL Structure . . . . .	150
<b>Table 6.42:</b>	Typical GLL Response Message . . . . .	151
<b>Table 6.43:</b>	GRS Structure . . . . .	156
<b>Table 6.44:</b>	Typical GPGRS Response Message . . . . .	156
<b>Table 6.45:</b>	Typical GLGRS Response Message . . . . .	157
<b>Table 6.46:</b>	GSA Structure . . . . .	159
<b>Table 6.47:</b>	Typical GPGSA Response Message . . . . .	159
<b>Table 6.48:</b>	Typical GLGSA Response Message . . . . .	160
<b>Table 6.49:</b>	GSN Structure . . . . .	163
<b>Table 6.50:</b>	Typical GPGSN Response Message . . . . .	163
<b>Table 6.51:</b>	Typical GLGSN Response Message . . . . .	164
<b>Table 6.52:</b>	GST Message Structure . . . . .	166
<b>Table 6.53:</b>	Typical GST Response . . . . .	167
<b>Table 6.54:</b>	\$GPMSG Structure for RTCM Message Types 1 and 9 . . . . .	172
<b>Table 6.55:</b>	\$GPMSG Response for RTCM Messages 1, 31, and 9, 34 . . . . .	173
<b>Table 6.56:</b>	\$GPMSG Structure for RTCM Message Types 3 and 32 . . . . .	174
<b>Table 6.57:</b>	\$GPMSG Response for RTCM Message Type 3 . . . . .	175

<b>Table 6.58:</b>	\$GPMMSG Structure for RTCM Message Types 16 and 36 . . . .	176
<b>Table 6.59:</b>	\$GPMMSG Response, RTCM Message Type 16 . . . . .	176
<b>Table 6.60:</b>	\$GPMMSG Structure for RTCM Message Type 18 . . . . .	177
<b>Table 6.61:</b>	\$GPMMSG Response for RTCM Message 18 . . . . .	178
<b>Table 6.62:</b>	\$GPMMSG Structure for RTCM Message Type 19 . . . . .	180
<b>Table 6.63:</b>	\$GPMMSG Response for RTCM Message 19 . . . . .	181
<b>Table 6.64:</b>	\$GPMMSG Structure for RTCM Message Type 22 . . . . .	182
<b>Table 6.65:</b>	\$GPMMSG Response for RTCM Message Type 22 . . . . .	183
<b>Table 6.66:</b>	PER (NMEA Output Rate) Range Options . . . . .	184
<b>Table 6.67:</b>	POS Response Structure . . . . .	185
<b>Table 6.68:</b>	Typical POS Response Message. . . . .	186
<b>Table 6.69:</b>	RMC Response Structure . . . . .	188
<b>Table 6.70:</b>	RRE Response Structure. . . . .	190
<b>Table 6.71:</b>	\$GPRRE Response Message . . . . .	190
<b>Table 6.72:</b>	\$GLRRE Response Message . . . . .	191
<b>Table 6.73:</b>	SAT Structure . . . . .	192
<b>Table 6.74:</b>	Typical SAT Response Message . . . . .	193
<b>Table 6.75:</b>	TCM Response Structure . . . . .	195
<b>Table 6.76:</b>	TTT Message Structure . . . . .	197
<b>Table 6.77:</b>	Example TTT Response Message. . . . .	198
<b>Table 6.78:</b>	VTG Structure. . . . .	199
<b>Table 6.79:</b>	Typical VTG Response Message . . . . .	200
<b>Table 6.80:</b>	ZDA Structure. . . . .	201
<b>Table 6.81:</b>	Typical ZDA Response Message . . . . .	202
<b>Table 6.82:</b>	RTCM Commands . . . . .	204
<b>Table 6.83:</b>	RTC Response Message Structure . . . . .	206
<b>Table 6.84:</b>	Bit Rate Codes . . . . .	209
<b>Table 6.85:</b>	Reference Station Health Codes . . . . .	209
<b>Table 6.86:</b>	Base Station Message Types and Period Ranges . . . . .	210
<b>Table 6.87:</b>	CPD Commands . . . . .	213
<b>Table 6.88:</b>	\$PASHQ,CPD Response Descriptions . . . . .	214
<b>Table 6.89:</b>	CPD,AFP Parameter Table . . . . .	215
<b>Table 6.90:</b>	CPD,ANT Parameter Table . . . . .	216
<b>Table 6.91:</b>	CPD,ANT Message Structure. . . . .	217
<b>Table 6.92:</b>	CPD,DLK Message Structure. . . . .	218
<b>Table 6.93:</b>	CPD,DLK Response Message Example - Rover . . . . .	219
<b>Table 6.94:</b>	CPD,DLK Response Message Example - Base Station . . . . .	220
<b>Table 6.95:</b>	INF Message Structure . . . . .	222
<b>Table 6.96:</b>	CPD,MOD Parameter Table . . . . .	226
<b>Table 6.97:</b>	CPD,MOD Message Structure . . . . .	227
<b>Table 6.98:</b>	CPD,POS Parameter Table . . . . .	228
<b>Table 6.99:</b>	CPD,UBP Parameter Table. . . . .	229

**Table A.1:** Comparison of GPS and GLONASS . . . . . 243

**Table A.2:** RTCM SC-104 Messages for GPS and GLONASS . . . . . 245

**Table A.3:** Accuracy as a Function of Constellation . . . . . 246

**Table A.4:** Approximate Position Error, Mixed GPS+GLONASS . . . . . 247

**Table B.1:** Available Geodetic Datums . . . . . 249

**Table B.2:** Reference Ellipsoids . . . . . 252

**Table D.1:** Single-Precision Format. . . . . 260

**Table D.2:** Double-Precision Format. . . . . 261

# Introduction

The GG24™ is the first all-in-view GPS+GLONASS™ receiver. It's revolutionary design allows smooth integration into a wide range of positioning applications on land, sea or in the air.

One of the primary advantages of GPS+GLONASS is increased satellite coverage. With a total of 40 healthy satellites, there are 60% more satellites available for position computation than GPS alone. Thus, GPS+GLONASS is extremely beneficial in obstructed operating environments, such as in cities, mountainous areas, under tree cover, or other areas where much of the sky and many of the satellites can be blocked.

To take advantage of the increased satellite availability, the GG24 has 12 channels for L1 GPS and 12 Channels for L1 GLONASS, providing all-in-view tracking for both constellations.

Differential corrections and RTK messages are available for both GPS and GLONASS providing real-time, on-the-fly centimeter accuracy when the GG24 is used with a base station and data link.

## Functional Description

The GPS constellation contains 26 usable satellites. As of December 1997, the GLONASS constellation has 13 usable satellites of the planned 24 satellites full constellation. The GG24 provides the capability to track up to 24 GPS and GLONASS satellites simultaneously. As the GG24 locks onto the signal generated by each satellite, information (ephemeris data) about the position of each satellite is automatically downloaded and stored in receiver memory. Once the ephemeris data is collected, the GG surveyor can compute its own position.

The GG24 calculates three-dimensional position and velocity when tracking any combination of five satellites (e.g. 3 GPS and 2 GLONASS). By holding the GPS-GLONASS clock offset fixed, the GG24 calculates a 3D position with any combination of 4 satellites (e.g., 2 GPS and 2 GLONASS). By also holding the altitude fixed, the GG24 calculates a 2D position with any combination of 3 satellites.

Up to 5 independent measurements are determined per second, with no interpolation or extrapolation from previous solutions. The position and velocity computations are performed using all the satellites in view simultaneously (up to 16 when in 5 Hz mode). The GG24 uses a Doppler measurement technique for computing on-the-fly velocity (no

dependence on the previous position). All computations are accomplished relative to the World Geodetic System WGS-84 reference ellipsoid when the receiver is used in GPS or MIX mode, and in PZ-90 when in GLN only mode.

Upon application of power, the GG24 runs a self-test of internal memories, and thereafter periodically self-tests various functions during normal operation. Test results are stored for commanded output. After self-test, the GG24 initializes the battery-backed RAM. If the battery-backed-up RAM fails self-test (due, for example, to a low battery condition), the GG24 clears and reports the loss of stored data, then initializes the 24 channels and begins searching for all satellites within the field of view of the antenna.

## Technical Specifications

Table 1.1 lists the technical specifications of the GG24 Sensor and board.

**Table 1.1:** Technical Specifications

Characteristic	GG24 Sensor Specifications	GG24 GPS Board Specifications
Tracking	<ul style="list-style-type: none"> <li>12 channels L1 GPS code and carrier</li> <li>12 channels L1 GLONASS code and carrier</li> </ul>	<ul style="list-style-type: none"> <li>12 channels L1 GPS code and carrier</li> <li>12 channels L1 GLONASS code and carrier</li> </ul>
Size	7.2 cm wide × 5.8 cm height × 22.5 cm depth	10 × 16.7 cm
Weight	3.4 lbs	8 oz.
Operating temperature	-30° to +55°C	-30° to +70°C
Storage temperature	-40° to +85°C	-40° to +85°C
Environment <ul style="list-style-type: none"> <li>Humidity</li> <li>Vibration</li> <li>Shock</li> </ul>	<ul style="list-style-type: none"> <li>Resistant to wind-driven rain and dust to MIL-STD-810E</li> <li>N/A</li> <li>N/A</li> </ul>	<ul style="list-style-type: none"> <li>95% condensing</li> <li>160 C, level B, N, M</li> <li>160 C, op, crash safety</li> </ul>
Power consumption	<ul style="list-style-type: none"> <li>2.6 watts (receiver)</li> <li>0.3 watts (typ, antenna)</li> </ul>	1.8 watts
Input Voltage	6 to 15 VDC	5 VDC +/- 5%
Speed (Maximum)	1,000 knots (higher velocities available under validated export license)	1,000 knots (higher velocities available under validated export license)

**Table 1.1:** Technical Specifications (Continued)

Characteristic	GG24 Sensor Specifications	GG24 GPS Board Specifications
Altitude (Maximum)	60,000 ft (higher altitude available under validated export license)	60,000 ft (higher altitude available under validated export license)
Interface	<ul style="list-style-type: none"> <li>• Three bi-directional RS-232 ports via DB 25 connector up to 115,200 bps</li> <li>• One antenna port</li> <li>• Event marker and 1PPS via DB25 connector</li> <li>• optional external reference connector</li> <li>• optional radio antenna connector</li> </ul>	<ul style="list-style-type: none"> <li>• Two bi-directional RS-232 ports via DIN64 connector up to 115,200 bps</li> <li>• 1 SMA antenna port</li> <li>• Event marker and 1PPS via DIN64 connector</li> </ul>

## Performance Specifications

One of the most important functions of the GG24 is providing real-time position solutions with accuracy ranging from centimeter level to 100 meters. Table 1.2 summarizes the positioning modes and expected accuracy.

**Table 1.2:** Accuracy as Function of Mode

Positioning Mode	GPS + GLONASS	GPS Only	GLONASS Only
Real-Time Position-Autonomous	7 meters (CEP 50%) 16 meters (95%)	25 meters (CEP 50%) 100 meters (95%)	8 meters (CEP 50%) 20 meters (95%)
Real-Time Position-Code Differential	35 centimeter (CEP) 75 centimeters (95%)	40 centimeters (CEP) 90 centimeters (95%)	50 centimeters (CEP) 1 meter (95%)
Real-Time Position-RTK/Carrier Differential-Float mode	<10 centimeters (95%)	<10 centimeters (95%)	N/A
Real-Time Position- RTK/Carrier Differential- Fixed mode	1 centimeter (CEP) 2 centimeters (95%)	N/A	N/A
Velocity Accuracy-Autonomous	0.15 knots (mean) 0.30 knots (95%)	1 knots (mean) 4 knots (95%)	0.03 knots (mean) 0.05 knots (95%)
Velocity Accuracy-Code Differential	0.04 knots (mean) 0.1 knots (95%)	0.05 knots (mean) 0.1 knots (95%)	0.02 knots (mean) 0.05 knots (95%)
Velocity Accuracy-RTK/Carrier Differential-Float mode	0.02 meters/sec (mean) 0.05 meters/sec (95%)	0.02 meters/sec (mean) 0.05 meters/sec (95%)	N/A

**Table 1.2: Accuracy as Function of Mode**

Positioning Mode	GPS + GLONASS	GPS Only	GLONASS Only
Velocity Accuracy- RTK/Carrier Differential- Fixed mode	0.02 meters/sec (mean) 0.05 meters/sec (95%)	N/A	N/A



Position and velocity accuracy are for horizontal errors based on tests except for the 100 meter GPS value, which is the 2dRMS accuracy promised by the US Department of Defense. Tests were conducted in California and Moscow with 10° elevation mask angles, medium to high multipath environment. A GG24 Reference Station board was used to provide differential corrections over a short baseline. Differential data rate 300 bps, HDOP <4. Position accuracy specifications are for horizontal position. Vertical error <2X horizontal error.

## Receiver Options

Both versions of the GG24 have a number of internal receiver options. The commands and features you can use depend upon the options installed in the receiver. For example, if the Photogrammetry option is not installed, you cannot use the \$PASHS,TTT command to output event time tags from the serial port.

Table 1.3 lists the available options. Each option is represented by a letter or number presented in a certain order. You can verify the installed options by issuing the \$PASHQ,RID command to the receiver using an external handheld controller or PC, as described in Chapter 6, **Command/Response Formats**:

The response displays the options as a 14 character alphanumeric string at the end of the response message. For example:

\$PASHR,RID,G2,GE00,55OPUBILEGMJCS

If the letter or number is displayed in the response message, the option is available. If the letter/number is not displayed, the option is not available. Table 1.3 lists the available options

**Table 1.3: GG24 Receiver Options**

Option	Description
5 = 5 Hz 2 = 2 Hz 1 = 1 Hz	Position update rate
5 = 5 Hz 2 = 2 Hz 1 = 1 Hz	Raw measurement update rate
O	Raw data output

**Table 1.3: GG24 Receiver Options (Continued)**

Option	Description (Continued)
P	Carrier phase
U	Differential - remote station
B	Differential - base station
I	RAIM availability
L	Pulse per second (1 PPS)
E	Event/Photogrammetry
G	Geoidal height
M	Magnetic variation
J	Phase differential mode
-	Reserved for future use
S	GLONASS

### **[5,2,1] Position Update Rate**

Allows for position fixes to be issued one [1], two [2] or five [5] times per second.

### **[5,2,1] Raw Measurement Update Rate**

Allows for raw measurement messages to be issued one [1], two [2] or five [5] times per second.

### **[O] Raw Data Output**

The [O] option enables the output of raw data.

### **[P] Carrier Phase**

The [P] option enables output of carrier phase information within the measurement messages.

### **[U] RTCM Remote**

The [U] option allows the receiver to be used as a RTCM remote station capable of decoding and using real-time differential corrections.

The GG24 decodes RTCM-104, Version 2.2 format message types 1, 2, 3, 6, 9, 16, 22, 31, 32, and 34. If the [J] option is also enabled, the receiver can also decode and use the RTCM RTK messages 18 and 19.

## **[B] RTCM Base**

The **[B]** option allows the GG24 to be used as a RTCM differential base station capable of outputting real-time differential corrections.

The GG24 outputs RTCM-104, Version 2.2 format message types 1, 2, 3, 6, 9, 16, 22, 31, 32, and 34. If the **[J]** option is also enabled, the receiver can also generate the RTCM RTK messages 18 and 19.

## **[I] RAIM Availability**

The **[I]** option allows the receiver to utilize autonomous integrity monitoring. Only available in GG24E.

## **[L] Pulse Per Second (1PPS)**

The **[L]** option allows the GG24 to generate a 1 PPS signal.

## **[E] Event Marker**

The **[E]** option allows the output of a time trigger message (TTT) corresponding to the time event created by a trigger signal. The event marker is activated at the rising edge of the trigger signal by default, but can be set to respond to the falling edge on command.

## **[G] Geoid Height**

The **[G]** option uses a geoid model to compute orthometric elevation information.

## **[M] Magnetic Variation**

The **[M]** option uses magnetic variation table.

## **[J] Phase Differential Mode**

The **[J]** option allows the receiver to use the carrier phase differential (RTCM message 18 and 19) data for RTK. Both the **[B]** and **[J]** options must be enabled to generate type 18 and 19 messages from a base station. Both the **[V]** and **[J]** options must be enabled to use type 18 and 19 messages at a remote station.

## **[-] Reserved for Future Use**

## **[S] GLONASS**

The **[S]** option enables the tracking and use of GLONASS satellites

---

# Equipment

## Configurations

---

The GG24 receiver is available in two configurations, a bare OEM board and an enclosed version referred to as a sensor. Although the physical interfaces are different, the two versions are functionally very similar; the following items are the main differences:

1. The OEM board has two serial ports A and B, the sensor version has three A, B, and C
2. The sensor version has a built-in wide-range power supply

The following paragraphs describe the interface details of each configuration.


### OEM Board

#### Hardware Description

The OEM board (Figure 2.1) has two RS-232 serial ports embedded in a 64-pin connector. The RF circuitry receives satellite data from a GPS+GLONASS antenna and LNA via a coaxial cable, and can supply power to the antenna/LNA by means of that cable. No separate antenna power is required. The LNA power consumption is approximately 150 milliwatts (depends upon model and manufacturer).

The board includes a two-color LED; the LED lights red to indicate the power status, and flashes green to indicate the number of satellites locked, e.g., 4 green flashes indicate 4 satellites locked. GPS and GLONASS SATELLITE counts are separated by a yellow flash.


An external 2-color LED can be connected to the board by connecting the common cathode to ground, and the anodes connected to the LED-GRN and LED-RED pins. 100 Ohm resistors are in series with the output pins.

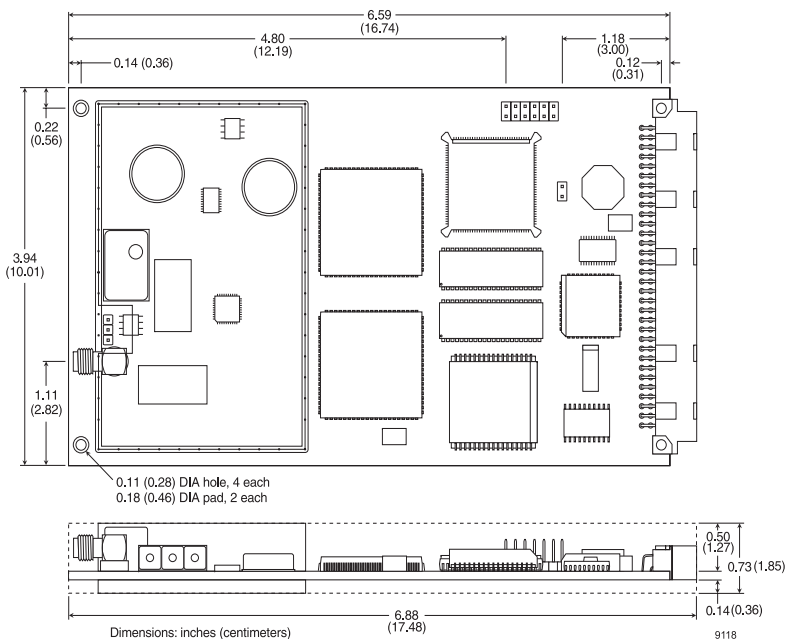

**Figure 2.1: GG24 OEM Board**

## Power/Input/Output Connections

Figure 2.2 shows the 64-pin on-line male power/input/output connector.

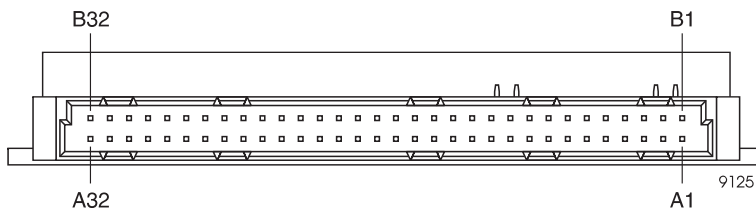

**Figure 2.2: GG24 OEM Board Interface Connector**

## CAUTION

To avoid damage to the GG24 board, do not apply power while connecting or disconnecting cables and ensure that when connecting the cable to the connector, pin 1 of your cable matches pin 1 of the connector.

This connector provides the input power interface, an external LED connection, a manual hardware reset input, one-pulse-per-second TTL output, photogrammetry input, measurement strobe input, variable frequency output, RS-232 I/O. Table 2.1 lists the pin assignments for the connector.

**Table 2.1:** Connector Pinout, OEM Board

Pin	Code	Pin	Code
A1	GND	B1	GND
A2	+5V input	B2	+5V input
A3	---	B3	---
A4	LNA GND	B4	LNA power
A5	---	B5	LED red
A6	---	B6	LED green
A7	Serial GND	B7	---
A8	---	B8	---
A9	Serial A TXD	B9	Serial A CTS
A10	Serial A RXD	B10	Serial A RTS
A11		B11	
A12		B12	
A13		B13	
A14		B14	
A15	Serial GND	B15	---
A16	---	B16	---
A17	Serial B TXD	B17	Serial B CTS
A18	Serial B RXD	B18	Serial B RTS
A19	---	B19	---
A20	---	B20	---
A21	GND	B21	Variable frequency output

**Table 2.1:** Connector Pinout, OEM Board (continued)

Pin	Code	Pin	Code
A22	GND	B22	1 PPS output
A23	GND	B23	Measurement strobe output
A24	GND	B24	Photo input
A25	GND	B25	---
A26	GND	B26	Reserved
A27	GND	B27	Reserved
A28	GND	B28	Manual reset input
A29	GND	B29	---
A30	GND	B30	Reserved
A31	GND	B31	Reserved
A32	GND	B32	Reserved

**CAUTION**

If MAN\_RES\* is not used, it should be left open. If used, MAN\_RES\* can be pulled to ground (GND) using a switch, or driven to ground with an open-collector gate to reset the GG24.

The 12-pin connector (J501) and the 2-pin connector (J601) on the board are for factory use only.

**Power Requirements**

Wattage: 1.8 watts

DC voltage: 5 volts DC, regulated  $\pm 5\%$

External wiring: At least 30 gauge

**Environmental Specifications**

The operating temperature range of the GG24 OEM board is -30°C to +70°C; storage range is -40°C to +85°C.

**RF Connector**

The RF connector is a standard 50-ohm SMA female wired for connection via coaxial cabling to a GPS antenna with integral LNA. The SMA connector shell is connected to the GG24 common ground. The SMA center pin provides +5 VDC to power the

LNA (maximum 100 mA draw) and accepts 1575-1616 MHz RF input from the antenna; the RF and DC signals share the same path.

### CAUTION

The GG24 may be damaged if the center pin of the RF connector is not isolated from DC ground. Provide a DC block between the center pin and ground. The block should have the following characteristics: VSWR 1.15 maximum, insertion loss 0.2 db maximum, and maximum voltage 5 VDC.


## Antenna

The GG24 works with an active antenna with LNA. An external LNA power source can be used (pin B4 of the DIN64 connector) by moving the jumper J102 from position 2-3 to position 1-2 (closest to LNA connector). The gain of the antenna/preamplifier minus the loss of the cable and connectors should be between 20 and 30 dB. Connect the antenna cable directly to the antenna connector on the GG24. Antenna cables exceeding 30 meters require a line amplifier. A Line Amp is available for longer cable length or cable with higher loss. The Line Amp has N-type connectors to connect to the antenna cable.

## Sensor

### Hardware Description

The sensor version (Figure 2.3) has four RS-232 input/output (I/O) ports embedded in a DB25 connector (ports A, B, and C are available for the user, while port D is an internal port), an L1-band radio-frequency (RF) port, an optional spread spectrum radio RF port, and an optional external frequency BNC port.

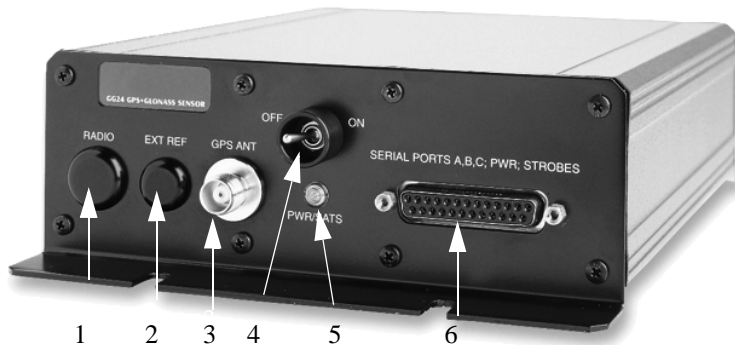

**Figure 2.3:** GG24 Sensor


Table 2.2 describes the front panel components of the GG24.

**Table 2.2.** GG24 Front Panel Description

Number	Component	Function
1	External Radio Connector	Allows connection to an external radio.
2	External Frequency Reference Connector	Allows input of external reference clocks Input frequencies 5 MHz, sinusoidal
3	Antenna Connector	The RF connector is a standard TNC-type female receptacle wired for connection via 50 $\Omega$ coaxial cabling to a GPS+GLONASS antenna with an integral LNA. The connector shell is connected to the GG24 common ground. The TNC-type connector center pin provides +5 VDC (to power the LNA) and accepts 1227 and 1575.42 MHz RF input from the antenna; the RF and DC signals share the same path.
4	On/Off Switch	Turns the receiver on and off.
5	Power Indicator/SV Indicator	Flashing red light indicates power is applied to the receiver. Number of green flashes indicates number of satellites the receiver is locked onto. A yellow flash separates the count between the number of GPS and GLONASS satellites the receiver is locked onto.
6	Serial / Power / I/O Port	The multi-function 25 pin connector serves as the 3 RS-232 serial input/output ports (ports A, B, and C), the power input, event marker input, and the 1PPS output.

# Mounting Dimensions


Figure 2.4 shows the mounting dimensions for the GG24 Sensor.

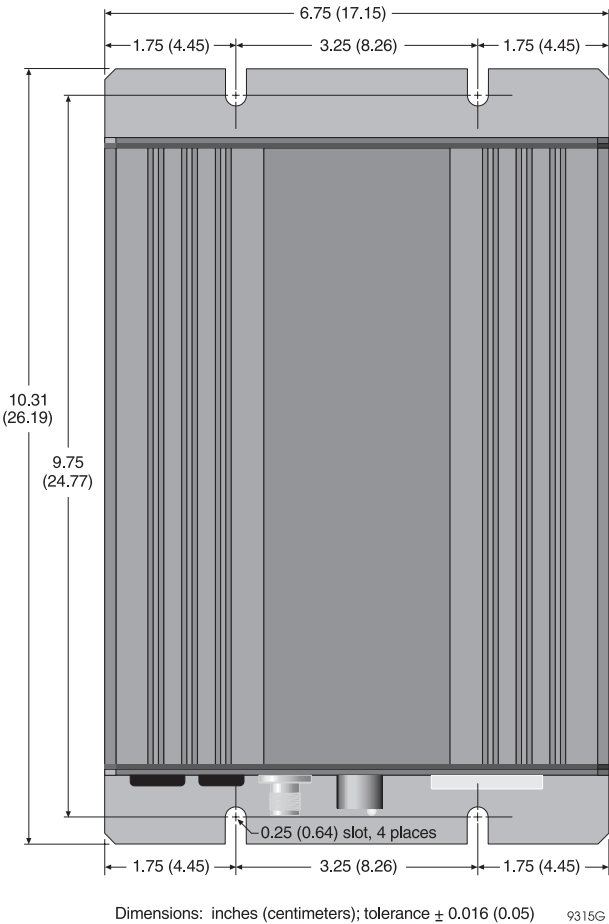

**Figure 2.4:** GG24 Sensor Mounting Dimensions

# Power/Input/Output Connector

A DB25 power/input/output connector provides the input power connection, an external LED connection, one-pulse-per-second TTL output, photogrammetry input, and RS-232 I/O (Figure 2.5).

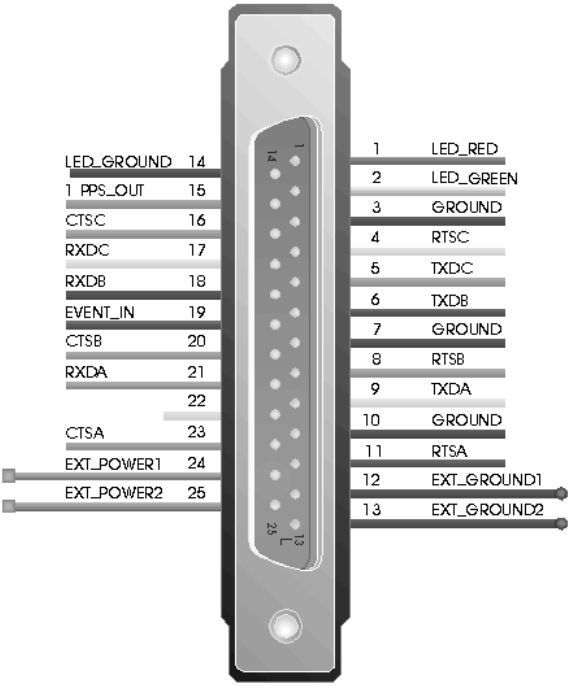

9276G-3

Figure 2.5: GG24 DB25 Connector

Table 2.3 lists the signal designations for the DB25 connector.

**CAUTION**

No power should be applied while connecting or disconnecting cables.

**Table 2.3:** GG24 DB25 Connector Pinout

Pin	Code	Pin	Code
1	LED RED	14	LED GND
2	LED GREEN	15	1PPS OUT
3	GND	16	CTSC - clear to send, port C
4	RTSC - ready to send, port C	17	RXDC - receive data, port C
5	TXDC - transmit data, port C	18	RXDB - receive data, port B
6	TXDB - transmit data, port	19	EVENT IN
7	GND	20	CTSB - clear to send, port B
8	RTSB - ready to send, port B	21	RXDA - receive data, port A
9	TXDA - transmit data, port A	22	No connection
10	GND	23	CTSA - clear to send, port A
11	RTSA - ready to send, port A	24	EXT PWR 1
12	GND	25	EXT PWR 2
13	GND		

## Power Requirements

Power: 3 watts

DC voltage: 6 to 15 volts, regulated  $\pm 5\%$

External wiring: 30 gauge or larger

## Environmental Specifications

The operating temperature range of the GG24 is -30°C to +55°C;

Storage temperature range is -40°C to +85°C.

## RF Connector

The RF connector is a standard 50-ohm female TNC wired for connection via coaxial cabling to a GPS antenna with integral LNA. The TNC connector shell is connected to the GG24 common ground. The TNC center pin provides +5 VDC to power the


LNA (maximum 100 mA draw) and accepts 1575-1616 MHz RF input from the antenna; the RF and DC signals share the same path.

### CAUTION

The GG24 may be damaged if the connector center pin is not isolated from DC ground. Provide a DC block between the center pin and ground in case an external power supply to the LNA is used; the DC block should have the following characteristics: VSWR 1.15 maximum, insertion loss 0.2 dB maximum, maximum voltage 5 VDC.

## Serial/Power Cable

The serial/power cable (fig) connect the GG24 to the power source, the PC or handheld unit and any peripherals.

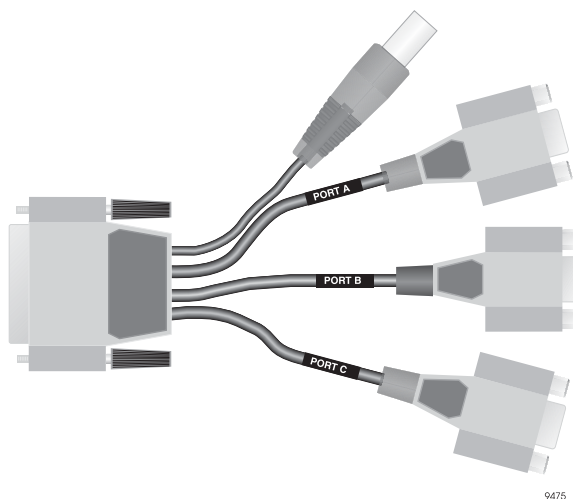

**Figure 2.6.** Serial/Power Cable

## Antenna

The GG24 works with an active antenna. The gain of the antenna/preamplifier minus the loss of the cable and connectors should be between 20 and 30 dB. Connect the antenna cable directly to the antenna connector on the GG24. Antenna cables exceeding 30 meters require a line amplifier. A Line Amp is available for longer cable length or cable with higher loss. The Line Amp has N-type connectors to connect to the antenna cable.

## Spread Spectrum Radio Antenna Connection (Option, Sensor Only)

The spread spectrum connector is an optional feature that allows you to connect a spread spectrum receiver to the sensor. The connector uses reverse polarity to comply with FCC spread spectrum standards. Table 2.4 summarizes the spread spectrum parameters.

**Table 2.4:** Spread Spectrum Parameters


Parameter	Specification (Magellan Spread Spectrum Radio)
Input impedance	50 ohms
Output Power	900 me
Frequency range	902 to 928 MHz
Port Rate	150 to 28800 baud
Radio Communication Rate	4800,9600,19200 baud
Data Rate	> ½ of radio communication rate
Frequency steps	50 KHz, 100 KHz, 150 KHz
Hopping Cycle	50, 75, 150

## Radio Interference


Some radio transmitters and receivers, such as FM radios, can interfere with the operation of GPS receivers. Magellan recommends that you verify that nearby handled or mobile communications devices do not interfere with the GG24 receivers before setting up your project.

## Inventory of GG24 Evaluation Kits

If you purchased a GG24 Sensor or GG24 OEM board Evaluation Kit, use Figure 2.7 through Figure 2.10 to verify you received all items shown.

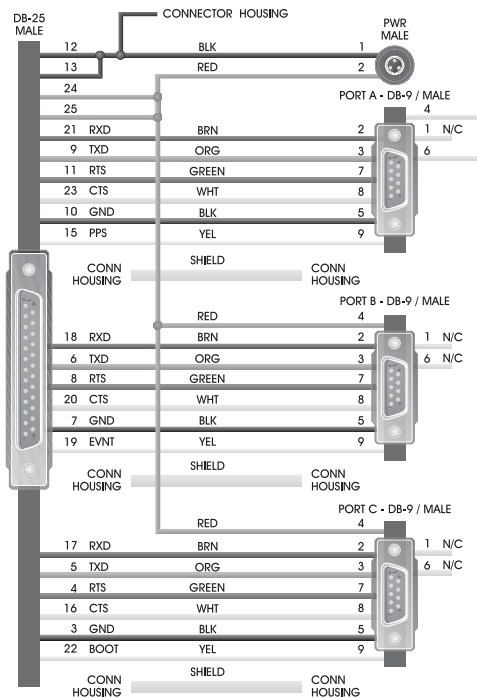

From: 730124

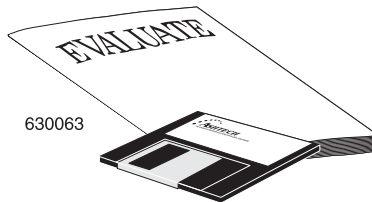

**Figure 2.7. GG24 Sensor Evaluation Kit**




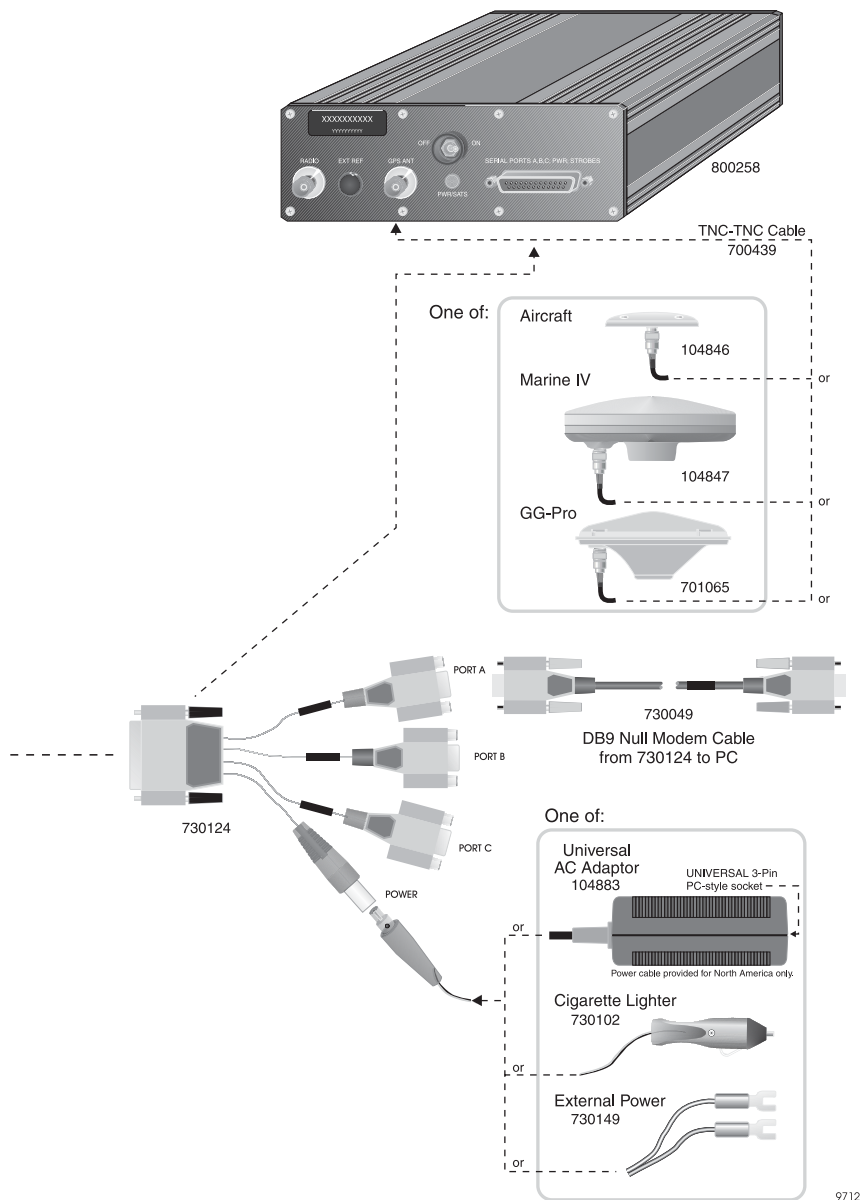


Figure 2.8. GG24 Sensor Evaluation Kit Continued

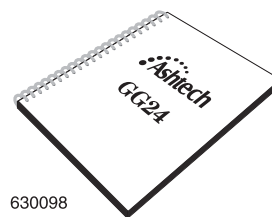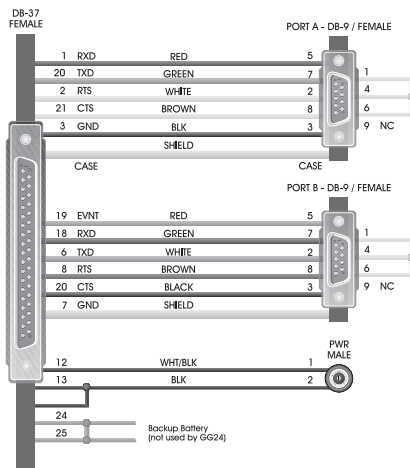


630098

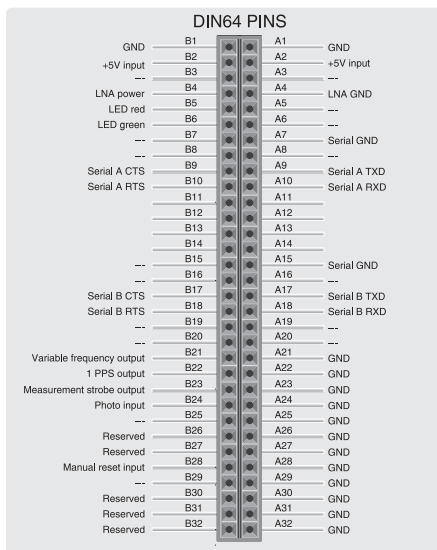

630063

**Figure 2.9. GG24 OEM Board Evaluation Kit**

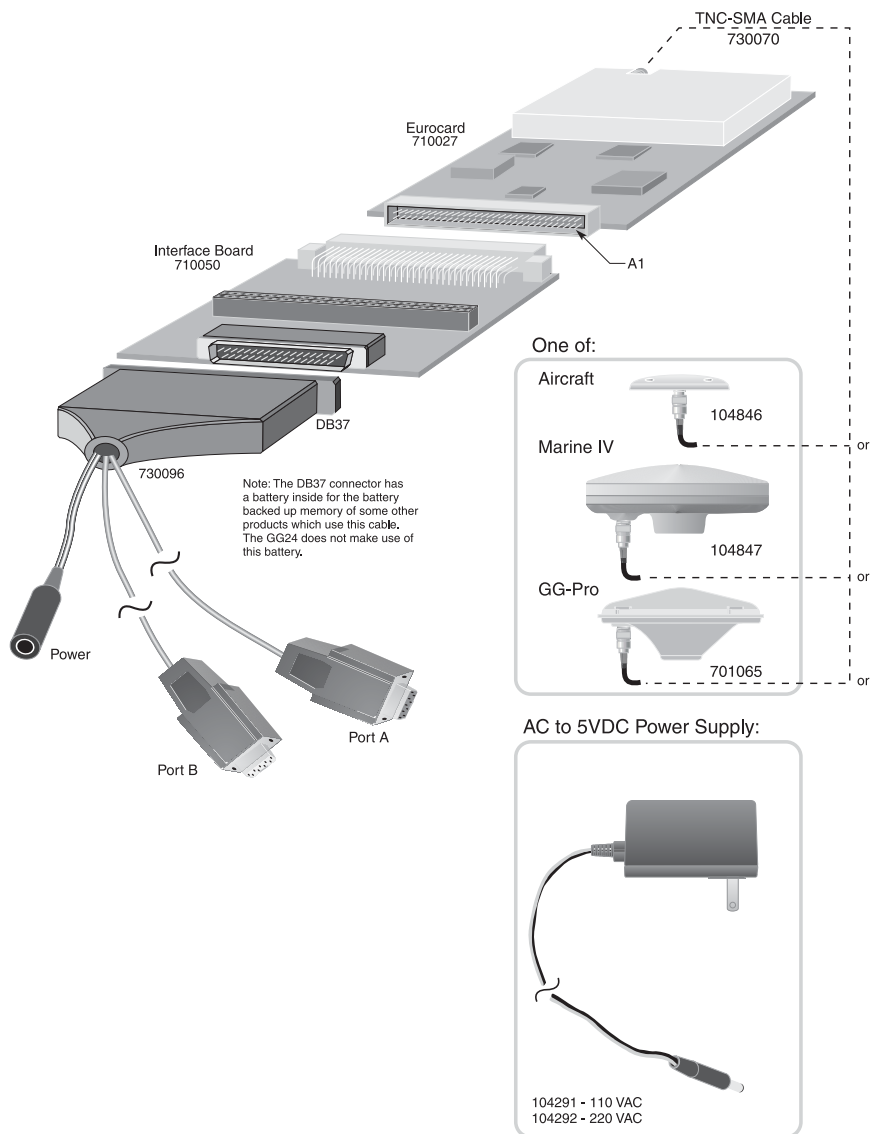

9713

**Figure 2.10. GG24 OEM Board Evaluation Kit Continued**



# Standard Operation

This chapter discusses system setup, power-up, command format, serial port configuration, parameter settings and status.

## Power Connection Procedures

If you plan to use equipment not supplied by Magellan, it must meet the hardware specifications described in “Technical Specifications” on page 2.

### OEM Board

Applying power to the power input pins on the DIN64 connector starts GG24 operation. Before applying power, connect any controller devices or data logging equipment to the input/output ports of the GG24 by way of the DIN64 connector.

Removing power from the power input pins on the DIN64 connector stops GG24 operation.

#### CAUTION

**To avoid damage to the GG24, always turn off the power supply before connecting or disconnecting the DIN64 connector.**

1. Connect the female DIN64 connector to the male DIN64 connector on the GG24 before applying power.
2. Connect the power cable to the power supply.

Upon power-up, the status LED lights red and continues to flash red indicating the unit is on but no position computed. When the GG24's automatic search results in a satellite acquisition, the status LED flashes green between the red power status flashes. Every satellite lock-on produces a green flash, where a short green flash indicates the satellite is locked but not being used; and a long green flash indicates that the satellite is being used. Once the GG24 locks to enough satellites to compute a position, the red flash turns into a longer flash, indicating a position computation. To differentiate between locked GPS and GLONASS satellites, the LED blinks first green for each locked GPS satellite, then it blinks yellow once, and then blinks green for each locked GLONASS satellite.

## Sensor

Before applying power, connect any controller devices or data logging equipment to the input/output ports of the GG24 Sensor by way of the DB25 connector. Apply power by setting the ON/OFF switch to ON.

### CAUTION

**To avoid damage to the GG24, always turn off the power supply before connecting or disconnecting the DB25 connector.**

Upon power-up, the status LED lights red and continues to flash red indicating the unit is on but no position computed. When the GG24's automatic search results in a satellite acquisition, the status LED flashes green between the red power status flashes. Every satellite lock-on produces a green flash, where a short green flash indicates the satellite is locked but not being used; and a long green flash indicates that the satellite is being used. Once the GG24 locks to enough satellites to compute a position, the red flash turns into a longer flash, indicating a position computation. To differentiate between locked GPS and GLONASS satellites, the LED blinks first green for each locked GPS satellite, then it blinks yellow once, and then blinks green for each locked GLONASS satellite.

## Receiver Communication

After you have the GG24 Sensor powered and running, you must send it commands in order to receive data and change parameters. Specially designed software which runs on the Husky FS/2 handheld computer can be obtained from Magellan to perform a variety specific applications. A personal computer can also be used to communicate with the receiver. The following procedure describes how to send commands to and receive information from the GG24 Sensor using a personal computer. Many communications software packages, such as the Magellan EVALUATE software, allow you to interface with the receiver. EVALUATE includes a communications package that automatically establishes communication with the receiver.

1. Connect port A of the serial cable to either COM 1 or COM 2 of your computer.

2. Run the communication software of your choice. Set the communication parameters in the software to match the computer and receiver.

The default communication parameters of the receiver are:

9600 baud, 8 data bits, no parity, one stop bit

When you first establish communication with the receiver, your communication interface must use this protocol.

3. Once the correct parameters have been set, type: \$PASHQ,PRT and press <Enter> to query the communication setup of the port and verify that communication with the receiver is established.

If the software and receiver are set up properly, the receiver responds with the message:

\$PASHR , PRT , A , 5

If a response message is not generated, recheck your cable connections and communication parameters, and verify that the receiver is powered on.

## Receiver Monitoring

Once the receiver has been powered on, connected to an antenna, and communications established, commands may be issued to check the status of the receiver and monitor receiver accuracy. The following examples serve as an introduction to controlling the receiver. For a complete list of commands, see Chapter 6, **Command/Response Formats**.

## Satellite Tracking

If you wish to monitor the satellites the receiver is tracking,

1. Type: \$PASHQ,STA and press <Enter> to query which satellites are locked and their signal strength at the time the command is sent.

The response message typically might display:

```
TIME: 18:38:31 UTC
LOCKED: 03 23 16 39 54
COUNT: 54 26 17 31 35
```

This message indicates that the current UTC time is 18:38:31, the PRN # of locked GPS satellites are 01 to 24 and the PRN # of GLONASS satellites are 33 to 56.

## Position

If you wish to view the current position,

1. Type: \$PASHQ,POS and press <Enter> to query the position message.  
The response message displays an ASCII string beginning with the header:  
\$PASHR, POS,  
The message contains time, position, velocity, and DOP values. For further description of the POS message, see “POS: Position Message” on page 184.

## Saving Parameter Settings

Ordinarily, receiver parameters that have been changed return to their factory default status after a power cycle. To save the receiver settings,

1. Type: \$PASHS<SAV<Y and press <Enter>.

For details on these commands and responses, as well as the rest of the GG24 Sensor command and response repertoire, refer to Chapter 6, **Command/Response Formats**.

## Receiver Initialization

---

It is good practice to reset the receiver prior to operating it for the first time or if a system malfunction occurs. A reset of the internal memory clears the memory and restores the receiver to factory defaults.

To reset the receiver, send the receiver command: \$PASHS,INI,5,5,5,5,3 <Enter>

---

# Advanced Operation

## Receiver Communications

---

The built-in command/response firmware allocates the RS-232 ports (A,B, and C) to receive command messages from an external control device, to send response messages to a single external control device (such as a PC), to output data to a separate data logging device, and to send or receive differential corrections from a reference or remote station, respectively. Messages are summarized in this chapter and covered in detail in Chapter 6, **Command/Response Formats**.

### Input Messages to the GG24

The input messages comprise set command messages or query command messages that either change receiver parameters or request receiver information.

Generally speaking, all set and query commands fall into one of five categories:

- general receiver commands
- NMEA message commands
- raw data commands
- RTCM commands
- CPD (carrier phase differential commands)

All command messages (set or query) can be in upper or lower case followed by <Enter>. A valid set command, if this command is successfully executed, causes the to return the \$PASHR,ACK\*3D, "acknowledged" response message. Valid query commands are acknowledged by return of the requested information. A set command containing a valid \$PASHS set command header, followed by character combinations or parameters unrecognized returns the \$PASHR,NAK\*30 "not-acknowledged" response message. All other invalid commands are ignored.

### Output Messages From the GG24

Output messages are messages the GG24 sends to the data logging device in response to a set or query command. Output messages comprise GG24 general status messages, command acknowledged/not acknowledged messages, and GPS data messages. The GG24 general status messages are in free-form Magellan proprietary formats. The command acknowledged/not acknowledged messages and GPS data messages are in ASCII format while the raw data messages output in binary format.

## Serial Port Configuration

The GG24 provides RS-232 serial ports with two-way full-duplex communication. The default transmit/receive protocol is 9600 baud, eight data bits, no parity, and one stop bit (8N1). The baud rate of the GG24 ports is adjustable using the \$PASHS,SPD speed set command; the data bit, stop bit, and parity protocol is always 8N1.

On initial power-up or after use of the \$PASHS,INI (memory reset) command, or the \$PASHS,RST (reset to defaults) command, the GG24 defaults to 9600 baud for all RS-232 serial ports.



**The baud rates between the GG24 and the interfacing equipment must be the same for the port and the device connected to the port.**

To resume communication with the GG24 after changing the baud rate using the \$PASHS,SPD set command, change the baud rate of the command device.

## Parameter Settings and Status

Receiver parameters are changed by using one of the set commands found in Chapter 6, **Command/Response Formats**. Most parameters are not saved through a power cycle unless saved using the SAVE command (\$PASHS,SAV,Y). If the parameters have been saved, the default parameters can be retrieved using either the \$PASHS,SAV,N command and a power cycle, the \$PASHS,RST command, or the \$PASHS,INI command. See Chapter 6, **Command/Response Formats** for more information.

The current settings of receiver parameters can be viewed using the query commands. Many individual parameters have a unique query that can be used to check their status. However, there are 4 main query commands that can be used to check multiple parameters at one time. Each of these query commands relates to a particular area:

- \$PASHQ,PAR - queries general receiver parameters
- \$PASHQ,RAW - queries raw data parameters
- \$PASHQ,RTC - queries RTCM differential parameters
- \$PASHQ,CPD - queries carrier phase differential parameters

The response to each of these queries is in free form format.

Figure 4.1 shows a typical response message for the general receiver parameters default values of the query command \$PASHQ,PAR. See “PAR: Query Receiver Parameters” on page 96 for more information.

```
SPDA:5 SPDB:5 SPDC:5 SPDD:5
GPS:YYYYYYYYYYYYYYYYYYYYYYYYYYYYYYY
GLO:YYYYYYYYYYYYYYYYYYYYYYYYYYY
SYS:MIX DTM:W84 GTM:0 GTF:0 DTG:+000000.0000 TDP:04 GTP:Y
PMD:1 FIX:0 ALT:+00000.00 PDP:40 HDP:04 VDP:04
PEM:05 UNH:N ION:N SAV:N
RTC:OFF PRT:A
NMEA: LTN AIM POS GLL GXP GGA VTG GSN MSG GSA SAT GRS RRE TTT ZDA TCM RMC GST
PRTA: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTB: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTC: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTD: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
PER:001.00
```

**Figure 4.1:\$PASHR,PAR Default Response Message**

The \$PASHQ,RAW query is available only if the Binary Data Outputs option [O] is installed in the receiver. Figure 4.2 shows a typical response message for the raw data parameters default values of \$PASHQ,RAW. See “\$PASHQ,RAW,x” on page 128 for more information.

```
RCI:020.00 MSV:3 ELM:05 REC:Y
ANH:0.0000 SIT:???? EPG:000 RNG:0
RAW: MBN PBN SNV SAL MCA MSB GGB SNG SAG
PRTA: OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTB: OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTC: OFF OFF OFF OFF OFF OFF OFF OFF OFF
PRTD: OFF OFF OFF OFF OFF OFF OFF OFF OFF
```

**Figure 4.2:\$PASHR,RAW Default Response Message**

The \$PASHQ,RTC query is available only if one of the RTCM differential options [B or U] are installed in the receiver. Figure 4.3 shows a typical response message for the

RTCM differential parameters and status default values of \$PASHQ,RTC. See “\$PASHQ,RTC,c” on page 206 for more information.

```

STATUS:
    SYNC:      TYPE:00    STID:0000  STHE:0
    AGE:+999    QA:100.0%  OFFSET:00

SETUP:
    MODE:OFF   PORT:A     AUT:N
    SPD:0300   STI:0000   STH:0
    MAX:0060   QAF:100    SEQ:N
    TYP:1  2   3   6   9   16  31  32  6G  34  36
    FRQ:99 00 00 OFF 00 00 99 00 OFF 00 00

BASE:  LAT:0000.0000,N  LON:00000.00000,W  ALT:+00000.00 WGS
MSG:    first 45 characters of RTCM type 16 message
        next 45 characters of RTCM type 16 message
MSG (GLO):first 45 characters of RTCM GLONASS type 36 message
        next 45 characters of RTCM GLONASS type 36 message

```

**Figure 4.3:\$PASHR,RTC Default Response Message**

The \$PASHQ,CPD query is available only if the carrier phase option [P] is installed in the receiver. Figure 4.4 shows a typical response message for the carrier phase differential parameters and status default values of \$PASHQ,CPD. See “\$PASHQ,CPD,c” on page 213 for more information.

```

STATUS:
    RST_TIME:000000  FIX_TIME:000000
    LATENCY:0046  AMB:FIXED  LENGTH:00000.0011  VELOCITY:000.0037
    ROV_SV: 04 14 16 18 19 22 25 29 42 - 44 52
    BAS_SV: 04 14 16 18 19 22 25 29 42 43 44 52
    BASE POSITION:RECEIVED 3759.729431 N 12159.549345 W -4.790
    ID:0000
    BASE_DELTA:RECEIVED
SETUP:
    MODE:ROV  PORT:B  SYS:MIX  PEM:10
    FST:ON  FST_RATE:02  AFP:99.0  MAXAGE:30

```

**Figure 4.4:\$PASHR,CPD Default Response Message**



The query commands \$PASHQ,PAR, \$PASHQ,RAW, \$PASHQ,RTC, and \$PASHQ,CPD are intended for use with an interface such as a computer screen. The response messages are formatted to display correctly on a screen; they are not intended as machine-readable messages. Magellan recommends using the one-line response messages for automated applications.

## Default Parameters

During the normal course of receiver operation, a typical user often changes one or more receiver parameters such as recording interval, port baud rate, or elevation mask. To save new settings, the user must save the current setting to memory or else all parameters reset to the default values during a power cycle. Saving parameters to memory can be done by issuing the \$PASHS,SAV,Y command. When parameters are saved to the memory, then they are maintained until a memory reset or a receiver initialization is performed which resets all parameters back to their factory default.

Table 4.1 lists the default values of all user parameters.

**Table 4.1:** Default Receiver Parameters

Parameter	Description	Default
SVS	SV Tracking Selection	Y for all
PMD	Position Mode Selection	1
FIX	Altitude Hold Fix Mode Selection	0
PEM	Position Elevation Mask	5
PDP	Position Dilution of Precision Mask	40
HPD	Horizontal Dilution of Precision Mask	04
VDP	Vertical Dilution of Precision Mask	04
ION	Enable Ionosphere Model	N
PPO	Enable point Positioning Mode	N
SAV	Save parameters in Battery Backup Memory	N
LAT	Antenna Latitude	00N
LON	Antenna Longitude	00W
ALT	Antenna Altitude	+00000.000
DTM	Datum Selection	W84
UDD	Datum Users Defined Parameters	Semi Mayor Axis = 6378137 Inverse Flattening = 298.3 Remaining parameters = 0
PHE	Photogrammetry Edge Selection	R
PPS	Pulse per Second Default Parameters	Period= 0, Offset = 000.0000 Edge = R
POW parameters	Power Capacity of External Battery	ALL 0'S

**Table 4.1: Default Receiver Parameters**

Parameter	Description	Default
NMEA messages	NMEA Message Output Status	OFF in all ports
PER	NMEA Messages Output Rate	001.0
RCI	Raw Data Output Rate	020.0
MSV	Minimum Number of SV's for Data Recording	03
ELM	Elevation Mask for Data Recording	5
SIT	Site ID Name	????
EPG	Kinematic Epoch Counter	000
RAW data	Raw Data Output Status	OFF in all ports
Raw data format	Raw Data Output Format	Binary
Serial Port Baud Rate	Serial Ports Baud Rate Selection	9600 in all ports
RTCM MODE	RTCM Differential Mode Selection	OFF
RTCM PORT	RTCM Differential Mode Port Selection	B
AUT	Automatic Differential/Autonomous switching when RTCM Differential Mode Enabled	N
RTCM SPD	RTCM Differential BPS Speed Setting	0300
STI	RTCM Base or Remote Station ID Setting	0000
STH	RTCM Base Station Health Setting	0
MAX	Maximum Age for old RTCM Corrections to be Used	0030
QAF	RTCM Communication Quality Setting	100
SEQ	Use Sequence Number of RTCM Correction in Remote Station	N
TYPE	RTCM differential Messages Enabled and Output Frequency of the Enabled Messages	1 = 99, 31 = 99, 6 = OFF, 6G = OFF, remaining messages = 00
RTCM EOT	End of Character Selection for RTCM Corrections	CRLF
CPD MODE	CPD Mode Selection	OFF
AFP	Setting of Ambiguity Fixing Confidence Level	099.0
CPD POS	Reference Position of the other Receiver	RECEIVED
FST	Fast CPD Mode Selection	ON

## Position Mode/ALT Fix Mode

Because the GG24 mixes two different constellation systems (GPS and GLONASS) to determine position, and the clocks between these two systems are not synchronized. The GG24 initially needs to track a minimum of 5 satellites (any combination of GPS and GLONASS satellites) to compute a 3D position, or four satellites to compute a 2D position.

The GG24 has three commands that control the position mode and fix the altitude or time shift between system clocks. These commands enable the GG24 to compute a 3D position using only four satellites, or a 2D position using only 3 satellites. The commands are PMD, GTM, and GTP.

The GG24 performs a position computation in four different modes: 0, 1, 2, or 3. These modes determine the number of satellites required to compute a 3D or 2D position, and depend upon the priority in which the altitude or time shift are held fixed. The position modes are set with command \$PASHS,PMD and depend upon the setting of GTM (whether to compute time shift or hold it fixed), and GTP (set priority to hold fixed time shift over altitude, or vice versa) when the number of used satellites is fewer than 5. See “\$PASHS,PMD,d” on page 99 for more information.

In **mode 0** with GTM set to 0 (time shift not held fixed), at least 5 satellites with elevation equal to or above the position elevation mask are required to compute a 3D position. With GTM set to 1 (time shift held fixed if number of satellites fewer than 5), or 2 (time shift held fixed), four satellites are required to compute a 3D position; 2D position is not computed in this mode.

In **mode 1** depending upon the setting of GTM and GTP, five or four satellites are required to compute a 3D position, and four or three satellites to compute a 2D position.

In **mode 2** depending upon the setting of GTM, three or four satellites are required to compute a position. In this mode, altitude is always held fixed and only 2D position is computed.

In **mode 3** depending upon the setting of GTM and GTP, three or four satellites are required to compute a 2D position. To compute a 3D position, four or five satellites are required, and the computed HDOP must be less than the HDOP mask. If HDOP is higher than the mask, a 2D position is computed.

### Altitude Definition

Two modes define the altitude selected when the GG24 is in altitude hold mode. Use the \$PASHS,FIX set command can be used to select between these modes. See “\$PASHS,FIX,x” on page 88 for more information.

In **mode 0** the most recent altitude is used. This is either the one entered by using the \$PASHS,ALT set command or the one computed when four or more satellites are used in the solution, whichever is most recent. If the last altitude is the one computed with four or more satellites, it is used only if VDOP is less than the VDOP mask.

In **mode 1** only the last altitude entered is used in the position fix solution.

On initial power-up or after use of the \$PASHS,INI memory reset command, or \$PASHS,RST default parameter reset command, the most recent antenna altitude is set to 0.

## Time Shift Hold Definition

Two modes determine what time shift is selected when the GG24 is in time shift hold mode. The \$PASHS,GTF command selects the mode, 0 or 1. See “\$PASHS,GTF,d” on page 88 for more information.

In **mode 0**, the GG24 uses most recent computed time shift is used: the time shift entered with the \$PASHS,DTG command, or the time shift computed in the position solution. If the most recent time shift is from the position solution, it is used only if TDOP is less than the TDOP mask.

In **mode 1**, the GG24 uses only the last time shift entered using \$PASHS,DTG in the position solution. The GG24 does not compute a position when the time shift entered using the \$PASHS,DTG, if this command is not close to the real time shift (varies slightly, current value -1.3  $\mu$ sec).

## Daisy Chain Mode

---

The Daisy Chain mode establishes a communication link through the GPS receiver, between a PC/handheld and a peripheral device. When the GPS receiver is in Daisy Chain mode, all commands entering one serial port are passed back out through another serial port. The commands are not interpreted by the GPS receiver. The command \$PASHS,DSY enables the Daisy Chain mode and allows the user to assign which serial ports to be used. A typical example of the use of Daisy Chain mode is communicating with a radio through a handheld. The radio and handheld are not directly connected but are both connected to the GPS receiver via separate serial ports. By enabling the Daisy Chain mode between the two serial ports used by the handheld and radio, the handheld can communicate with the radio through the GPS receiver. Refer to “\$PASHS,DSY,x,y” on page 82.

## Pulse Generation (1PPS) and Strobe


---

When the 1PPS [L] option is installed, the GG24 provides the capability of a 1 pulse-per-second (1PPS) signal synchronized with receiver time. If the GG24 is set to use the GPS constellation, the 1PPS pulse synchronizes with GPS system time. If it is set to use the GLONASS constellation only, the 1PPS pulse synchronizes with GLONASS system time. If it is set to use a mixed constellation, it synchronizes with the time selected by the TSC command (default is GPS system time).

The PPS signal is TTL-level into a 75-ohm impedance. 1PPS is generated by default once every second with its rising or falling edge (selectable) synchronized to GPS or GLONASS system time. Using the \$PASHS,PPS command, the period of the PPS may be changed from 0.2 second up to 999 seconds, depending upon the receiver update rate; the PPS may be offset from the reference time with a resolution of 100 nanoseconds, and the synchronization edge can be set to rising or falling.


In order to provide notification to peripheral equipment and software with respect to time tagging the instant of the 1PPS pulse, it is necessary to request the output of the PBN raw data structure. The GPS system time contained in the PBN message plus one second is the time of the next 1PPS pulse that occurs (Figure 4.5). This PBN time is already internally rounded to GPS system time so it is the actual time to which the navigation 1PPS pulse generation which preceded it (unless that pulse has been

intentionally advanced or retarded). The data latency of this PBN message is normally about 40 milliseconds after the 1PPS pulse.

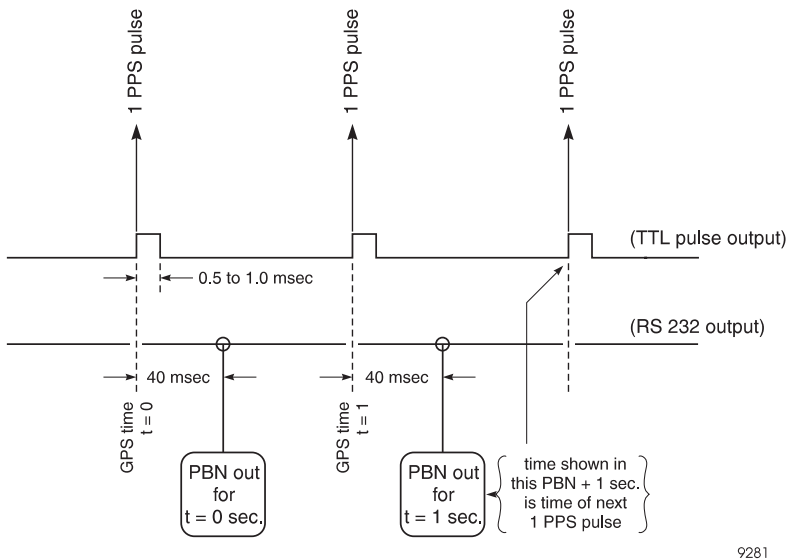

**Figure 4.5:**Relationship of GPS Time in PBN Record to 1 PPS Pulse

Figure 4.6 shows the PPS characteristics. The PPS occurs when the signal goes high. The PPS is generated exactly on the GPS second, and the pulse remains high for 1-2 milliseconds. The precision of the PPS signal is 70 nsec (nanoseconds) in stand-alone mode, and 45 nsec in differential mode. A position must be computed for this accuracy to be valid.

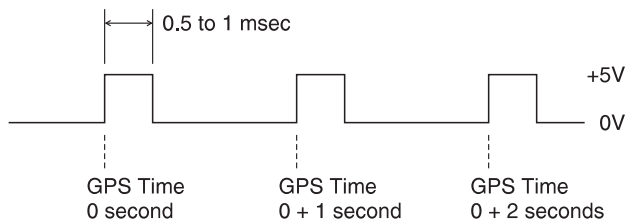

**Figure 4.6:**1PPS Characteristics

The 1PPS option [L] also controls the output of the Measurement Strobe output. The Measurement Strobe output is TTL-level into a 75-ohm impedance. Its output is controlled by the \$PASHS,STB command, and is synchronized with GPS or GLONASS system time, depending upon the constellation selected. The period depends upon the xxxx value and the setting of the RCI parameter. The ±yyy.yyyy field allows you to set an offset value from reference time with a resolution of 100 nanoseconds, and also allows you to synchronize the rising or falling edge of the output with reference time. The accuracy of the measurement strobe output is the same as the accuracy of the 1PPS pulse (Table 4.2).

**Table 4.2:** PPS and Photogrammetry Accuracy

Condition	Accuracy
Setting PPS resolution	100 ns
PPS accuracy GPS+GLONASS stand-alone	~70 ns
PPS accuracy GLONASS stand-alone	~70 ns
PPS accuracy GPS stand-alone	~340 ns
PPS accuracy differential mode	~45 ns
Setting photogrammetry TTT output resolution	100 ns
Photogrammetry accuracy GPS+GLONASS stand-alone	~160 ns
Photogrammetry accuracy GLONASS stand-alone	~160 ns
Photogrammetry accuracy GPS with SA ON stand-alone	~430 ns


## Photogrammetry Event Marking

When the photogrammetry [E] option is installed, the GG24 can measure and record event times with high accuracy. The input signal is TTL level into a 5 K $\Omega$  impedance. The photogrammetry feature allows the event time to be output by using the \$PASHS,NME,TTT command.

At the rising or falling edge (selectable) of the trigger signal, the time is measured and output of TTT NMEA message is enabled. The trigger signal can be set to the rising or falling edge using the \$PASHS,PHE (photogrammetry edge) command.

The measured time is accurate to 120 nanoseconds. If the constellation system is set to GPS, this time is GPS system time; if the constellation system is set to GLONASS, this time is GLONASS system time, which is equal to UTC + 3 hours; if the constellation system is set to mixed, this time depends upon the TSC setting (default is GPS). The time is output as day number, hours, minutes, seconds, and fractional seconds up to 6 digits.

The photogrammetry time measures the event time relative to the receiver's time. It measures only the first event during the period between 2 epochs. See Figure 4.7

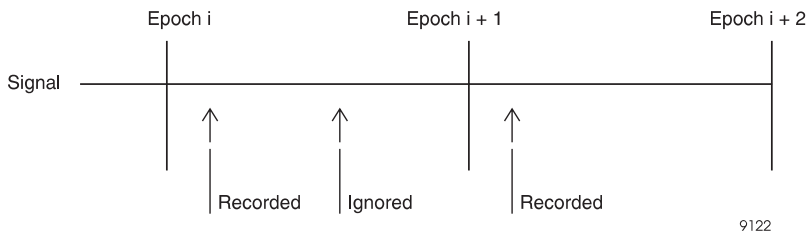

**Figure 4.7:**Photogrammetry Timing

#### CAUTION

**The GG24 measures only one event time per data collection period. If more than one event time is measured within a data collection period, the receiver measures only the first one. The event time record rate is then dependent upon the setting of the RCI parameter.**

Because the 1 PPS signal is being used to measure the photogrammetry events, the period of the 1 PPS signal needs to be set to a value equal to or less than the period of the photogrammetry pulse.

The trigger pulse may be TTL-compatible or open collector. Minimum pulse duration is 100 nanoseconds. The impedance is approximately 2K ohms.

Usage of a coaxial connection cable is recommended.


## Time Tagging the Shutter Signal

In this technique, the signal generated by the camera shutter is fed to a GPS receiver for accurate time-tagging which can then be post-processed with the GPS observations. Since the time of the picture is not synchronized with the time that the GPS measurement is taken, the two position computations before and after the shutter time are interpolated to compute the position of the camera at the time the picture was taken.

For instance, if GPS measurements are recorded at the rate of one per second, the distance the aircraft moves in  $\frac{1}{2}$  second is about 100 meters. Therefore, the distance between the position of the camera at the time the picture was taken and the GPS position fixes can be as much as 50 meters. The motion of the aircraft during this time may be in the meter range. To minimize the errors discussed above, the closed loop technique is recommended.

## Closed-Loop Technique (Advanced Trigger)

The closed-loop technique combines PPS synchronization and shutter timing as shown in Figure 4.8.

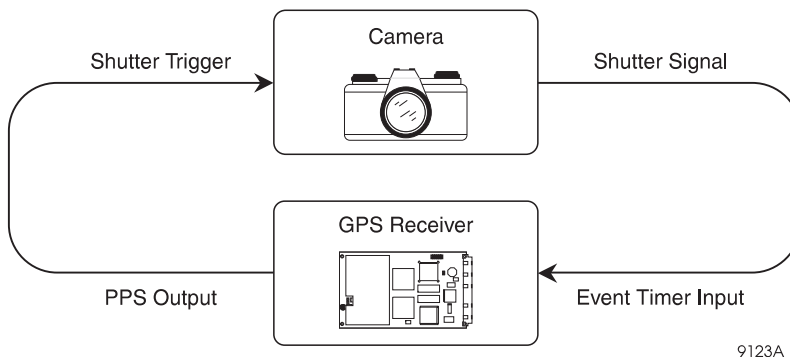

**Figure 4.8:**Closed Loop Technique

In this technique, the 1PPS output of the GG24 triggers a camera shutter. The camera shutter generates a signal that is fed to the GG24 for accurate time tagging.

The delay between the camera receiving the pulse and triggering the photogrammetry port should be calculated. This may then be applied so as to advance the 1PPS from the GG24 so that the shutter time exactly matches the GPS system time for the epoch. No interpolation between the shutter time and the GPS position time will be needed.

## Data Output

Real time data output is only available through the three RS-232 ports. Refer to “NMEA Data Message Commands” on page 138 and “Raw Data Commands” on page 121 for more details. There are three types of messages:

- **NMEA**

NMEA is a standard data transfer format developed to permit ready and satisfactory data communication between electronic marine instruments, navigation equipment and communications equipment when interconnected via an appropriate system. This is data in printable ASCII format and may include information such as position, speed, frequency allocation, etc. Typical messages might be 20 to a maximum of 79 characters in length and generally require transmission no more often than once per second.

- **Proprietary**  
When specific information was needed, and the NMEA standard did not contain a suitable message, Magellan created proprietary messages in a NMEA style format. Messages are available in ASCII.
- **RAW**  
Raw Data outputs in binary format and includes measurement data, ephemeris data, almanac data, and position data.

The receiver has two options which affect the rate at which data output: position update rate and Raw measurement update rate. The highest output rate supported under different conditions is 5 Hz.

## 5 Hz Output

The GG24, as an option, provides the capability of 5 Hz internal receiver update rate, allowing raw data and NMEA data to be output every 0.2 seconds. Two options are available to control this feature: the position update rate option for NMEA output rate, and raw measurement update rate for raw data output. See “Receiver Options” on page 4 for more information. Because of CPU power limitation, when this option is set, the receiver will update at 2 Hz until command \$PASHS,POP,5 is issued. When updating at 5 Hz, the receiver will use only 16 satellites in the position solution, although it will track all available satellites. During the period while 5 HZ update is not required, you can revert to 2 HZ and use all available satellites in the position solution by issuing the command \$PASHS,POP,2.

### CAUTION

**When collecting data at 5 Hz, because of large amounts of data being output through the serial ports, a 486-66 MHz or Pentium™ computer with a fast serial and parallel port card (i.e., 16550 serial and parallel card) is recommended. The serial port baud rate should be set to a baud rate above 38K.**

## NMEA Outputs

As an option, the GG24 allows you to output NMEA message format and other miscellaneous messages through the serial ports. The following standard NMEA messages are available: GLL, GXP, GGA, VTG, GSN, MSG, GSA, GRS, GST, RMC, and ZDA. Additional non-standard messages are available: LTN, AIM, POS, SAT, RRE, TCM, and TTT. All standard NMEA messages are a string of ASCII characters delimited by commas, in compliance with NMEA 0183 Standards Version 2.1. All non-standard messages are a string of ASCII characters delimited by commas, in the Magellan proprietary response format. Any combination of these messages can be output through any of the serial ports, and the same messages can be output through different ports at the same time. The output rate is determined by the

\$PASHS,NME,PER command, and can be set to any value between 0.2 and 999 seconds depending upon the update rate option installed (5, 2, or 1 Hz). See “NMEA Data Message Commands” on page 138 for more information.

## Raw Data Outputs

As an option, the GG24 allows you to output raw data through the serial ports. Table 4.3 outlines the different types of messages available.

**Table 4.3:** Raw Data Messages

Message	Description
MCA	measurement data output with Magellan type 3 data structure
PBN	position data
SNV	GPS ephemeris data
SNG	GLONASS ephemeris data
SAL	GPS almanac data
SAG	GLONASS almanac data

All outputs are in binary format. Any combination of messages can be output through any of the serial ports, and the same messages can be output through different ports at the same time. The output rate is determined by the \$PASHS,RCI setting, and can be set to any rate between 0.2 and 999 seconds depending upon the raw data update rate option installed (5, 2, or 1 Hz). See “Raw Data Outputs” on page 41 for more information.

## Signal to Noise Ratio

The GG24 calculates the signal to noise ratio using one of two methods: DBH or AMP. Select which method using the \$PASHS,SNR command. The default method is the AMP method.

The DBH method the classic method of dB\*Hz units, and the result is independent of the hardware. The result is presented in true SNR, in dB\*Hz. The range is approximately 30 to 55. The receiver can track signals with SNR > 26 dB\*Hz, and can find signals with SNR >34 dB\*Hz. The algorithm is

$$\text{SNR}[\text{dB*Hz}] = 10 * \log_{10} (\text{mean}(I)^2 / [\text{mean}(I^2) - (\text{mean}(I)^2)] / (2 * T))$$

where  $T$  is the time of averaging of  $I$ . Note that  $\text{mean}(I^2) - \text{mean}(I)^2$  is the dispersion of the mean value of  $I$ . If DBH is selected, SNR is presented in dB\*Hz units in all messages that report SNR.

The AMP method computes the SNR in actual amplitude, and this value is dependent upon hardware. In the receiver, an internal scale coefficient is chosen such that under usual circumstances, AMP is approximately equal to satellite elevation in degrees. The range is from 1 to 99. If AMP is selected, SNR is presented in AMP units in all messages that report SNR.

## Satellite Search Algorithm

---

When the GG24 operates for the first time after receipt from Magellan, no almanac or ephemeris data are loaded. The GG24 always assigns the first 12 elements of a 32-element table of satellite PRN numbers to its first 12 channels and the first 12 elements of a 24-element table of the GLONASS frequency numbers to its last 12 channels. If no ephemeris data is available in the memory, or if the data is older than ten hours, 30 to 60 seconds will be needed to collect data. After locking onto four or five satellites and collecting almanac/ephemeris data, the GG24 computes its first position. The GG24 continuously collects in its on-board battery-backed-up memory (no external battery is required for memory) almanac and ephemeris data as well as the most recent position. The time to the first position computation, if no almanac/ephemeris data are available, is typically two minutes (this is called a cold start).

At the next power up, if the almanac/ephemeris data from battery-backed-up memory are available, the GG24 uses the almanac data, the last computed position, and the time from the on-board real-time clock to search only the visible satellites; under these conditions, the GG24 recomputes a position in 10 to 20 seconds (this is called a warm start).

## Ionospheric and Tropospheric Models

---

The GG24 can be set to use an ionospheric and tropospheric model in its position computation using the \$PASHS,ION,Y/N command. The ionospheric and tropospheric models are based on the models defined in ICD-GPS-200, Revision B. Typically this function is used to improve the accuracy of stand-alone position by minimizing the influence of ionosphere and troposphere on the code phase. In differential mode, however, the model should not be applied since differential corrections already contain the errors induced by ionosphere and troposphere. Both models are simultaneously turned on or off with the \$PASHS,ION command. See

“The ION setting is automatically set based on the receiver’s mode of operation (ION,Y in autonomous and ION,N in differential).” on page 91 for more information.

## RAIM

---

GG24 RAIM (Receiver Autonomous Integrity Monitoring) provides the detection of anomalous satellite pseudorange error with miss detection probability 0.999 and false alarm probability 0.002 per hour (requirements from RTCA/DO-208) under given horizontal alarm limit in range 200 m to 2 nautical miles. In addition GG24 RAIM isolates wrong satellite and correct position and velocity errors.

GG24 RAIM includes three procedures which are called every epoch. The first one is Availability Check which checks current satellites constellation available to determine the possibility of anomalous error detection with given alarm threshold, false alarm and miss detection probabilities. Availability percentage depends on alarm threshold value, satellites number and their position. The less alarm threshold is, the less availability percentage will be. For example, if 7 satellites of the same system or 8 ones of two different systems (GPS/GLONASS) with good PDOP are in view and alarm threshold is the one nautical mile (terminal mode) detection is always available. If only 4 satellites of the same system or 5 satellites of the two different systems are visible, detection is impossible.

If detection is available then Detection procedure is called. Detection algorithm compares the residuals with threshold depending on number of redundant satellites in view. If the threshold is exceeded then anomalous error is detected. RAIM is a snapshot type algorithm, so detection usually takes place at the first epoch after alarm limit being exceeded.

If error is detected and at least 6 satellites of the same system or 7 ones of the two different systems with good PDOP are in view, then Exclusion And Correction algorithm is called. Exclusion And Correction algorithm determines the number of "wrong" satellites by maximal normalized residual, after that the position and velocity are corrected by exclusion of that "wrong" satellite. To avoid possible incorrect isolation, the rest of satellites' set is tested by Availability Check and Detection algorithm. If the rest of satellites' set is available and no error is detected, it means the successful correction of position and velocity. The procedures above can be executed recursively. It provides the possibility of more than one simultaneously wrong satellites exclusion. However, in some cases where not enough satellites are available or too many errors are detected, the probability requirement can not be met because of statistical limitations.

# External Frequency

This feature lets you input an external frequency so that you can synchronize the receiver clock to a more stable external reference. To enable the external frequency connect the external clock to the EXT REF connector on the front panel and issue the command \$PASHS,EXF. To check the status of this function, issue the command \$PASHQ,EXF. Frequency selection can be made between 10 KHz and 21 MHz in 10-KHz increments. To disable the external frequency, issue the command \$PASHS,EXF,OFF.

The external frequency parameters are summarized in Table 4.4

**Table 4.4:** External Frequency Parameters

Parameter	Specifications
Input impedance	50 ohms
Frequency range	10 KHz to 21 MHz in 10 KHz increments
Lock range	$\pm 5$ ppm



The setting of the external frequency is always saved through the power cycle.

## Datums

The receiver normally computes and outputs positions in the WGS-84 coordinate reference frame. However, it is possible to output positions in NMEA messages in a number of different pre-defined datums, as well as in a user defined datum.

To set the receiver to output positions in a different datum, use the \$PASHS,DTM command. Once set to a different datum, then all position outputs in NMEA messages such as GGA and GLL and the position dare referenced to the chosen datum. For a list of Datums, refer to Appendix B, **Reference Datums and Ellipsoids**.

If the list of datums does not include a datum of interest to the user, a user defined datum may be created and supplied to the receiver. This is done using the command \$PASHS,UDD command along with the \$PASHS,DTM command. Prior to using these commands, the user must first define the required parameters including the length of the semi-major axis and amount of flattening in the reference ellipsoid, and the translation, rotation, and scale between the user defined system and WGS-84.



To use this datum for the position computation and measurements, use the \$PASHS,DTM,USR command after defining the datum parameters.



After issuing the \$PASHS,DTM,USR command, the receiver internally transforms positions *from* the reference datum (WGS-84) *to* the user-defined datum. In standard text books, however, the datum transformations are given *from* local datums *to* WGS-84. To simplify entering the transformation parameters, the translation, rotation, and scale parameters are defined *from* the local datum *to* WGS-84.

The generic formula used to translate and rotate from coordinate system 1 to coordinate system 2 is as follows:

$$\begin{bmatrix} x \\ y \\ z \end{bmatrix}_2 = \begin{bmatrix} \Delta x \\ \Delta y \\ \Delta z \end{bmatrix} + (1 + m \times 10^{-6}) \begin{bmatrix} 1 & \varepsilon_{rz} & -\varepsilon_{ry} \\ -\varepsilon_{rz} & 1 & \varepsilon_{rx} \\ \varepsilon_{ry} & -\varepsilon_{rx} & 1 \end{bmatrix} \begin{bmatrix} x \\ y \\ z \end{bmatrix}_1$$

where  $\varepsilon_{rx} = \varepsilon_x$  expressed in radians, similarly for  $\varepsilon_{ry}$  and  $\varepsilon_{rz}$ .

Example: Define local datum as the WGS-72 datum

\$PASHS,UDD, 0,6378135.0, 298.26,0,0,4.5,0,0,-0.554,0.23

\$PASHS,DTM,USR

This implements the transformations listed in Table 4.5 and below.

**Table 4.5:** Ellipsoid Parameters for WGS-72 and WGS-84

Datum	Reference Ellipsoid	a[m]	1/f
WGS-72	WGS-72	6378135.0	298.26
WGS-84	WGS-84	6378137.0	298.257223563


$$\Delta x = \Delta y = 0 \quad \Delta z = 4.5 \text{ meters} \quad m = 0.23 \times 10^{-6}$$

$$\varepsilon_x = \varepsilon_y = 0 \quad \varepsilon_z = -2.686 \times 10^{-6} \text{ radians} = -0.554''$$

in the following equation:

$$\begin{bmatrix} x \\ y \\ z \end{bmatrix}_{WGS84} = \begin{bmatrix} 0 \\ 0 \\ 4.5 \end{bmatrix} + (1 + 0.23 \times 10^{-6}) \begin{bmatrix} 1 & -2.686 \times 10^{-6} & 0 \\ 2.686 \times 10^{-6} & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} x \\ y \\ z \end{bmatrix}_{WGS72}$$

Internally, the receiver implements the transformation *from* WGS-84 *to* WGS-72. Figure 4.9 demonstrates the change in the coordinate systems.

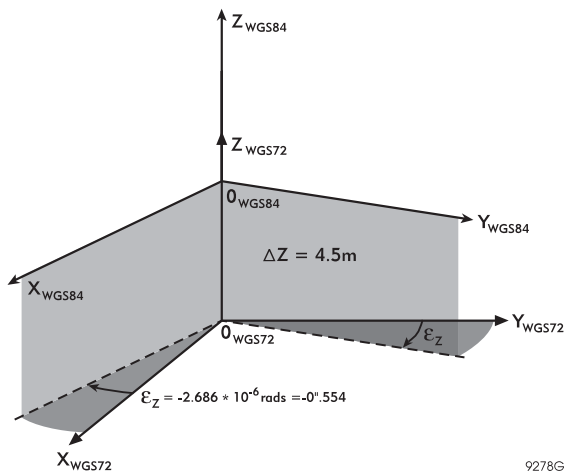


**Figure 4.9:**Rotation and Translation Between Coordinate Systems

## Point Positioning

The Point Positioning feature improves the accuracy of a stand-alone absolute position of a stationary receiver to about 4 meters horizontal over a period of about 4 hours, and under 3 meters (horizontal) over a period of about 12 hours. (Figure 4.10). Point positioning uses an averaging technique to reduce the effects of Selective Availability (SA) and other fluctuating errors. Point positioning mode can be set using the \$PASHS,PPO command. We recommend that when using the point positioning mode that the system be set to use GPS only (\$PASHS,SYS command) and that the

ionospheric model be enabled (\$PASHS,ION command). Refer to Chapter 6, **Command/Response Formats** for more details about these commands.

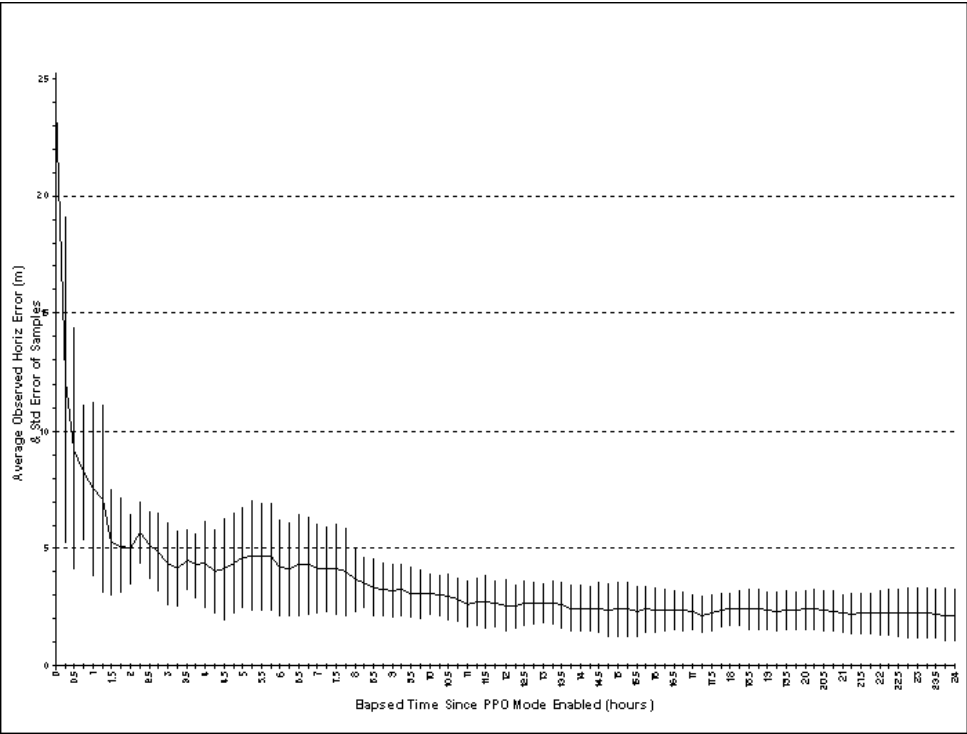

**Figure 4.10:**Point Positioning Mode Position Error - GPS Only



---

# Differential and RTK Operations

Real-time differential positioning involves a reference (base) station receiver computing the satellite range corrections and transmitting them to the remote stations. The reference station transmits the corrections in real time to the remote receivers via a telemetry link. Remote receivers apply the corrections to their measured ranges, using the corrected ranges to compute their position.

RTK (Real-time kinematic) positioning can be used in lieu of real-time differential positioning. RTK uses the carrier signal in addition to the code signal and is much more accurate. Although messages transmitted and calculations performed vary, RTK is essentially a special form of differential positioning. A base station receiver is required to transmit RTK data to remote receivers. The remote receivers use the RTK data to compute a corrected position.

As stand-alone, the GG24 can compute a position to around 15 meters. Differential GPS achieves sub-meter precision at a remote receiver, and RTK positioning achieves centimeter accuracy at a remote receiver.

A communication link must exist between the base and remote receivers. The communication link can be a radio link, telephone line, cellular phone, communications satellite link, or any other medium that can transfer digital data.

## Base Stations

---

### Setting Up a Differential Base Station

You must have the Base option [B] installed on the receiver.

Send the commands listed in Table 5.1 to the receiver to generate RTCM differential corrections using message types 1 and 31.

**Table 5.1:** Differential Base Station Commands

Command	Description
\$PASHS,RST	Reset the receiver to factory defaults
\$PASHS,PEM,4	Set the Base differential mask to four degrees
\$PASHS,POS,ddmm.mmm,d,dddmm.mmm,d,saaaa.aa	Enter the phase center of the antenna

**Table 5.1: Differential Base Station Commands (Continued)**

Command	Description
\$PASHS,RTC,BAS,x	Turn on RTCM corrections on port x When this command is sent, a base station automatically sends RTCM message types 1 and 31 once per second.
\$PASHS,RTC,SPD,9	Set internal bit-rate for corrections to burst mode.
\$PASHS,LPS,1,1,1	Set loop setting for stationary receiver.
\$PASHS,SAV,Y	Save settings



**Do not try to transmit corrections on the same GG24 serial port you are using to set up the receiver from your PC.**

The receiver is set as a base station which transmits RTCM message types 1 and 31 every second. Following a power cycle it automatically starts transmitting these corrections again (because you have saved the settings with the \$PASHS,SAV,Y command). To change the message rate, use the \$PASHS,RTC,TYP command.

## Setting Up an RTK Base Station

You must have both the Base option [B] and the Phase Differential option [J] installed on the receiver.

Send the commands listed in Table 5.2 to the receiver to generate RTCM RTK message types 3,18,19 and 22.

**Table 5.2: RTK Base Station Commands**

Command	Description
\$PASHS,RST	Reset the receiver to factory defaults
\$PASHS,ELM,4	Set the RTK Base mask to nine degrees
\$PASHS,POS,ddmm.mmmm,d,dddmm.mmmm,d,saaaaa.aa	Enter the phase center of the antenna
\$PASHS,RTC,BAS,B	Turn on RTCM corrections on port x When this command is sent, a base station automatically sends RTCM message types 1 and 31 once per second.
\$PASHS,RTC,TYP,1,0	Turn off RTCM message type 1.
\$PASHS,RTC,TYP,31,0	Turn off RTCM message type 31.
\$PASHS,RTC,TYP,3,1	Turn on RTCM message type 3.

**Table 5.2: RTK Base Station Commands (Continued)**

Command	Description
\$PASHS,RTC,TYP,18,1	Turn on RTCM message type 18.
\$PASHS,RTC,TYP,19,1	Turn on RTCM message type 19.
\$PASHS,RTC,TYP,22,1	Turn on RTCM message type 22.
\$PASHS,RTC,SPD,9	Set internal bit-rate for corrections to burst mode.
\$PASHS,LPS,1,1,1	Set loop setting for stationary receiver
\$PASHS,SAV,Y	Save settings

The receiver is set as a base station which transmits RTCM messages types 18 and 19 every second, and types 3 and 22 every minute. Following a power cycle it will automatically start transmitting these messages again (because you have saved the settings with the \$PASHS,SAV,Y command). To change the message rate, use the \$PASHS,RTC,TYP command.

Setting Up a Combined Differential and RTK Base Station

You must have both the Base option **[B]** and the Phase Differential option **[J]** installed in your receiver.

Send the commands listed in Table 5.3 to the receiver.

**Table 5.3: Base Station Commands**

Command	Description
\$PASHS,RST	Reset the receiver to factory defaults
\$PASHS,PEM,4	Set the Base differential mask to four degrees
\$PASHS,ELM,9	Set the RTK base elevation mask to nine degrees
\$PASHS,POS,ddmm.mmm,d,dddmm.mmm,d,saaaa.aa	Enter the phase center of the antenna
\$PASHS,RTC,BAS,x	Turn on RTCM corrections on port x
\$PASHS,RTC,SPD,9	Set internal bit-rate for corrections to burst mode
\$PASHS,RTC,TYP,3,1 \$PASHS,RTC,TYP,22,1	Turn on base station position messages, once per minute
\$PASHS,RTC,TYP,18,1 \$PASHS,RTC,TYP,19,1	Turn on Code and Carrier phase messages, once per second
\$PASHS,LPS,1,1,1	Set loop setting for stationary receiver
\$PASHS,SAV,Y	Save settings



**Type 1 and 31 messages are ON by Default.**

The receiver is set as a base station which transmits RTCM Differential corrections (messages 1 and 31) every second, RTCM messages types 18 and 19 every second, and types 3 and 22 every minute. Following a power cycle it automatically starts transmitting these messages again (because you have saved the settings with the \$PASHS,SAV,Y command).

## **Advanced Base Station Operation**

### **Recommended Advanced Parameter Settings for Base Stations**

There are many parameters that control the operation of the receiver. Most should be left at default values, except for the settings identified in Table 5.1, Table 5.2, and Table 5.3.

### **Antenna**

Locate the antenna with a clear view of the sky.

The antenna position, entered with the \$PASHS,POS command, is the WGS84 phase center of the antenna. If you do not have a surveyed position on which to locate your antenna you may use the command \$PASHS,POS,CUR. This sets the base station position to the autonomous position calculated by the receiver. The relative accuracy of the remote receiver positions is the same, with respect to the base station, as if you had entered the true position of the antenna. The absolute accuracy translates by the difference between the nominal base station position (from \$PASHS,POS,CUR) and the true WGS84 position. That is, if the nominal base station position is one meter north of the true position, then all remote positions will be translated north by exactly one meter. You may check which position was set by using the \$PASHQ,RTC command.

### **Message Rate**

To improve Differential and RTK performance, minimize base station data latency by using the highest possible data rates that your data link supports. There are three different settings that affect data rates:

- RTCM message bit rate. \$PASHS,RTC,SPD. This is the internal bit rate used to generate the RTCM messages. This should be as high as possible without exceeding the baud rate of the serial port. Recommended bit rate setting is

burst mode (9), which automatically adjusts the bit rate to the fastest possible rate based on the serial port baud rate:

\$PASHS,RTC,SPD,9

- Serial port baud rate. This should be as high as possible.
- RTCM message rate. This is the rate at which messages are generated.
  - RTK messages (18 and 19) are the most important. They should be generated as fast as possible, ideally once per second. If they are generated slower then the effect on the remote receiver depends on the mode. The slowest allowable setting for type 18 and 19 is once per 5 seconds.
    - Fast RTK mode: accuracy will degrade by approximately 1cm for each second of latency (example: type 18 and 19 generated every 5 seconds, fast RTK accuracy of 5cm, horizontal  $1\sigma$ . Fast RTK update rate is unaffected.
    - Synchronized RTK mode: accuracy is unaffected. Update rate is limited to the update rate of messages 18 and 19.
  - Differential messages (1 and 31) are next most important, ideally once per second. If the data rate does not support this, these messages may be generated slower, with a corresponding decrease in differential accuracy (Figure 5.2) to see the accuracy sensitivity to lower update interval.
  - RTK base station position (3 and 22) are least important. They affect the RTK initialization time following power on of the remote receiver, (the remote receiver cannot provide an RTK position until it has received messages 3 and 22 once or until receiving the \$PASHS,CPD,POS command), but the rate at which these messages are generated does not affect RTK accuracy.

## Required Differential Update Rates

For RTK operation there is a minimum radio baud rate that is acceptable. The required radio rate depends on which messages are being generated at the base station, and the message period. The slowest rate at which one should send RTK data is once every 5 seconds. The remote receivers can fix integers with base station data arriving once every 5 seconds or faster.

## Message size

Table 5.4 lists the message size for RTCM messages 18 and 19.

**Table 5.4:** Message Size for RTCM Messages 18 and 19

Number of Satellites	Number of RTCM Words in Message Type 18. (30 bits/word)	Number of RTCM Words in Message Type 19. (30 bits/word)
7 GPS + 7 GLONASS	$(2+1+2*7)*2 = 34$	$(2+1+2*7)*2 = 34$
9 GPS + 9 GLONASS	$(2+1+2*9)*2 = 42$	$(2+1+2*9)*2 = 42$
12 GPS + 12 GLONASS	$(2+1+2*12)*2 = 54$	$(2+1+2*12)*2 = 54$

## Required Radio Rate

For RS232 communications, 1 start bit and 1 stop bit is required for each byte. The required number of bits is 10/8 times the number of message bits.

For RTCM, the data is packed in 6/8 format. The required number of bits is 8/6 times the number of bits in the message.

For RTCM data on an RS232 link, the required number of bits is  $8/6*10/8$  times the number of bits in the message.

Table 5.5 lists the minimum baud rates, for a GG-RTK receiver sending RTCM 18 and 19 messages only.

**Table 5.5:** Minimum Baud Rates for RTCM Messages 18 and 19

Number of Satellites	Minimum baud rate (message period = T)	Minimum standard baud rate (T = 5 sec)	Minimum standard baud rate (T = 1 sec)
12 total GPS+GLO	$30*30*2*8/6*10/8*1/T$	600 bps	4800 bps
14 total GPS+GLO	$34*30*2*8/6*10/8*1/T$	1200 bps	4800 bps
18 total GPS+GLO	$42*30*2*8/6*10/8*1/T$	1200 bps	4800 bps
24 total GPS+GLO	$54*30*2*8/6*10/8*1/T$	1200 bps	9600 bps



Table 5.5 lists the minimum baud rates, assuming no other data is sent on the data link. If other RTCM messages are transmitted, then the minimum standard baud rate may increase.

The recommended optimal setting is to transmit type 18 and 19 messages once every second on a high-speed link.

If a high speed data link is not available, you have *indirect* control over the number of satellites used, by setting elevation mask angles. The elevation angle for any particular satellite changes by 1° for every 100 km of baseline length. For baselines of

less than 100 km, you should set the base station elevation mask at 1° less than the remote receiver elevations masks to guarantee that the base station sends data for all satellites the remote might use, while not sending data for low elevation satellites that the remote does not use.

Recommended mask angle settings for RTK:

Remote: 5° (Default)

Base: 4°

Use Ashtech’s Mission Planner to determine the maximum number of satellites visible above a given mask angle. Table 5.6 shows the maximum number of satellites above a 4° mask angle, with the constellations available August 11, 1997, (25 GPS satellites, 14 GLONASS satellites) using a 24 hour simulation at 0° longitude. GPS or GLONASS geometry is primarily a function of latitude, and varies only slightly with longitude for a constant latitude.

**Table 5.6:** Maximum Number of Satellites Above a 4° Mask Angle

Latitude	Maximum Number of GPS SVs	Maximum Number of GPS+GLONASS SVs
0°	11	16
10°	12	16
20°	11	15
30°	11	16
40°	11	15
50°	10	15
60°	11	16
70°	12	17
80°	11	17
90°	12	17

## Mask Angle

The Base station mask angle for RTK messages 18 and 19 is controlled by \$PASHS,ELM. The Base station mask angle for all Differential corrections (1,9,31,34) is controlled by \$PASHS,PEM. If your data link bandwidth is large enough, then you can set both mask angles to zero degrees for base stations. This ensures that the base station will send data for all satellites that it can "see" above the horizon.

If your bandwidth limits the number of satellites for which you can transmit base station data, then you may raise the mask angle. On baselines less than 100 km, the remote station sees satellites at approximately the same elevation angles as the base station sees them, the base station mask angle should be set one degree lower than the remote mask angle. On long baselines the elevation angle changes by approximately  $1^\circ$  for every 100 km. So for baselines of  $x \times 100$  km the base station should not have a mask angle higher than the remote station mask minus  $x \times 1^\circ$ .

The two different controls allow you, for a combined RTK/Differential base station, to set the mask angles higher for RTK (which typically operates on short baselines) than Differential (which often operates on longer baselines).

## Base Station Position

The RTCM messages 3 and 22 broadcast the base station position. The base station position may also be entered directly into the remote unit, using the \$PASHS,CPD,POS and \$PASHS,UBP commands. This reduces bandwidth requirements by obviating the need for messages 3 and 22.

## Base Station Antenna Offset

If you set up the base station antenna over a known, surveyed point, you may enter the position of the surveyed point and the offset from this point to the antenna phase center. Or you may enter the phase center directly.

If you are using 3 & 22:

- At the base station, enter the phase center of the antenna directly using \$PASHS,POS or
- At the base station, enter the surveyed reference point using \$PASHS,POS and enter the antenna offset using \$PASHS,ANT.

If you are entering the base station position directly at the remote:

- At the remote, enter the phase center of the base station antenna directly using \$PASHS,CPD,POS or
- At the remote, enter the surveyed base station reference point using \$PASHS,CPD,POS and enter the base station antenna offset using \$PASHS,CPD,ANT.

## Using Reference Station ID

You may monitor which reference or base station the remote receiver uses by setting a reference station ID at the base station. Set the reference station ID using the command \$PASHS,RTC,STI.

You may also control which reference station the remote receiver uses by setting the desired station ID at the remote receiver, or all the remote receiver to use corrections from any base station.

## Reference Station Health

You may set the reference station to "unhealthy", which causes all remote receivers to ignore the messages they receive from that base station.

## Other RTCM Messages

### Partial Differential corrections: Message 9 and 34

These are alternatives to messages 1 and 31. They should only be used if you have a low bandwidth data link (~100bps). Use of high-bandwidth datalinks, and messages 1 and 31 are recommended.

Message type 1 cannot generate at the same time as type 9. Message type 31 cannot be generated at the same time as 34. It is possible, though unusual, to generate message types 1 and 34, or 9 and 31.

### Message 2 and 32

These are automatically generated when the base station is transmitting differential corrections and a new ephemeris is downloaded from the satellites.

### Filler: Message 6 and 34 Null Frame

This message is provided for datalinks that require continuous transmission of data, even if there are no corrections to send.

### Special Message: Message 16 and 36

These message allow you to transmit an ASCII message from the base station.

## Using a PC Interface

If you are using the Ashtech Evaluate™ software to interface to your receiver you may use initialization files (\*.gps) to send the base station setting commands for you.

To monitor the corrections from a PC, turn on the MSG message

\$PASHS,NME,MSG,y,ON

This generates an ASCII echo of the RTCM messages being transmitted by the base station. Use different receiver serial ports for MSG and the actual transmitted RTCM messages.

## Using a Handheld Interface

If you are using Ashtech software running on the Husky FS/2 handheld computer, differential set-up is controlled via a series of menus designed to free users from knowing or entering commands. Handheld software allows users to monitor and control most receiver functionality.

# Remote Stations

---

## Setting Up a Differential Remote Station

You must have the Differential remote option [U] installed on your receiver.

You must have a source of differential corrections, usually a radio receiving a transmission from a base station. Connect this radio to one of the GG24 serial ports.

Send the following commands to the receiver. The receiver will accept RTCM differential corrections in message types 1 or 9 (for GPS) and 31 or 34 (for GLONASS). You do not have to tell the receiver which message types to expect, it will automatically use whatever it receives on serial port x.

**Table 5.7:** Differential Remote Station Commands

Command	Description
\$PASHS,RST	Reset the receiver to factory defaults
\$PASHS,RTC,REM,x	Set the receiver as a remote station, receiving corrections on serial port x
\$PASHS,SPD,x,n	Set the baud rate of serial port x to the same as the radio providing the corrections.
\$PASHS,SAV,Y	Save settings

You have now set up the remote station. Turn on the GGA, GLL, POS or PBN message to obtain position.

## Setting Up an RTK Remote Station

Operating an RTK remote is almost identical to operating a Differential remote receiver. The main differences are:

1. The data from the base station is RTCM Types 18,19,3 and 22, instead of 1 and 31 or 9 and 34.
2. The accuracy is approximately 100 times better.

You must have both the Differential remote option, [U], and the Phase differential option, [J], installed in your receiver.

You must have a source of RTK data, usually a radio receiving a transmission from an RTK base station. Connect this radio to one of the GG24 serial ports.

Send the following commands to the receiver. The receiver accepts RTCM RTK data in message types 18 (Carrier phase data) and 19 (Code phase data) and 3 and 22 (Base station position).

**Table 5.8:** RTK Remote Station Command

Command	Description
\$PASHS,RST	Reset the receiver to factory defaults
\$PASHS,RTC,REM,x	Set the receiver as a remote station, receiving corrections on serial port x
\$PASHS,SPD,x,n	Set the baud rate of serial port x to the same as the radio providing the corrections.
\$PASHS,CPD,MOD,ROV	Set the receiver as an RTK remote
\$PASHS,SAV,Y	Save settings

The receiver is set up as a RTK remote station. Turn on the GGA, GLL, POS or PBN message to obtain position.



**RTK (Real Time Kinematic) and CPD (Carrier Phase Differential) are synonyms.**

# Advanced Remote Station Operation

## Recommended Advanced Parameter Settings for Differential Remote Stations

There are many parameters that control the operation of the receiver. Most should be left at default values. The following settings are recommended for Differential Remote Stations.

- \$PASHS,CRR,S
- \$PASHS,LPS,10,3,1 (for high dynamic or high vibration applications)
- \$PASHS,AIM,0.015
- Other parameter settings at factory default.

## **Recommended Advanced Parameter Settings for RTK Remote Stations**

There are many parameters that control the operation of the receiver. Most should be left at default values. The following settings are recommended for RTK Remote Stations.

\$PASHS,CRR,E


\$PASHS,LPS,10,3,1 (for high dynamic or high vibration applications)

Other parameter settings at factory default.

## **Base Station RTCM Data**

Both Differential remote stations and RTK remote stations automatically extract the messages needed from the data coming in to the designated serial port. So you can set up a combined Differential/RTK base station (see See “Setting Up a Combined

Differential and RTK Base Station” on page 51.), and operate DGPS remote receivers, DGG remote receivers and RTK remote receivers.

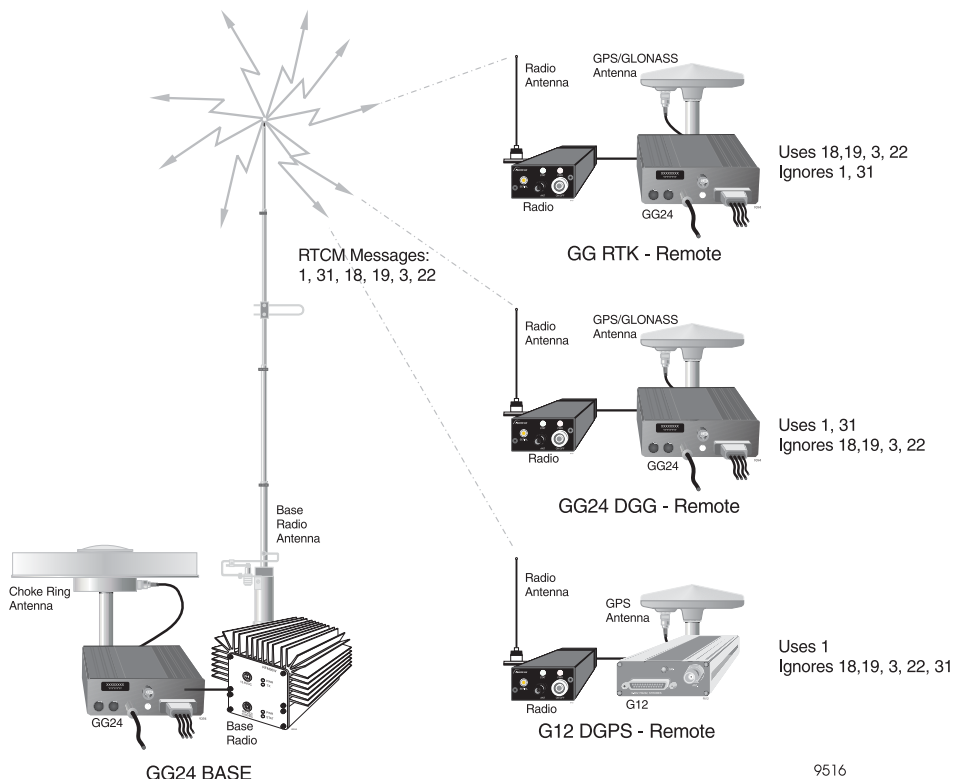

**Figure 5.1:** Combined Differential/RTK Base Station and Remote Operation

Ashtech remote receivers (both Differential and RTK) operate with any base station that generates the industry standard RTCM messages.

## Base Data Latency


Both Differential and RTK operation are better the lower the latency of the Base-Remote data link. To minimize latency set the baud rate of the radios as high as possible, and use radios that are optimized for low latency GPS operation, such as the Ashtech SSRadio.

The actual Base-Remote data latency is given in the GGA message (whether in Differential or RTK modes).

Maximum acceptable base-remote data latency is controlled by \$PASHS,RTC,MAX for both Differential and RTK modes.

## Differential Accuracy vs. Base Data Latency

Figure 2 shows the growth of position error with increasing latency for DGPS and DGLONASS.

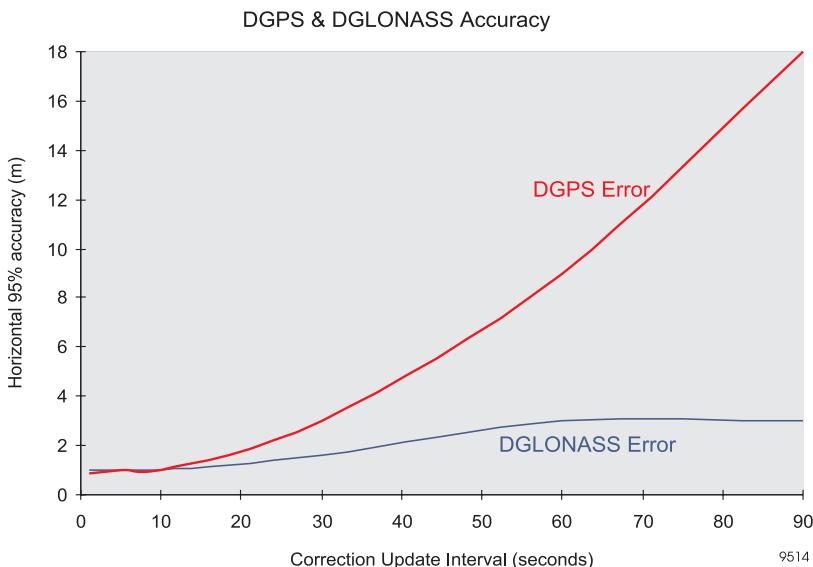

**Figure 5.2:** DGPS and GLONASS Accuracy

## RTK Accuracy and Update Rates vs. Base Data Latency

With an RTK remote you may choose between:

1. Higher accuracy and lower update rates (Synchronized RTK)
2. Lower accuracy and higher update rates (Fast RTK)



**Lower RTK accuracy still means centimeter-level accuracy**

Use the command \$PASHS,CPD,FST,ON/OFF to switch between the two modes.

## Synchronized RTK

In this mode the remote receiver's update rate is equal to the rate at which it receives type 18 and 19 messages. (Maximum of 1Hz). The latency of position is approximately equal to the latency of the base-remote data link. Typical accuracy is 0.5cm+1ppm (1 $\sigma$  horizontal), and is independent of the rate at which the receiver receives type 18 and 19 messages.

## Fast RTK

In this mode the remote receiver's update rate is selectable up to 5Hz, and is independent of the rate at which it receives type 18 and 19 messages. Use the command \$PASHS,NME,PER to control the update rate. The latency of position is less than 100 ms. The precise latency (to 1ms resolution) is available in the LTN message. Typical accuracy (1 $\sigma$  horizontal) in centimeters is equal to the base-remote data latency in seconds, for data latency of up to 10 seconds. For base-remote data latency of greater than 10 seconds and less than 30 seconds, the accuracy degrades up to 2 meters. In Fast RTK mode the receiver will always provide the best possible position solution at the data rate selected by the user. If the accuracy degrades for any reason (such as cycle slips, lost radio link, etc.), this will be reflected in the GST message. By contrast, the Synchronized RTK position only provides positions when a fresh set of base station data has been received.

Fast RTK should be used when you need position updates at regular intervals, (such as in machine control). Synchronized RTK should be used when you can afford to wait a few epochs for the highest available accuracy (such as in surveying).

During Fast RTK mode the receiver runs synchronized RTK mode in the background at the same rate that it receives base station data. If the receiver detects a cycle slip, it fixes the cycle slip at the next synchronized epoch (typically within one second).

If you are using Fast RTK mode you should monitor position accuracy using the GST message.

Example: Fast RTK running at 5Hz. Type 18&19 message updates at 1Hz.

Cycle slip occurs at time 12:00:00.1 (100 milliseconds past noon). There will be 4 epochs of Fast RTK positions with an error of a few decimeters, each will have a corresponding GST message showing that there is an error. Then, at 12:00:01.0 (1 second past noon) the cycle slip will be repaired.

## Position Latency

Base data latency, discussed above, is the delay between when a base station measures the GPS&GLONASS signals and when the remote receiver receives the RTCM messages. *Position latency* is the delay between when the remote receiver measures the GPS&GLONASS signals and when the position is available at the serial port. In other words, position latency is the delay in providing the user's actual

position to the user. Position latency is typically between 50 and 100 milliseconds, it varies with the number of satellites in view. The actual position latency, to one millisecond precision, is provided by the LTN message for each epoch.

## Float and Fixed Solutions

When the receiver is in RTK mode the crucial difference from Differential mode is that it uses the carrier phase measurement to generate the range measurements to centimeter accuracy. The receiver can measure the fractional part of the carrier phase to centimeter accuracy, it derives the integer number of full carrier phase wavelengths by processing both the carrier and code phase measurements. This process of deriving the integer numbers is known as integer ambiguity resolution or carrier phase initialization. This carrier phase initialization is only necessary following power-on, or after the receiver has lost lock on the satellites (e.g. after passing under a bridge). The receiver performs carrier phase initialization automatically. The receiver does not have to be stationary while initializing. Once the receiver is initialized it will provide centimeter-level accuracy, while moving, in real time. The time for carrier phase initialization is a few seconds up to several minutes, depending on baseline length, number of satellites in view, and required reliability; these are discussed in the next section.

During the carrier phase initialization the receiver is said to be in "float" mode, once initialization is complete the receiver is said to be in "fixed" mode. This terminology derives from computer terminology: floating-point numbers (real numbers) and fixed numbers (integers).

When in float mode the accuracy will range from Differential accuracy (1m) down to sub-decimeter. The longer the receiver has been in float mode the higher the accuracy. The convergence to 20 cm accuracy takes approximately five minutes, convergence to 10 cm accuracy requires approximately ten minutes. Convergence time is a function of baseline length and number of satellites in view. When the receiver fixes integers, accuracy makes a quantum change to centimeter level.

The POS and GGA messages have fields which indicate whether the receiver is in float or fixed mode.

## Carrier Phase Initialization

The time required for carrier phase initialization is a function of base-remote baseline length, number of satellites in view, satellite geometry, and required reliability. With a large number of satellites in view ( $\geq 14$ ), initialization time can be as low as a few seconds. With fewer satellites in view, the receiver takes as long as necessary to guarantee the required reliability.

## Reliability

The process of carrier phase initialization has a non-zero probability of error. If an error is made the receiver will fix the integers to the wrong value. This will result in floating point accuracy (typically between 10cm and 1m). After an error in fixing integers the receiver automatically detects and corrects the error when the satellite geometry changes. This may be as soon as a new satellite comes into view, or, in the worst case, when the satellites move by a few degrees in the sky, which can take from one to 20 minutes.

You can control the reliability that the receiver provides, this indirectly controls the speed of carrier phase initialization. The higher the reliability the longer it takes to fix integers.

The receiver offers three modes for ambiguity fixing:

- a. Float solution only
- b. Fixed solution, formal reliability = 99%
- c. Fixed solution, formal reliability = 99.9% (default)

The command \$PASHS,CPD,AFP controls the ambiguity fix parameter.

The two choices of formal reliability for fixed solution are provided to allow you to trade off speed with reliability. The AFP setting controls the internal thresholds of the receiver so that the expected statistical reliability of getting correctly fixed integers is 99% or 99.9% respectively. The receiver fixes integers two to three times faster with AFP=99 than with AFP=99.9. The actual achieved reliability has been tested under different conditions in different locations, and using two different test techniques.

Under the first technique, the receiver is reset at regular intervals (every 10 minutes).

Under the second technique the receiver is reset every time it has fixed integers.

Results vary according to location, environmental conditions (multipath and

blockage), and test method. Best and worst case results of all tests are listed in the Table 5.9.

**Table 5.9:** Actual achieved reliability results with AFP settings of 99 and 99.9

AFP Setting	Worst Achieved Reliability	Best Achieved Reliability	Median Time to Fix (50% of resets)	90% Time to Fix (90% of resets)
99	96% (3.5km baseline, 800 resets over 5 days)	99.97% (3.5km baseline, 3826 resets over 1 day)	< 1 minute <sup>1</sup>	10 minutes <sup>1</sup>
99.9	99.6% (3.5km baseline, 800 resets over 5 days)	100% (7km baseline, 829 resets over 5 days)	3 minutes <sup>1</sup>	> 10 minutes <sup>1</sup>
<sup>1</sup> Time to fix integers varies with number of satellites in view, and baseline length. The more satellites in view, the faster integers are fixed. The longer the baseline, the slower the integers are fixed. Values shown are typical for tests over baselines of 3.5km to 7km. Most tests last more than 24 hours, during this time there are periods of high satellite visibility when time to fix integers is much shorter than the typical times shown				


The above results are for tests using Magellan GG-Pro antennas. Similar results are not guaranteed with different antennas.

While the receiver is busy fixing integers, it gives a float solution.

Operation under trees, or in other areas with frequent blockage of satellites signals will lead to significantly degraded results.

As well as the three reliability settings for fixed solutions, there is a setting for pure floating-point mode (\$PASHS,CPD,AFP,0). In this mode, the receiver always gives a floating point solution. The accuracy of the floating point solution converges to decimeter level in approximately ten minutes (depending on the baseline length and the number of satellites in view, coverage time increases with increasing baseline lengths and decreasing number of satellites). Figure 5.3 shows typical behavior of the

floating point solution following start-up or obstruction-and-reacquisition for a short baseline with eleven to thirteen satellites in view.

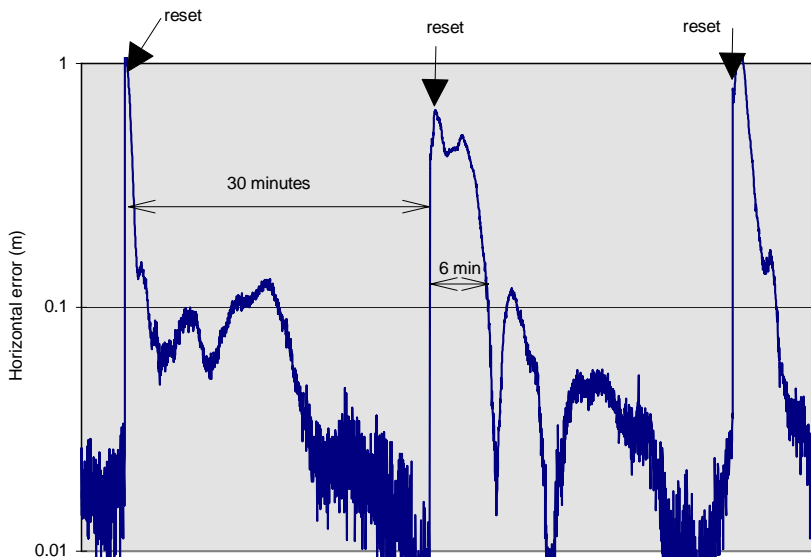

**Figure 5.3:** Convergence of Float Solution Following Reset

## Monitoring Accuracy


Besides fixed/float status, position accuracy is the most important consideration when using the GG24 for real time carrier phase positioning. The primary means of monitoring CPD “fixed” and CPD “float” accuracy is the GST message (see NMEA section for full description). Each GST message contains a UTC time tag which relates to a given epoch of position computation. The GST gives an indication of the overall quality (precision) of the CPD position by displaying the RMS value of the standard deviation of all the range inputs to the position solution. The GST message also gives a real-time estimate of the actual error in the CPD position at a 1 sigma probability by displaying the standard deviation of latitude, longitude and altitude. The actual position error of the system will be less than the standard deviations displayed in the GST approximately 68% of the time. If you multiply the standard deviations by 2, the result is a conservative estimate of actual accuracy about 95% of the time.

The quality of the GST estimates improve with increasing number of satellites. The GST estimates may be very unreliable with only 4 satellites in view. Figure 5.4 plots horizontal error estimates (from GST) and actual horizontal error (calculated using

known antenna position) for typical GST performance for 10 satellites in view. The horizontal estimates are derived from:

$$\sqrt{(GSTLatError)^2 + (GSTLonError)^2}$$

GST estimates of latitude, longitude, and altitude accuracy automatically account for DOP, SNR, and many other factors. These parameters are built into the GST estimate already and do not have to be recomputed by the user.

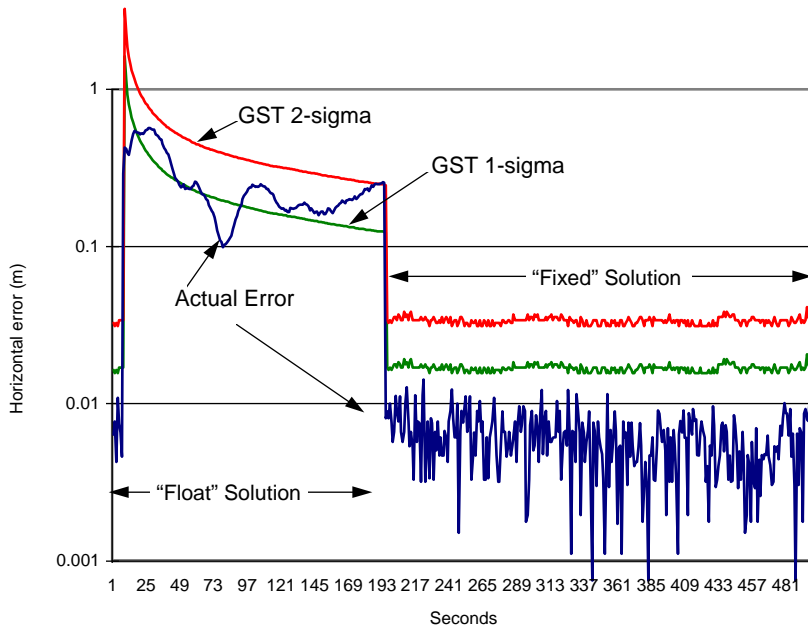

**Figure 5.4:** Typical GST Performance

## Required Number of Satellites

The receiver requires seven or more satellites to fix integers, following power on, or obstruction and re-acquisition. If the solution is fixed with 7 or more satellites, and the number of satellites falls below 7 but stays above 3, the solution stays fixed and accuracy remains at the centimeter-level. If the solution is not fixed, but the receiver has four, five, or six satellites in view, the solution will be floating-point, and steadily converges to sub-decimeter accuracy. Positions are always three-dimensional when in RTK mode. Two-dimensional positions, using previously calculated altitudes, are not possible.

# Mask Angles

At the remote station the position elevation mask is always controlled by \$PASHS,PEM, whether the receiver is in Differential mode or RTK mode.

# Auto Differential Mode

When a user operates a rover receiver in differential mode (either code phase or carrier phase), a failure at the base station or in the data link causes the rover receiver to cease outputting differentially corrected positions. Auto differential mode allows the user to output an autonomous position at the rover receiver if differential data from the base station is unavailable. Auto differential mode is enabled by entering the command \$PASHS,RTC,AUT,Y. Table 5.10 describes how auto differential mode affects position output at the rover receiver.

**Table 5.10:** Auto Differential Modes and Position Output

Mode	Position Output
Code differential Auto Differential Off (Default code mode)	Differential position output if the age of corrections is less than maximum age (maximum age as defined in the rover by \$PASHS,RTC,MAX,xx). No position otherwise.
Code differential Auto Differential On	Differential position is output if the age of corrections is less than maximum age, otherwise an autonomous position is output.
Carrier differential Fast CPD On Auto Differential Off (Default carrier mode)	Once the rover mode has been enabled, autonomous position outputs until it has computed the first CPD position. A CPD position solution continues to output until the age of corrections is greater than the maximum age.
Carrier differential Fast CPD On Auto Differential On	Once the rover mode has been enabled, autonomous position outputs until it has computed the first CPD position. A CPD position solution continues to output until the age of corrections is less than the maximum age, otherwise an autonomous position is output.
Carrier differential Fast CPD Off Auto Differential Off or On	Once the rover mode has been enabled, autonomous position outputs until it has computed the first CPD position. A CPD position solution continues to output until corrections stop, and no position outputs unless corrections are available.

# RTCM Messages

The GG24 accepts RTCM 104 version 2.1 differential formats. The GG24 is set to differential mode in any of the serial ports with the set command \$PASHS,RTC,str,c where str is BAS or REM and c is the port. Of RTCM message types 1 through 64, the GG24 processes only: types 3, 16, 22, 32, and 36 for station location and special information; types 1, 2, 9, 31, and 34 for RTCM differential corrections, null frame type 6 and 34, and RTK data message types, 18 and 19. The differential corrections are automatically processed by the GG24. RTCM message types 3, 16, 22, 32, and 36 provide user information from the reference (base) station via the \$PASHS,NME,MSG set command and the \$PASHQ,MSG query command. RTCM message types 1, 9, 18, 19, 31, and 34 provide differential correction information via the \$PASHS,NME,MSG set command and \$PASHQ,MSG query command.

On initial power-up or after use of the \$PASHS,RST reset to defaults command, the GG24 default automatic differential mode is OFF, and the default is 60 seconds for the maximum age of an RTCM differential correction above which it will not be used. If the automatic mode is not enabled by the \$PASHS,RTC,AUT,Y set command and the differential correction data is older than the maximum age specified by the \$PASHS,RTC,MAX set command, the GG24 does not return antenna position data.

In automatic mode, if no differential correction data is received or the age of data is older than the specified maximum age, the GG24 does return the uncorrected raw position.

## RTCM 104 Format, Version 2.2

When the GG24 is used as a reference station and the RTCM base option is enabled, the GG24 computes differential corrections for up to 24 satellites (12 GPS + 12 GLO), converts those corrections to RTCM format, and transmits the converted messages via its serial ports. It can generate message types 1, 2, 3, 6, 9, 16, 18, 19, 22, 31, 32, 34 null frame, 34, and 36 as detailed in Table 5.11.

**Table 5.11: RTCM Message Types**

GPS Message Type	Contents of Message	GLONASS Message Type	Contents of Message
1	Differential GPS corrections	31	Differential GLONASS correction
2	Delta differential corrections		
3	Reference station parameters in WGS 84	32	Reference station parameters in PZ-90

**Table 5.11: RTCM Message Types (Continued)**

<b>GPS Message Type</b>	<b>Contents of Message</b>	<b>GLONASS Message Type</b>	<b>Contents of Message</b>
6	Null frame	34 with no parameters	Null frame
9	GPS partial correction set	34	GLONASS partial correction set
16	Special GPS text message	36	Special GLONASS text message
18	RTK carrier phase (both GPS and GLONASS)	19	RTK pseudo-ranges (both GPS and GLONASS)
22	Extended reference station parameter		

The GG24 uses the six-of-eight format (data bits a1 through a6 of an eight-bit byte) for communication between the reference station and user equipment.

When the GG24 is used as remote equipment and the RTCM remote option is enabled, the GG24 can accept any type of RTCM message. However it decodes types 1, 2, 3, 6, 9, 16, 18, 19, 22, 31, 32, 34, and 36 uses only types 1, 2, 9, 31, and 34 for differential corrections and types 3, 18, 19, and 22 for RTK corrections. For radio communication, the GG24 in remote mode can recover bit slippage.

# Operational Hints

---

- In RTK mode, if the Rover takes longer than three minutes to fix ambiguities in an open-sky environment, moving and/or re-orienting the antenna may speed up the process.
- In RTK mode, when trying to fix ambiguities in an obstructed environment, more than ten minutes of static operation may be needed.
- Initial ambiguity fixing should be done on baselines of less than ten kilometers. Once a solution has been fixed, baseline distances can be extended beyond ten kilometers.
- The default setting for RTK is \$PASHS,CPD,MTP,1. This setting is optimized for performance under open sky conditions and the reliability of the fixed solution will decrease in harsh environments. Users requiring increased reliability in heavily obstructed environments are advised to issue \$PASHS,CPD,MTP,4 to put the receiver in “under trees or near structures” mode.
- When using the PPO position calculation feature, set the system to GPS only mode using the command \$PASHS,SYS,GPS.
- If the serial communication is lost after \$PASHS,INI,5,5,5,1, issue the command again through a different port.
- General RTK Base Station Recommendations:
  - a) Place under open sky as far as possible from reflective surfaces.
  - b) Reflections from nearby surfaces (up to 10 meters) are the source of strong/slow carrier multipath which has the greatest influence on the fixed ambiguity solution. Eliminate these sources if possible.
  - c) Avoid excessive altitude separation between base and rover, especially for fixed-ambiguity mode. Altitude separation within 50 meters is recommended.
  - d) Minimize baseline length. Baselines should be kept to less than 10 km especially for fixed ambiguity mode.

# Command/Response Formats

This chapter details the format and content of the serial port commands through which the receiver is controlled and monitored. These serial port commands set receiver parameters and request data and receiver status information. Use the REMOTE.exe software or any other standard serial communication software to send and receive messages. Note that the baud rate and protocol of the computer COM port must match the baud rate and protocol of the receiver port for commands and data to be successfully transmitted and received. The receiver protocol is 8 data bits, 1 stop bit, and parity = none.

All commands sent by the user to the receiver are either Set Commands or Query commands. Set commands generally change receiver parameters or initiate data output. Query commands generally request receiver status information. All set commands begin with the string \$PASHS and all query commands begin with the \$PASHQ string. \$PASHS and \$PASHQ are the message start character and message header and are required for all commands. All commands must end with a <enter> or <CR><LF> keystroke to transmit the command to the receiver. If desired, an optional checksum may precede the <enter> characters. All response messages will end with a <CR><LF>.

In this manual, the serial commands have been separated into 5 separate groups:

- Receiver commands - commands that relate to general receiver operations
- Raw data commands - commands that control the output of measurement, ephemeris, and almanac information.
- NMEA message commands - commands that control NMEA style data message output
- RTCM commands - commands that control RTCM differential operation
- CPD commands - commands that control carrier phase differential (CPD) operation

Within each section, the commands are listed alphabetically and described in detail. Information about the command including the syntax, a description, the range and default, and an example of how it is used are presented for each command. The syntax includes the number and type of parameters that are used or required by the command. These parameters may be either characters or numbers depending upon the particular command.

The parameter type is indicated by the symbol that is a part of the syntax. The format of these parameters are as follows:

**Table 6.1:** Command Parameter Symbols

Symbol	Parameter Type	Example
d	Numeric integer	3
f	Numeric real	2.45
c	1 character ASCII	N
x	1 character ASCII	A
s	character string	UDD
m	mixed parameter (integer and real)	3729.12345
h	hexadecimal digit	FD2C

For example, for the receiver command:

\$PASHS,RCI,f

The parameter **f** indicates that the RCI command accepts a single parameter that is real number such as 0.5 or 10.0. If a character is entered instead, the command will be rejected. Generally speaking, the parameter must be in the specified format to be accepted. However, most parameters that are real numbers (f) will also accept an integer. For example, in the case of the RCI command both 10 and 10.0 are accepted by the receiver.

## Receiver Commands

Receiver commands change or display various receiver operating parameters such as recording interval, antenna position, and PDOP mask. Commands may be sent through any available serial port.

### Set Commands

The general structure of the set commands is:

\$PASHS,str,x,<enter>

where str is a 3 character string identifier, and x is one or more data parameters that will be sent to the receiver. For example, the set command to change the recording interval to 5 seconds is:

\$PASHS,RCI,5<enter>

If a set command is accepted, an acknowledgment message is returned in the form:

\$PASHR,ACK\*3D

If a set command is not accepted, a non-acknowledgment message is returned in the form \$PASHR,NAK\*30. If a command is not accepted, check that the command has been typed correctly, and that the number and format of the data parameters is correct.

## Query Commands

The general structure of the query command is:

\$PASHQ,str,x <enter>

where str is a 3 character string identifier and x is the serial port where the response message will be sent. The serial port field is optional. If the serial port is not included in a query command, the response will be sent to the current port. For example, if the user is communicating with the receiver on Port A and sends the following query command:

\$PASHQ,PRT <enter>

The response will be sent to port A. However, if from the same port, the users sends the query command:

\$PASHQ,PRT,B <enter>

Then the response will be sent to port B.

The format of the response message may either be in a comma delimited format or in a free form table format, depending upon the query command, Note that not every set command has a corresponding query command. The most useful query command to check the general status of most receiver parameters use:

\$PASHQ,PAR <enter>

Table 6.2 lists the receiver set and query command alphabetically by function, and then alphabetically within each function. Each command is described in detail in alphabetical order.

**Table 6.2:** Receiver Set/Query Commands

Function	Command	Description	Page
Antenna Position	\$PASHS,ALT	Set ellipsoid height of antenna	78
	\$PASHS,POS	Set antenna position	100
	\$PASHS,POS,CUR	Set antenna position to current computed position	100
Dilution of Precision (DOP)	\$PASHS,HDP	Set HDOP mask for position computation	90
	\$PASHS,PDP	Set PDOP mask for position computation	98
	\$PASHS,TDP	Set GLONASS system time shift DOP mask	116
	\$PASHS,VDP	Set VDOP mask for position computation	120

**Table 6.2: Receiver Set/Query Commands (continued)**

Function	Command	Description	Page
Ionosphere	\$PASHS,ION	Include/exclude ionospheric model	91
	\$PASHQ,ION	Display ionosphere data information	91
Memory	\$PASHS,INI	Clear receiver memory and data	90
	\$PASHS,RST	Reset User Parameters	110
	\$PASHS,SAV	Save parameters in battery-backed-up memory	110
Miscellaneous Commands	\$PASHS,AIM	Set RAIM mode	78
	\$PASHQ,CLK	Query receiver clock status	81
	\$PASHS,LTZ	Set local time zone	94
	\$PASHS,POW	Set battery parameters	101
	\$PASHQ,POW	Query battery parameters	101
	\$PASHS,SNR	Set algorithm for SNR computation	113
	\$PASHQ,SNR	Display SNR setting	113
External Frequency/ Photogrammetry/ 1PPS / Strobe	\$PASHS,EXF	Set external frequency	87
	\$PASHQ,EXF	Query external frequency setting	87
	\$PASHS,PHE	Set photogrammetry edge	99
	\$PASHQ,PHE	Display the photogrammetry parameters	99
	\$PASHS,PPS	Set period and offset of 1 PPS signal	103
	\$PASHQ,PPS	Display 1PPS parameters	103
	\$PASHS,STB	Set measurement strobe parameters	115
	\$PASHQ,STB	Display measurement strobe parameters	115
Position Computation	\$PASHS,DTG	Set GLONASS system time shift relative to GPS system time	83
	\$PASHS,ERM	Set position error mask for autonomous & DGPS position solution	86
	\$PASHS,FIX	Set altitude hold position fix mode	88
	\$PASHS,GTF	Set GLONASS system time shift hold position fixed mode	88
	\$PASHS,GTM	Compute/hold GLONASS system time shift	89
	\$PASHS,GTP	Set priority of GLONASS system time shift if SVs = 4	89
	\$PASHS,PEM	Set elevation mask for position computation	98
	\$PASHS,PMD	Set position computation mode	99
	\$PASHS,PPO	Point Positioning Command	102
	\$PASHS,PSM	Apply position/velocity filter	106
	\$PASHS,USP	Select specific satellite to use for position computation	119

**Table 6.2:** Receiver Set/Query Commands (continued)

Function	Command	Description	Page
Receiver Configuration	\$PASHS,CTS	Port protocol	82
	\$PASHQ,CTS	Query port protocol settings	82
	\$PASHS,DSY	Configures receiver serial ports in daisy-chain mode	82
	\$PASHS,DTM	Set datum for position computation	83
	\$PASHS,LPS	Set loop tracking parameters	93
	\$PASHQ,LPS	Display loop tracking parameter setting	93
	\$PASHS,MRX	Set transformation matrix from PZ-90 to WGS-84	95
	\$PASHQ,MRX	Query transformation matrix	95
	\$PASHQ,PAR	Query receiver parameters	96
	\$PASHS,POP	Position computation rate	100
	\$PASHQ,PRT	Request port baud rate	105
	\$PASHQ,RID	Request receiver identification	108
	\$PASHQ,RIO	Request for receiver ID	109
	\$PASHQ,RSO	Query receiver serial number and installed options	110
	\$PASHS,SEM	Apply a secondary elevation mask zone	111
	\$PASHS,SMI	Set code smoothing	112
	\$PASHS,SMV	Set speed filtering	112
	\$PASHS,SPD	Set speed (baud rate) of serial port	113
	\$PASHS,SYS	Set system (GLONASS/GPS/Mixed)	116
	\$PASHS,TSC	Set type of time scale used	116
	\$PASHQ,TSC	Display time scale setting	116
	\$PASHS,UDD	Set user-defined datum	117
	\$PASHQ,UDD	Display user-defined datum	118
Surveying Parameters	\$PASHS,ANT	Set antenna offset parameter	79
	\$PASHQ,ANT	Query antenna offset parameters	79
	\$PASHS,SIT	Set site name	112
Data Recording	\$PASHS,ELM	Set data recording elevation mask	85
	\$PASHS,EPG	Set kinematic epoch counter	85
	\$PASHS,MSV	Sets the minimum number of satellites	96
	\$PASHS,RCI	Set recording interval	107
Satellites	\$PASHS,PRR	Upload Ephemeris and Almanac data to receiver	104
	\$PASHQ,STA	Request status of SVs currently locked	114
	\$PASHS,USE	Designate satellites to use	119

## **AIM: RAIM Availability**

(GG24E and GG24E2 receivers only)

### **\$PASHS,AIM,s**

Select the RAIM (Receiver Autonomous Integrity Monitor) mode, where s is one of the following 3-character strings representing a pre-defined alarm limit or the user can enter a user defined limit.

OFF - Disables RAIM

NPA - Non-precision approach, alarm limit is 0.030 nmi (default)

TER - Terminal, alarm limit is 1.00 nmi

ERT - En route, alarm limit is 2.00 nmi

n.nn- User-defined alarm limit

where n.nn can be a value between 0.015 and 4.00 kilometers.

Example: Set RAIM mode to terminal mode.

\$PASHS,AIM,TER<Enter>

## **ALT: Set Ellipsoid Height**

### **\$PASHS,ALT,f**

This command sets the ellipsoidal height of the antenna. Where f is the height in meters, and the range is  $\pm 99999.99$ . The receiver uses this data in the position calculation for 2-D position computation, and when in differential base mode.

Examples: Set antenna height to +100.25 meters

\$PASHS,ALT,+100.25<Enter>

Set antenna height to - 30.1 meters

\$PASHS,ALT,-30.1<Enter>

## ANT: Set Antenna Offsets

### \$PASHS,ANT,f1,f2,f3,m1,x1

Sets the antenna offsets from reference point to antenna phase center.

**Table 6.3:** Antenna Offsets Settings

Setting Parameter	Description	Range	Unit
f1	antenna height: height measured from the reference point to the antenna edge	0 -64.000	Meter
f2	antenna radius: the distance from the antenna phase center to the antenna edge	0.0 - 9.9999	Meter
f3	antenna offset: the offset set from the antenna phase center to the antenna ground plane.	0.0 - 99.9999	Meter
m1	Always 0	0	
x1	Always 0	0	



The implementation of this command affects message type 1, 9, 31, 34, 3, and 22 significantly. Only vertical offsets are supported by Message 22, thus the azimuth and distance fields of this command should always be 0 if in RTK or differential mode.

Example: Set antenna offsets.

```
$PASHS,ANT,1.678,0.1737,0.5,0000.00,0.0<Enter>
```

### \$PASHQ,ANT,c

Requests the current antenna offset parameters, where c is the output port and is not required to direct the response message to the current communication port.

Example: Query antenna offsets to port A.

```
$PASHQ,ANT
```

### **\$PASHR,ANT,f1,f2,f3,m1,x1\*cc**

Returns the antenna parameters of the receiver, where Table 6.4 outlines the response format.

**Table 6.4:** ANT Message Structure

Return Parameter	Description	Range	Unit
f1	antenna height: height measured from the reference point to the antenna edge	0—64.000	meter
f2	antenna radius: the distance from the antenna phase center to the antenna edge	0.0—9.9999	meter
f3	antenna offset: the offset set from the antenna phase center to the antenna ground plane.	0.0—99.9999	meter
m1	Always 0	0	
x1	Always 0	0	
*cc	checksum	00-FF	n/a

## CLK: Clock Status

### \$PASHQ,CLK

Queries the real-time clock status. Note that the response contains an extra-nuisance data field at the end before the checksum.

### \$PASHR,CLK

The response is in the format:

\$PASHR,CLK,d1,d2, d, d3, d4, d5, d6, d7, d8\*cc

where Table 6.5 outlines the response format:

**Table 6.5:** CLK Response Format

Parameter	Description	Range
d1	Year	0-99
d2	Month	0-12
d3	Date	0-31
d4	Day	0-7
d5	Hour	0-23
d6	Minute	0-60
d7	Second	0-60
d8	Time Difference	
*cc	The hexadecimal checksum	0-9 and A-F

Example Response:

\$PASHR,CLK,96,12,04,04,13,25,20,14\*1D

Date: 4 December 1996, Wednesday

Time:13.25, 20sec;

Last write time to clock operation was at 14sec before issuing the command.

## CTS: Port Protocol

### \$PASHS,CTS,c,s

This command enables or disables the RTS/CTS (handshaking) protocol for the specified port, where c is the port and s is ON or OFF. If the port is not specified (i.e., if c is not included in the command), the protocol is enabled or disabled for the port to which the command was sent.

Example: Disable the handshaking protocol for port A.

\$PASHS,CTS,A,OFF<Enter>

### \$PASHQ,CTS

The associated query command is \$PASHQ,CTS which requests the RTS/CTS (handshaking) protocol status.

### \$PASHR,CTS

The response message is in the form \$PASHR,CTS,s where s is the RTS/CTS (handshaking) protocol status, ON or OFF.

## DSY: Daisy Chain

### \$PASHS,DSY,x,y

Redirects all characters from one serial port to the other without interpreting them, where x is the source port and y is the destination port. Any combination may be chosen. When a port is in daisy chain mode, it can only interpret the OFF command; all other characters are redirected. The OFF command discontinues the daisy chain mode. Redirection can also be bi-directional (i.e. A to B and B to A at the same time). Table 6.6 lists the daisy chain commands and their effects.

**Table 6.6:** Daisy Chain Commands

Command	Effect
\$PASHS,DSY,A,B<Enter>	Redirects A to B. Can issue from any port.
\$PASHS,DSY,B,A<Enter>	Redirects B to A. Can issue from any port, but it cannot be issued from port A if \$PASH,DSY,A,B<Enter> has been sent.
\$PASHS,DSY,A,OFF<Enter>	Turns off redirection from A. Can issue from any port.
\$PASHS,DSY,OFF<Enter>	Turns off daisy chain on all ports. Can issue from any port.



The DSY command also works with Ports A and C, or Ports B and C in the manner described in Table 6.6.

## DTG: GLONASS Time Shift

### \$PASHS,DTG,f

Set GLONASS system time shift relative to GPS system time, where f is the time shift in microseconds, from 0.0000 (default) to  $\pm 500000.0000$ . F is the fractional part of the GPS-GLONASS system time offset, the integer seconds (leap seconds) and integer hour offsets are automatically set by the receiver.

Example: Set GLONASS system time shift to -1.3 microseconds

\$PASHS,DTG,-1.3



This parameter needs to be defined close to the real time shift value for the receiver to compute position when this parameter is being used. As of September 1997, the time shift value is 1.2 microseconds.

## DTM: Datum Selection

### \$PASHS,DTM,str

This command selects the geodetic datum used for position computation.

where str can be W84 (WGS-84), E90 (PZ-90), USR (user-defined datum), or other predefined datum as listed in Appendix B. The default is WGS-84. Parameters for a user-defined datum are entered with the \$PASHS,UDD command on page 117.



GPS ephemeris are transmitted in WGS-84 reference system (default) and GLONASS ephemeris in Earth-90 system (PZ-90). The positions of GLONASS satellites are automatically transformed to the WGS-84 reference system, unless the SYS = GLO, in which case PZ-90 is used by default. If computed positions based on a different datum are desired, select the datum from Appendix A, or issue the command \$PASHS,UDD (user-defined datum).

Example: Set the datum to International 1924.

\$PASHS,DTM,AST<Enter>

## DUG: UTC-GPS Time Difference

### \$PASHQ,DUG

Displays information on the time difference between UTC and GPS system times.  
The response message is in the form:

\$PASHR,DUG,struct

where struct is in binary format as listed in Table 6.7

**Table 6.7:** GPS-UTC Time Codes

Type	Size (bytes)	Content	Units	Example	
				Actual Number	Interpretation
unsigned short	2	GPS week of current GPS-UTC time correction	week numbers	897	week 897
unsigned short	2	GPS system time of current GPS-UTC time correction	seconds x $2^{12}$ (4096)	123	$123 \times 2^{12}$ seconds
unsigned short	2	Current GPS-UTC time correction	seconds	11	11 seconds
unsigned short	2	GPS week of correction's change	week numbers	834	week 834
unsigned short	2	Day of correction's change	1...7	1	day 1
unsigned short	2	New GPS-UTC time correction	seconds	11	11 seconds
unsigned short	2	Checksum computed by breaking the structure into shorts, adding them together, and taking the least significant 16 bits of the result.			
Total bytes	14				

## ELM: Raw Data Elevation Mask

### \$PASHS,ELM,x

Sets the value of elevation under which the measurement data (MCA) for that satellite will not be output or recorded into data storage memory, where x is the elevation mask in degree. The default is 5°.

Example: Set elevation mask to 10 degrees

\$PASHS,ELM,10



ELM controls the elevation mask for satellites used for raw measurement output, and Base station output of RTCM messages Type 18 & 19.

PEM controls the elevation mask for satellites used for position computation, and Base station output of RTCM messages Type 1,9,31 & 34.

## EPG: Set Kinematic Epoch Counter

### \$PASHS,EPG,d

Sets the initial value of the counter of epochs for recording at a site where d is the number of epochs and ranges from 0 to 999. The command is used during kinematic surveys, when you want to occupy a site for a set amount of time. When the number of epoch goes to zero, the site name will be set automatically to ??? indicating that the receiver is in motion.

Example: Sets the epoch counter to 20.

\$PASHS,EPG,20<Enter>



The site name must be set with the \$PASHS,SIT command before the epoch counter works.

## ERM: Set Position Error Mask For Autonomous & DGPS Modes

This command sets the position error mask for autonomous, DGPS or CPD position solution. If the calculated 99% (3 sigma) error estimate of the computed position exceeds the set ERM value, no position will be output. The 99% position error estimate is 3 times the standard deviation values reported in the GST message.

**\$PASHS,ERM,ccc,h,v<CR>>LF>**

Current ERM settings appear in the response to \$PASHQ,PAR

Setting Parameter	Description	Range
ccc	Positioning type: AUT - sets error masks for autonomous mode DIF - sets error masks for code-differential mode ALL - sets equal error masks for AUT and DIF modes	
h	Integer value of horizontal error mask [meters]	1 - 6000
v	integer value of vertical error mask [meters]	1 - 6000

Default:

Autonomous mode: 6000, 6000

Code differential: 6000, 6000

**Example:** \$PASHS,ERM,AUT,5,10<CR><LF>

Sets horizontal error masks for autonomous mode to 5 meters and vertical error mask to 10 meters.

Notes:

- Users who currently use the RMS and standard deviation information reported in the GST message, and who also use the PDOP mask to screen out position fixes in less than favorable conditions, may choose to disable the additional ERM masking feature. To disable the ERM, use the default ERM settings or issue the command: \$PASHS,ERM,ALL,6000,6000
- Horizontal position standard deviation is derived from the individual latitude and longitude standard deviations (GST) every epoch
- The various ERM mask parameters are utilized based on the positioning mode the receiver is operating in. For example, in auto-differential mode (AUT,ON), based on the epoch-to-epoch conditions, the receiver will use the respective mask parameters based on the corresponding positioning mode of each epoch. If the receiver is generating autonomous positions (e.g. due to the lack of current RTCM correction) the AUT mask parameters will be used until differential position fixes are computed, which will be masked by the DIF parameters.

## EXF: Set Frequency Input - Sensor Only

### \$PASHS,EXF,s

This command sets internal/external reference frequency input, where s is either ON, OFF or an external frequency value in Hz.

Table 6.8 outlines the structure:

**Table 6.8:** EXF Structure

Field	Description
ON	Turn on external reference frequency (if s=ON, the external reference frequency must be 20 MHz. If the frequency is not 20 MHz, use s=XXX)
OFF	Revert to internal oscillator (default)
XXX	Set external frequency to a value between 10,000 and 21,000,000 Hz in steps of 10,000 Hz

User settings are saved in battery-backed-up memory through power cycles, and are used until a new frequency is selected, until turned off (\$PASHS,EXF,OFF) or the memory is cleared.

Example: Enable the external frequency at 20 mHz.

```
$PASHS,EXF,ON<Enter>
```

### \$PASHQ,EXF,c

The associated query command is \$PASHQ,EXF, where c is the optional output serial port.

Example: Query the external frequency status to port A.

```
$PASHQ,EXF,A<Enter>
```

### \$PASHR,EXF

The response message is in the form \$PASHR,EXF,s where s is:

**Table 6.9:** EXF Response Structure

Field	Description
OFF	Internal oscillator is used
s	External frequency is used, at frequency s

## **FIX: Altitude Fix Mode**

### **\$PASHS, FIX, x**

Set altitude hold position fix mode for the altitude used (for 2- D position determination), where x is 0 or 1.

x = 0 (default), the most recent antenna altitude is used in altitude hold position fix. The altitude is taken from either the altitude entered by the \$PASHS, POS command, or the last one computed when VDOP is less than VDOP mask.

x = 1, only the most recently entered altitude is used

Example: Fix using most recent altitude

\$PASHS, FIX, 0

## **GTF: Set GLONASS Time Shift**

### **\$PASHS, GTF, d**

This command sets the GLONASS system time shift hold position fixed mode, where d is 0 or 1.

d = 0 - Use the most recent computed GLONASS system time shift

d = 1 - Always use GLONASS system time shift entered by \$PASHS, DTG.

Default is 0.



**This command does not set the GLONASS system time shift, but just says whether to use the last computed or entered value of GLONASS system time shift in fixed mode.**

## GTM: GLONASS Time Shift Relative or Fixed

### \$PASHS,GTM,d

This command specifies whether to compute GLONASS system time shift relative to GPS system time, or hold it fixed, where d is 0, 1, or 2. Default = 1.

d = 0 - GLONASS system time shift is never held fixed

d = 1 - Compute GLONASS system time shift if number of satellite (N) is enough to compute position, but hold it fixed if number of satellites is N-1. See PMD for number of satellites required to compute position.

d = 2 - GLONASS system time shift is always held fixed.



When d = 0, if the number of satellites is less than needed, position is not computed.

## GTP: Set Priority of GLONASS Time Shift

### \$PASHS,GTP,c

This command sets the priority of GLONASS system time shift computation against altitude computation if the number of used satellites is 4, where c sets the priority. If c = Y, time shift has priority over altitude. If c = N, altitude has priority over time shift. Default is Y.

Y sets the receiver to compute GLONASS system time shift and hold altitude fixed.  
N sets the receiver to compute altitude and hold GLONASS system time shift fixed.



If GPS and GLONASS satellites are used in position computation, and both PMD and GTM are set to a value different than 0, (fix altitude or time shift when fewer than 5 satellites), then with only 4 used satellites: Y (default) sets the receiver to compute GLONASS time shift and hold altitude fixed. N sets the receiver to compute altitude and hold GLONASS time shift fixed.

Example: Set to compute GLONASS system time shift and use fixed altitude

\$PASHS,GTP,Y<Enter>

## HDP: Horizontal Dilution of Precision

### \$PASHS,HDP,d

Set value of HDOP mask (default = 4), where d is a number between 0 and 99.

Example: Set HDOP mask to 6

\$PASHS,HDP,6<Enter>

## INI: Receiver Initialization

### \$PASHS,INI,x1,x2,x3,x4,z

Reset receiver memory and serial port baud rates, where x1 through x4 are the codes for baud rate settings for ports A through D respectively (see \$PASHS,SPD command for code), and z is the memory reset code defined in Table 6.10.

**Table 6.10:** Reset Memory Codes

Reset Memory Code z	Action
0	No memory reset
1	Reset internal memory

Example: Reset baud rate of ports A, B, C, and D to 9600 baud and reset internal memory.

\$PASHS,INI,5,5,5,5,1 (GG24 Sensor)

\$PASHS,INI,5,5,1 (GG24E)



**GG24 Sensor's Port D is for internal use only. GG24E only has ports A and B available.**

## ION: Set Ionospheric Models

The ION setting is automatically set based on the receiver's mode of operation (ION,Y in autonomous and ION,N in differential).

### \$PASHQ,ION,x

Query current ionospheric data information, where x is the port through which the response message should be output. Note that x is not required to direct the response message to the current communication port.

### \$PASHR,ION

The response message has the format:

\$PASHR,ION,struct

where Table 6.11 outlines *struct*.

**Table 6.11:** Ionosphere Data Format

Type	Size	Content
float	4	$a_0$ ionospheric parameter (seconds).
float	4	$a_1$ ionospheric parameter (sec. per semicircle).
float	4	$a_2$ ionospheric parameter (sec. per semicircle <sup>2</sup> ).
float	4	$a_3$ ionospheric parameter (sec. per semicircle <sup>3</sup> ).
float	4	$b_0$ ionospheric parameter (seconds).
float	4	$b_1$ ionospheric parameter (sec. per semicircle).
float	4	$b_2$ ionospheric parameter (sec. per semicircle <sup>2</sup> ).
double	8	$b_3$ ionospheric parameter (sec. per semicircle <sup>3</sup> )
double	8	$A_0$ constant (zero-order terms of GPS/UTC polynomial) (sec)
double	8	$A_1$ constant (first-order terms of GPS/UTC polynomial) (sec/sec)
unsigned long	4	$t_{ot}$ reference time for UTC data (seconds)
short	2	$W_{nt}$ UTC reference week number
short	2	$\Delta_{tLS}$ delta time due to leap-second (seconds)
short	2	$WN_{LSF}$ Week of leap second correction
short	2	DN day of leap second correction
short	2	$DtLSF$ Delta time between GPS and UTC (seconds)

**Table 6.11: Ionosphere Data Format (continued)**

Type	Size	Content
short	2	WN Current GPS week number
unsigned long	4	TOW current time of week in seconds
short	2	bulwn current GPS week number when message was read (usually same as WN)
unsigned long	4	bultow time of week when message was read (usually same as TOW) (seconds)
short	2	Checksum computed by breaking the structure into shorts, adding them together, and taking the least significant 16 bits of the result.
total characters	76 bytes	



None of the above ionosphere data is computed by the receiver; it is all obtained from the frame data transmitted by the satellites.

## LPS: Loop Tracking

### \$PASHS,LPS,x,y,z

Set user-selectable third-order loop tracking parameters, where x is the ratio of the carrier loop, y is the carrier loop parameter, and z is the code loop parameter (see \$PASHQ,LPS below for more information). Loop setting allows you to select the tracking loop parameters based on application. The carrier and code loop parameters are set independently. Firmware uses default values until you select another setting. The user settings are saved in battery-backed memory and are used until a new setting is selected, or the memory is cleared. The default is 10, 3, 1.

Example: Change loop parameters

```
$PASHS,LPS,2,1,1<Enter>
```

### \$PASHQ,LPS,x

The associated query command is \$PASHQ,LPS,x, where x is the optional output port.

### \$PASHR,LPS

The response is in the form

```
$PASHR,LPS,x,y,z*cc
```

where

x = 0-10 (ratio)

y = 1, 2, or 3 (option # for selecting carrier loop)

z = 1, 2, or 3 (option number for selecting code loop)

Loop setting values:

1. **Third-order ratio** for carrier loop x (default = 10):
 

x = 0	indicates ratio of 0, i.e., no third-order, the carrier loop is a regular second-order loop (with damping of 1 instead of 0.7 as in previous versions)
x = 1	indicates ratio of 0.1, for low acceleration rate
x = 10	indicates ratio of 1.0, for high acceleration rate
2. **Carrier loop parameter** y (default = 3):
 

y = 1	indicates noise bandwidth of 0 = 10; static, very low phase noise
y = 2	indicates noise bandwidth of 0 = 25; low dynamics, low phase noise (< 2g for x=1 and <20g for x=10)
y = 3	indicates noise bandwidth of 0 = 50; high dynamics, medium phase noise (< 6g for x=1 and <100g for x=10)

3. **Code loop parameter z** (default = 1):

- |       |  |
|-------|--|
| z = 1 | indicates noise bandwidth of 0 = 1.0; fast range availability (5 sec), medium range noise    |
| z = 2 | indicates noise bandwidth of 0 = 0.5; medium range availability (10 sec), low range noise    |
| z = 3 | indicates noise bandwidth of 0 = 0.1; slow range availability (50 sec), very low range noise |



For high dynamic applications, use the setting **\$PASHS,LPS,10,3,1**.

## **LTZ: Set Local Time Zone**

### **\$PASHS,LTZ,d1,d2**

Set local time zone value, where d1 is the number of hours that should be added to the local time to match GMT time and d2 is the number of minutes; minutes have the same sign as d1. The d1 value is negative for east longitude, and the range is 0 to 13. The setting is displayed by NMEA message ZDA.

Example: Set local time zone to +7 hours, 0 minutes

**\$PASHS,LTZ,+7,0**

## MRX: Set Transformation Matrix from PZ-90 to WGS-84

### \$PASHS,MRX

Sets the transformation matrix from PZ-90 to WGS-84. The structure is

**\$PASHS,MRX,f1,f2,f3,f4,f5,f6,f7**

where the fields are as described in Table 6.12

**Table 6.12: MRX (PZ-90 to WGS-84) Structure**

Field	Description
f1,f2,f3	Translation in meters from PZ-90 to WGS-84. Range -1000.000 to +1000.000.
f4,f5,f6	Datum rotations in seconds of arc from PZ-90 to WGS-84. Range -10.0000 to +10.0000. + rotation is counterclockwise, - rotation is clockwise as viewed from the positive end of the axis about which the rotation takes place.
f7	Datum scale factor in ppm from PZ-90 to WGS-84. Range -10.00 to +10.00.

Default values are:

f1 = 0.0                      f2 = +2.5                      f3 = 0.0  
f4 = 0.0                      f5 = -0.3919" =  $-1.9 \times 10^{-6}$  radians                      f6 = 0.0  
f7 = 0

The transformation evaluates the following matrix equation:

$$\begin{bmatrix} x \\ y \\ z \end{bmatrix}_{WGS-84} = \begin{bmatrix} 0,0 \\ 2,5 \\ 0,0 \end{bmatrix} + (1 + 0 \times 10^{-6}) \begin{bmatrix} 1,0 & -1,9 \times 10^{-6} & 0,0 \\ 1,9 \times 10^{-6} & 1,0 & 0,0 \\ 0,0 & 0,0 & 1,0 \end{bmatrix} \begin{bmatrix} x \\ y \\ z \end{bmatrix}_{PZ-90}$$

### \$PASHQ,MRX,c

The accompanying query command has the structure, where c is the optional output port.

**\$PASHQ,MRX**

### \$PASHR,MRX

The transformation matrix response message is in the format

**\$PASHR,MRX,f1,f2,f3,f4,f5,f6,f7**

where the fields are as described in Table 6.12

## MSV: Set Minimum Satellites

### \$PASHS,MSV,x

Set the minimum number of satellites required for MBN or MCA messages to be output, where x is a number between 1 and 9. Default is 3.

Example: Set minimum satellites to 4

\$PASHS,MSV,4

## PAR: Query Receiver Parameters

### \$PASHQ,PAR,c

Queries the general receiver parameters, where c is the optional output port and is not requires to direct the response message to the current communications port.

Example: \$PASHQ,PAR

A typical response message (default values) is shown in Figure 6.1.

```
SPDA:5 SPDB:5 SPDC:5 SPDD:5
GPS:YYYYYYYYYYYYYYYYYYYYYYYYYYYYYYYY
GLO:YYYYYYYYYYYYYYYYYYYYYYYYYYYY
SYS:MIX DTM:W84 GTM:0 GTF:0 DTG:+000000.0000 TDP:04 GTP:Y
PMD:1 FIX:0 ALT:+00000.00 PDP:40 HDP:04 VDP:04
ERM:6000,6000,6000,6000,6000,6000
PEM:05 SEM:OFF UNH:N ION:Y SAV:N
RTC:OFF PRT:A
NMEA: LTN POS GLL GGA VTG GSN MSG GSA GSV SAT GRS RRE TTT ZDA TCM RMC GST GNS
CRT VEC DPO DCR
PRTA: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
OFF OFF OFF OFF
PRTB: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
OFF OFF OFF OFF
PRTC: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
OFF OFF OFF OFF
PRTD: OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
OFF OFF OFF OFF
PER:100.00
```

**Figure 6.1.** Typical \$PASHR,PAR Response Message

where Table 6.13 outlines the information in the response message.

**Table 6.13: \$PASHR,PAR Response Message Parameters**

Parameter	Description
SPDA:5	Serial port A baud rate. Default is 5 (9600).
SPDB:5	Serial port B baud rate. Default is 5 (9600).
SPDC:5	
SPDD:5	
GPS:Y	GPS satellites attempted to acquire. Default is all Y.
GLO:Y	GLONASS satellites attempted to acquire. Default is Y.
SYS:MIX	Type of navigational system used (GPS, GLONASS, or mixed). Default is MIX.
DTM:W84	Geodetic datum being used. Default is WGS-84.
GTM:0	Time shift mode for the minimum number of satellites required to compute a position. Default is 0.
GTF:0	Time shift mode for position computation. Default is 0.
DTG:0	Time shift in microseconds. Default is 0.
TDP:04	Time dilution of precision. Mask default is 04.
GTP:Y	Time shift priority over altitude fixed for position computation. Default is Y.
PMD:1	Position mode for the minimum number of satellites required to compute a position.
FIX:0	Altitude hold position fix mode for the altitude used when computing a 2-D position. With the default value (0), the most recent antenna altitude is used.
ALT:+00000.00	Height of the antenna position in meters. Default is 0.
PDP:40	Position Dilution Of Precision. Mask default is 40.
HDP:04	Horizontal Dilution Of Precision. Mask default is 04.
VDP:04	Vertical Dilution Of Precision mask. Default is 04.
ERM:6000	
PEM:05	Position elevation mask. Elevation below which the satellite will not be used to compute a position. Default is 05 degrees.
SEM:OFF	
UNH:N	Use unhealthy satellites for position computation. The default is N.
ION:Y	Include ionospheric and tropospheric models in position computation. Note that “Y” is always reported in this field even during differential operation when ION is automatically set to “N”.

**Table 6.13:** \$PASHR,PAR Response Message Parameters (continued)

Parameter	Description
SAV:N	Save parameters in the battery-backed memory. With default value (N), at the next power cycle, the default parameters are used.
RTC:OFF	RTCM differential mode setting. OFF for disabled, BAS for base station setting, REM for remote station setting. Default is OFF.
PRT:A	Port assigned to send or receive differential corrections. Port D is for internal use only and so is not accessible.
PER:100.00	Send interval of the NMEA response messages, with the exception of TTT. Default is 1 second.

For NMEA messages LTM, AIM, POS, GLL, GXP, GGA, VTG, GSN, MSG, GSA, SAT, GRS, RRE, TTT, and ZDA, the default is OFF (disabled) for both ports.

## **PDP: Position Dilution of Precision**

### **\$PASHS,PDP,d**

Set the value of the PDOP mask to d, where d is a number between 0 and 99. Position is not computed if the PDOP exceeds the PDOP mask. The default is 40.

Example: Set PDOP mask to 20

\$PASHS,PDP,20<Enter>

## **PEM: Position Elevation Mask**

### **\$PASHS,PEM,d**

This command sets the elevation mask for position computation. The structure is \$PASHS,PEM,d where d is 0 to 90 degrees. Default is 5 degrees. Satellites with elevation less than the elevation mask are not used for position computation.

Example: Set position elevation mask to 15 degrees

\$PASHS,PEM,15<Enter>



ELM controls the elevation angle for satellites used for raw measurement output and Base station output of RTCM messages Type 18 & 19. PEM controls the elevation angle for satellites used for positions and Base station output of RTCM messages Type 1, 9, 31 & 34.

## PHE: Photogrammetry Edge

### \$PASHS,PHE,c

This command allows you to set the edge (rising or falling) at which the trigger signal associated with the photogrammetry event will be measured where c = R (photo rising edge), or F (photo falling edge). Default is R.

Example: Set the photogrammetry edge to falling edge.

```
$PASHS,PHE,F<Enter>
```

### \$PASHQ,PHE,c

The associated query command is \$PASHQ,PHE,c, where c is the optional output port.

Example: Query the photogrammetry edge setting to port B.

```
$PASHQ,PHE,B<Enter>
```

### \$PASHR,PHE,c

The response is in the form:

```
$PASHR,PHE,x*cc
```

where c is R for rising edge, or F for falling edge, and \*cc is the checksum.

## PMD: Position Mode

### \$PASHS,PMD,d

Set position mode for minimum number of satellites required to compute a position, where d = 0, 1, 2, or 3.

**Table 6.14:** Position Mode Settings

Mode	Description
d = 0	minimum of 5 satellites needed (e.g., for 3-D)
d = 1	default, minimum of 4 satellites needed; with 4 satellites, altitude is held (2-D); with 5 or more, altitude is not held (3-D) (Default)
d = 2	minimum of 4 satellites needed; altitude always held (always 2-D)
d = 3	minimum 4 satellites needed; with 4 satellites, altitude is always held; with 5 satellites, altitude is held only if HDOP is greater than HDOP mask (2-D), otherwise 3-D



The number of satellites required to compute a position is based on SYS = MIX. For SYS = GPS or SYS = GLO, the number of satellites required is N - 1. Also, the description of the number of satellites required to hold altitude fixed is based on the assumption that GTP is set to Y and altitude will be held fixed before time shift.

Example: Set minimum number of satellites for 3-D computation

\$PASHS,PMD,0<Enter>

## POP: Position Fix Rate

### \$PASHS,POP,d

Set the internal update rate of the receiver, where d may be either 2 or 5 Hz, indicating that the position will be computed 2 or 5 times per second, depending upon the setting; the default is 2 Hz.



The 2 or 5 Hz rates are available only if the corresponding option has been installed in the receiver. When POP is set to 5, the number of satellites in the position computation will be reduced to 16 satellites because of CPU processing limitation. However, all satellites are tracked, even when the update rate is 5 Hz.

Example: Set the internal update rate to 5Hz

\$PASHS,POP,5<Enter>

## POS: Set Antenna Position

### \$PASHS,POS,m1,c1,m2,c2,f1

Sets the position of the antenna used in differential base mode.

**Table 6.15: POS Structure**

Field	Description	Range
m1	Latitude in degrees, decimal minutes (ddmm.mmmmmm)	0 - 90.0
c1	North (N) or South (S)	N, S
m2	Longitude in degrees, decimal minutes (dddmm.mmmmmm)	0 - 90.0
c2	East (E) or West (W)	E, W
f1	the ellipsoidal height in meters (+ or -) and xxxxx.xxx	± 0 - 99999.999

Example: Set antenna position

\$PASHS,POS,3722.291213,N,12159.799821,W,+15.25<Enter>

## POS CUR: Set Antenna to Current Computed Position

### \$PASHS,POS,CUR

This command is an extension of the \$PASHS,POS command, setting the antenna to the current (last computed) position as base coordinates.



If the receiver is not currently computing a position, the last computed position is stored. If the receiver has not computed a position, the command is ignored.

## POW: Battery Parameters

### \$PASHS,POW,d1,d2,f1

The POW command allows you to enter parameters associated with the external battery. The query and response uses entered parameters to compute the approximate amount of available time left on the battery.

**Table 6.16:** POW Parameter Table

Parameter	Description	Range
d1	battery capacity in mAh	500 - 10000
d2	battery capacity in percent (percent charged)	0-100
f1	battery voltage	10.0 - 28.0

Example: Set the POW parameters of a 12 volt battery with a capacity of 5000 mAh that is 100% charged.

\$PASHS,POW,5000,100,12.0 <Enter>



**The data shown for the external battery is estimated based on user entered parameters and the power consumption of the receiver. The user should re-Enter the battery parameters after clearing the receiver's internal memory. Using receiver to power external devices such as radios can reduce the effectiveness of this command.**

### \$PASHQ,POW,c

The POW query command requests current available battery power data, where c is the optional port to which the response will be sent.

## **\$PASHR,POW**

The available battery power displayed in the response is computed from the battery parameters entered and the amount of time the receiver has been on.

\$PASHR,POW,d1,d2,d3,f1\*cc

where Table 6.17 outlines the response format:

**Table 6.17:** POW Message Structure

Parameter	Description	Unit
d1	battery capacity (time)	minutes
d2	capacity remaining	minutes
d3	battery capacity (power)	mAh
f1	battery voltage	volts
*cc	checksum	n/a

## **PPO: Point Positioning**

### **\$PASHS,PPO,c**

Enable/disable point positioning mode, where c is either Y (enable) or N (disable). Point positioning is an averaging algorithm that will improve the stand-alone accuracy of a static point after about 4 hours.

Example: Enable point positioning mode

\$PASHS,PPO,Y <Enter>

## PPS: 1 PPS Pulse Output

### \$PASHS,PPS,f1,f2,c3

The GG24 GPS board can generate 1 PPS pulse (page 35) with programmable period and offset. 1 PPS is generated by default once every second with its rising or falling edge synchronized to the GPS system time (or UTC + 3 hours if SYS is set to GLO). The PPS set command allows you to change the period and the offset of the pulse, where Table 6.18 outlines the parameters:

**Table 6.18:** PPS Parameters

Field	Description
f1	1PPS period in seconds with a range between 0.2 and 99, depending upon the receiver update rate, which depends upon the position update or raw data update options
f2	Offset from GPS system time in milliseconds, with 100ns resolution (range between -999.9999 and +999.9999)
c3	R (Synchronize the rising edge of the pulse with GPS system time), or F (synchronize the falling edge of the pulse with GPS system time).

The precision of the PPS signal is 70 nano-seconds in stand-alone mode with SA active, and 45 nano-seconds in differential mode.

Example: Set 1PPS to a period of 2 seconds an offset of 500ms, and synchronize the rising edge of the pulse with GPS time.

```
$PASHS,PPS,.2.0,+500,R<Enter>
```

### \$PASHQ,PPS,x

The associated query command is \$PASHQ,PPS,x, where x is the optional output port.

Example: Query 1PPS parameters to port A.

```
$PASHQ,PPS,A<Enter>
```

### \$PASHR,PPS

The receiver response message to this query command is in the form:

```
$PASHR,PPS,f1,f2,c3,*cc
```

where Table 6.19 outlines the response:

**Table 6.19: PPS Response Structure**

Field	Description
f1	Period in seconds
f2	Offset value
c3	R (rising) or F (falling) for the synchronization edge of the pulse
*cc	is the checksum

## **PPR: Ephemeris & Almanac Upload**

This command allows the user to upload current ephemeris and almanac data in Magellan format (SNV and SAL) to a receiver so when it is turned on it is hot (up to date) and the TTFF is minimum.

### **\$PASHS,PPR,Y**

To enable ephemeris/almanac uploading mode, issue the \$PASHS,PPR,Y command. After uploading the data, turn PRR off by issuing the command \$PASHS,PPR,N. Default is N.

The Upload Process:

- Using \$PASHQ,SNV (\$PASHQ,SNG) and \$PASHQ,SAL (\$PASHQ,SAG), obtain ephemeris "SNV/SNG" and almanac "SAL/SAG" data from another running Magellan-type receiver. Save the generated SNV/SNG and SAL/SAG messages in a file
- Issue "\$PASHS,PPR,Y" to the receiver to be uploaded
- Use a file upload utility such as "gterm.exe" or "term90.exe" under Norton Commander to upload the previously logged SNV/SAL file
- "\$PASHR,ACK" will be generated by the receiver after each successfully decoded ephemeris or almanac record.

## PRT: Port Setting

### \$PASHQ,PRT,c

This command displays the baud rate setting for the connected port, where c is the optional output port.

Example:

```
$PASHQ,PRT<Enter>
```

### \$PASHR,PRT

The response is a message in the form:

```
$PASHR,PRT,x,d where
```

x = communication port

d = communication speed outlined in Table 6.20

**Table 6.20:** Serial Port Baud Rate Codes

Code	Baud Rate
0	300
1	600
2	1200
3	2400
4	4800
5	9600 (default)
6	19200
7	38400
8	56800
9	115200

## PSM: Position/Velocity Filter Control

This command enables/disables the position/velocity filter using \$PASHS,PSM command. A number of filtering models are available to suit the navigation mode.

**\$PASHS,PSM,x**

where:

x=0 - no filtering

x=1 - filtering without any kinematic model

x=2 - filtering with static model

x=3 - filtering with walking kinematic model

x=4 - filtering with ship kinematic model

x=5 - filtering with automobile kinematic model

x=6 - filtering with aircraft kinematic model

**Query:** \$PASHQ,PSM

**Response:** \$PASHR,PSM,x

## RCI: Recording Interval

### \$PASHS,RCI,f

Sets the value of the interval at which raw data messages will be recorded or output, where f is any number between 0.2 and 999 in seconds, depending upon the raw data update rate option installed (Table 6.21). Default is 20.0.

**Table 6.21:** Raw Data Update Rate Options

Installed Option	RCI Range (seconds)	Increment
1 Hz	1-999	1 second
2 Hz	0.5-999	0.5 second from 0.5 to 1 1 second from 1 to 999
5 Hz	0.2-999	0.2 second from 0.2 to 1 1 second from 1 to 999



At a 2-Hz output rate, a baud rate of 115,000 bps is required to output all the raw data (MBN, PBN, SNV, SNG, SAL, and SAG) and NMEA messages. At higher output rates, the raw data must be split between two serial ports, or some of the messages should be turned off. To receive data at high baud rates (e.g., 115,000), you must ensure that your computer has a suitable serial I/O capability. Most computers with 486 or Pentium processors and 16550 UART serial ports can support high data rates. For a 5-Hz update rate, the \$PASHS,POP,5 command should have been sent previously.

Example: Set recording interval to 5 seconds

```
$PASHS,RCI,5<Enter>
```

## **RID:Receiver ID**

### **\$PASHQ,RID,c**

This query command allows you to display the receiver ID, firmware version, and installed options, where c is the optional output port.

Example: Query the receiver in to the current port.

\$PASHQ,RID<Enter>

### **\$PASHR,RID**

The response to the \$PASHQ,RID command is a message in the form:

\$PASHR,RID,G2,s1,s2\*cc

where:

G2 = GG24

s1 = firmware version

s2 = installed option

For more information on the options, see “Receiver Options” on page 4.

Response:

\$PASHR,RID,G2,GM06,55OPUB-LEGMJ-S\*6C



A - (dash) in any of the option slots indicates that the option is not installed, and an underscore indicates that it is not available.

## RIO: Request for Receiver ID

### \$PASHQ,RIO

This command lets you query the receiver ID. The response is output through the port that received the request.

### \$PASHR,RIO

The response message is in the form:

\$PASHR,RIO,s1,s2,s3,s4,s5\*cc

where Table 6.22 outlines the response parameters:

**Table 6.22: RIO Structure**

Field	Description	Range
s1	Product name or receiver type	Maximum 10 characters
s2	Main processor firmware version	Maximum of 10 characters
s3	Channel firmware version	Maximum of 10 characters
s4	Option settings	Maximum of 12 characters
s5	Serial number	Maximum of 20 characters
cc	Byte-wise checksum (XOR of all characters between but excluding \$ and *)	2 hex characters

Example: Query the receiver ID.

\$PASHQ,RIO

Typical Response:

\$PASHR,RIO,GG24,1R49,1E53,-U-1-M-Q-L-,AD00109JMEWG\*35

## **RSO: Receiver Serial Number and Installed Options**

### **\$PASHQ,RSO,(c)**

Where c is the optional response port.

**Format:** \$PASHR,RSO,s1,s2\*cc

where:

s1 is the receiver serial number

s2 list of installed options.

Example: \$PASHR,RSO,GD00107\_\_\_\_\_,55OPUB-LEGMJ-S\*42

## **RST: Reset Receiver to Default Parameters**

### **\$PASHS,RST**

Reset the receiver parameters to their default values. For more information, see the query commands PAR, RAW, and RTC.

Example: Reset user parameters to default values.

\$PASHS,RST<Enter>

## **SAV: Save User Parameters**

### **\$PASHS,SAV,x**

Enables or disables saving user parameters in the battery-backed-up memory (BBU), where x is Y (yes) or N (No). User parameters (entered before issuing the SAV command) are saved until commands INI or RST or SAV,N are issued. The default is N. All parameters are saved in the battery backup memory except the POP parameter.



**Set commands issued after the SAV command is issued are not saved.**

Example: Save user parameters to internal battery memory

\$PASHS,SAV,Y<Enter>

## SEM: Secondary Elevation Mask Zone

In the northern hemisphere, users are experiencing more and more ionospheric activity especially in the northern sky which results in poor positioning quality. Therefore, zoning of the PEM function is now possible to allow the user to specify a second (secondary) mask value for a particular sector of the sky. This is achieved using a new Secondary Elevation Mask command (SEM) which contains the secondary elevation mask angle for the particular sector defined by two azimuth angles.

**\$PASHS,SEM,d1,d2,d3**

where:


d1 = secondary elevation mask angle

d2 = first azimuth defining the secondary sector

d3 = second azimuth defining the secondary sector

The secondary sector is the region between the first and the second defining measured clockwise from North, respectively.

**Example:** To achieve the mask zoning shown, either of the following sets of commands can be used.

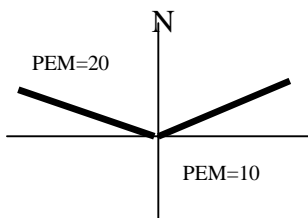

\$PASHS,PEM,10

\$PASHS,SEM,20,300,60

OR

\$PASHS,PEM,20\$

PASHS,SEM,10,60,300

### NOTES:

- To change the SEM settings, the user will issue a new SEM command. A new SEM setting command shall override earlier SEM settings.
- To turn off a previously activated SEM, the user will issue the command \$PASHS,SEM,OFF.
- PEM commands issued after the SEM command will change the elevation mask for ONLY the primary PEM zone. The previously issued SEM setting will continue in effect. To apply PEM to the whole sky, SEM will have to be turned off.
- Default SEM is OFF.

**NOTE: SEM will only apply to PEM or the elevation mask angle used in position computation. ELM function shall remain unchanged without zoning.**

## **SIT: Set Site Name**

### **\$PASHS,SIT,s**

Set site name, where s is a 4 character string.

Example: Set site name to 0001

\$PASHS,SIT,0001<Enter>

## **SMI: Code Measurement Smoothing**

### **\$PASHS,SMI,d**

Set the interval in seconds of code measurements smoothing, where d is the interval in seconds ranging from 0 to 1000. The default is 100.

Example: Set code measurement smoothing to 200 seconds.

\$PASHS,SMI,200<Enter>

### **\$PASHQ,SMI,c**

The associated query command is \$PASHQ,SMI,c, where c is the optional output port.

### **\$PASHR,SMI,d**

The response message is in the form:

\$PASHR,SMI,\*cc

where d is the smoothing interval in seconds.

## **SMV: Speed Filtering**

### **\$PASHS,SMV,d**

This command sets the interval of speed filtering for the receiver velocity, where d is the interval ranging from 0 to 999 seconds. A filter interval of 0 seconds indicates no filtering.

## SNR: Set Signal-to-Noise Ratio

### \$PASHS,SNR,s

Sets the algorithm used for computing signal-to-noise ratio, where s is a 3-character algorithm identifier; algorithm identifiers are DBH and AMP. Default is AMP.

More more information about these settings, see the “Signal to Noise” section, of Chapter 4.

Example: Compute SNR using DBH algorithm

```
$PASHS,SNR,DBH<Enter>
```

### \$PASHQ,SNR,x

The associated query command is \$PASHQ,SNR,x where x is the optional port where the reply will be sent.

### \$PASHR,SNR

The receiver response message is in the form \$PASHR,SNR,str\*cc, where str is DBH or AMP, and cc is the checksum.

## SPD: Serial Port Baud Rate

### \$PASHS,SPD,x,d

Set the baud rate of the GG24 serial port x, where d is the output port, and d is a number between 0 and 9 specifying the baud rate as shown in Table 6.23 Default is 9600 baud.

**Table 6.23: Baud Rate Codes**

Code	Baud Rate	Code	Baud Rate
0	300	5	9600
1	600	6	19200
2	1200	7	38400
3	2400	8	57600
4	4800	9	115200

To resume communication with the GG24 after changing the baud rate using this command, change the baud rate of the command device.

Example: Set port A to 19200 baud

```
$PASHS,SPD,A,6<Enter>
```

## STA: Show Status of Satellites

### \$PASHQ,STA,c

Show the status of satellites currently locked where c is the optional output port.

Example: Query STA to the current port.

```
$PASHQ,STA<Enter>
```

The response is a free format table that shows the current time, the PRN and signal to noise of each satellite locked.

Example:

```
TIME:    18:38:31 UTC
LOCKED:  03 23 16 39 54
COUNT:  54 26 17 31 35
```

## STB: Measurement Strobe Parameters

### \$PASHS,STB,d1,f1,c1

This command allows you to set the period factor, the offset, and the synchronization edge of the measurement strobe. The parameters are described in Table 6.24.

The period of the strobe is a function of the period factor times the recording interval (RCI). For example, if the period factor is set to 3 and the RCI is set to 2 seconds, then the period of the strobe will be 6. The offset is offset from GPS system time if the SYS parameter is set to GPS or MIX, and to GLONASS system time (UTC+3 hours) if SYS is set to GLO. Default parameters are 1,0,0,R. The accuracy of the strobe pulse is the same as for the PPS pulse.

**Table 6.24: STB Structure**

Parameter	Description	Range	Default
d1	Period factor. Determines the period of the pulse in seconds by the function (d1 *RCI) where d1 is the period factory and RCI is the recording interval.	0-9999	1
f1	Offset from system time in milliseconds	+999.9999	0.0
c1	Edge setting. Synchronizes the pulse to either the rising edge ® or the falling edge (F).	'R', 'F'	R

Example: Set the measurement strobe to have a period factor of 5, and offset of 10 milliseconds, and set the synchronization edge to be the falling edge.

```
$PASHS,STB,5,10,0,F<Enter>
```

### \$PASHQ,STB,x

The associated query command is \$PASHQ,STB,x, where x is the optional output port.

### \$PASHR,STB

The receiver response message is in the form:

```
$PASHR,STB,d1,f1,c1*cc
```

where the parameters are described in Table 6.24.

## **SYS: Set Navigational System**

### **\$PASHS,SYS,s**

Set navigational system to be used for positioning, where s is GPS, GLO, or MIX:

GPS - Only GPS is used

GLO - Only GLONASS is used

MIX - Both systems are used (default)

Example: Set the receiver to use GPS only

\$PASHS,SYS,GPS<Enter>

## **TDP: Time Shift Dilution of Precision**

### **\$PASHS,TDP,d**

Set GLONASS system time shift DOP mask, where d is 0 to 99. Default is 4. This is analogous to the VDP command. The time shift is only computed when TDOP is less than the TDOP mask. If TDOP is greater than the TDOP mask, then the most recently computed time shift is used when the number of satellites is low.

Example: Set GLONASS system time shift DOP mask to 30

\$PASHS,TDP,30

## **TSC: Set Type of Time Scale**

### **\$PASHS,TSC,s**

Sets the time scale to use for output data, where s is GPS or GLO:

GPS - use GPS system time scale (default)

GLO - use GLONASS system time scale



For SYS = GPS, TSC automatically sets to GPS system time scale. For SYS = GLO, TSC automatically sets to GLO. For SYS = MIX, the default setting of TSC is GPS. The messages affected are:

NMEA messages (always output UTC time),

Raw data (time tag dependent upon TSC setting),

1 PPS/measurement strobe (time tag dependent upon TSC setting),

Photo pulse (time tag dependent upon TSC setting).

### **\$PASHQ,TSC,x**

The associated query command is \$PASHQ,TSC,x where x is port the optional output port.

### **\$PASHR,TSC,s**

The associated response message is \$PASHR,TSC,s where s is GPS or GLO.

## UDD: Set User-Defined Datum

**\$PASHS,UDD,d1,d2,f1,f2,f3,f4,f5,f6,f7,f8**

Sets the user-defined datum parameters in the receiver memory, where

**Table 6.25: UDD Structure**

Field	Description	Range	Units	Default
d1	Geodetic datum id. Always 0 for WGS 84	0	n/a	0
d2	Semi-major axis	6300000-6400000	meters	6378137
f1	Flattening in meters	290.00000000-300.00000000	meters	298.25722356
f2	Translation in x direction	±1000.000	meters	0.0
f3	Translation in y direction	±1000.000	meters	0.0
f4	Translation in z direction	±1000.000	meters	0.0
f5	Rotation in x axis + rotation is counter clockwise, and rotation is clockwise rotation.		radians	0.0
f6	Rotation in y axis		radians	0.0
f7	Rotation in Z axis		radians	0.0
f8	Scale factor. Range -10.00 to +10.00	±10	n/a	0.0



For these parameters to be used, the DTM parameter must be set to 'USR'.

Example: Define local datum as the WGS-72 datum

\$PASHS,UDD, 0,6378135.0, 298.26,0,0,4.5,0,0,-0.554,0.23

\$PASHS,DTM,USR

This implements the transformations listed in Table 6.26 and below.

**Table 6.26: Ellipsoid Parameters for WGS-72 and WGS-84**

Datum	Reference Ellipsoid	a[m]	1/f
WGS-72	WGS-72	6378135.0	298.26
WGS-84	WGS-84	6378137.0	298.257223563


$$\Delta x = \Delta y = 0 \quad \Delta z = 4.5 \text{ meters} \quad m = 0.23 \times 10^{-6}$$

$$e_x = e_y = 0 \quad e_z = -2.686 \times 10^{-6} \text{ radians} = -0''.554$$

in the following equation:

$$\begin{bmatrix} x \\ y \\ z \end{bmatrix}_{WGS-84} = \begin{bmatrix} 0 \\ 0 \\ 4.5 \end{bmatrix} + (1 + 0.23 \times 10^{-6}) \begin{bmatrix} 1 & -2.686 \times 10^{-6} & 0 \\ 2.686 \times 10^{-6} & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} x \\ y \\ z \end{bmatrix}_{WGS-72}$$

Internally, the receiver implements the transformation *from* WGS-84 to WGS-72. Figure 6.2 demonstrates the change in the coordinate systems.

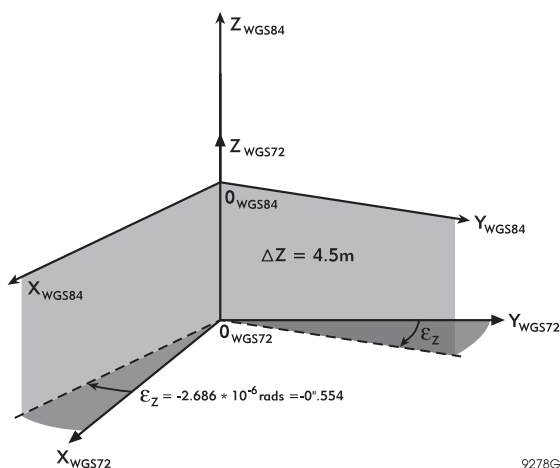

**Figure 6.2:** Rotation and Translation Between Coordinate Systems

### **\$PASHQ,UDD,c**

The associated query command is **\$PASH,UDD,c** where c is the optional output port; and is not required to direct the response message to the current communication port.

Example: Query datum parameters to port C.

**\$PASHS,UDD,c<Enter>**

### **\$PASHR,UDD**

The response is in the format:

**\$PASHR,UDD,d1,d2,f1,f2,f3,f4,f5,f6,f7,f8**

where the fields are as defined in Table 6.25.

**USE: Use Satellites****\$PASHS,USE,d,c**

Selects satellites to track or not track, where

d = ID number of satellite, 1-32 for GPS, 33-56 for GLONASS

ALL = all satellites

GPS = GPS satellites only

GLO = GLONASS satellites only

c = Y to use, N to not use

By default, all satellites are turned on (set to Y).

Example: Use (track) satellite 15

\$PASHS,USE,15,Y<Enter>

**USP: Select Satellite to Use in Position Computation****\$PASHS,USP,d,c**

This command selects an individual satellite to use in position computation, The structure is \$PASHS,USP,d,c, where:

d = ID number of satellite, 1-32 for GPS, 33-56 for GLONASS

ALL = all satellites

GPS = GPS satellites only

GLO = GLONASS satellites only

c = Y to use, N to not use

By default, all satellites are turned on (set to Y)

Example: Do not use Satellite 4

\$PASHS,USP,4,N

## UTS: Synchronize with GPS Time

### **\$PASHS,UTS,s**

This command enables (s=ON) or disables (s=OFF) a mechanism that synchronizes measurements and coordinates with GPS system time rather than with local (receiver) clock. This means that the calculated pseudo-ranges do not depend upon the receiver clock stability. This mode simulates a configuration where the receiver has a quartz oscillator with very high stability and is synchronized with GPS. Default is OFF.



**If processing raw data from the receiver with your own processing algorithms, we recommend that you turn UTS on.**

### **\$PASHQ,UTS,x**

The associated query command is \$PASHQ,UTS,x, where x is the port where the reply will be sent. Note that x is not required to direct the response message to the current communication port.

### **\$PASHR,UTS,x**

The receiver response message to this query command is in the form:

**\$PASHR,UTS,x\*cc**

where x is ON or OFF and \*cc is the checksum.

## VDP: Vertical Dilution of Precision

### **\$PASHS,VDP,d**

Set value of VDOP mask, where d is between 0 - 99. Default is 4.

Example: Set VDOP mask to 6

**\$PASHS,VDP,6**

# Raw Data Commands

The raw data commands cover all query and set commands related to measurement, ephemeris, and almanac data.

## Set Commands

There is only one set command that controls the continuous output of all raw data messages: the \$PASHS,RAW command. The \$PASHS,RAW command allows you to enable or disable the output of raw data messages and to set the port to which the messages will be output. The general format of the \$PASHS,RAW command is:

`$PASHS,RAW`

where str is a 3 character string that denotes the different raw data output types, c is the output serial port, and x is the ON/OFF toggle. For example, the command:

`$PASHS,RAW,MCA,A,ON<Enter>`

will output MCA messages to serial port A. IF the \$PASHS,RAW command is sent correctly, the receiver will respond with \$PASHR,ACK acknowledgment. The message will be output to the indicated serial port at the recording interval defined by the \$PASHS,RCI command. The default output frequency is every 20 seconds.

Raw data messages are disabled by sending the \$PASHS,RAW command with ON/OFF toggle field set to OFF. Multiple messages may be disabled from a particular port by sending the \$PASHS,RAW command with ALL in the string field.

For example the command:

`$PASHS,RAW,ALL,B,OFF<Enter>`

will disable all raw data messages from port B. To see what raw data messages have been enabled, use the \$PASHQ,RAW query.

In general, the parameters that affect raw data output are the same as those that control data recording including: recording interval, elevation mask, and minimum number of Svs. See Table 6.27, Raw Data Commands for more details about the commands that control these parameters.

## Query Commands

The query commands will output a single raw data message type once. The general format of the query command is:

\$PASHQ,str,x

where str is the 3 character string that denotes the raw data message type, and x is the serial port to which the message will be output. The serial port field is optional. If the query is sent with the port field left empty, then the response will be sent to the current port. If the port field contains a valid port (A-C), then the response will be output to that port. For example, the query:

\$PASHQ,PBN<Enter>

will output a single PBEN message to the current port. The command:

\$PASHQ,MCA,C<Enter>

will output a single MCA message to port C.

There are no ACK command acknowledgments for queries. If the query has been entered properly, and the data is available (for example, MCA is not available unless the receiver is tracking enough satellites above the elevation mask), then the acknowledgment will be the data response message.

Table 6.27 lists all the available raw data commands.

**Table 6.27:** Raw Data Commands

Function	Command	Description	Page
Almanac Data	\$PASHS,RAW,SAL	Enable/disable GPS raw almanac data.	131
	\$PASHQ,SAL	Query GPS raw almanac data.	131
	\$PASHS,RAW,SAG	Enable/disable GLONASS raw almanac data.	129
	\$PASHQ,SAG	Query GLONASS raw almanac data.	129
Disable Message	\$PASHS,RAW,ALL	Disable raw date message	
Ephemeris Data	\$PASHS,RAW,SNG	Enable/disable GLONASS raw ephemeris data.	133
	\$PASHQ,SNG	Query GLONASS raw ephemeris data	133
	\$PASHS,RAW,SNV	Enable/disable GPS raw ephemeris data	135
	\$PASHQ,SNV	Query GPS raw ephemeris data	136
Measurement Data	\$PASHS,RAW,MCA	Enable/disable raw measurement data (MCA)	123
	\$PASHQ,MCA	Query raw measurements data (MCA)	123
Position Data	\$PASHS,RAW,PBN	Enable/disable raw position data (PBEN)	126
	\$PASHQ,PBN	Query raw position data (PBEN)	126

**Table 6.27: Raw Data Commands (continued)**

Function	Command	Description	Page
Raw Data Parameters	\$PASHS,ELM	Set raw data output elevation mask	85
	\$PASHS,MSV	Set minimum number of satellites	96
	\$PASHS,RCI	Set recording interval	107
	\$PASHQ,RAW	Show current settings of raw data parameters	128
	\$PASHS,SIT	Set site name	112

## MCA: Enable/Disable MCA Message

### \$PASHS,RAW,MCA,x,s[,f]

Enable/disable measurement data (MCA) messages with Magellan type 3 structure on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.



**This message is output for those satellites with elevation equal to or greater than the elevation mask (ELM), and only if the number of locked satellites is equal to or greater than the minimum satellite mask.**

Example: Enable MCA message on port A with an output period of 5 seconds:

\$PASHS,RAW,MCA,A,ON,5

### \$PASHQ,MCA,x

The associated query command is \$PASHQ,MCA,x. This command outputs one set of MCA measurement data response messages on port x, where x is the optional output port.

## \$PASHR,MCA

The response is a binary message in the format:

\$PASHR,MCA,(measurement structure)

where Table 6.28 defines the measurement structure.

**Table 6.28: MCA Structure**

Field	Bytes	Content
unsigned short	2	Sequence ID number in units of 50 ms, modulo 30 minutes
unsigned char	1	Number of remaining structures to be sent for current epoch
unsigned char	1	Satellite PRN number (1-56). The broadcast ephemeris from a GLONASS satellite does not contain the satellite slot number. This information is derived from the almanac. When the GG24 has ephemeris data for a satellite but no almanac data (after memory reset with the INI command) the satellite number is set to zero. Once the almanac has been received, the satellite number is updated.
unsigned char	1	Satellite elevation angle (degrees)
unsigned char	1	Satellite azimuth (units of 2 degrees)
unsigned char	1	Channel ID (1-24)
unsigned char	1	Warning flag Bit 1 Bit 2 0 0 Code and/or carrier phase measured 0 1 Code and/or carrier phase measured, navigation message obtained, measurement not used to compute position 1 0 Code and/or carrier phase measured ,navigation message obtained, measurement used to compute position 3 Carrier phase questionable 4 Code phase questionable 5 Code phase integration not stable 6 Not used 7 Possible loss of lock 8 Loss-of-lock counter reset NOTE: More than one bit can be set at the same time.

**Table 6.28: MCA Structure (continued)**

Field	Bytes	Content
unsigned char	1	Goodbad flag indicates quality of position measurement: 0 = measurement not available and no additional data will be sent 22 = code and/or carrier phase measured 23 = code and/or carrier phase measured and navigation measurement obtained, but measurement not used to compute position 24 = code and/or carrier phase measured and navigation measurement obtained, measurement used to compute position
char	1	Polarity_know. This number is either 0 or 5 0 means the satellite is just locked 5 means the preamble was found and the polarity of phase tracking is known and taken into account (i.e., phase measurements can be used for ambiguity fixing).
unsigned char	1	Signal-to-noise ratio of satellite observation
unsigned char	1	Always 0 (not used)
double	8	Full carrier phase measurement in cycles. Not available unless carrier phase option is installed.
double	8	Raw_range. Raw range to satellite in seconds. Computed by formula: receiver time - transmitted time. NOTE: If TSC is set to GPS, in GLONASS pseudoranges, due to 11-sec (currently) difference between GLONASS system time and GPS system time, raw range will have 11-sec integer part. If TSC is set to GLO, in GPS pseudoranges, due to 11-sec (currently) difference between GPS system time and GLONASS system time, raw range will have -11 sec integer part.
long	4	Doppler ( $10^{-4}$ Hz)
long	4	Smoothing. Bits 0-23-smooth correction Bit 23 (MSB) - sign Bits 0-22 - magnitude of correction (centimeters) Bits 24-31 - Smooth count, unsigned, as follows: 0 - unsmoothed 1 - least smoothed 100 - most smoothed
unsigned char	1	Computed by XORing all the bytes of the structure. (MCA only)
total bytes	37	C/A only

For a given channel expecting more than one block of data, when one of them is not yet available, its warning flag is set to 7 and the rest of the block is zeroed out.

## PBN: Enable/Disable PBN Message

### \$PASHS,RAW,PBN,x,s[,f]

Enable/disable position data (PBN) messages on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.

Example: Enable PBN on port B with an output period of 2 seconds

\$PASHS,RAW,PBN,B,ON,2

### \$PASHQ,PBN,x

The associated query command is \$PASHQ,PBN,x. This command outputs one PBN position data response message on port x, where x is the optional output port.

### \$PASHR,PBN

The response is a binary message output on every recording interval (RCI). The message is in the form:

\$PASHR,PBN,(position structure)

where Table 6.29 defines the measurement structure.

**Table 6.29: PBN Structure**

Field	Bytes	Content
long rcvtime	4	Signal received time in milliseconds of week of GPS system time or in milliseconds of week/day of GLONASS system time (see commands \$PASHS,TSC and \$PASHS,SYS for more information). If GLONASS system time scale is chosen, operation (rcvtime % day) produces GLONASS system time (a time within a day) in all cases. This is the time tag for all measurements and position data.
char sitename	4	Set to user-entered string or four question marks ??? if empty
double navx	8	Antenna position ECEF x coordinate in meters.
double navy	8	Antenna position ECEF y coordinate in meters.
double navz	8	Antenna position ECEF z coordinate in meters.
float navt	4	Receiver clock offset in meters.
float navxdot	4	The antenna x velocity in meters per second.
float navydot	4	The antenna y velocity in meters per second.
float navzdot	4	The antenna z velocity in meters per second.
float navtdot	4	Receiver clock drift in meters per second.
unsigned short PDOP	2	PDOP multiplied by 100.
unsigned short checksum	2	The checksum is computed by breaking the structure into 27 unsigned shorts, adding them together, and taking the least significant 16 bits of the result.
total characters	56	

## RAW: Setting Query Command

### \$PASHQ,RAW,x

Show current settings of raw data parameters, where c is the optional output port.

Example:

\$PASHQ,RAW

#### Typical Response Message

```
RCI:020.00 MSV:3 ELM:00 REC:Y
ANH:0.0000 SIT:???? EPG:000 RNG:0
RAW:  MCA MBN PBN MCM SNV SAL SNG SAG
PRTA: OFF OFF OFF OFF OFF OFF OFF OFF
PRTB: OFF OFF OFF OFF OFF OFF OFF OFF
PRTC: OFF OFF OFF OFF OFF OFF OFF OFF
PRTD: OFF OFF OFF OFF OFF OFF OFF OFF
```

where Table 6.30 outlines the response parameters:

**Table 6.30:** \$PASHQ,RAW Response Parameters

Field	Description
RCI:020.00	This is the output interval of the data in seconds. Default is once every 20 seconds.
MSV:3	Minimum number of satellites for the data to be output. Default is 3.
ELM:00	Data elevation mask. Elevation below which data from that satellite will not be output.
REC:Y	
ANH:0.0000	
SIT:????	Four-character site name.
EPG: 000	
RNG: 0	
RAW:	Raw data types: MCA, MBN, PBN, SNV, SAL, MCA, SNG, SAG.
PRTA PRTB PRTC PRTD	Communication Ports A, B, and C. Port D is for internal use only and is not accessible
OFF/ON	OFF indicates that the RAW data message is not sent to the port. ON indicates the RAW data message is sent to the communication port.

## SAG: Enable/Disable GLONASS Satellite Almanac Message

### \$PASHS,RAW,SAG,x,s[,f]

Enable/disable GLONASS almanac data (SAG) messages on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.

Example: Disable SAG message on port A

\$PASHS,RAW,SAG,A,OFF<Enter>



Almanac data for all satellites is output once every hour, with one satellite output at each recording interval (RCI).

### \$PASHQ,SAG,x

The associated query command is \$PASHQ,SAG,x. This command outputs the SAG almanac data response message on port x, where x is the optional output port.

### \$PASHR,SAG

The response is a binary message in the form:

\$PASHR,SAG(structure)

where Table 6.31 defines the measurement structure.

**Table 6.31:** SAG (GLONASS Almanac) Structure

Field	Bytes	Content
short	2	Satellite number [1,...,24]
short	2	Satellite GLONASS frequency number [-7,...,24]

**Table 6.31: SAG (GLONASS Almanac) Structure (continued)**

Field	Bytes	Content
short	2	Satellite health 0=bad, 1=good
float	4	Eccentricity $\mathcal{E}_n^A$
long	4	Reference day number $N^A$ (days in range 1 to 1461)
float	4	Correction to inclination $\Delta i_n^A$ (semicircles)
float	4	Longitude of first ascension node $\lambda_n^A$ (semicircles)
float	4	Reference time of longitude of first node $t_{\lambda n}^A$ (seconds)
float	4	Argument of perigee $\mathcal{O}_n^A$ (semicircles)
float	4	$af_0$ correction to mean value (43200 sec) of Draconic period $\Delta T_n^A$ (seconds)
float	4	$af_1 = d(af_0)/dt$ (sec/sec)
float	4	Satellite clock offset (seconds)
unsigned short	2	Checksum computed by breaking the structure into shorts, adding them together, and taking the least significant 16 bits of the result.
total characters	44	

## SAL: Enable/Disable GPS Satellite Almanac Message

### \$PASHS,RAW,SAL,x,s[,f]

Enable/disable GPS almanac data (SAL) messages on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.

Example: Disable SAL message on port A

\$PASHS,RAW,SAL,A,OFF<Enter>



Almanac data for all satellites is output once every hour, with one satellite output at each recording interval (RCI).

### \$PASHQ,SAL,x,

The associated query command is \$PASHQ,SAL,x. This command outputs the SAG almanac data response message on port x, where x is the optional output port.

### \$PASHR,SAL

The response is a binary message in the form:

\$PASHR,SAL,(almanac structure)

where Table 6.32 defines the measurement structure.

**Table 6.32:** SAL (Almanac) Structure

Field	Bytes	Content
short prn	2	Satellite PRN number [0,...,31]
short health	2	Satellite health.

**Table 6.32: SAL (Almanac) Structure (continued)**

Field	Bytes	Content
float	4	e eccentricity
long	4	toa reference time for orbit (sec).
float	4	i0 inclination angle (semicircles)
float	4	omegadot rate of right ascension (semicircles/sec)
double	8	roota Square root of semi-major axis (meters $1/2$ )
double	8	omega0 longitude of ascending node (semicircles)
double	8	omega augment of perigee (semicircles)
double	8	m0 mean anomaly at reference time (semicircles)
float	4	af0 clock correction (sec)
float	4	af1 clock correction (sec/sec)
short	2	wna almanac week number
short	2	wn week number
long	4	tow seconds of GPS week (sec) [0,...,604799]
unsigned short	2	Checksum computed by breaking the structure into shorts, adding them together, and taking the least significant 16 bits of the result.
total characters	70	

## SNG: Enable/Disable GLONASS Ephemeris Data

### \$PASHS,RAW,SNG,x,s[,f]

Enables or disables GLONASS ephemeris data on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.

Example: Output GLONASS ephemeris data on port A with an output period of 5 minutes:

```
$PASHS,RAW,SNG,A,ON, 300<Enter>
```



Ephemeris data is output once every 15 minutes with one satellite output at each recording interval (RCI).

### \$PASHQ,SNG,x

The associated query command is \$PASHQ,SNG,x. This command outputs the SNG ephemeris data response message on port x, where x is the optional output port.

### \$PASHR,SNG

The response is one binary message per locked satellite in the form:

```
$PASHR,SNG,(ephemeris structure)
```

where Table 6.33 defines the measurement structure.

**Table 6.33: SNG GLONASS Ephemeris Data Structure**

Type	Size in Bytes	Content
long	4	Start time of the 30-second frame in satellite time scale $t_k$ from which the ephemeris data is derived; time modulo one day (seconds)
short	2	Day number of 30-second frame; modulo four-year period counting from beginning of last leap year, which corresponds to parameter $t_b$ ( $t_b$ is set within this day number) . This parameter varies within the range 1 to 1461. If day number = 0, the day number is unknown (absent in navigation frame).
long	4	Ephemeris data reference time within the day expressed in GLONASS system time scale = UTC + 3 hours (seconds)
float	4	Frequency offset $\gamma_{\eta}$ of the on-board frequency standard at $t_b$ (dimensionless)
float	4	Bias $t_n$ between satellite time scale and GLONASS system time scale at $t_b$ (seconds)
double	3*8	Satellite ECEF (PZ-90) X, Y, Z coordinates (km)
float	3*4	Satellite ECEF (PZ-90) velocity $X', Y', Z'$ (km/sec)
float	3*4	Satellite perturbation acceleration $X'', Y'', Z''$ due to moon and sun (km/sec/sec)
double	8	Bias between GLONASS system time scale and UTC + 3 hours time scale $\tau_c$ (seconds)
char	1	Age of ephemeris parameter $E_n$ (interval from moment when ephemeris data was last uploaded to $t_b$ )
char	1	Combined 3-bit flag (contains $\check{I}1, \check{I}2, \check{I}3$ , see GLONASS ICD)
char	1	Satellite health status flag (0 = good, 1 = bad)
char	1	Satellite frequency channel number [-7,...,24]
short	2	Satellite system number (satellite number [1,...,24])
unsigned short	2	Word checksum computed by breaking the structure into 40 unsigned shorts, adding them together, and taking the least significant 16 bits of the result.
Total	82 bytes	(95 for structure plus header and <CR><LF>)

If both GPS and GLONASS satellites are locked during a session and the absolute current time is available from GPS data download, then the day number can be calculated through WN (GPS week number).

If only GLONASS satellites are locked and processed during a session, the receiver checks whether a GLONASS almanac is available. If there is no GLONASS almanac

or it is too old, the day number is taken as zero. If an adequate GLONASS almanac is available, the receiver determines on which day within the range  $[-3 + N^A, 3 + N^A]$  the satellite coordinates at  $t_b$  based on the almanac data fit best with known ephemeris coordinates.

The broadcast ephemeris from a GLONASS satellite does not contain the satellite slot number. This information is derived from the almanac. When the GG24 has ephemeris data for a satellite but no almanac data (this occurs at startup, before the almanac has been fully transmitted), the satellite number is set to zero. Once the almanac has been received, the satellite number is updated.

## SNV: Enable/Disable GPS Ephemeris Data

### \$PASHS,RAW,SNV,x,s[,f]

Enable/disable ephemeris data (SNV) messages on port x where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,RCI command is used. If a \$PASHS,NME,RCI command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the RCI output period setting.

.Example: Enable SNV on port A with an output period of 5 minutes

\$PASHS,RAW,SNV,A,ON,300<Enter>



Ephemeris data is output once every 15 minutes or each time the IODE changes, whichever comes first, with one satellite output at each recording interval (RCI).

## \$PASHQ,SNV,x

The associated query command is \$PASHQ,SNV,x. This command outputs the GPS SNV ephemeris data response message on port x, where x is the optional output port.

## \$PASHR,SNV

The response is one binary message per locked satellite in the form:

\$PASHR,SNV,(ephemeris structure)

where Table 6.34 defines the measurement structure.

**Table 6.34:** SNV (Ephemeris) Structure

Field	Bytes	Content
short wn	2	GPS week number [0,...,1023]
long tow	4	Seconds of GPS week [0,...604799]
float tgd	4	Group delay ( $\pm 127 \cdot 2^{-31}$ ) (seconds)
long aodc	4	Clock data issue
long toc	4	Clock data reference time [0,...,604784] (LSB = $2^4$ seconds)
float af2	4	Clock correction (sec/sec <sup>2</sup> ).
float af1	4	Clock correction (sec/sec).
float af0	4	Clock correction (sec).
long aode	4	Orbit data issue.
float deltan	4	Mean anomaly correction (semicircles/sec).
double m0	8	Mean anomaly at reference time (semicircles).
double e	8	Eccentricity.
double roota	8	Square root of semi-major axis (meters <sup>1/2</sup> ).
long toe	4	Reference time for orbit (sec).
float cic	4	Harmonic correction term (radians).
float crc	4	Harmonic correction term (meters).
float cis	4	Harmonic correction term (radians).
float crs	4	Harmonic correction term (meters).
float cuc	4	Harmonic correction term (radians).
float cus	4	Harmonic correction term (radians).
double omega0	8	Longitude of ascending node (semicircles).
double omega	8	Argument of perigee (semicircles).

**Table 6.34: SNV (Ephemeris) Structure (continued)**

Field	Bytes	Content
double i0	8	Inclination angle (semicircles).
float omegadot	4	Rate of right ascension (semicircles/sec).
float idot	4	Rate of inclination (semicircles/sec).
short accuracy	2	User range accuracy (URA), coded 0-15. 0 = 2 m                  6 = 16 m                  12 = 1024 m 1 = 2.8 m                7 = 32 m                  13 = 2048 m 2 = 4 m                   8 = 64 m                  14 = 4096 m 3 = 5.7 m                9 = 128 m                15 = no prediction possible 4 = 8 m                   10 = 256 m 5 = 11.3 m               11 = 512 m
short health	2	Satellite health.
short fit	2	Curve fit interval (0 or 1) 0=>interval = 4 hours 1=>interval = 6 hours
char prnnum	1	Satellite PRN number minus 1 (0 to 31)
char res	1	Reserved character.
checksum	2	The checksum is computed by breaking the structure into 65 unsigned shorts, adding them together, and taking the least significant 16 bits of the result.
total characters	132	

# NMEA Data Message Commands

---

The NMEA message commands control all query and set commands related to NMEA format messages and miscellaneous messages in a NMEA style format. All standard NMEA message are a string of ASCII characters delimited by commas, in compliance with NMEA 0183 Standards version 2.1. All non-standard messages are a string of ASCII characters delimited by commas in the Magellan proprietary format. Any combination of these messages can be output through different ports at the same time. The output rate is determined by the \$PASHS,NME,PER command and can be set to any value between 0.2 and 999 seconds.



**Maximum NMEA update rate is dependent on receiver options.**

For each NMEA message type there is a set command, a query command and a response message. The set command is used to continuously output the NMEA response message at the period defined by the \$PASHS,NME,PER command. The query will output a NMEA response message only once.

## Set Commands

The general structure of the NMEA set commands is:

`$PASHS,NME,str,x,s <Enter>`

where x is the serial port to which response message should be sent (A, B, or C), and s is either ON or OFF. ON will enable the message and OFF will disable the message. The str is a 3 character strings that depicts the NMEA message to be output. The available strings are:

AIM, GGA, GLL, GRS, GSA, GSN, GST, GXP, LTN, MSG, POS, RMC, RRE, SAT, TCM, TTT, VTG, and ZDA

When a set command is sent correctly, the receiver will send a \$PASHR,ACK (command acknowledge) message. If the command is sent incorrectly or the syntax is wrong, the receiver will sent a \$PASHS,NAK (command not acknowledged) message. Once acknowledged, the receiver will output the corresponding NMEA data message at the interval defined by the \$PASHS,NME,PER command, unless a necessary condition for the message to be output is not present. For example, the GGA message will not be output unless a position is being computed.

To disable all set NMEA message, use the \$PASHS,NME,ALL command.

To see what NMEA messages have been enabled, use the \$PASHQ,PAR command.

Example: Enable GGA message on port A

```
$PASHS,NME,GGA,A,ON <Enter>
```

Output enabled NMEA messages every 5 seconds

```
$PASHS,NME,PER,5 <Enter>
```

## Query Commands

While the set commands will continuously output response messages at a set interval, the query command will output a single response message. The general structure of the NMEA query commands is:

```
$PASHQ,str,x, <Enter>
```

where str is one of the 3 character NMEA strings and x is the optional output serial port. The serial port field is optional. If a port is not specified, the receiver sends the response to the current port.

Example: Query POS message and send the response to port D

```
$PASHQ,POS,D <Enter>
```

Query GSA message and send the response to the current port.

```
$PASHQ,GSA <Enter>
```

## Response message

The response message is the information sent back from the receiver in response to a set or query command.

The generic NMEA response message format is:

```
$<header><data items> *cc
```

where Table 6.35 outlines the response format:

**Table 6.35:** NMEA Response Structure

Field	Description
\$	NMEA message start character
<header>	standard response message header
<data items>	data field dependent upon header
*cc	checksum

Data items are separated by commas; successive commas indicate data not available. For example, two successive commas indicate one missing data item, while three successive commas indicate two missing items.

The following is an example of an NMEA sentence.

\$GPGLL,4728.3100,N,12254.2500,W\*FF

where Table 6.36 outlines the response format:

**Table 6.36: GLL Structure**

Field	Description
\$	Start of sentence
GPGLL	GP = GPS, GLL = latitude/longitude message type
4728.3100	Latitude 47°28.3 1'
N	Latitude direction (north)
12254.2500	Longitude 122°54'25'
W	Longitude direction (west)
*FF	checksum

Refer to *NMEA 0183 Standard for Interfacing Marine Electronic Navigational Devices* for more details on sentence format protocols.

The Magellan proprietary NMEA style response message format applies to the AIM, LTN, POS, RRE, SAT, and TTT messages, where the format is:

\$PASHR,str,<data items>\*cc

replacing the standard header with an Magellan proprietary header and adding Magellan proprietary message information.

Table 6.37 lists the NMEA data message commands. Only the set command for each NMEA message type is listed, as the description for the set, query and response message to each NMEA message are grouped together.

**Table 6.37: NMEA Data Message Commands**

	Command	Description	Page
Disable NMEA Messages	\$PASHS,NME,ALL	Disable all messages	141
Latency Information	\$PASHS,NME,LTN	Enable/disable the latency message	170
Differential Information	\$PASHS,NME,MSG	Enable/disable base station message	171
	\$PASHS,NME,TCM	Enable/disable RTCM rover status	195
Output Rate Parameter	\$PASHS,NME,PER	Set send interval of NMEA response message	184
Photogrammetry	\$PASHS,NME,TTT	Enable/disable photogrammetry message	197

**Table 6.37: NMEA Data Message Commands (continued)**

	Command	Description	Page
Position Information	\$PDAS,NME,DCR	Output rover delta position fixes (CRT type)	145
	\$PDAS,NME,DPO	Output rover delta position fixes (POS type)	146
	\$PASHS,NME,GGA	Enable/disable GPS position response message	147
	\$PASHS,NME,GLL	Enable/disable lat/lon message	150
	\$PASHS,NME,GNS	GPS+GLONASS position information	152
	\$PASHS,NME,POS	Enable/disable position message	184
	\$PASHS,NME,RMC	Enable/disable declination message	
RAIM Information	\$PASHS,NME,AIM	Enable/disable RAIM message	142
Residual Information	\$PASHS,NME,RRE	Enable/disable satellite residual and position error	189
	\$PASHS,NME,GRS	Enable/disable satellite range residual	155
	\$PASHS,NME,GST	Enable/disable position error message	
Satellite Information	\$PASHS,NME,GSA	Enable/disable satellites used message	147
	\$PASHS,NME,GSN	Enable/disable signal strength/satellite number	162
	\$PASHS,NME,GSV	Number os SVs in view, etc.	168
	\$PASHS,NME,SAT	Enable/disable satellite status message	192
Time and Date	\$PASHS,NME,ZDA	Enable/disable time and date message	201
Track, Speed	\$PASHS,NME,VTG	Enable/disable velocity/course message	199

**ALL: Disable All NMEA Messages****\$PASHS,NME,ALL,x,OFF**

Disable ALL NMEA message types on port x, where x is the output port.

Examples: Turn off all NMEA messages for Port A.

\$PASHS,NME,ALL,A,OFF <Enter>

## AIM: Receiver Autonomous Integrity Monitor Message

### \$PASHS,NME,AIM,x,s[,f]

Enable/disable RAIM message on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

This message is not output unless a position is computed.

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Enable RAIM message on port B with an output period of 30 seconds.

```
$PASHS,NME,AIM,B,ON,30<Enter>
```

### \$PASHQ,AIM,x

The associated query command is \$PASHQ,AIM,x. This command outputs the AIM response message on port x, where x is the optional output port. This message is not output unless a position is computed.

Example:

```
$PASHQ,AIM,A
```

Example of response to <\$PASHQ,AIM>

```
$PASHR,AIM,NPA,1,22-56*5D
```

### \$PASHR,AIM

The response message to the set or query command is in the form:

```
$PASHR,AIM,s1,d1,n(d2-d3)*cc
```

n = number of channel - SV pairs

Table 6.38 outlines the structure of the RAIM response message.

**Table 6.38:** RAIM Response Message Structure

Field	Description
s1	Current RAIM mode (3-character) OFF - Turns RAIM off NPA - Non-precision approach, alarm limit is 0.030 nmi TER - Terminal, alarm limit is 1.00 nmi ERT - En route, alarm limit is 2.00 nmi n.nn - user-selectable alarm limit between 0.015 and 4.00 km
d1	Value returned by RAIM gives: 0 - no errors detected 1 - error detected and corrected 2 - error detected, correction not possible 3 - detection not available (lack of satellite or poor geometry) 4 - error detected, rest of satellite set not available
d2-d3	d2-d3 represents a pair of excluded channel and its corresponding satellite, where d2 is the number of the excluded channel and d3 is the number of the corresponding satellite

Example:

\$PASHR,AIM,NPA,1,10-12,05-20\*FF

where:

NPA = non-precision approach mode

1 = error detected and corrected

10-12 = channel 10, satellite 12 excluded

05-20 = channel 5, satellite 20 excluded

When RAIM returns 0, no errors exceed the alarm limit. All computed satellite ranges are used in the position velocity calculation.

If the value returned is 1, RAIM has detected errors, and has excluded satellites with large range errors and corrected the position and velocity. If the quantity of channel-satellite pairs does not exceed 1, the corrected position and velocities are acceptable for applications with a probability of 0.999. If the quantity of channel - satellite pairs exceeds 1, then there is no assurance that the positions and velocities have been properly corrected. However, in many cases, RAIM corrects the results satisfactorily even under unfavorable conditions.

If the value returned is 2, RAIM has detected a problem but can not eliminate the questionable satellites because of too few satellites (e.g., 5 satellites in view). In this case, the computed data (position and velocity) does not meet the probability of 0.999.

If the value returned is 3, the satellite geometry is poor and detection is unavailable. This value is always returned if the number of satellites is less than 5.

Finally, if the value returned is 4, RAIM indicates that errors exist (the response contains channel-satellite pairs), but fails to correct positions and velocities. In such cases, you can exclude questionable satellites by using the \$PASHS,USE or \$PASHS,SVS commands.

## DCR: Rover Delta Position in a Format Similar to CRT

Outputs rover delta position information between rover and base in a format similar to CRT message format.

### \$PASHS,NME,DCR,x,c[,f]

Enable/disable NMEA delta position response message on output port x, c is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If no position is computed, an empty message is output.

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

**Format:** This is a response message similar to \$PASHR,CRT message but containing delta position information.

\$PASHR,**DCR**,d1,d2,m1,**m2,m3,m4**,f2,f3,f4,f5,f6,f7,f8,f9,s\*cc

The description of all the non-bold data fields is the same as in \$PASHR,CRT message (see above). The new fields are bolded and are defined as follows:

m2: Antenna delta position ECEF x coordinate difference in meters

m3: Antenna delta position ECEF y coordinate difference in meters

m4: Antenna delta position ECEF z coordinate difference in meters

Example: \$PASHR,DCR,0,10,200449.00,,,74217.031,0.012,0.050,-0.043,-423.559,01.8,00.9,01.6,01.0,GM06\*

Notes:

a) All delta position components calculated as:

$$\Delta X = ROVER_X - BASE_X$$

b) All delta position components calculated based on ground mark coordinates

There are corresponding \$PASHQ,DCR query and \$PASHS,NME,DCR,x,c[,f] enabling/disabling command similar to all other NMEA messages.

## DPO: Rover Delta Position in a Format Similar to POS

Outputs rover delta position information between rover and base in a format similar to POS message format.

**Format:** This is a response message similar to \$PASHR,POS message but containing delta position information.

\$PASHR,**DPO**,d1,d2,m1,**m2**,c1,**m3**,c2,**f1**,f2,f3,f4,f5,f6,f7,f8,f9,s\*cc

The description of all the non-bold data fields is the same as in the existing GG24 \$PASHR,POS message. The new fields are bolded and are defined as follows:

m2: Antenna delta position - Northing coordinate difference in meters

m3: Antenna delta position - Easting coordinate difference in meters

f1: Antenna delta position - ellipsoidal height difference in meters

Example: \$PASHR,DPO,0,10,200455.50,,,,,,000.00,000.01,-000.04,01.8,00.9,01.6,01.0,GM06\*23

Notes:

a) All delta position components calculated as:

$$\text{DELTA}_X = \text{ROVER}_X - \text{BASE}_X$$

b) All delta position components calculated based on ground mark coordinates

There are corresponding \$PASHQ,DCR query and \$PASHS,NME,DCR,x,c[,f] enabling/disabling command similar to all other NMEA messages.

### \$PASHS,NME,DPO,x,c[,f ]

Enable/disable NMEA delta position response message on output port x, c is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

If no position is computed, an empty message is output.

## GGA: GPS Position Message

### \$PASHS,NME,GGA,x,s[,f]

Enable/disable NMEA GPS position response message on port x, where x is the output port A, B, or C, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Enable GGA on port A with an output period of 1 second

\$PASHS,NME,GGA,A,ON,1

### \$PASHQ,GGA,x

The associated query command is \$PASHQ,GGA. This command outputs the GGA response message on port x, where x is the optional output port.

Example: Output GGA message on port B

\$PASHQ,GGA,B

### \$GPGGA

The response message is in the form:

\$GPGGA,m1,m2,c1,m3,c2,d1,d2,f1,f2,M,f3,M,f4,d3 \*cc

Table 6.39 outlines the GGA structure.

**Table 6.39:** GGA Structure

Field	Description	Range
m1	Current UTC time of position fix in hours, minutes and seconds (hhmmss.ss).	00 to 235959.50
m2	Latitude component of position in degrees, minutes and fraction of minutes (ddmm.mmmmmm).	0 to 90°

**Table 6.39: GGA Structure (continued)**

Field	Description	Range
c1	Latitude sector, N = North, S = South.	'N' or 'S'
m3	Longitude component of position in degrees, minutes and fraction of minutes (dddmm.mmmmmmm).	0 to 180°
c2	Longitude sector, E = East, W = West.	'E' or 'W'
d1	Position Type, n 1 = Autonomous position 2 = position differentially corrected 3 = RTK float 4 = RTK fixed	1, 2, 3, 4
d2	number of GPS satellites used in position computation.	3 to 24
f1	HDOP - horizontal dilution of precision	0 to 99.9
f2	Altitude in meters above the geoid. For 2-D position computation this item contains the altitude held fixed.	0 to 30000.000
M	Altitude units, M = meters.	'M'
f3	Geoidal separation (value output only if Geoidal Height option (G) is installed in the receiver).	±999.999
M	Geoidal separation units, M = meters.	'M'
f4	Age of the differential corrections, sss, in seconds.	±999.999
d3	Base station ID (RTCM only)	0 to 1023
*cc	checksum	

If there is no valid position, GGA still provides: time, position flag, number of satellites, HDOP, age of corrections, and base station ID

If there are not enough satellites to compute HDOP, then the HDOP field is null. If the receiver is not in Differential or RTK mode, then the age of corrections, base station ID fields are null.



**When running in the 5 Hz option, the GG24 limits the number of available used satellites to 16.**

Example:

Query: \$PASHQ,GGA,C or

Set: \$PASHS,NME,GGA,A,ON



In order to provide high resolution on time and position information, the GGA message may extend beyond the maximum message length of 82 characters recommended by the NMEA 0183 standard.

Typical Response:

\$GPGGA,183805.50,3722.36223,N,12159.827 41,W,2,03,02.8,  
+00016.12,M,0031.24,M,005,000 1 \*6F

Table 6.40 outlines the GGA response message structure.

**Table 6.40:** Typical GGA Response Message

Item	Significance
\$GPGGA	Header
183805.50	Time of position fix
3722.36223	Latitude
N	North
12159.82741	Longitude
W	West
2	Differentially corrected position
03	Number of satellites used in position computation
02.8	HDOP
+00016.12	Altitude above the geoid
M	Meters. Units of altitude
0031.24	Geoidal separation
M	Meters. Units of the geoidal separation
005	Age of differential corrections
0001	Base station ID
6F	Message checksum in hexadecimal

When no position is available, a typical response might look like:

\$GPGGA,015454.00,N,W,0,2,99.9,M,M,\*6F

## GLL: Latitude, Longitude Message

### \$PASHS,NME,GLL,x,s[,f]

Enable/disable NMEA latitude/longitude response message on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Enable GLL message on port A with an output period of 2 seconds

\$PASHS,NME,GLL,A,ON,2

### \$PASHQ,GLL,x

The associated query command is \$PASHQ,GLL,x. This command outputs the GLL message on port x, where x is the optional output port.

Example: Output GLL message on port B

\$PASHQ,GLL,B

### \$GPGLL

The response message is in the form:

\$GPGLL,m1,c1,m2,c2,m3,c3\*cc

Table 6.41 outlines the GLL structure.

**Table 6.41: GLL Structure**

Field	Significance	Range
m1	Latitude component of position, ddmm.mmmmmm, in degrees, minutes and fraction of minutes	0 to 90°
c1	Latitude sector, N = North, S = South	'N' or 'S'

**Table 6.41:** GLL Structure (continued)

Field	Significance	Range
m2	Longitude component of position, dddmm.mmmmmm, in degrees, minutes and fraction of minutes.	0 to 180°
c2	Longitude sector, E = East, W = West	'E' or 'W'
m3	UTC of position (hours, minutes, seconds)	00 to 235959.5
c3	Status, A= data valid, V= data invalid	A or V

If position is not valid, GLL provides: time, and position flag, for example:

\$GPGLL,,,,,174645:30,V\*cc

Example:

Query: \$PASHQ,GLL,B [or]

Set: \$PASHS,NME,GLL,C,ON

Response: \$GPGLL,3722.36223,N,12159.82741,W,170003,A\*7F

Table 6.42 outlines a typical GLL response message.

**Table 6.42:** Typical GLL Response Message

Item	Significance
\$GPGLL	Header
3722.36223	Latitude
N	North
12159.82741	Longitude
W	West
170003	UTC of position
A	Valid
7F	Message checksum in hexadecimal

## GNS: GPS+GLONASS Navigation Solution

To comply with the NMEA 0183 v2.3 standard, the GPS+GLONASS navigation solution is now available in the NMEA GNS message (in addition to the other currently available messages).

**Format:** GNS response message comes in different forms. The following prefix identification shall be used:

\$GPGNS: for GPS only if the receiver is set to use GPS only  
(\$PASHS,SYS,GPS);

\$GLGNS: for GLONASS only if the receiver is set to use GLONASS only  
(\$PASHS,SYS,GLO);

\$GNGNS: for GPS+GLONASS if the receiver is set to use  
GPS+GLONASS (\$PASHS,SYS,MIX).

Note: If the receiver is set up to use GPS+GLONASS (\$PASHS,SYS,MIX), and if one of the systems is not available, the receiver continues to report the solution on the \$GNGNS and it uses the mode indicator to show which satellite system is actually used in the solution.

Also, to follow the NMEA recommended maximum message length, the GNS message shall NOT have more than a total of 82 characters (including \$, checksum, CR and LF). The structure of the GNS message is given below.

\$--GNS,m1,m2,c3,m4,c5,d6,d7,d8,f9,f10,f11,d12\*cc<CR><LF>

Parameter	Description	Range
m1	UTC (hhmmss.ss)	0-235959.99
m2	Latitude (ddmm.mmmmmm)	0-9000.000000
c3	Direction of latitude N/S	'N'/'S'
m4	Longitude (dddmm.mmmmmm)	0-18000.000000
c5	Direction of longitude E/W	'E'/'W'
d6	Mode Indicator (one for GPS and one for GLO) N = No fix. Satellite system not used in position fix, or fix not valid A = Autonomous. D = Differential. P = Precise. No SA & P-code R = Fixed RTK F = Float RTK	'NN' 'AA' 'DD' 'RR' 'FF'
d7	Total number of satellites used in the computation	'0'-'99'
d8	HDOP	'0.0'-'9.9'
f9	Geoidal height (Altitude above MSL) in meters	'-1000.0' - '18000.0'
f10	Geoidal separation in meters	'-99.9' - '99.9'
f11	Age of differential corrections	'0' - '999'
d12	Base station ID	'0' - '1023'

*cc	Checksum	
-----	----------	--

Example:

\$GNGNS,233836.00,3721.070506,N,12156.105742,W,AA,11,0.8,27.247,-31.33,,  
\*61

Notes:

- a) NO '+' sign in any field if positive.
- b) Notice maximum negative altitude value is one order of magnitude less than maximum positive value.
- c) Mode Indicator. A two-character field with the first character indicating GPS and the second character indicating GLONASS. The characters shall take one of the following values:

N = No fix, satellite system not used in position fix, or fix not valid. For example, DGPS position computed and GLONASS not used, 'DN' shall be displayed.

A = Autonomous. Satellite system used in non-differential mode in position fix

D = Differential. Satellite system used in differential mode in position fix

P = Precise. Satellite system used in precision mode. Precision mode is defined as no deliberate degradation (e.g. SA) and higher resolution code (P-code) is used to compute position fix

R = Real Time Kinematic. Satellite system used in RTK mode with fixed integers

F = Float RTK. Satellite system used in real time kinematic mode with floating integers

- d) Age of differential data and Differential Reference Station ID:

- i. When the prefix identifier is GN and both GPS and GLONASS systems are used in differential mode using differential corrections for both GPS and GLONASS, the "Age of differential data" and "Differential reference station ID" fields is null. In this case, the "Age of differential data" and "Differential reference station ID" fields are provided in following GNS messages with prefix identification GP and GL. These following GNS messages have the latitude, N/S, longitude, E/W, altitude, geoidal separation, mode, and HDOP fields null. This indicates that the field is supporting a previous \$GNGNS message with the same time tag. The "Number of satellites" field may be used in these

following messages to denote the number of satellites used from each of the satellite systems.

Example: GG24 receiver using only GPS differential corrections, and thus only DGPS position is being computed, generates the following GNS message:

```
$GNGNS,122310.2,3722.425671,N,12258.856215,W,1005.543,6.5,DN,0.9,14,5.2,23*59<CR><LF>
```

Example: GG24 receiver using GPS+GLONASS differential corrections has the following three GNS sentences sent in a group:

```
$GNGNS,122310.2,3722.425671,N,12258.856215,W,1005.543,6.5,DD,0.9,14,,*74<CR><LF>
```

```
$GPGNS, 122310.2, , , , , , ,7,5.2,23*4D<CR><LF>
```

```
$GLGNS, 122310.2, , , , , , ,7,3.0,23*55<CR><LF>
```

The Differential Reference station ID may be the same or different for the different satellite systems.

## ii. Age of Differential Data:

### For GPS Differential Data:

This value is the average age of the most recent differential corrections in use. When only RTCM SC104 Type 1 corrections are used, the age is that of the most recent Type 1 correction. When RTCM SC104 Type 9 corrections are used solely, or in combination with Type 1 corrections, the age is the average of the most recent corrections for the satellites used. Null field when Differential GPS is not used.

### For GLONASS Differential Data:

This value is the average age of the most recent differential corrections in use. When only RTCM SC104 Type 31 corrections are used, the age is that of the most recent Type 31 correction. When RTCM SC104 Type 34 corrections are used solely, or in combination with Type 31 corrections, the age is the average of the most recent corrections for the satellites used. Null field when differential GLONASS is not used.

e) HDOP is calculated using all the satellites (GPS and GLONASS) used in computing the solution reported in each GNS sentence.

f) Geoidal Separation: the difference between the earth ellipsoid and mean-sea-level (geoid) defined by the reference datum used in the position solution, "-" = mean-sea-level below ellipsoid. The reference datum may be specified in the DTM sentence.

## GRS: Satellite Range Residual Message

### \$PASHS,NME,GRS,x,s[,f]

Enable/disable NMEA satellite range residual response message to port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message is not output unless a position is computed.

Example: Enable GRS message on port B

\$PASHS,NME,GRS,B,ON

### \$PASHQ,GRS,x

The associated query command is \$PASHQ,GRS,x where x is the optional output port. This message does not output unless a position is computed.

Example: Output GRS message on port B

\$PASHQ,GRS,B

### \$GPGRS/\$GLGRS

The response message for the set and query commands is output in two messages with different headers. The first message contains GPS residual information, and is in the form:

\$GPGRS,m1,d1,n(f1)\*cc

The second message contains GLONASS residual information, and is in the form:

\$GLGRS,m1,d1,n(f1)\*cc



Range residuals are recomputed after the GGA position is computed. Therefore the mode m is always 1. There will be a range residual sxx.x for each satellite used in position computation, where range residuals for GPS satellites are included in the GPGRS message, and range residuals for GLONASS satellites are included in the GLGRS message.

Table 6.43 outlines the GRS message structure.

**Table 6.43: GRS Structure**

Field	Description
m1	Current UTC time, (hhmmss.ss), of GGA position fix in hours, minutes, and seconds hh = Hours (00 to 23) mm = Minutes (00 to 59) ss.ss = Seconds (00.00 to 59.99)
d1	Mode, used to compute range residuals 0 - Residuals were used to calculate the position given in the matching GGA line 1 - residuals were recomputed after the GGA position was computed
f1	Range residuals (sign s = + or -, and magnitude xx.x) for each satellite used in position computation.

Example:

Query: \$PASHQ,GRS,A or

Set: \$PASHS,NME,GSN,A,ON

Response: \$GPGRS,180257.50,1,+00.3,-00.4,+00.2,+00.5,+00.7,-00.8\*64

\$GLGRS,180257.50,1,-00.2,+00.4,+00.3,-00.6,+00.5\*38

Table 6.44 outlines a typical GPGRS response message. Table 6.45 outlines a typical GLGRS response message.

**Table 6.44: Typical GPGRS Response Message**

Field	Significance
\$GPGRS	Header
180257.50	Time of position fix
1	Mode
+00.3	Range residual for first GPS satellite
-00.4	Range residual for second GPS satellite
+00.2	Range residual for third GPS satellite
+00.5	Range residual for fourth GPS satellite
+00.7	Range residual for fifth GPS satellite
-00.8	Range residual for sixth GPS satellite
*36	Message checksum in hexadecimal

**Table 6.45:** Typical GLGRS Response Message

Field	Significance
\$GLGRS	Header
180257.50	Time of position fix
1	Mode
-00.2	Range residual for first GLONASS satellite
+00.4	Range residual for second GLONASS satellite
+00.3	Range residual for third GLONASS satellite
-00.6	Range residual for fourth GLONASS satellite
+00.5e	Range residual for fifth GLONASS satellite
*64	Message checksum in hexadecimal

## GSA: DOP and Active Satellites Message

### \$PASHS,NME,GSA,x,s[,f]

Enable/disable DOP and active satellite message to be sent out to the serial port, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

This message is output even if a position is not computed.

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Enable GSA message on port B with an output period of 1 minute

\$PASHS,NME,GSA,B,ON,60

### \$PASHQ,GSA,x

The associated query command is \$PASHQ,GSA,x where x is the optional output port.

Example: Output GSA message on port B

\$PASHQ,GSA,B

### \$GPGSA/\$GLGSA

The response message is output in two messages with different headers. The first message contains GPS satellite information in the form:

\$GPGSA,c1,d1,d2,d3,d4,d5,d6,d7,d8,d9,d10,d11,d12,d13,f1,f2,f3\*cc

The second message contains GLONASS satellite information in the form:

\$GLGSA,c1,d1,d2,d3,d4,d5,d6,d7,d8,d9,d10,d11,d12,d13,f1,f2,f3\*cc



The satellite PRN displayed in each of the ss fields of the GPGSA message is associated with one of the 12 GPS channels in the receiver, where the first ss field corresponds to the satellite locked to channel 1 and the last corresponds to the satellite locked to channel 12. The satellite PRN displayed in each of the ss fields of the GLGSA message is associated with one of the 12 GLONASS channels in

the receiver, where the first ss field corresponds to the satellite locked to channel 13, and the last corresponds to the satellite locked to channel 24.

Table 6.46 outlines the GSA response message structure.

**Table 6.46:** GSA Structure

Field	Significance
c1	Mode M: manual A: Automatic
d1	Mode 2: 2D 3:3D
d2-d13	Satellites used in position computation (range 1 to 32 for \$GPGSA message, and 33 to 56 for \$GLGSA message)
f1	PDOP (range 0 - 99.9 for mixed constellation)
f2	HDOP (range 0 - 99.9 for mixed constellation)
f3	VDOP (range 0 - 99.9 for mixed constellation)

Examples:

\$GPGSA,M,3,15,20,01,22,14,21,25,,,,29,01.8,01.0,01.5\*O F

Table 6.47 outlines the GPGSA response message.

**Table 6.47:** Typical GPGSA Response Message

Item	Significance
\$GPGSA	Header
M	Manual mode
3	3D mode
15	Satellite 15 used for position computation
empty field	No locked satellite in this channel or locked satellite not used in position solution
20	Satellite 20 used
01	Satellite 1 used
22	Satellite 22 used
14	Satellite 14 used
21	Satellite 21 used

**Table 6.47: Typical GPGSA Response Message (continued)**

Item	Significance
25	Satellite 25 used
empty field	No locked satellite in this channel or locked satellite not used in position solution
empty field	No locked satellite in this channel or locked satellite not used in position solution
empty field	No locked satellite in this channel or locked satellite not used in position solution
29	Satellite 29 used
01.8	PDOP = 1.8
01.0	HDOP = 1.0
01.5	VDOP = 1.5
0F	Message checksum in hexadecimal

Example:

\$GLGSA,M,3,33,54,,,41,38,,,42,51,48,01.8,01.0,01.5\*A B

Table 6.48 outlines the GLGSA response message.

**Table 6.48: Typical GLGSA Response Message**

Item	Significance
\$GLGSA	Header
M	Manual mode
3	3D mode
33	Satellite 33 used for position computation
54	Satellite 54 used for position computation
empty field	No locked satellite in this channel or locked satellite not used
empty field	No locked satellite in this channel or locked satellite not used
41	Satellite 41 used
38	Satellite 38 used
empty field	No locked satellite in this channel or locked satellite not used in position solution
empty field	As above
42	Satellite 42 used

**Table 6.48:** Typical GLGSA Response Message (continued)

Item	Significance
51	Satellite 51 used
48	Satellite 48 used
empty field	No locked satellite in this channel or locked satellite not used in position solution
01.8	PDOP = 1.8
01.0	HDOP = 1.0
01.5	VDOP = 1.5
AB	Message checksum in hexadecimal

## GSN: Signal Strength/Satellite Number Message

### **\$PASHS,NME,GSN,x,s[,f]**

Enable/disable the signal strength/satellite number response message on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message outputs even if a position is not computed.

Example: Enable GSN message on port B

\$PASHS,NME,GSN,B,ON

### **\$PASHQ,GSN,x**

The associated query command is \$PASHQ,GSN,x, where x is the optional output port.

Example: Output GSN message on port B

\$PASHQ,GSN,B

### **\$GPGSN/\$GLGSN**

The response message for the set and query commands is output in two messages with different headers.

The first message contains GPS satellite information in the form:

\$GPGSN,d1,n(d2,d3)d4\*cc

The second message contains GLONASS satellite information in the form:

\$GLGSN,d1,n(d2,d3)d4\*cc

when n is equal to the number of locked satellites.

Table 6.49 outlines the GPGSN message response structure.

**Table 6.49: GSN Structure**

Field	Significance
d1	Number of satellites locked, number of satellites in message
d2	Satellite PRN number, 1 to 32 in the \$GPGSN message, 33 to 56 in the \$GLGSN message
d3	Satellite signal strength/signal-to-noise ratio, 00 to 99
d4	999 ends the message if no RTCM age is reported. If RTCM age is reported then it displays the GPS satellite correction mean value in the \$GPGSN message, and the GLONASS satellite corrections mean value in the \$GLGSN message.

Example:

Query: \$PASHQ,GSN,A or

Set: \$PASHS,NME,GSN,A,ON

Response: \$GPGSN,03,03,060,23,039,16,021,999 \*7D

Table 6.50 outlines the GPGSN response message.

**Table 6.50: Typical GPGSN Response Message**

Field	Significance
\$GPGSN	Header
03	Number of satellites locked
03	PRN number of the first GPS satellite
060	Signal strength of the first GPS satellite
23	PRN number of the second GPS satellite
039	Signal strength of the second GPS satellite
16	PRN number of the third GPS satellite
021	Signal strength of the third GPS satellite
999	Termination with no RTCM information
7D	Message checksum in hexadecimal

Example:

\$GLGSN,04,38,040,46,056,53,025,40,033,999\*BA

Table 6.51 outlines the GLGSN response message.

**Table 6.51:** Typical GLGSN Response Message

Item	Significance
\$GLGSN	Header
04	Number of locked satellites
38	ID number of the first GLONASS satellite
040	Signal strength of the first GLONASS satellite
46	ID number of the second GLONASS satellite
056	Signal strength of the second GLONASS satellite
53	ID number of the third GLONASS satellite
025	Signal strength of the third GLONASS satellite
40	ID number of the fourth GLONASS satellite
033	Signal strength of the fourth GLONASS satellite
999	Termination with no RTCM information
BA	Message checksum in hexadecimal

## GST: Position Error

### \$PASHS,NME,GST,x,c[,f]

Enables/disables the GST message where x is the serial port, c is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

The GST message provides a real time estimate (1 sigma) of the position error. The GST message is output only if the position is computed.

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Enable GST message on port C

\$PASHS,NME,GST,C,ON

### \$PASHQ,GST,x

The associated query command the \$PASHQ,GST,x where x is the optional output port.

### \$GPGST

The return message is in the form:

\$GPGST,f1,f2,f3,f4,f54,f6,f7,f8\*cc

where Table 6.52 outlines the GST message response structure.

**Table 6.52:** GST Message Structure

Parameters	Description	Range
f1	UTC time of the GGS fix associated with this sentence (hhmmss.ss)	000000.00-235959.95
f2	RMS value of the standard deviation of the range inputs to the navigation process. This field is related to the other fields in the following way: $(\text{RMS value of standard deviation range inputs})^2 = (\text{HDOP})^2 = (\text{standard deviation of latitude error})^2 + (\text{standard deviation of longitude error})^2$ $(\text{RMS value of standard deviation range inputs})^2 = (\text{VDOP})^2 = (\text{standard deviation of altitude error})^2$	0.00-99.99
f3	Standard deviation of semi-major axis of error ellipse (meters) This field is not implemented.	N/A
f4	Standard deviation of semi-minor axis of error ellipse (meters) This field is not implemented.	N/A
f5	Orientation of semi-major axis of error ellipse (degrees from true north) This field is not implemented.	N/A
f6	Standard deviation of latitude error (meters)	0.00-99.99
f7	Standard deviation of longitude error (meters)	0.00-99.99
f8	Standard deviation of altitude error (meters)	0.00-99.99
*cc	The hexadecimal checksum	

Example:

Query: \$PASHS,GST

Response: \$PASHR,GST,174640.00,06.660,,,04.103,03.545,11.821\*75

where Table 6.53 outlines a typical GST message.

**Table 6.53:** Typical GST Response

Item	Description
174640.00	UTC time (hhmmss.ss)
06.660	RMS value (1 sigma position error)
null	
null	
null	
04.103	Standard deviation of the latitude error (meters)
03.545	Standard deviation of the longitude error (meters)
11.821	Standard deviation of the altitude error (meters)
*75	checksum

## GSV: Satellite Data

**Function:** Number of SVs in view, PRN numbers, elevation, azimuth and SNR value. A maximum of four satellites per transmission; additional satellites sent in messages following initial message. Total number of messages being transmitted and the number of the message being transmitted are indicated in the first two fields of first message.

**\$PASHS,NME,GSV,x,c[,f]<CR><LF>**

Enable/disable GSV response message on output port x, c is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

**\$PASHQ,GSV,x<CR><LF>**

This is the associated query command, where x is the optional output port

**Format:** \$GPGSV,a,b,cc,dd,ee,fff,gg,hh,ii,jjj,kk,ll,mm,nnn,oo,pp,qq,rrr,ss

Number of SVs in view, PRN numbers, elevation, azimuth and SNR value. Four satellites maximum per transmission, additional satellite data sent in second or third message. Total number of messages being transmitted and the number of the message being transmitted is indicated in the first two fields. First three messages contain GPS satellite information and second three messages contain GLONASS satellite information.

Field	Description
a	Total number of messages (1 to 3)
b	Message number (1 to 3)
cc	Total number of satellites in view
dd	Satellite PRN number
ee	Elevation (degrees)
fff	Azimuth (degrees)
gg	SNR (0 to 99 dB), null when not tracking
hh	Same as 4,5,6,7 but for second satellite
ii	Same as 4,5,6,7 but for third satellite
jjj	Same as 4,5,6,7 but for fourth satellite

Example:

\$GPGSV,3,1,09,26,12,223,37,05,18,298,38,04,52,132,47,28,26,093,42\*74

\$GPGSV,3,2,09,31,32,052,46,07,50,045,45,09,51,297,46,29,07,215,33\*7C

\$GPGSV,3,3,09,24,29,173,42\*4E

\$GLGSV,1,1,03,54,05,049,32,55,51,017,42,56,51,276,37\*5A

## LTN: Latency Message

### \$PASHS,NME,LTN,x,s[,f]

Enable/disable message containing latency information on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

Example: Output LTN message on port B with an output period of 30 seconds

\$PASHS,NME,LTN,B,ON,30

### \$PASHQ,LTN,x

The associated query command is \$PASHQ,LTN,x, where x is the optional output port. This message is not output if a position is not computed.

### \$PASHR,LTN

The response message for the set and query commands is a one-field message that contains information on the number of milliseconds it takes the receiver to compute a position (from the measurement tag time) and prepare data to be transmitted through the serial port. This number is dependent upon the number of locked satellites. This response message is in the form:

\$PASHR,LTN,d\*cc

where d is the latency value in milliseconds.

Example:

Query: \$PASHQ,LTN,A or

Set: \$PASHS,NME,LTN,A,ON

Typical Response:\$PASHR,LTN,76\*03

Then response message indicates that the latency is 76 milliseconds.

## MSG: RTCM Message

### \$PASHS,NME,MSG,x,s[,f]

Enable/disable message containing RTCM reference (base) station message types 01, 03, 09, 16, 18, 19, 31, 32, 34, and 36 on port x, where x is the output port, s is ON or OFF and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.



Unless the GG24 is sending or receiving differential corrections, this command is ignored.

Example: Enable MSG on port A with an output period of 10 seconds

```
$PASHS,NME,MSG,A,ON,10
```

### \$PASHQ,MSG,x

The associated query command is \$PASHQ,MSG,x, where x is the optional output port.

### \$GPMSG

The response message format depends upon the RTCM message type enabled: types 1 and 31 are enabled by default; types 3, 9, 16, 32, 34, and 36 must be enabled by the \$PASHS,RTC,TYP set command.

The format for RTCM message types 1, 9, 31, and 34 is:

```
$GPMSG,d1,d2,f1,d3,d4,d5,m1,d5,d7,f2,f3,d8*cc
```



Message types 1 and 9 output correction information for GPS satellites, while message types 31 and 34 output correction information for GLONASS satellites.

Differential GPS Corrections (Type1) and GPS Partial Correction Set (Type 9)

Table 6.54 outlines the \$GPMSG response structure.

**Table 6.54:** \$GPMSG Structure for RTCM Message Types 1 and 9

Field	Description
d1	RTCM type, 01, 09, 31, or 34
d2	Station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	Sequence number, 0 to 7
d4	Station health, 0 to 7
d5	Total number of characters after the time item, 000 to 999
m1	Current UTC time of position computation in hours, minutes, and seconds
d6	User differential range error (UDRE)
d7	Satellite PRN number. GPS satellites for message types 1 and 31 and GLONASS satellites for message types 9 and 34.
f2	Pseudo-range correction (PRC) in meters
f3	Range rate correction (RRC) in meters/sec
d8	Issue of data (IODE) for message types 1 and 9, and reference time of GLONASS ephemerides (TB) for message types 31 and 34.
*cc	Message checksum in hexadecimal



Message types 1/31 and 9/34 are identical except for the fact that message type 1/31 has correction information (fields 9, 10, 11, 12, 13) for all GPS+GLONASS satellites, and each message type 9/34 has correction information for up to 3 GPS+GLONASS satellites per transmission. Note that for message types 01 and 09, GPS PRN numbers are between 1 and 32, and for message types 31 and 34, GLONASS ID numbers are between 1 and 24 (GLONASS slot numbers).

Example:

```
$GPMSG,01,0000,2220.0,1,0,127,003702:00,2,12, -  
0081.30,+0.026,235,2,13,+0022.86,+0.006,106,2,26,-0053.42,-  
0.070,155,2,02,+0003.56,+0.040,120, 2,27,+0047.42,-0.005, 145*7A
```

where Table 6.55 outlines the \$GPMSG response format.

**Table 6.55:** \$GPMSG Response for RTCM Messages 1, 31, and 9, 34

Item	Description
\$GPMSG	Header
01	RTCM message
0000	Station ID
2220.0	Z count in seconds and tenths
1	Sequence number
0	Station health
127	Total number of characters of the time item
003702.00	Current time in hours, minutes, and seconds
2	UDRE for SV 12
12	Satellite PRN number
-0081.30	PRC for SV 12
+0.026	RRC for SV 12
235	IODE for SV 12
2	UDRE for SV 13
13	Satellite PRN number
+0022.86	PRC for SV 13
+0.006	RRC for SV 13
106	IODE for SV 13
2	UDRE for SV 26
26	Satellite PRN number
-0053.42	PRC for SV 26
-0.070	RRC for SV 26
155	IODE for SV 26
2	UDRE for SV 26
02	Satellite PRN number
+0003.56	PRC for SV 02
+0.040	RRC for SV 02
120	IODE for SV 02

**Table 6.55:** \$GPMSG Response for RTCM Messages 1, 31, and 9, 34 (continued)

Item	Description
2	UDRE for SV 02
27	Satellite PRN number
+0047.42	PRC for SV 27
-0.005	RRC for SV 27
145	IODE for SV 27
7A	Message checksum in hexadecimal

The format for RTCM message type 3 and 32 is:

\$GPMSG,d1,d2,f1,d3,d4,d5,m1,f1,f2,f3,\*cc



**Format and contents of message types 3 and 32 are identical except for the fact that message type 32 displays the base coordinates in the PZ-90 coordinate system, while message type 3 uses the WGS-84 coordinate system.**

GPS Reference Station Parameters (Type 3) and GLONASS Reference Station Parameters (Type 32):

Table 6.56 outlines the \$GPMSG structure.

**Table 6.56:** \$GPMSG Structure for RTCM Message Types 3 and 32

Field	Description
d1	RTCM type, 03 or 32
d2	Station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	Sequence number, 0 to 7
d4	Station health, 0 to 7
d5	Total number of characters after the time item, 000 to 999
m1	current GPS system time of position computation in hours, minutes and seconds
f1	metric x - distance from geocenter (x component of station) using WGS-84 in message type 3, and SGS-90 in message type 32

**Table 6.56:** \$GPMSG Structure for RTCM Message Types 3 and 32 (continued)

Field	Description
f2	metric y - distance from geocenter (y component of station) using WGS-84 in message type 3, and SGS-90 in message type 32
f3	metric z - distance from geocenter (z component of station) using WGS-84 in message type 3, and SGS-90 in message type 32
*cc	Message checksum in hexadecimal

Example:

```
$GPMSG,03,0000,1200.0,7,0,038,231958.00,-2691561.37,-
4301271.02,+3851650.89*6C
```

Table 6.56 outlines the \$GPMSG response structure.

**Table 6.57:** \$GPMSG Response for RTCM Message Type 3

Item	Description
03	RTCM type
0000	Station ID
1200.0	Z count in seconds and tenths
7	Sequence number
0	Station health
038	Total number of characters after the time item
231958.00	Current time in hours, minutes and seconds
-2691561.37	Station X component using WGS-84
-4301271.02	Station Y component using WGS-84
+3851650.89	Station Z component using WGS-84
*6C	Message checksum in hexadecimal

The format for RTCM message types 16 and 36 is:

```
$GPMSG,d1,d2,f1,d3,d4,d5,m1,s1*cc
```



Message types 16 and 36 are identical except for the text. The text displayed by type 16 is the one defined by command \$PASHS,RTC,MSG, while the text displayed by type 36 is the one defined by command \$PASHS,RTC,M36.

GPS Special Text Message (Type 16) and GLONASS Special Text Message (Type 36).

Table 6.58 outlines \$GPMSG structure for message types 16 and 36.

**Table 6.58:** \$GPMSG Structure for RTCM Message Types 16 and 36

Field	Description
d1	RTCM type 6 or 16
d2	station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	sequence number, 0 to 7
d4	station health, 0 to 7
d5	total number of characters after the time item, 000 to 999
m1	current GPS system time of position computation in hours, minutes and seconds
s1	text message
*cc	Message checksum in hexadecimal

Example:

\$GPMSG,16,0000,1209.6,5,0,038,232008.00,THIS IS A MESSAGE  
SENT FROM BASE\*5C

Table 6.59 outlines the \$GPMSG response message for message type 16.

**Table 6.59:** \$GPMSG Response, RTCM Message Type 16

Item	Description
\$GPMSG	Header
16	RTCM type
0000	Station ID
1209.6	Z count in seconds and tenths
5	Sequence number
0	Station health
038	Total number of characters after the time item
232008.00	Current time in hours, minutes and seconds
THIS IS A....	Message content
5C	Message checksum in hexadecimal

RTCM type 18 is the uncorrected carrier phase message used to transmit data to the rover for RTK processing. The format for RTCM type 18 is:

\$GPMSG,d1,d2,f1,d3,d4,d5,m1,s1,d6,d7,n(d8,d9,d10,d11,f2)\*cc

Table 6.60 outlines the \$GPMSG response message structure for RTK Uncorrected Carrier Phases (Type 18)

**Table 6.60:** \$GPMSG Structure for RTCM Message Type 18

Field	Description
d1	RTCM type, 18
d2	Station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	Sequence number, 0 to 7
d4	Station health, 0 to 7
d5	Total number of characters after the time item, 000 to 999
m1	Current UTC time of position computation in hours, minutes, and seconds
s1	GPS / GLONASS Constellation Indicator
d6	Frequency Indicator: “00”: L1 message, “01”: L2 message, “10”, “11”:Reserved
d7	GNSS Time of measurement (GPS or GLONASS time) (added to Z-Count)
	The following data is displayed for each Satellite in the message:
d8	Multiple message indicator (1 = more messages will follow with same time tag, 0 = last message)
d9	GPS (PRN Range 0-31) or GLONASS (Slot number 1-24) Satellite ID
d10	Data Quality Indicator (See RTCM Paper 88-97/SC104-156 Version 2.2)
d11	Cumulative loss of continuity indicator (unfixed cycle slips or loss of lock)
f2	Uncorrected Carrier Phase (Cycles)
*cc	Message checksum in hexadecimal

Typical Example 4:

\$GPMSG,18,0000,1747.8,4,0,170,202908.50,GLO,0,200000,0,0,20,4,01,-  
8259701.2187,0,0,04,4,01,+5708064.4921,0,0,16,4,05,-

1803924.6250,0,0,14,4,01,-0383075.2578,0,0,15,4,01,-  
7205926.2500,0,0,06,4,01,-0607101.0039\*33

Table 6.61 outlines the \$GPMSG structure for message type 18.

**Table 6.61: \$GPMSG Response for RTCM Message 18**

Item	Description
\$GPMSG	Header
18	RTCM message
0000	Station ID
1747.8	Z count in seconds and tenths
4	Sequence number
0	Station health
170	Total number of characters of the time item
202908.50	Current time in hours, minutes, and seconds
GLO	GLONASS Constellation
0	L1 Frequency indicator
200000	GPS system time of measurement basis
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
20	GLONASS slot number (ID)
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
01	Cumulative loss of continuity error (cycle slips)
-8259701.2187	Carrier phase (cycles)
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
04	GLONASS slot number (ID)
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
01	Cumulative loss of continuity error (cycle slips)
+5708064.4921	Carrier phase (cycles)
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
16	GLONASS slot number (ID)

**Table 6.61:** \$GPMSG Response for RTCM Message 18 (continued)

Item	Description
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
05	Cumulative loss of continuity error (cycle slips)
-1803924.6250	Carrier phase (cycles)
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
14	GLONASS slot number (ID)
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
01	Cumulative loss of continuity error (cycle slips)
-0383075.2578	Carrier phase (cycles)
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
15	GLONASS slot number (ID)
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
01	Cumulative loss of continuity error (cycle slips)
-7205926.2500	Carrier phase (cycles)
0	Last message for this SV and Time Tag
0	Code indicator 0=C/A Code
06	GLONASS slot number (ID)
4	Data quality indicator (phase error $\leq 0.03933$ cycle)
01	Cumulative loss of continuity error (cycle slips)
-0607101.0039	Carrier phase (cycles)
*33	Message checksum in hexadecimal

RTCM type 19 is the uncorrected code phase message used to transmit data to the rover for RTK processing. The format for RTCM type 19 is:

\$GPMSG,d1,d2,f1,d3,d4,d5,m1,s1,d6,d7,d8,n(d9,d10,d11,d12,f2)\*cc

Table 6.62 outlines the \$GPMSG response message format for RTK Uncorrected Pseudoranges (Type 19):

**Table 6.62:** \$GPMSG Structure for RTCM Message Type 19

Field	Description
d1	RTCM type, 19
d2	Station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	Sequence number, 0 to 7
d4	Station health, 0 to 7
d5	Total number of characters after the time item, 000 to 999
m1	Current UTC time of position computation in hours, minutes, and seconds
s1	GPS / GLONASS Constellation Indicator
d6	Frequency Indicator: "00": L1 message, "01": L2 message, "10","11":Reserved
d7	Smoothing Interval (0=1 min, 1 = 1..5 min, 2=5..15 min, 3=undefined)
d8	GNSS Time of measurement (GPS or GLONASS time) (added to Z-Count)
	The following data is displayed for each Satellite in the message:
d9	Multiple message indicator (1 = more messages will follow with same time tag, 0 = last message)
d10	GPS (PRN Range 0-31) or GLONASS (Slot number 1-24) Satellite ID
d11	Data Quality Indicator (See RTCM Paper 88-97/SC104-156 Version 2.2)
d12	Pseudorange multipath error indicator quantization (See RTCM Ver 2.2)
f2	Uncorrected Pseudorange (meters)
*cc	Message checksum in hexadecimal

Typical Example 5:

```
$GPMSG,19,0000,1747.8,6,0,148,202908.50,GLO,0,3,200000,0,20,14,15,
21322294.20,0,04,14,15,23304544.46,0,16,14,15,22933427.40,0,14,14,15,
22844988.16,0,15,14,15,21307216.00,0,06,14,15,21096086.06*2B
```

Table 6.63 outlines the \$GPMSG response structure:

**Table 6.63:** \$GPMSG Response for RTCM Message 19

Item	Description
\$GPMSG	Header
19	RTCM message
0000	Station ID
1747.8	Z count in seconds and tenths
6	Sequence number
0	Station health
148	Total number of characters of the time item
202908.50	Current time in hours, minutes, and seconds
GLO	GLONASS Constellation
0	L1 Frequency indicator
3	Smoothing Interval (3=undefined)
200000	GPS system time of measurement basis
0	Last message for this SV and Time Tag
04	GLONASS slot number (ID)
14	Data quality indicator ( $\leq 5.409$ meters)
15	Pseudorange multipath error indicator quantization not determined
21322294.20	Uncorrected Pseudorange (meters)
0	Last message for this SV and Time Tag
20	GLONASS slot number (ID)
14	Data quality indicator ( $\leq 5.409$ meters)
15	Pseudorange multipath error indicator quantization not determined
23304544.46	Uncorrected Pseudorange (meters)
0	Last message for this SV and Time Tag
16	GLONASS slot number (ID)
14	Data quality indicator ( $\leq 5.409$ meters)
15	Pseudorange multipath error indicator quantization not determined
22933427.40	Uncorrected Pseudorange (meters)

**Table 6.63:** \$GPMSG Response for RTCM Message 19 (continued)

Item	Description
0	Last message for this SV and Time Tag
14	GLONASS slot number (ID)
14	Data quality indicator (?5.409 meters)
15	Pseudorange multipath error indicator quantization not determined
22844988.16	Uncorrected Pseudorange (meters)
0	Last message for this SV and Time Tag
15	GLONASS slot number (ID)
14	Data quality indicator (?5.409 meters)
15	Pseudorange multipath error indicator quantization not determined
21307216.00	Uncorrected Pseudorange (meters)
0	Last message for this SV and Time Tag
06	GLONASS slot number (ID)
14	Data quality indicator (?5.409 meters)
15	Pseudorange multipath error indicator quantization not determined
21096086.06	Uncorrected Pseudorange (meters)
*2B	Message checksum in hexadecimal

RTCM type 22 provides additional station position information and antenna height information. The format for RTCM type 22 is:

\$GPMSG,d1,d2,f1,d3,d4,d5,m1,f1,f2,f3,f4\*cc

Table 6.64 outlines the response structure for Extended Reference Station Parameters (Type 22):

**Table 6.64:** \$GPMSG Structure for RTCM Message Type 22

Field	Description
d1	RTCM type, 22
d2	Station identifier, 0000 to 1023
f1	Z count in seconds and tenths, 0000.0 to 3600.0
d3	Sequence number, 0 to 7
d4	Station health, 0 to 7
d5	Total number of characters after the time item, 000 to 999

**Table 6.64:** \$GPMSG Structure for RTCM Message Type 22 (continued)

Field	Description
m1	current GPS system time of position computation in hours, minutes and seconds
f1	L1 ECEF DELTA-X (meters)
f2	L1 ECEF DELTA-Y (meters)
f3	L1 ECEF DELTA-Z (meters)
f4	Antenna L1 phase center height (meters)
*cc	Message checksum in hexadecimal

Example:

```
$GPMSG,22,0000,1717.2,2,0,045,202908.50,+0.000664,+0.004180,-
0.002461,+0.000000*69
```

Table 6.65 defines the response format for a typical RTCM type 22 message.

**Table 6.65:** \$GPMSG Response for RTCM Message Type 22

Item	Description
22	RTCM type
0000	Station ID
1717.2	Z count in seconds and tenths
2	Sequence number
0	Station health
045	Total number of characters after the time item
202908.50	Current UTC time of position calculation in hours, minutes, and seconds
+0.000664	L1 ECEF DELTA-X (meters)
+0.004180	L1 ECEF DELTA-Y (meters)
-0.002461	L1 ECEF DELTA-Z (meters)
+0.000000	Antenna L1 phase center height (meters)
69	Message checksum in hexadecimal

## PER: Set NMEA Send Interval

### \$PASHS,NME,PER,x

Set send interval of the NMEA response messages in seconds, where x is a value between 0.2 and 999, depending upon position update rate option installed (5, 2, or 1 Hz).

Example: Set send interval to 10.0 seconds

\$PASHS,NME,PER,10.0

Table 6.66 outlines the PER (NMEA output rate) range options.

**Table 6.66:** PER (NMEA Output Rate) Range Options

Installed Option	PER Range (seconds)	Increment
1 Hz	1-999	1 second
2 Hz	0.5-999	0.5 second from 0.5 to 1 1 second from 1 to 999
5 Hz	0.2-999	0.2 second from 0.2 to 1 1 second from 1 to 999

For 5-Hz update rate, the \$PASHS,POP,5 command should have been previously sent.

## POS: Position Message

### \$PASHS,NME,POS,x,c[,f]

Enable/disable NMEA position response message on output port x, c is ON or OFF and f is and f is the optional message period as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

If no position is computed, an empty message outputs.

Example: Enable position message on port B at 1-second output rate

\$PASHS,NME,POS,B,ON,1

### \$PASHQ,POS,x

The associated query command is \$PASHQ,POS,x where x is the optional output port.

### \$PASHR,POS

The response is a message containing information on the most recently computed position. This response message is in the form:

\$PASHR,POS,d1,d2,m1,m2,c1,m3,c2,f1,f2,f3,f4,f5,f6,f7,f8,f9,s\*cc

Table 6.67 defines the POS response structure.

**Table 6.67: POS Response Structure**

Field	Description	Range
d1	position type: 0 = autonomous 1 = position differentially corrected with RTCM code 2 = position differentially corrected with CPD float solution 3 = position is CPD fixed solution	0 to 3
d2	Number of satellites used in position computation	3 to 12
m1	Current UTC time, (hhmmss), of position computation in hours, minutes and seconds	00 to 235959.50
m2	Latitude component of position in degrees, minutes, and fraction of minutes (ddmm.mmmm)	0 to 90°
c1	Latitude sector: N = North, S = South	'N' or 'S'
m3	Longitude component of position in degrees, minutes, and fraction of minutes	0 to 180°
c2	Longitude sector: E = East, W = West	W or E
f1	Altitude in meters above WGS-84 reference ellipsoid. For 2-D position computation this item contains the altitude held fixed.	± 30000.00
f2	Reserved	
f3	True track/true course over ground in degrees (000.00 to 359.99 degrees)	0 to 359.9
f4	Speed over ground in knots	0 to 999.9
f5	Vertical velocity in meters per second	± 999.9
f6	PDOP - position dilution of precision	0 to 99.9

**Table 6.67: POS Response Structure (continued)**

Field	Description	Range
f7	HDOP - horizontal dilution of precision	0 to 99.9
f8	VDOP - vertical dilution of precision	0 to 99.9
f9	TDOP - time dilution of precision	0 to 99.9
s1	Firmware version ID	4 character string

If there is no valid position, POS provides: number of satellites, time, DOPs, firmware version ID. All other fields are null.

If there are not enough satellites to compute DOP, then the DOP field is null.

Example 1:

Query: \$PASHQ,POS,A or

Set: \$PASHS,NME,POS,B,ON

Typical Response:

\$PASHR,POS,0,06,183805:00,3722.36221,N, 12159.82742,  
W,+00016.06,179.22,021.21,+003.96+34,06.1,04.2,03.2,01.4,GA00\*cc

Table 6.68 outlines a typical POS response message.

**Table 6.68: Typical POS Response Message**

Item	Description
\$PASHR,POS	Header
0	Position is autonomous
06	Number of satellites used in position computation
183805.00	Time of position computation
3722.36221	Latitude
N	North
12159.82742	Longitude
W	West
+00016.06	Altitude in meters
empty field	Reserved
179.22	Course over ground in degrees (True)
021.21	Speed over ground in knots
+003.96	Vertical velocity in meters per second

**Table 6.68:** Typical POS Response Message (continued)

Item	Description
06.1	PDOP
04.2	HDOP
03.3	VDOP
01.4	TDOP
GA00	Version number
cc	Message checksum in hexadecimal

### RMC: Recommended Minimum Course

This command enables/disables output of NMEA Recommended Minimum Course message which contains time, position, course and speed data.

**\$PASHS,NME,RMC,c,s[,f]<CR><LF>**

Where c is the receiver port, s is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

**Format:** \$GPRMC,f1,c2,f3,c4,f5,c6,f7,f8,s9,f10,c11<cr><lf>

Table 6.69 outlines the response structure.

**Table 6.69: RMC Response Structure**

Parameters	Description	Range
f1	UTC time of the GGA fix associated with this sentence (hhmmss.ss)	000000.00-23559.95
c2	Status	A => Data Valid V => Navigation Receiver Warning
f3	Latitude (ddmm.mmmm)	0000.0000-8959.9999
c4	Latitude direction	N => North S => South
f5	Longitude (dddmm.mmmm)	00000.0000-17959.9999
c6	Longitude direction	E => East W => West
f7	Speed over ground, knots	000.00-999.99
f8	Course Over Ground, degrees True	000.00-359.99
s9	date, mmddyy	010100-123199
f10	Magnetic Variation, degrees	0.00-99.99
c11	Direction of Variation Easterly variation (E) subtracts from True course. Westerly variation (W) adds to True course	E => East W => West
*hh	The hexadecimal checksum is computed by exclusive-ORing all of the bytes in the message between, but not including, the \$ and the *. The result is *hh where h is a hex character.	0 - 9 and A-F

### **\$PASHQ,RMC**

This is the associated query message.

Example:

\$GPRMC,200544.00,A,3721.070931,N,12156.107483,W,000.01,000.00,111004,15.25,E\*49

## RRE: Satellite Residual and Position Error Message

### \$PASHS,NME,RRE,x,c[,f]

Enable/disable satellite residual and position error message to port x, where x is the output port, c is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message is not output unless a position is computed.

Example: Enable RRE message on port A at 2-second output rate

```
$PASHS,NME,RRE,A,ON,2
```

### \$PASHQ,RRE,x

The associated query command is \$PASHQ,RRE,x, where x is the optional output port.

Example:

```
$PASHQ,RRE,A
```

### \$GPRRE/\$GLRRE

The response message is output in two messages with different headers. The first message contains GPS satellite information in the form:

```
$GPRRE,d1,n(d2,f1)f2,f3
```

The second message contains GLONASS satellite information in the form:

```
$GLRRE,d1,n(d2,f1)f2,f3
```

where n is equal to the number of satellites used to compute a position.

Table 6.70 outlines the RRE response structure.

**Table 6.70: RRE Response Structure**

Field	Description
d1	Number of satellites used to compute position
d2	PRN number for each of the satellites used in position computation. GPS satellite ranging from 1 to 32 in the \$GPRRE message and GLONASS satellite ranging from 33 to 56 in the \$GLRRE message
f1	Range residuals magnitude in meters for each satellite used in position computation: GPS satellites in message.
f2	Horizontal RMS position error for mixed constellation in meters
f3	Vertical RMS position error for mixed constellation in meters

Example:

Query: \$PASHQ,RRE,A or

Set:\$PASHS,NME,RRE,A,ON

Typical Responses:

\$GPRRE,05,18,+000.2,29,+000.2,22,-000.1,19,- 000.1,28,  
+000.5,0002.0,0001.3\*76

\$GLRRE,03,45,+000.4,36,+000.2,52,-000.2,0002.0,0001.3\*A1

Table 6.71 outlines the typical \$GPRRE response message.

**Table 6.71: \$GPRRE Response Message**

Item	Description
\$GPRRE	Header
05	Number of satellites used to compute position
18	PRN of first satellite
+000.2	Range residual for first satellite in meters
29	PRN of second satellite
+000.2	Range residual for second satellite in meters
22	PRN of third satellite
-000.1	Range residual for third satellite in meters
19	PRN of fourth satellite
-000.1	Range residual for fourth satellite in meters

**Table 6.71: \$GPRRE Response Message (continued)**

Item	Description
28	PRN of fifth satellite
+000.5	Range residual for fifth satellite in meters
0002.0	Horizontal position error in meters
0001.3	Vertical position error in meters
76	Message checksum in hexadecimal

Table 6.72 outlines the \$GLRRE response message.

**Table 6.72: \$GLRRE Response Message**

Item	Description
\$GLRRE	Header
03	Number of satellites used to compute position
45	PRN of first GLONASS satellite
+000.4	Range residual for first GLONASS satellite in meters
36	PRN of second GLONASS satellite
+000.2	Range residual for second GLONASS satellite in meters
52	PRN of third GLONASS satellite
-000.2	Range residual for third GLONASS satellite in meters
0002.0	Horizontal position error in meters
0001.3	Vertical position error in meters
A1	Message checksum in hexadecimal

## SAT: Satellite Status Message

### \$PASHS,NME,SAT,x,c[,f]

Enable/disable satellite status message on port x, where x is the output port, c is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message is output even if no position is computed.

Example: Enable SAT message on port B at 1-minute output rate

\$PASHS,NME,SAT,B,ON,60

### \$PASHQ,SAT,x

The associated query command is \$PASHQ,SAT,x, where x is the optional output port.

Example:

\$PASHQ,SAT,B

### \$PASHR,SAT

The response is a message in the form:

\$PASHR,SAT,d1,n(d2,d3,d4,d5,c1)\*cc

where n is equal to the number of satellites locked.

Table 6.73 outlines the SAT field structure.

**Table 6.73: SAT Structure**

Field	Description
d1	Number of satellites locked, number of satellites in message, range 0-24
d2	Satellite PRN number, range 1 to 56 (1 to 32 for GPS, 33 to 56 for GLONASS)

**Table 6.73:** SAT Structure (continued)

Field	Description
d3	Satellite azimuth angle, 000 to 359 degrees
d4	Satellite elevation angle, 00 to 90 degrees
d5	Satellite signal strength/signal-to-noise ratio, 00 to 99
c1	Satellite used/not used in position computation U = Satellite used in position computation - = Satellite not used in position computation

Example 1:

Query: \$PASHQ,SAT,B or

Set: \$PASHS,NME,SAT,B,ON

Typical Response:

\$PASHR,SAT,04,03,103,56,60,U,23,225,61,39,U,16,045,02,21,U,40,160,46,50,U  
\*6E

Table 6.74 outlines the response format.

**Table 6.74:** Typical SAT Response Message

Item	Description
\$PASHR,SAT	Header
04	Number of satellites locked
03	PRN number of the first satellite
103	Azimuth of the first satellite in degrees
56	Elevation of the first satellite in degrees
60	Signal strength of the first satellite
U	Satellite used in position computation
23	PRN number of the second satellite
225	Azimuth of the second satellite in degrees
61	Elevation of the second satellite in degrees
39	Signal strength of the second satellite
U	Satellite used in position computation
16	PRN number of the third satellite
045	Azimuth of the third satellite in degrees

**Table 6.74:** Typical SAT Response Message (continued)

Item	Description
02	Elevation of the third satellite in degrees
21	Signal strength of the third satellite
U	Satellite used in position computation
40	PRN number of fourth satellite
160	Azimuth of fourth satellite in degrees
46	Elevation of fourth satellite in degrees
50	Signal strength of fourth satellite
U	Satellite used in position computation
6E	Message checksum in hexadecimal

## TCM: Enables/Disables RTCM Rover Data Message

### \$PASHS,NME,TCM,x,c[,f]

This command enables or disables the RTCM rover data message, where x is the port, A, B, or C, c is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

### \$PASHQ,TCM

The associated query command is \$PASHQ,TCM,x where x is the optional output port.

### \$PASHR,TCM

The response message has the structure

\$PASHR,TCM,d1,d2,d3,d4,f5,d6,d7

where Table 6.75 outlines the response format.

**Table 6.75:** TCM Response Structure

Field	Description	Range
d1	Synchronization indicator. 0 = sync between base and remote has not been established or has been lost 1 = sync between base and remote has been established	0 or 1
d2	RTCM message type	1, 2, 3, 6, 9, 16
d3	Reference station ID, transmitted by reference station	0 through 1023

**Table 6.75: TCM Response Structure (continued)**

Field	Description	Range
d4	Reference station health, transmitted by reference station. 0 = UDRE scale factor 1 1 = UDRE scale factor 0.75 2 = UDRE scale factor 0.5 3 = UDRE scale factor 0.3 4 = UDRE scale factor 0.2 5 = UDRE scale factor 0.1 6 = reference station transmission not monitored 7 = reference station not working	0 through 7
f5	Modified Z count	0 - 3599.4 seconds
d6	Quality factor for communication, defined as 100 x number of good measurements divided by total number of measurements	0 through 100
d7	Age of received messages, types 1, 2, 9 only	00 through 99 seconds

# TTT: Event Marker Message

## \$PASHS,NME,TTT,x,c[,f]

Enable/disable event marker message on port x, where x is the output port and c is ON or OFF. This message is not output unless a photogrammetry pulse is being input, and the photogrammetry option (E) is available in the receiver.

Example: Enable TTT message on port A

\$PASHS,NME,TTT,A,ON



There is no query command for TTT.

## \$PASHR,TTT

The response message is in the form:

\$PASHR,TTT,d1,m1\*cc



The time displayed in the TTT message depends upon the selected constellation. If SYS=MIX, the time depends upon the setting of the TSC parameter. If SYS=GPS, the time is GPS. IF SYS=GLO, the time is UTC + 3 hours.

Table 6.76 outlines the TTT response message structure.

Table 6.76: TTT Message Structure

Field	Description
d1	Day of GPS week, 1 to 7, where Sunday = 1
m1	Time in hours, minutes, seconds (hh:mm:ss.ssssss)

Example: Enable TTT event marker on port A

Set: \$PASHS,NME,TTT,A,ON

Typical Response: \$PASHR,TTT,6,20:41:02.0000000\*OD

Table 6.77 outlines the example TTT response message.

**Table 6.77:** Example TTT Response Message

Item	Description
\$PASHR,TTT	Header
6	Day of week (Friday)
20:41:02.000000 0	Time
OD	Message checksum in hexadecimal

## VTG: Velocity/Course Message

### \$PASHS,NME,VTG,x,c[,f]

Enable/disable the velocity/course message on port x, where x is the output port, c is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message is not output unless position is computed.

Example: Enable VTG message on port B at 5-second output rate

\$PASHS,NME,VTG,B,ON,5

### \$PASHQ,VTG,x

The associated query command is \$PASHQ,VTG,x where x is the optional output port. This message does not output unless position is computed.

### \$GPVTG

The response message is in the form:

\$GPVTG,f1,T,f2,M,f3,N,f4,K

Table 6.78 outlines the VTG structure.

**Table 6.78:** VTG Structure

Field	Description
f1	True track/true course over ground, ttt.tt = 000.00 to 359.99 degrees
T	T = true course

**Table 6.78: VTG Structure (continued)**

Field	Description
f2	Magnetic track/magnetic course over ground, (000.00 to 359.99) degrees. (Output only if magnetic variation option (M) is installed in receiver)
M	Magnetic course over ground marker, M = magnetic course
f3	Speed over ground, 000 to 999.99 knots
N	Speed over ground units, N = nautical miles per hour
f4	Speed over ground, = 000 to 999.99 kilometers per hour
K	Speed over ground units, = K (kilometers per hour)

Example:

Query:\$PASHQ,VTG,B or

Set: \$PASHS,NME,VTG,A,ON

Typical Response:\$GPVTG,179.21,T,1934.4,M,000.11,N,000.20,K\*3E

Table 6.79 outlines the example VTG response message.

**Table 6.79: Typical VTG Response Message**

Item	Description
\$GPVTG	Header
179.21	Course over ground in degrees
T	True course over ground marker
193.44	Magnetic course over ground
M	Magnetic course over ground marker
000.11	Speed over ground in knots
N	Knots
000.20	Speed over ground in kilometers/hour
K	Kilometers/hour marker
3E	Message checksum in hexadecimal

# ZDA: Time and Date Message

## \$PASHS,NME,ZDA,x,c[,f]

Enable/disable the time and date message or port x, where x is the output port, c is ON or OFF and f is the optional period of the message as per the following increment schedule:

Option	Increment		
	0.2 s	0.5 s	1.0 s
1 Hz			f=1, 2, 3,... 999 (1 to 999 s)
2 Hz		f=0.5 or 1.0 (0.5 or 1.0 s)	f=1, 2, 3,... 999 (1 to 999 s)
5 Hz	f=0.2, 0.4, 0.6, 0.8 or 1.0 (0.2, 0.4, 0.6, 0.8 or 1.0 s)		f=1, 2, 3,... 999 (1 to 999 s)

If the output is set without a period 'f', the period set by the \$PASHS,NME,PER command is used. If a \$PASHS,NME,PER command is issued after individual NMEA message output periods have been set, all individual message periods will be reset to the PER output period setting.

This message is output even if a position is not computed.

Example: Disable ZDA message on port A

\$PASHS,NME,ZDA,A,OFF

## \$PASHQ,ZDA,x

The associated query command is \$PASHQ,ZDA,x, where x is the optional output port.

## \$GPZDA

The response message is in the form:

\$GPZDA,m1,d1,d2,d4,d5

Table 6.80 outlines the ZDA structure.

Table 6.80: ZDA Structure

Field	Description
m1	UTC time (hhmmss.ss) (hours, minutes, seconds)
d1	Current day 01 - 31
d2	Current month 01 - 12

**Table 6.80: ZDA Structure (continued)**

Field	Description
d3	Current year 0000-9999
d4	Local zone offset from UTC time where s = sign and hh = hours Range 00 - ±13
d5	Local zone offset from UTC time where mm = minutes with same sign as shh

Example:

Query: \$PASHQ,ZDA,A or

Set: \$PASHS,NME,ZDA,A,ON

Typical Response: \$GPZDA,132123.00,10,03,1996,+07,00\*ss

Table 6.81 outlines the example ZDA response message.

**Table 6.81: Typical ZDA Response Message**

Item	Description
\$GPZDA	Message header
123123.00	UTC time
10	Current day
03	Current month
1996	Current year
+07	Local zone
*22	Checksum in hexadecimal

# RTCM Response Message Commands

---

The RTCM commands allow you to control and monitor RTCM real-time differential operations. The RTCM commands are only available if the differential options are installed in the receiver. If the Base Station option (B) is installed, then only the base parameters and general parameters commands are accessible. If the Remote option (U) is installed, then only the remote parameter and general parameter commands are available. For a more detailed discussion of RTCM differential, refer to Chapter 5, **Differential and RTK Operations**.

## Set Commands

All RTCM commands but one are set commands. Through the set commands you can modify and enable a variety of differential parameters. Certain set commands are applicable only to the base station and certain commands only apply to the remote station. If the set command is sent correctly, the receiver will respond with the \$PASHS,ACK acknowledgment. If a parameter is out of range or the syntax is incorrect, then the receiver will respond with a \$PASHS,NAK to indicate that the command was not accepted.

## Query Commands

There is only one query command: \$PASHQ,RTC. Use this command to monitor the parameters and status of RTCM differential operations. The query command has an optional port field. If the query is sent with the port field left empty, then the response will be sent to the current port. If the port field contains a valid port (A-C), then the response will be output to that port. For example, the query:

\$PASHQ,RTC<Enter>

Will output an RTCM status message to the current port. The command:

\$PASHQ,RTC<Enter>

Will output an RTCM status message to port C.

Table 6.82 lists the RTCM commands.

**Table 6.82: RTCM Commands**

Function	Command	Description	Page
Base Parameters	\$PASHS,RTC,BAS	Set receiver to operate as differential base station	205
	\$PASHQ,RTC,M36	Defines RTCM type 36 message	205
	\$PASHS,RTC,MSG	Defines RTCM type 16 message	205
	\$PASHS,RTC,SPD	Sets baud rate of base station	209
	\$PASHS,RTC,STH	Sets health of reference station	209
	\$PASHS,RTC,TYP	Enables type of message	210
Remote Parameters	\$PASHS,RTC,AUT	Turns auto differential mode on or off	204
	\$PASHS,RTC,MAX	Set max age of RTCM differential corrections	205
	\$PASHS,RTC,REM	Set receiver to operate as differential remote station	206
	\$PASHS,RTC,SEQ	Checks sequence number of received messages	208
General Parameters	\$PASHQ,RTC	Requests base or remote differential mode parameters and status	206
	\$PASHS,RTC,OFF	Disable differential mode	205
	\$PASHQ,TCM	Query RTCM station data	195

## AUT: Enable/Disable Auto Differential Mode

### \$PASHS,RTC,AUT,x

Turns auto differential mode on or off where x is Y (on) or N (off). When in auto-differential mode the receiver generates raw positions automatically if differential corrections are older than the maximum age, or are not available. Used only in REMOTE mode.



When the receiver is in CPD (RTK) mode and fast CPD mode is off (\$PASHS,CPD,FST,OFF), then the rover receiver does not generate any positions if data from the base station is unavailable.

Example: Turn auto differential mode on

\$PASHS,RTC,AUT,Y<Enter>

## **BAS: Set Receiver as Differential Base Station**

### **\$PASHS,RTC,BAS,x**

Set the GG24 to operate as an RTCM differential base station, where x is the port through which corrections will be sent.

Example: Set to differential base mode using port B

```
$PASHS,RTC,BAS,B<Enter>
```

## **M36: RTCM Type 36 Message**

### **\$PASHS,RTC,M36,s**

Define RTCM type 36 message, where s is a character string up to 90 characters long that will be sent from the base to the remote. Used only if message type 36 is enabled.

Example: Define RTCM message "This is a test message"

```
$PASHS,RTC,M36,This is a test message<Enter>
```

## **MAX: Set Maximum Age of RTCM Differential Corrections**

### **\$PASHS,RTC,MAX,d**

Set the maximum age in seconds of an RTCM differential correction above which it will not be used, where d is any number between 1 and 1199. Default is 60. Used only in REMOTE mode.

Example: Set maximum age to 30 seconds

```
$PASHS,RTC,MAX,30<Enter>
```

## **MSG: RTCM Type 16 Message**

### **\$PASHS,RTC,MSG,s**

Define RTCM type 16 message, where s is a character string up to 90 characters long that will be sent from the base to the remote. Used only if message type 16 is enabled.

Example: Define RTCM message "This is a test message"

```
$PASHS,RTC,MSG,This is a test message<Enter>
```

## **OFF: Disable Differential Mode**

### **\$PASHS,RTC,OFF**

Disables base or remote differential mode.

Example:

\$PASHS,RTC,OFF<Enter>

**REM: Set Receiver as Differential Remote**

**\$PASHS,RTC,REM,x**

Set the GG24 to operate as a differential remote station using RTCM format, where x is port through which corrections will be received.

Example: Set receiver as differential remote using port B

\$PASHS,RTC,REM,B

**RTC: RTCM Differential Parameters**

**\$PASHQ,RTC,c**

Request differential mode parameters, where c is the optional serial port. The response message is a free form response looks like:

STATUS:

SYNC: TYPE:00 STID:0000 STHE:0

AGE:+999 QA:100.0% OFFSET:00

SETUP:

MODE:OFF PORT:A AUT:N

SPD:000300 STI:0000 STH:0

MAX:0060 QAF:100 SEQ:N

TYP:1 2 3 6 9 16 18 19 22 31 32 6G 34 36

FRQ:99 00 00 OFF 00 00 00 00 00 99 00 OFF 00 00

BASE: LAT:0000.000000,N LON:00000.000000,E ALT:+00000.000 W84

MSG:

MSG(GLO):

where Table 6.83 outlines the response message format:

**Table 6.83: RTC Response Message Structure**

Field	Description
STATUS:	
SYNC	Indicates with an * that synchronization between base and remote has been established. Valid only for REMOTE mode.
TYPE	Indicates type of message being sent (base) or received (remote).
STID	Displays the station ID or received from the base station.

**Table 6.83: RTC Response Message Structure (continued)**

Field	Description
STHE	Displays the station health or received from the base station.
AGE	In BASE mode, displays the elapsed time in seconds between the beginning of the transmission of Type 1 or 9 messages. In REMOTE mode, displays the age of the received messages in seconds.
QA	Displays the communication quality factor between base and remote. <ul style="list-style-type: none"> <li>Defined as 100 x number of good messages/total number of messages</li> </ul> Valid for REMOTE mode only.
OFFSET:	Displays the number of bits from the beginning of the RTCM byte (in case of a bit slippage).
SETUP:	
MODE:OFF	Displays differential mode either base (BAS), remote (REM) or disabled (OFF).
PORT:A	Displays port used to send or receive RTCM corrections.
AUT:N	Displays auto differential mode. Default is N. Used only in REMOTE mode.
SPD:0300	RTCM bit rate. The number of bits per second sent to the differential serial port. Used only in BASE mode.
STI:0000	User-supplied station ID. Default is 0000.
STH:0	User-set reference station health. Default is 0. Used only in BASE mode.
MAX:0060	Maximum age, in seconds, allowed for a message to be used to compute a differentially corrected position. Default is 60. Used only in REMOTE mode.
QAF:100	The criteria to be applied when evaluating the quality of communication between base and remote. Used in computing QA. Default is 100. Used only in REMOTE mode.
SEQ:N	Indicates if there is a check for sequential received message number for the message to be accepted. Default is N. Used only in REMOTE mode.
TYP	Indicates the RTCM message types the receiver can generate. Messages available are 1, 3, 6, 9, 16, 31, 32, 6G, 34, and 36. Message 2 is not generated. Used only in BASE mode.
FRQ	Indicates the output period for message types 1, 2, 3, 9, 16, 31, 32, 34, and 36. A 0 indicates message disabled, a 99 indicates continuous output, and any other number specifies the number of seconds between transmissions for message types 1, 9, 31, and 34, and the number of minutes between transmissions for all other messages. Default for message types 1 and 31 is 99, for types 6 and 6G is OFF, and for all other messages is 00.

**Table 6.83: RTC Response Message Structure (continued)**

Field	Description
BASE	For base mode, displays the antenna position of the base station in latitude, longitude, altitude above reference ellipsoid, and reference coordinates to use when computing corrections. Antenna position is entered with commands POS.
MSG	For base mode, contains the text message, up to 90 characters, that is sent from the base to the remote when message type 16 is enabled. In REMOTE mode, displays the text message, up to 90 characters, that is received from the base.
MSG(GLO)	For base mode, contains the text message, up to 90 characters, that is sent from the base to the remote when message type 36 is enabled. In REMOTE mode, displays the text message, up to 90 characters, that is received from the base.



**If changed parameter values are saved by the \$PASHS,SAV,Y set command, after the next power-up, the response to the \$PASHQ,RTC query command will display the saved quantities instead of the defaults. \$PASHS,RST always reinstates the defaults.**

## **SEQ: Check Sequence Number**

### **\$PASHS,RTC,SEQ,c**

Checks sequence number of received messages and, if sequential, accept corrections; if not, don't use correction, where c is Y (check) or N (do not check). Default is N. Used only in REMOTE mode. Valid only at beginning of differential operation. After two sequential RTCM corrections have been received, differential operation begins.

Example: Check sequence number

\$PASHS,RTC,SEQ,Y<Enter>

**SPD: Set RTCM Bit Rate**

**\$PASHS,RTC,SPD,d**

Set the number of bits per second that are being generated to the serial port of the base station, where d is the code for the output rate in bits per second. Default is 300 bits per second. Used only in BASE mode. Table 6.84 lists the bit rate codes.

**Table 6.84:** Bit Rate Codes

Code	0	1	2	3	4	5	6	7	8	9
Rate	25	50	100	110	150	200	250	300	1500	Burst Mode

Example: Set bit rate to 110 bits/sec

\$PASHS,RTC,SPD,3<Enter>

**STH: Health of Reference Station**

**\$PASHS,RTC,STH,d**

Set the health of the reference station, where d is any value between 0 and 7. Used only in BASE mode. Default is 0. Table 6.85 lists the codes for the station health.

**Table 6.85:** Reference Station Health Codes

Code	Health Indication
7	Reference station not working.
6	Reference station transmission not monitored.
5	Specified by service provider.
4	Specified by service provider.
3	Specified by service provider.
2	Specified by service provider.
1	Specified by service provider
0	Specified by service provider.

Example: Set health to "Reference station not working"

\$PASHS,RTC,STH,7<Enter>

## STI: Set Station Identification

### \$PASHS,RTC,STI,d

Set user station identification (user STID) to any value between 0000 and 1023. In RTCM differential mode, corrections will not be applied if the station ID between base and rover are different, unless rover is set to zero. If user STID of rover station is set to zero, the GG24 will attempt to use the differential corrections it receives, regardless of STID of base station. Default is 0000.

Example: Set site identification to 0001

\$PASHS,RTC,STI,0001<Enter>

## TYP: Enable Type of Message

### \$PASHS,RTC,TYP,x,s

Enables the type of message to be sent by the base station and the period at which it will be sent, where x is the type and s is the period. Used only in BASE mode. Table 6.86 lists the type of messages available and the period range setting.

**Table 6.86:** Base Station Message Types and Period Ranges

Type	Range
1	0-99 seconds, where 0 is disabled and 99 is generated continuously
2	Delta differential GPS corrections
3	0-99 minutes, where 0 is disabled and 99 is generated continuously
6	ON or OFF    Default = OFF
9	0-99 seconds, where 0 is disabled and 99 is generated continuously
16	0-99 minutes, where 0 is disabled and 99 is generated continuously
18	0-99 seconds, where 0 is disabled and 99 is generated continuously
19	0-99 seconds, where 0 is disabled and 99 is generated continuously
22	0-99 minutes, where 0 is disabled and 99 is generated continuously
31	0-99 seconds, where 0 is disabled and 99 is generated continuously
32	0-99 minutes, where 0 is disabled and 99 is generated continuously
6G	ON or OFF    Default is OFF

**Table 6.86:** Base Station Message Types and Period Ranges (continued)

Type	Range
34	0-99 seconds, where 0 is disabled and 99 is generated continuously
36	0-99 minutes, where 0 is disabled and 99 is generated continuously

Example: Enable type 1, sent out every second

\$PASHS,RTC,TYP,1,1<Enter>



**When the command \$PASHS,RTC,BAS,is sent, message types 1 and 31 are generated continuously by default.**

# CPD Commands

---

The CPD commands allow you to control and monitor CPD (carrier phase differential) operations. The commands are either general parameter or query commands, base set commands or rover set commands. The rover set commands are only available if the CPD Rover option (J) is installed in the receiver, For a more detailed discussion of CPD differential, refer to the Understanding CPD section in this manual.

## Set Commands

Through the set commands you can modify and enable a variety of CPD operating parameters. Certain set commands are applicable only to the base station and certain set commands only apply to the remote station. The general format of the set commands is:

`$PASHS,CPD,str,x<Enter>`

where str is the 3 character command identifier, and x is the parameter to be set. If the set command is sent correctly, the receiver will respond with the `$PASHR,ACK` acknowledgment. If a parameter is out of range or the syntax is incorrect, then the receiver will respond with a `$PASHR,NAK` to indicate that the command was not accepted.

## Query Commands

The query commands are used to monitor the setting of individual parameters and the status of CPD operations. The general format of the query command is:

`$PASHQ,CPD,str,x<Enter>`

where str is the 3 character command identifier, and x is the port to which the response message will be output. The port field is optional. If the query is sent with the port field left empty, then the response will be sent to the current port. If the port field contains a valid port (A-C), then the response will be output to that port. For example, the query:

`$PASHQ,CPD<Enter>`

outputs a CPD status message to the current port. The query:

`$PASHQ,CPD,C <Enter>`

output a CPD status message to port C.

where Table 6.87 lists the CPD commands.

**Table 6.87: CPD Commands**

Function	Command	Description	Page
General Set Commands	\$PASHS,CPD,MOD	Set CPD mode	226
General Query Commands	\$PASHQ,CPD	Query CPD related setting	213
	\$PASHQ,CPD,ANT	Query base station antenna settings (from Rover)	216
	\$PASHQ,CPD,DLK	Query data link status	218
	\$PASHQ,CPD,INF	Query CPD satellite information	222
	\$PASHQ,CPD,MOD	Query CPD mode settings	226
	\$PASHS,RST	Query base position from Rover	226
Rover Only Set Command	\$PASHS,CPD,AFP	Set ambiguity fixing confidence parameter	215
	\$PASHS,CPD,ANT	Set base antenna parameters from Rover	216
	\$PASHS,CPD,FST	Enable/disable fast CPD mode.	221
	\$PASHS,KPI	Known point initialization for faster RTK recovery	224
	\$PASHS,CPD,MAX	Set maximum age of correction	226
	\$PASHS,CPD,POS	Set reference position of the base receiver from Rover	228
	\$PASHQ,CPD,POS	Reset CPD processing	228
	\$PASHS,CPD,UBP	Select which base position to use in ROVER mode	229
			229

Note: \$PASHQ,CPD is not accepted by the receiver if issued with a checksum.

### **\$PASHQ,CPD,c**

The general CPD query command is \$PASHQ,CPD,c where c is the optional serial port. Use this query to monitor CPD settings and status.

Example: Query CPD parameters

\$PASHQ,CPD<Enter>

The response message is in free form format. A typical response appears as follows:

STATUS:

```
RST_TIME:000000 FIX_TIME:000000
LATENCY:0046 AMB:FIXED LENGTH:00000.0011 VELOCITY:000.0037
ROV_SV: 04 14 16 18 19 22 25 29 42 - 44 52
BAS_SV: 04 14 16 18 19 22 25 29 42 43 44 52
BASE POSITION:RECEIVED 3759.729431 N 12159.549345 W -4.790 ID:0000
BASE_DELTA:RECEIVED
```

SETUP:

MODE:ROV PORT:B SYS:MIX PEM:10

FST:ON FST\_RATE:02 AFP:99.0 MAXAGE:30

Table 6.88 outlines the response format.

**Table 6.88:** \$PASHQ,CPD Response Descriptions

Item	Description	Range
RST TIME	GPS seconds of week when the CPD engine was last reset	000000-604800
FIX TIME	GPS seconds of week the COD engine last fixed carrier phase ambiguities.	000000-604800
LATENCY	RTK solution latency in milliseconds (Rover mode only)	0000-9999
AMB	RTK solution type (Rover mode only)	<FLOAT, FIXED>
LENGTH	Length of the baseline currently computed by the RTK engine (Rover mode only)	00000.0000-99999.9999
VELOCITY	Velocity of the rover antenna currently computed by the CPD engine. (Rover mode only)	000.0000-999.9999
ROV SV	PRN numbers of the SVs that are currently usable for CPD positioning in the rover receiver (Rover mode only)	
BAS SV	Should display the PRN numbers of the SVs for which corrections are being received by the Rover (Rover mode only)	
BASE POSITION	Part 1 of this field displays the method from which corrections are being received by the rover (Rover mode only) Part 2 of this field displays the WGS84 geographic coordinate clauses (rover mode only)	<NO, COMPUTER, RECEIVED, ENTERED>
ID	Base station ID	<0000-1023> 0000 (Default)
BASE DELTA	Type 22 message reception indicator	<NO, RECEIVED, ENTERED>
MODE	Mode of CPD operation	<OFF, BAS, ROV> OFF (Default)
PORT	Current port of CPD operation	<A, B, C, D> B (Default)
SYS	Current satellite system for positioning	<GPS, GLO, MIX> MIXS (Default)

**Table 6.88:** \$PASHQ,CPD Response Descriptions (continued)

Item	Description	Range
PEM/ELM	Elevation mask governing the current mode of RTK positioning PEM should be displayed in this field if the MOD is set to ROV or OFF. ELM should be displayed in this field if the MOD is set to BAS.	<0-90> 10° (Default)
FST	Fast CPD operation flag <ON, OFF>	ON (Default)
FST RATE	The maximum update rate of the receiver in Hz for fast CPD mode.	<1,2,5> 2 (Default)
AFP	Ambiguity fix confidence percentage	<0, 95.0, 99.0, 99.9> 99.0 (Default)
MAXAGE	The maximum age of corrections that will be used in fast CPD mode.	<1-1199> 30 (Default)

## AFP: Ambiguity Fixing

### \$PASHS,CPD,AFP,f

This command sets the confidence level for ambiguity fixing, where f is the confidence level in percent. The higher the confidence level, the more certainty that the ambiguities are fixed correctly, however the longer it will take to fix the ambiguities. 0 is float solution. The default is 99.0.

**Table 6.89:** CPD,AFP Parameter Table

Parameter	Description	Range
f	Ambiguity Fixing Parameter, i.e. the confidence levels for the reliability of the ambiguity fixed solution. 0 = Float Solution only	95.0 99.0 99.9 0

Example: Set the confidence level to 99.9.

\$PASHS,CPD,AFP,99.9<Enter>

# ANT: Antenna Parameters

## \$PASHS,CPD,ANT,f1,f2,f3,m1,f4

Sets the antenna parameters of base receiver from the rover receiver.



Since this is only valid when using a base position entered at the rover, set \$PASHS,CPD,UBP,0 before entering \$PASHS,CPD,ANT.

where Table 6.90 defines the parameters.

**Table 6.90:** CPD,ANT Parameter Table

Parameter	Description	Range	Units
f1	Antenna height (measured from the point to the antenna edge). (Survey mark to edge of antenna)	0 - 6.4000	meter
f2	Antenna radius	0 - 6.4000	meter
f3	Vertical offset (phase center to ground plane)	0 - 99.9999	meter
m4	Always 0	0	
f5	Always 0	0	

Example: Set antenna parameters of base station.

\$PASHS,CPD,ANT,6.4,0.13,0.02,0,0<Enter>

## \$PASHQ,CPD,ANT,c

The associated query command is \$PASHQ,CPD,ANT,c where c is the optional output port. The command queries the Base station from the Rover. This command is only valid from the Rover. If this command is sent when the receiver is in Base mode, the response will be \$PASHR,NAK.

Example: \$PASHQ,CPD,ANT <Enter>

## \$PASHR,CPD,ANT

The message returns the Base station parameters from the Rover. It is in the form:

\$PASHR,CPD,ANT,f1,f2,f3,m4,f5\*cc

where Table 6.91 outlines the response format.

**Table 6.91:** CPD,ANT Message Structure

Field	Description	Range	Units
f1	Antenna height (measured from the point to the antenna edge). (Survey mark to edge of antenna)	0 - 6.4000	meter
f2	Antenna radius	0 - 6.4000	meter
f3	Vertical offset (phase center to ground plane)	0 - 99.9999	meter
m4	Always 0	0	
f5	Always 0	0	
cc	checksum		

Example:\$PASHQ,CPD,ANT

\$PASHR,CPD,ANT,01.0242,0.2000,01.0000,0,0\*6E

**BAS: Base Mode**

**\$PASHQ,CPD,BAS**

STATUS:  
RST\_TIME:000000 FIX\_TIME:000000  
ROV\_SV:  
BAS\_SV:  
BASE\_POSITION:NO  
BASE\_DELTA:NO  
SETUP:  
MODE:BAS PORT:B SYS:MIX ELM:09  
FST:ON FST\_RATE:02 AFP:99.0 MAXAGE:30

## DLK: Data Link Status

### \$PASHQ,CPD,DLK,c

This command queries the data link status message, where c is the optional output port. If the port is not specified, the message is output to the port from which this command was received

Example: Query the data link status message to port A.

\$PASHQ,CPD,DLK,A

### \$PASHR,CPD,DLK

This response message is different for base and rover receiver.

The response message is in the form:

\$PASHR,CPD,DLK,s1,d1,d2,n(d3c1),s3,s4,d4,d5,d6,c1\*cc

where Table 6.92 outlines the response format.

**Table 6.92:** CPD,DLK Message Structure

Field	Description	Range	Unit
s1	receiver CPD mode	'BAS', 'ROV', 'OFF'	n/a
	The remainder of the message is only available when receiver is not in 'OFF' mode		
d1	BPS message warning flag	bit1 - set if base station antenna parameters are all zeros bit0 - set if the base station coordinates are not entered	
d2	Number of satellites represented in current RTCM messages	0 - 24	n/a
n	Number of Satellites		n/a
d3c1	Satellite PRN number and warnings. Satellite PRN Warning field description: + - no warnings C - warning in L1 measurements	1-56  '+' 'C'	n/a
s3	Reserved		n/a

**Table 6.92:** CPD,DLK Message Structure (continued)

Field	Description	Range	Unit
	The following message is only available if the receiver is in ROV mode		n/a
s4	Reserved		n/a
d4	BPS message age (999 if no base position received)		sec
d5	percentage of good RTCM message reception		%
d6	the correction message age		ms
c1	the communication port status: '+' data is in the communication port '-' no data in the communication port	‘+’, ‘-’	
*cc	Checksum		

The following examples will illustrate the difference between the \$PASHR,DLK response message from a Rover station receiver and from a base station receiver.

From the Rover station:

```
$PASHR,CPD,DLK,ROV,10,9,22+,21+,17+,06+,03+,54+,48+,41+,38+,????,??
??,053,100,00500,+*37
```

where Table 6.93 outlines the response format.

**Table 6.93:** CPD,DLK Response Message Example - Rover

Field	Significance
ROV	Receiver CPD mode = rover
10	BPS warning flag - base station antenna parameters are all zeros
9	Number of satellites in current DBEN message = 10
22+	Satellite 22, warning = none
21+	Satellite 21, warning = none
17+	Satellite 17, warning = none
06+	Satellite 06, warning = none

**Table 6.93:** CPD,DLK Response Message Example - Rover (continued)

Field	Significance
03+	Satellite 03, warning = none
54+	Satellite 54, warning = none
48+	Satellite 48, warning = none
41+	Satellite 41, warning = none
38+	Satellite 38, warning = none
????	Reserved
????	Reserved
053	age of base coordinates reception
100.00	Percentage of good correction message reception
00500	correction message age in millisecond
+	Data is in the communication port
*37	checksum

From the Base station:

\$PASHR,CPD,DLK,BAS,02,09,02+,03+,10+,18+,19C,34+,44+,48+,52+????\*  
12

where Table 6.94 outlines the response format.

**Table 6.94:** CPD,DLK Response Message Example - Base Station

Field	Significance
BAS	Receiver CPD mode = base
02	BPS warning flag - base station antenna parameters are all zeros
05	Number of satellites in current correction message = 5
02+	Satellite 02, warning = none
03C	Satellite 03, warning - L1 measurement warning
10+	Satellite 10, warning = none
18+	Satellite 18, warning = none
19C	Satellite 19, warning = L1 measurement warning

**Table 6.94:** CPD,DLK Response Message Example - Base Station (continued)

Field	Significance
34+	Satellite 34, warning = none
44+	Satellite 44, warning = none
48+	Satellite 48, warning = none
52+	Satellite 52, warning = none
*12	checksum

### **FST: Fast CPD Mode**

#### **\$PASHS,CPD,FST,s**

Enables/disables fast CPD mode, where s is either ON or OFF. If this mode is set to ON, the rover receiver provides a fast CPD position solution. This command is relevant for ROVER receiver only. The default is ON.

Fast CPD ON means faster update rates, lower latency (typically 50-100 ms), and lower accuracy (typically about 2 cm horizontal 95% (i.e. 2RMS) confidence accuracy).

Fast CPD OFF means lower update rates limited to the rate at which corrections are received from the base; Position latency is approximately equal to the interval between position updates plus a delta; Accuracy is higher (typically about 1 cm horizontal 95% (i.e. 2RMS confidence accuracy).

Example: Turn fast CPD OFF

\$PASHS,CPD,FST,OFF<Enter>

## INF: CPD Information

### \$PASHQ,CPD,INF,c

This command queries the INF message where c is the optional output port. This message contains base and rover satellite status information.

Example: Query the CPD satellite information message to the current port.

\$PASHQ,CPD,INF<Enter>

### \$PASHR,CPD,INF

The response message is in the form:

\$PASHR,CPD,INF,s1,d1,n(d2,c1),d3,m(d4,c2),d5,d6,d7\*cc

where Table 6.95 outlines the response format.

**Table 6.95:** INF Message Structure

Field	Description	Range	Units
s1	CPD mode	OFF, BAS, ROV	
d1	Number of satellites in base station. This determines how many fields to be followed.	0 - 24	
n	Number of satellites in the base receiver.		
d2	Satellite PRN for the satellites in base receiver	1-56	
c1	Warning field description: + - no warnings C - warning in L1 measurements	'+' 'C'	
...	repeats for other satellites in base station		
d3	Number of satellites in the rover station. This determines the number of fields to follow.	0-24	
m	Number of satellites in the rover receiver.		
d4	Satellite PRN for the satellites in the rover receiver	1-56	
c2	Warning field description: + - no warnings C - warning in L1 measurements	'+' 'C'	
...	repeats for other satellites in rover station		
d5	Last base coordinates message time		sec

**Table 6.95:** INF Message Structure (continued)

Field	Description	Range	Units
d6	Last correction message time		ms
d7	Always 0		
*cc	Checksum		

Typical Response:

\$PASHR,CPD,INF,ROV,12,01+,26+,23+,22+,21+,17+,06+,03+,54+,48+,  
41+,38+,12,01+,26+,22+,23+,21+,17+,06+,03+,54+,41+,38+,48+,

## KPI: Initialization Time Reduction

This command provides G12E/GG-RTK users with means to minimize their initialization periods and also means to recover RTK operation quickly and conveniently during a survey using a known point or vector.

### **\$PASHS,KPI,x1,c1,x2,c2,x3,s1,s2,s3**

This command enters known coordinates of antenna phase center:

x1 = WGS84 Latitude in degrees and decimal minutes; ddmm.mmmmmmm (0-8959.9999999)

c1 = Direction of latitude; N=North, S=South ('N', 'S')

x2 = WGS84 Longitude in degrees and decimal minutes; dddmm.mmmmmmm (0-17959.9999999)

c2 = Direction of longitude; E=East, W=West ('E', 'W')

x3 = WGS84 ellipsoidal height in meters; mmmm.mmm (-9999.999 - +9999.999)

s1&s2&s3 = a priori expected error estimate (1 s) of entered coordinates (meters) - range (0.01 - 100 meters)

Notes:

- a) Empty 'x' fields are interpreted as having no information about the respective coordinate; i.e. 1D, 2D and 3D initializations are permitted;
- b) Empty (or missing) 's' fields are interpreted as 0.01 m estimate;
- c) 100m 's' field is equivalent to no a priori information for the respective coordinate.
- d) The KPI command is not accepted (NAK'd) by the receiver if:
  - i. receiver is not in rover RTK mode;
  - ii. receiver has no accurate base coordinates (RTCM-3,22 or entered on rover);
  - iii. receiver has no computed position (at least stand alone);
  - iv. entered and computed position differ by more than 500 meters.
- e) The KPI command is accepted regardless and independent of the AFP setting; i.e. float RTK initialization is possible
- f) Once the KPI command is issued, the rover RTK receiver is reset as if \$PASHS,CPD,RST was issued.
- g) A second issue of KPI overrides the previous KPI settings.
- h) All resets (INI; RST; CPD,RST) reset and clear KPI information.

- i) KPI setting is used only ONCE by the RTK engine. Once initialized by the current KPI, KPI information is cleared and RTK operates normally thereafter; i.e. if RTK is then reset (for any reason), reinitialization will take place using normal OTF techniques. KPI command will need to be reissued if required.
- j) KPI setting is used only ONCE by the RTK engine. Therefore, it is acceptable to move the rover antenna in only a few seconds from receiving the acknowledgement (ACK) of the KPI command, regardless of the status of the FIX flag.
- k) The RTK engine may reset if the input KPI coordinates are in error (e.g. error estimate entered in KPI is significantly smaller than actual error).

**MAX: Maximum Age**

**\$PASHS,CPD,MAX,d**

Sets the maximum age in seconds of RTK base station data above which it will not be used by the rover to compute an RTK position, where d is any number between 1 and 30. The default is 30 seconds. This command is only used by the remote receiver in RTK mode.

Example: Set maximum age of RTK base station data to 20 seconds.

```
$PASHS,CPD,MAX,20 <enter>
319873000,319893000,00*0B
```

**MOD: CPD Mode**

**\$PASHS,CPD,MOD,s**

This command selects the CPD mode, where s is a string that defines the mode.  
where Table 6.96 defines the response format.

**Table 6.96:** CPD,MOD Parameter Table

Parameter	Character String	Description
s	ROV	CPD ROVER mode
	OFF	Disable CPD mode

Example: Set receiver to Rover CPD mode

```
$PASHS,CPD,MOD,ROV
```

**\$PASHQ,CPD,MOD,c**

Queries for the current CPD setting, where c is the optional output port. This message contains information about current CPD mode. If the port is not specified, the message is output to the port from which this command was received.

Example: Query the receiver for CPD mode information.

```
$PASHQ,CPD,MOD
```

**\$PASHR,CPD,MOD**

The response is in the form:

```
$PASHR,CPD,MOD,s1,s2,c1,f1,d1,d2,s3,s4,f2,s5,d3,s6,f3*cc
```

where Table 6.97 outlines the response format.

**Table 6.97: CPD,MOD Message Structure**

Field	Description	Range
s1	Mode	'BAS', 'ROV', 'OFF'
s2	Fast CPD mode	'FST', 'OFF'
c1	Port	'A', 'B', ...
f1	CPD update period	0.2 - 1.0
d1	Reserved	n/a
d2	Reserved	n/a
s3	Correction type	'RTC'
s4	Reserved	n/a
f2	Reserved	n/a
s5	Which base position to use (entered/received)	'ETD', 'XIT'
d3	Reserved	n/a
s6	Which solution to output	'CPD'
f3	Ambiguity fixing confidence level	0 (always float), 95.0, 99.0, 99.9

Example: Response message with CPD mode information.

\$PASHR,CPD,MOD,ROV,FST,B,0.50,,,RTC,,,XIT,CPD,99.0

## POS: Set Base Position

### **\$PASHS,CPD,POS,m1,c1,m2,c2,f1**

This command sets the base point position from the rover receiver where Table 6.98 defines the parameters.

**Table 6.98:** CPD,POS Parameter Table

Parameter	Description	Range
m1	Latitude of base position in degrees and decimal minutes (ddmm.mmmmmmm).	0-8959.9999999
c1	Direction of latitude N = North, S = South	'S', 'N'
m2	Longitude of base position in degrees and decimal minutes (ddmm.mmmmmmm)	0-17959.9999999
c2	Direction of longitude E = East, W = West	'E', 'W'
f1	Reference point altitude (always have + or - sign) (in meters)	±9999.9999

Only implemented in Rovers, to allow the user to Enter the base station position at the rover. This position is only used if the command \$PASHS,CPD,UBP,0 is sent.

If UBP is entered without a CPD,POS information having been entered ahead of time, the RTK engine will not send out a position. A base position MUST be entered before UBP can be used.

Example: Set base position from the rover receiver

\$PASHS,CPD,POS,3722.2432438,N,12350.5438423,W,+34.5672

### **\$PASHQ,CPD,POS,c**

This command queries the base position from the rover, where c is the optional serial port. If the port is not specified, the message is output to the port from which this command was received.

Example: Query base position set at the rover receiver

\$PASHQ,CPD,POS

### **\$PASHR,CPD,POS**

The response message is in the form:

\$PASHR,CPD,POS,m1,c1,m2,c2,f1

The description of these parameters can be found in Table 6.98.

Example:   Query the base position from the rover receiver  
          \$PASHQ,CPD,POS  
          \$PASHR,CPD,POS,3722.2432438,N,12350.5438423,W,+34.5672\*53



If UBP is 0, the returned position will be the base station position entered at the rover. If UBP is 1, the returned position will be the base station position from Type 3 or 22 messages received from the base station. If no base station position has been received or entered, an empty response will be returned.

### RST: Reset CPD

#### \$PASHS,CPD,RST

Reset the CPD processing. This command is relevant in remote CPD mode only.

Example: \$PASHS,CPD,RST<Enter>

### UBP: Use Base Position

#### \$PASHS,CPD,UBP,d1

This command selects the base position to use in ROVER mode, where d1 indicates the desired base position. This command is relevant for ROVER mode only. Default is 1.

Table 6.99 outlines the parameter structure.

**Table 6.99:** CPD,UBP Parameter Table

Parameter	Description	Range	Default
d1	Base position to use: 0 = Use entered base position 1 = Use transmitted base position	0,1	1

Example:   Use entered base station position.

\$PASHS,CPD,UBP,0<Enter>



If the user sends \$PASHS,CPD,UBP,0 then Message types 3 and 22 will be ignored. The user must then Enter all base station antenna parameters (POS and ANT) at the rover, using \$PASHS,CPD,POS and \$PASHS,CPD,ANT.



If UBP is entered without prior entering of CPD,POS information, the receiver will return “NAK” message. A base position MUST be entered before UBP can be used.

# Projection / Grid Commands

---

## UTM: Universal Transverse Mercator

(GG24E and GG24 Sensor with Extended Memory Only)

The following commands:

- \$PASHS,NME,UTM,
- \$PASHQ,UTM,
- \$PASHR,UTM,
- \$PASHS,FZN, and
- \$PASHS,FUM

have been implemented in the GG24E (Eurocard) and GG24-E2 receiver boards to be compatible with Magellan Micro-Z technology.

## NME,UTM

(GG24E and GG24 Sensor with Extended Memory Only)

### \$PASHS,NME,UTM,x,s

This command enables/disables the \$PASHS,UTM message on port x, where x is either A, B, C, or D and s is ON or OFF. If no position is being computed, this message is not output.

### \$PASHQ,UTM,x

This is the associated query message where x is the optional output serial port. The UTM message is not output unless position is being computed.

Example: Send UTM message to the current port - \$PASHQ,UTM

Format: \$PASHR,UTM

The response message is in the form:

\$PASHR,UTM,m1,m2,f1,f2,d1,d2,f3,f4,M,f5,M,d5,s,\*cc

Parameters	Description	Range
m1	UTC of position in hours, minutes, and decimal seconds (hhmmss.ss)	0 - 235959.50
m2	Zone number for coordinates Zone letter for coordinates (N = north, S = south)	1-60, 99 'N', 'S'
f1	East UTM coordinate (meters)	±9999999.99
f2	North UTM coordinate (meters)	±9999999.99

d1	Position indicator. 2: Autonomous 3: RTCM differential 4: Carrier Phase Differential (CPD) float solution 5: Carrier Phase Differential (CPD) fixed solution	2, 3, 4, 5
d2	Number of GPS satellites being used	3 - 12
f3	Horizontal dilution of precision (HDOP)	999.9
f4	Antenna height in meters	±99999.999
M	Antenna height units (M = meters)	M
f5	Geoidal separation in meters	±999.999
M	Geoidal separation units (M = meters)	M
d5	Age of differential corrections	0 - 999
s	Differential reference station ID	4 char string
cc	Checksum	

Example:

Query: \$PASHQ,UTM

Response: \$PASHR,UTM,015454.00,10S,+588757.62,  
+4136720.05,2,04,03.8,+00012.123,M,-031.711,M,14,1010\*1A

Item	Significance
015454.00	UTC time
10S	UTM zone
+588757.62	UTM easting coordinate
+4136720.05	UTM northing coordinate
2	RTCM differential position
04	Number of SVs used to compute position
03.8	HDOP
+00012.123	height above ellipsoid
M	height units (M = meters)
-031.711	geoidal separation
M	geoidal separation units (M = meters)
014	Age of corrections
1010	Differential Station ID
cc	checksum

## FZN

(GG24E and GG24 Sensor With Extended Memory Only)

### \$PASHS,FZN,d

This command will set the UTM zone that will be held fixed, where d is the UTM zone and ranges from 1-60.

This command is mostly used when the user is near a UTM boundary and outputting position in UTM coordinates and does not want the UTM coordinates to suddenly shift from one zone to another if the boundary is crossed. This command is used in conjunction with \$PASHS,FUM.

Example: Select UTM zone 10 to be fixed - \$PASHS,FZN,10 <enter>

## **FUM**

(GG24E and GG24 Sensor With Extended Memory Only)

### **\$PASHS,FUM,c**

This command will enable/disable the fixing of the UTM zone, where c is either Y (enable) or N (disable). The default is N. This command is mostly used when the user is near a UTM boundary and outputting position in UTM coordinates and does not want the UTM coordinates to suddenly shift from one zone to another if the boundary is crossed. Use the \$PASHS,FZM command to set the zone that will be fixed.

Example: Select UTM zone to be fixed - \$PASHS,FUM,Y <enter>

## **Grids: Predefined and User-defined**

(GG24E and GG24 Sensor With Extended Memory Only)

The following commands:

- \$PASHS,UDG,
- \$PASHS,GRD,
- \$PASHS,NME,GDC,
- \$PASHQ,GDC, and
- \$PASHR,GDC

have been implemented in the GG24E (Eurocard) and GG24-E2 board to be compatible with Magellan Micro-Z technology.

## **UDG**

(GG24E and GG24 Sensor With Extended Memory Only)

### **\$PASHS,UDG**

Sets the user-defined datum-to-grid transformation parameters.

Format: \$PASHS,UDG,s1,d2,f3,f4,f5,f6,f7,f8,f9,f10,f11,f12,f13

The number of parameters depends on the map projection type selected and must be indicated by the user as parameter d2. The parameters description for each map projection type is as follows:

#### UDG Structure for Equatorial Mercator

Parameters	Description	Range	Units
s1	Map projection type.	EMER	n/a
D2	Number of parameters for the selected projection	3	n/a
f3	Longitude for the Central Meridian	±1800000.000	dddmss.sss
f4	False northing	±10,000,000	meters
f5	False easting	±10,000,000	meters

#### UDG Structure for Transverse Mercator

Parameters	Description	Range	Units
s1	Map projection type.	TM83	n/a
d2	Number of parameters for the selected projection	5 or 7 (last 2 optional)	n/a
f3	Longitude for the Central Meridian	±1800000.000 0	dddmss.ssss
F4	Scale factor at Central Meridian	0.5 - 1.5	n/a
F5	Latitude of the grid origin of the projection	±900000.0000	ddmmss.ssss
F6	False Easting	±10,000,000	meters
F7	False Northing	±10,000,000	meters
F8	Zone width (default is 6 deg)	3 or 6	degrees
F9	Zone number at 0 deg longitude (default is 31)	1-60	n/a

#### UDG Structure for Oblique Mercator

Parameters	Description	Range	Units
s1	Map projection type.	OM83	n/a
d2	Number of parameters for the selected projection	6	n/a
f3	Azimuth of the skew axis	±1800000.0000	dddmss.sss s
f4	Scale factor at center of projection	0.5 - 1.5	n/a
f5	Longitude of the grid origin of the projection	±1800000.000	dddmss.sss
f6	Latitude of the grid origin of the projection	±900000.000	ddmmss.sss
f7	False Easting	±10,000,000	meters
f8	False Northing	±10,000,000	meters

#### UDG Structure for Stereographic (polar and oblique)

Parameters	Description	Range	Units
s1	Map projection type.	STER	n/a

d2	Number of parameters for the selected projection	5	n/a
f3	Latitude of the grid origin of the projection	±900000.000	ddmmss.sss
f4	Longitude of the grid origin of the projection	±1800000.000	dddmmss.sss
f5	Scale factor at center of projection	0.5 - 1.5	n/a
f6	False Easting	±10,000,000	meters
f7	False Northing	±10,000,000	meters

**UDG Structure for Lambert Conic Conformal for SPC83 (2 standard parallels form)**

Parameters	Description	Range	Units
S1	Map projection type.	LC83	n/a
D2	Number of parameters for the selected projection	6	n/a
F3	Latitude of Southern Standard parallel	±900000.0000	ddmmss.ssss
F4	Latitude of Northern Standard parallel	±900000.0000	ddmmss.ssss
F5	Longitude of the grid origin of the projection	±1800000.0000	dddmmss.ssss
F6	Latitude of the grid origin of the projection	±900000.0000	ddmmss.ssss
F7	False Easting	±10,000,000	meters
F8	False Northing	±10,000,000	meters

**The following SPC27 map projections must be used in conjunction with the Clark 1866 ellipsoid (a = 6378206.4 m and 1/f = 294.978698200) and the following datum (Tx = -8.0, Ty = 160.0, Tz = 176.0, rotation and scale = 0) which is included in the preset datum list as NAC.**

NOTE : Values are derived from tables which can be obtained from various sources, including NGS Publication 62-4 (1986 Reprint) which also includes discussion and definitions of applied formulas and parameters.

**UDG Structure for Lambert Conic Conformal for SPC27**

Parameters	Description	Range/ Name in table
s1	Map projection type.	LC27
d2	Number of parameters for the selected projection	11
f3	False Easting or x coordinate of central meridian	L1
f4	Longitude of Central meridian	L2
f5	Map radius of central parallel (Φ <sub>0</sub> )	L3
f6	Map radius of lowest parallel of the projection table plus y value on central meridian at this parallel (y = 0 in most cases)	L4
f7	Scale (m) of the projection along the central parallel (Φ <sub>0</sub> )	L5
f8	Sine of latitude of central parallel (Φ <sub>0</sub> ) computed from basic equations for Lambert projection with 2 standard parallel.	L6
f9	Degree, minute portion of the rectifying latitude ω <sub>0</sub> for Φ <sub>0</sub> , latitude of origin	L7
f10	Remainder of ω <sub>0</sub>	L8
f11	$1/6 * R_o * N_o * 10^6$	L9
f12	$\tan \Phi_o / 24 * (R_o * N_o)^{3/2} * 10^{24}$	L10
f13	$[(5 + 3 * \tan^2 \Phi_o) / 120 * R_o * N_o^3] * 10^{32}$	L11

$f9 : \omega = \Phi - [1052.893882 - (4.483344 - 0.002352 * \cos^2 \Phi) * \cos^2 \Phi] * \sin \Phi * \cos \Phi$   
 $f11/f12/f13 : R_o = a * (1 - e^2) / (1 - e^2 * \sin^2 \Phi_o)^{3/2}$  : radius of curvature in meridian plane at  $\Phi_o$   
 $No = a / (1 - e^2 * \sin^2 \Phi_o)^{1/2}$  : radius of curvature in prime vertical at  $\Phi_o$

#### UDG Structure for Transverse Mercator for SPC27

Parameters	Description	Range/Name in table
s1	Map projection type.	TM27
d2	Number of parameters for the selected projection	6
f3	False Easting or x coordinate of central meridian	T1
f4	Longitude of Central meridian	T2
f5	Degree, minute portion of the rectifying latitude $\omega_o$ for $\Phi_o$ , latitude of origin	T3
f6	Remainder of $\omega_o$	T4
f7	Scale along the central meridian	T5
f8	$(1/6 * R_m * N_m * T5^2) * 10^{15}$	T6

$R_m$  = radius of curvature in meridian plane  
 $N_m$  = radius of curvature in prime vertical  
 Both calculated for the mean latitude of the area in the zone.

#### UDG Structure for Transverse Mercator for SPC27 for Alaska (zone 2 through 9)

Parameters	Description	Range/ Name in table
s1	Map projection type.	TMA7
d2	Number of parameters for the selected projection	2
f3	False Easting or x coordinate of central meridian	C
f4	Longitude of Central meridian	CM

Example: Set datum to grid transformation parameters for Lambert Conformal CA-zone 4:  
 \$PASHS,UDG,LC83,6,360000.0,371500.0,-1190000.0,352000.0,2000000,500000 <enter>

#### \$PASHQ,UDG,c

Query grid transformation parameters, where c is the optional output port and is not required to direct the response message to the current communication port.

Example: \$PASHQ,UDG,LC83,360000,371500,-1190000,352000,2000000,  
 500000\*2B

#### \$PASHR,UDG

The UDG response is in the format.

\$PASHR,UDG,s1,d2,f3,f4,f5,f6,f7,f8,f9,f10,f11,f12,f13\*cc<CR><LF>

Where the fields (and the number of them) are defined in the tables above and depend on the type of map projection selected.

## **GRD**

(GG24E and GG24 Sensor With Extended Memory Only)

### **\$PASHS,GRD,s**

Enable/Disable the usage of the user-defined datum-to-grid transformation where s is a 3-character string:

NON: (default) disable datum to grid transformation.

UDG : enable user-defined datum-to-grid transformation.

Parameters for user defined datum are entered with the **\$PASHS,UDG** command (see above).

Grid coordinates are output in the **\$PASHR,GDC** message (see below)

Example: Enable user defined datum to grid transformation.

**\$PASHS,GRD,UDG**<enter>

### **\$PASHQ,GRD,c**

This is the associated query command where c is the optional output port.

Example: Query the GRD status to port C.

**\$PASHQ,GRD,C**<enter>

Format: **\$PASHR,GRD**

The response message is in the form:

**\$PASHR,GRD,s\*cc**<CR><LF>

where s is the 3 character string that denotes the current datum to grid setting (NON or UDG).

Example: **\$PASHQ,GRD,UDG\*5C**

## **GDC**

(GG24E and GG24 Sensor With Extended Memory Only)

### **\$PASHS,NME,GDC,c,s**

This command enables/disables the \$PASHR,GDC message on port c, where c is either A, B, C, or D and s is ON or OFF.

If no position is being computed, this message is not output.

### **\$PASHQ,GDC,c**

To query grid coordinates, where c is the optional output serial port. The message is not output unless position is being computed.

Format: \$PASHR,GDC

The response message is in the form:

\$PASHR,GDC,m1,s2,f3,f4,d5,d6,f7,f8,M,f9,M,d10,s11,s12\*cc<CR><LF>

Parameters	Description	Range
m1	UTC of position in hours, minutes, and decimal seconds (hhmmss.ss)	0 - 235959.90
s2	Map projection type	EMER/ TM83/ OM83/ LC83/ STER/TM27/ TMA7/ LC27
f3	East (X) User Grid coordinate (meters)	±9999999.99
f4	North (Y) User Grid coordinate (meters)	±9999999.99
d5	Position indicator. 1: Raw position 2: RTCM differential, or CPD float solution 3: Carrier Phase differential (CPD) fixed	1, 2, 3
d6	Number of GPS satellites being used	3 - 12
f7	Horizontal dilution of precision (HDOP)	999.9
f8	Altitude in meters	±99999.999
M	Altitude units (M = meters)	M
f9	Geoidal separation in meters w.r.t. selected datum	±999.999
M	Geoidal separation units (M = meters)	M
d10	Age of differential corrections	0 - 999
s11	Differential reference station ID	4 char string
s12	Reference Datum for the map projection	3 char string
cc	Checksum	

Example:

\$PASHR,GDC,015454.00,EMER,588757.623,4136720.056,2,04,03.8,00012.123,M,  
-031.711,M,14,1010,W84\*2A

### **Typical GDC Response Message**

Item	Significance
------	--------------

015454.00	UTC time
EMER	Equatorial Mercator map projection
588757.623	User Grid easting (X) coordinate
4136720.056	User Grid northing (Y) coordinate
2	RTCM differential position
04	Number of SVs used to compute position
03.8	HDOP
00012.123	Altitude
M	Altitude units (M = meters)
-031.711	geoidal separation w.r.t. selected datum
M	geoidal separation units (M = meters)
014	age of corrections
1010	Differential Station ID
W84	Reference datum is WGS 84
2A	checksum

---

# GPS and GLONASS Concepts

When the Global Positioning System (GPS) became operational in 1993, it promised to provide a new utility as pervasive and as useful as the telephone. However, GPS has certain limitations that become apparent in certain applications. These limitations are dramatically reduced by the augmentation of GPS with the Russian GLObal Navigation Satellite System (GLONASS). The Ashtech GG24™ GPS+GLONASS receiver uses the 13 healthy GLONASS satellites in addition to the 26 healthy GPS satellites, providing a system even more reliable and more accurate than either system alone.

Ashtech's GG24 is the world's first fully integrated GPS+GLONASS receiver for easy integration with electronic displays, vehicle tracking, flight management survey, and mapping systems.

## Background

---

There are three primary benefits of adding GLONASS to GPS; availability, integrity and accuracy.

### Availability

A navigation system is “available” when it produces valid position fixes. The availability of a valid and accurate GPS position fix depends strongly on the visibility of enough satellites. A GPS receiver needs to “see” at least four satellites to calculate latitude, longitude and altitude. This is easy in a perfect environment. With 26 GPS satellites orbiting the earth, there are usually seven satellites visible 10 degrees or more above the horizon. But if there is a mountain, building, tree, or other obstruction nearby, the number of visible satellites may fall to four, three or fewer, with the possibility that the GPS receiver has too few satellites to compute position.

### Integrity

A navigation system has “integrity” when it can warn the user that the position fix is in error. It's even better if the system can remove the error and provide a correct solution. A GPS receiver must use five satellites (and an integrity algorithm) to detect a problem. To remove the satellite that is causing the problem, a sixth satellite must be used. With the addition of GLONASS there are twice as many satellites available, and so twice as much chance that an integrity algorithm can operate correctly. The GG24 has built-in Receiver Autonomous Integrity Monitoring (RAIM) to detect and remove faulty GPS or GLONASS satellites.

## Accuracy

Because GLONASS has no Selective Availability (SA), accuracy of autonomous (non-differential) GPS+GLONASS positions are 5-10 times better than GPS-only, and GLONASS autonomous velocity accuracy is more accurate than Differential GPS velocity accuracy.

### Differential Position Accuracy

Because there are more satellites in view, the DOPs (Dilution Of Precision) typically decrease by 20%-50%, and differential accuracy improves by a similar amount. In fact, there is no limit to how much the DOPs can change. At times of bad GPS satellite visibility the GPS DOPs may be tens to hundreds of times worse than the combined GPS+GLONASS DOPs, at these times the GPS+GLONASS differential accuracy will be tens to hundreds of times better than GPS differential accuracy.

Also, because SA causes GPS errors to change constantly and rapidly, Differential GPS corrections must be sent every few seconds. GLONASS errors are natural errors (such as orbit errors) and these change very slowly, so Differential GLONASS corrections need to be sent much less frequently than those for DGPS (Figure A.1)

### Basic Concepts

GPS and GLONASS both work on the principle of triangulation: if you know your distance from several known points, then you can compute your position. The known points for both systems are the satellites. The distance to a satellite is measured by timing how long the satellite signal takes to reach you; multiply this time by the speed of light and you have the distance.

The GPS satellite clocks are all synchronized. Similarly, the GLONASS satellites are all synchronized with each other, but GPS time is not synchronized with GLONASS time. Thus, the receiver clock has two errors: the error with GPS time, and the error with GLONASS time. These two clock errors, plus latitude, longitude, and altitude, give 5 unknowns, which are solved by having 5 satellites (or more) in view.

The GG24 fixes the altitude, if the altitude of the antenna is known; this removes one unknown, and only four satellites are needed. The GG24 also determines the offset between GPS and GLONASS time. You can command the receiver to fix the time offset; this eliminates another unknown, thus only three satellites are needed for a 2D position, or four for a 3D position. Any combination of GPS & GLONASS satellites work, the GG24 seamlessly integrates the two systems into one 48-satellite constellation.

# Signal Structure

GPS and GLONASS have similar signal structures.

- Both transmit on two frequency bands, L1 and L2
- Both have PRN codes in the L1 frequency band, known as Coarse/Acquisition (C/A) code for GPS, and standard (S) code for GLONASS
- Both transmit almanac and ephemerides at a data rate of 50 bps. The GG24 tracks the L1 C/A and S codes from both GPS and GLONASS
- Both have PRN codes that repeat every one millisecond (C/A for GPS and S for GLONASS)

## Differences in Signal Structure

The difference between GPS and GLONASS signal structures is that GPS uses the same frequencies but different PRN codes for each satellite (CDMA, Code Division Multiple Access). GLONASS uses the same PRN codes for each satellite, but different frequencies within the L1 and L2 bands (FDMA, Frequency Division Multiple Access). A PRN code identifies each GPS satellite. GPS PRN codes are numbered from 1 through 32, 24 of which are used for the full constellation. GLONASS satellites are identified by their orbital slot number. There are 24 orbital slots, numbered sequentially 1 through 24. The satellite takes the slot number it occupies.

## Differences in Implementation

The major difference in implementation between GPS and GLONASS is that GPS has SA on both C/A and P codes. The codes are deliberately degraded by dithering the transmit time. GLONASS has no deliberate degradation. GPS encrypts the P code on both L1 and L2; the encrypted code is secret, this is known as AS (Anti-Spoofing). GLONASS has no encryption.

GPS and GLONASS satellites transmit orbit information about the satellites in almanacs. Each satellite transmits an almanac which tells the receiver which satellites are operating and where they are. This is how the receiver knows which satellites are above the horizon. GPS satellites are identified in their almanac by their PRN numbers, while GLONASS satellites are identified by their orbital slot (ID) numbers. Each slot number has an associated carrier number in the almanac which tells the GG24 receiver which frequency the satellite is on.

Each GPS satellite transmits at an L1 frequency of 1575.42 MHz, and at an L2 frequency of 1227.60 MHz. Each GLONASS satellite transmits at an L1 frequency of  $1602 + K(9/16 \text{ MHz})$ , and at an L2 frequency of  $1246 + K(7/16 \text{ MHz})$ . K is the carrier number given in the almanac for each satellite. Currently K is in the range 1 through 24. The GG24 is an L1-only receiver.

Changes are planned for the GLONASS frequency plan:

- **Stage 1**—Present to 1998 -The carrier numbers will be assigned in such a way as to avoid the frequencies in the band 1610.6-1613.8 MHz used in Radio Astronomy. This means the carrier number assignments K= 16, 17, 18, 19, 20 will not be used. To compensate for the lost frequencies, identical frequencies will be used for two satellites on opposite sides of the earth.
- **Stage 2**—1998 to 2005 - The next Generation of GLONASS-M satellites will use the carrier number assignments 1 through 12.
- **Stage 3**—beyond 2005 - The GLONASS-M satellites will use the carrier number assignments (-7 through +4). Carriers 5 and 6 will be used for interaction with the ground control segment.

Any or all of these changes in frequency will have no effect on the GG24 GPS+GLONASS receiver, because the capability to handle any of the carrier number assignments is built in, and the satellite almanac always tells the receiver which assignment to use for each satellite.

The satellite ephemerides are like a high-precision almanac, they tell the receiver precisely where the satellite is. Each satellite (both GPS and GLONASS) transmits its own ephemerides. The GPS satellites provide their positions in terms of the WGS- 84 (World Geodetic System, 1984) while the GLONASS satellites provide positions in the PZ-90 reference system (sometimes called PE-90 Parameters of the Earth, 1990 or E90). The GG24 translates the two systems into a single user-selectable reference system. The default is WGS- 84, and by default, the GG24 converts GLONASS satellite positions into WGS-84 coordinates and computes positions in WGS-84 coordinates.

## Satellite orbits

---

The orbits of GPS and GLONASS are similar. GPS satellites orbit in 6 planes, 4 satellites per plane. GLONASS uses 3 planes, 8 satellites per plane. The GLONASS inclination is slightly higher (64.8°) than GPS (55°). The orbits of both systems are circular, and with similar radii.

## Geoid Model

---

The GG24 uses the OSU-91 geoid model. Grid size is 5 x 5 degrees, and the interpolation technique is similar to the GPS ICS algorithm. Expected accuracy when the actual position is on a grid point is 0.5 to 0.6 meters, in accordance with the OSU-91 specification. Expected accuracy when the actual position is halfway between grid points is better than 8 meters.

## Magnetic Model

The receiver uses the WMM-95 magnetic model. Grid size is 5 x 5 degrees, and the interpolation technique is similar to the GPS ICD algorithm. Expected accuracy depends upon the geomagnetic latitude. The errors are least at the equator, and greatest at the magnetic poles, and equal to 0.5 degrees (RMS) when the actual position is on a grid point. Expected accuracy when the actual position is halfway between grid points is better than 2.5 degrees (RMS). In arctic and antarctic regions, deviations from model values are frequent and persistent.

## Comparison of GPS and GLONASS

Table A.1 compares the operating characteristics of GPS and GLONASS.

**Table A.1:** Comparison of GPS and GLONASS

Parameter	GPS	GLONASS
<b>SIGNAL STRUCTURE</b>		
<b>C/A Code (L1)</b>		
Code rate	1.023 MHz	0.511 MHz
Chip length	293 m	587 m
Selective availability	Yes	No
<b>P Code</b>		
Code rate	10.23 MHz	5.11 MHz
Chip length	29.3 m	58.7 m
Selective availability	Yes	No
Encryption (anti-spoofing)	Yes	No
<b>Signal separation</b>	CDMA	FDMA
<b>Carrier frequency</b>	<ul style="list-style-type: none"> <li>1575.42 MHz</li> <li>1227.60 MHz</li> </ul>	<ul style="list-style-type: none"> <li>1602 + Kx9/16 MHz, where K is within the range -7 to +24</li> <li>1246 + Kx7/16 MHz, where K is within the range -7 to +24</li> </ul>
<b>SATELLITES</b>		
Number	24	24
Planes	6	3

**Table A.1: Comparison of GPS and GLONASS (Continued)**

Parameter	GPS	GLONASS
Satellites per plane	4, unevenly spaced	8, evenly spaced
Orbital inclination	55°	64.8°
Orbital radius	26560 km	25510 km
Orbital period	11 hours 58 minutes	11 hours 15 minutes
NAVIGATION MESSAGE		
Duration	12.5 minutes	2.5 minutes
Capacity	37500 bits	7500 bits
Time reference	UTC (US Naval Observatory)	UTC (SU, Russia)
Geodetic datum	WGS-84	PZ-90

## GPS and GLONASS System Time

GPS system time is equal to UTC time + the number of leap seconds added since 1980 (currently 12 seconds). GLONASS system time is equal to UTC time + 3 hours. There is an additional GLONASS time shift relative to GPS time of approximately -28.6 microseconds. Therefore, when UTC time equals 00:00:00.000000, GPS system time equals 00:00:12.000000, and GLONASS system time equals 00:02:59.9999714. In other words, GLONASS system time leads GPS system time by 3 hours minus the number of leap seconds plus the sub-second time shift value, which is currently equal to 2:59:47.9999714 (as of 30 June 1997).

## GPS+GLONASS Standards

Two standards are used widely and successfully for GPS applications. These are

RTCM (Radio Technical Commission for Maritime Services) standard for differential corrections

NMEA (National Marine Electronics Association) standard for reporting position, velocity and satellite data.

Although both these standards were initially for marine use, they have been adopted worldwide for all applications of GPS.

### RTCM SC-104

The RTCM Special Committee 104 (SC-104) has defined differential correction messages that are used worldwide for GPS. The messages that carry the GPS

corrections are message types 1 and 9. Similar messages for GLONASS differential corrections are message types 31, GLONASS equivalent to GPS message type 1, and GLONASS type 34, GLONASS equivalent to GPS message type 9.

Other RTCM messages carry information about reference station parameters, satellite health, etc. These have been defined for both GPS and GLONASS.

Other messages are being developed to improve further the operation of GPS+GLONASS systems in differential mode. A GLONASS-GPS time offset message has been proposed, which allows the reference station to report the time offset between the two systems so that the GPS+GLONASS receiver does not have to calculate it. See \$PASHQ,DUG on page 84 for more information. Table 1.2 lists the RTCM SC-104 messages for GPS and GLONASS, which the GG24 supports, both as a reference station and a rover.

**Table A.2:** RTCM SC-104 Messages for GPS and GLONASS

Parameter	GPS Message Type	GLONASS Message Type
Differential corrections	1	31
Reference station parameters	3	32
Null frame (filler)	6	6
Partial satellite set differential corrections	9	34
Special message	16	36
RTK Uncorrected Carrier Phases	18	19
RTK Uncorrected Pseudoranges	19	19
Extended reference station parameters	22	22

## NMEA 0183

The National Marine Electronics Association Standard NMEA 0183 defines interfacing standards for marine electronic devices. The following messages apply specifically to GPS, and are supported by the GG24.

- GGA—Global positioning system fix data
- GSA—GPS DOP and active satellites
- GRS—GPS range residuals for each satellite

As of January 1997, the NMEA 0183 Standards Committee was in the process of finalizing the definition of messages for GLONASS information. When these messages are finalized, Ashtech will comply with NMEA GLONASS standards in the GG24. For more information on NMEA messages and decisions, see the NMEA web page, <http://www.coastalnet.com/nmea/>.

# Navigation Modes (Availability & Accuracy)

The GG24 has 12 parallel channels for tracking GPS satellites, and 12 parallel channels for tracking GLONASS satellites. With this capability, the GG24 always uses the best available constellation to provide the most accurate position. The greatest accuracy is obtained when differential corrections are available for both GPS and GLONASS satellites. The GG24 can be used as a reference station to generate RTCM corrections for GPS and GLONASS, and a GG24 can use RTCM corrections for both systems. If differential corrections are available for only one satellite system (either GPS or GLONASS) the GG24 automatically uses only those measurements for which it has corrections. If GG24 has no differential corrections, it automatically uses all available healthy satellites, from both constellations, to compute a position. If one satellite system is shut down or jammed, or if satellites become unhealthy (generating incorrect data), the GG24 automatically uses the satellites which are operating correctly based on the signal-to-noise ratio.

Table A.3 lists the expected accuracies in various operating configurations.


**Table A.3:** Accuracy as a Function of Constellation

Available Constellation	GG24 Mode	Typical (50%) Accuracy* at Radio Data Rate of 1200 bps	95% Accuracy at Radio Data Rate of 1200 bps
Differential GPS & Differential GLONASS	D(GPS+GLONASS)	35 cm	75 cm
GPS & Differential GLONASS	DGLONASS	50 cm	1 m
GLONASS & Differential GPS	DGPS	40 cm	90 cm
GPS & GLONASS	GPS & GLONASS	7 m	16 m
GLONASS	GLONASS	8 m	20 m
GPS	GPS	25 m	100 m

\*Differential GPS accuracy is affected by the radio data rate. If the data rate is slow, SA causes errors to grow while the corrections are being transmitted. Figure A.1 shows actual 95% accuracy measured in tests with DGPS and DGLONASS.

The graph shows how position precision decays as the age of corrections increases. For each particular age, 95% of the position errors sampled were less than or equal to the value on the graph. Approximately 400 positions were sampled for each age.

Test conditions: 10° elevation mask, correction rate: 90 seconds, HDOP less than or equal to 4, number of GLONASS satellites used in position computation greater than or equal to 4.

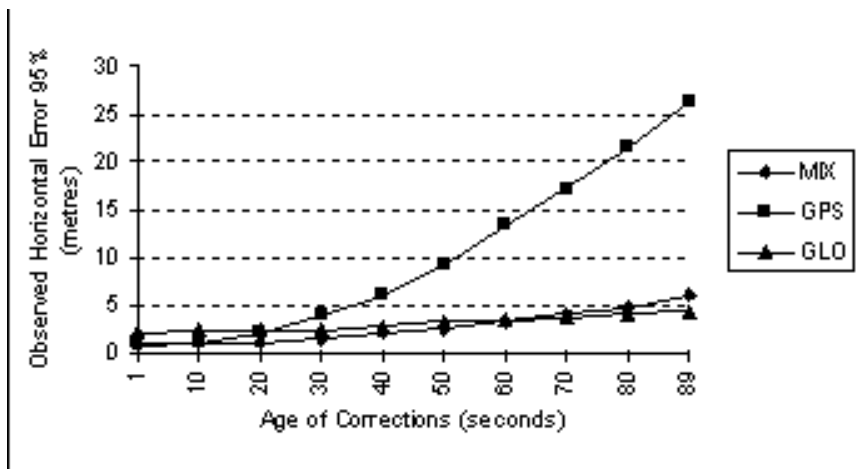

**Figure A.1:** GG24 Code Differential Horizontal Position Decay

When a position is not differentially corrected, SA degrades the position accuracy from the GPS constellation to about 100 metres (2-sigma, 95%). The GLONASS constellation does not implement SA, so position accuracy improves as GLONASS satellites are added to a mixed system. The attained accuracy is proportional to the number of healthy GLONASS satellites above the elevation mask. When the number of healthy GLONASS satellites is fewer than five, accuracy is degraded. The approximate stand-alone position error attainable by a mixed GPS+GLONASS system with an HDOP close to 1 is presented in Table A.4.

**Table A.4:** Approximate Position Error, Mixed GPS+GLONASS

Number of GPS Satellites	Number of GLONASS Satellites	50%	95%
≥0	≥5	~ 7 m	~16 m
≥1	4	~10 m	~20 m
≥2	3	~15 m	~30 m
≥3	2	~20 m	~40 m

**Table A.4:** Approximate Position Error, Mixed GPS+GLONASS (Continued)

Number of GPS Satellites	Number of GLONASS Satellites	50%	95%
$\geq 4$	1	~25 m	~100 m (no improvement over stand-alone GPS)

With the full 24-satellite GLONASS constellation, more than 5 GLONASS satellites are in view above 10° elevation almost all the time. Check the GLONASS almanac for exact numbers at any particular time.

By holding the GPS-GLONASS clock error fixed, the GG24 calculates a 3D position with any combination of 4 satellites (e.g., 2 GPS and 2 GLONASS). By holding the altitude fixed, the GG24 calculates a 2D position with any combination of 3 satellites. See Chapter 6, **Command/Response Formats** for more information.

# Reference Datums and Ellipsoids

The following tables list geodetic datums and reference ellipsoid parameters.

**Table B.1:** Available Geodetic Datums

N	Datum ID	Reference Ellipsoid	Offset in meters from local system to WGS-84 (dX,dY,dZ)	Datum Description
1	ADN	Clarke 1880	-162, -12, 206	Adindan (Ethiopia,Mali,Sene-gal,Sudan)
2	ARF	Clarke 1866	-143, -90, -294	ARC 1950 (Botswana,Lesotho,Malawi,Swazi-land,Zaire,Zambia,Zimbabwe)
3	ARS	Clarke 1866	-160, -8, -300	ARC 1960 (Kenya,Tanzania)
4	AST	International 1924	-104, -129, 239	Camp Area Astro (Antarctica)
5	AUA	Australian National	-133, -48, 148	Australian Geodetic Datum 1966(Australia, Tasmania Island)
6	AUG	Australian National	-134, -48, 149	Australian Geodetic Datum 1984 (Australia, Tasmania Island)
7	BOO	International 1924	307, 304, -318	Bogota Observatory (Columbia)
8	BUK	Bessel 1841	-384, 664, -48	Bukit Rimpah (Indonesia)
9	CAI	International 1924	-148, 136, 90	S. American Campo Inchauspe (Argentina)
10	CAP	Clarke 1866	-136, -108, -292	Cape (South Africa)
11	CGE	Clarke 1866	-263, -6, 431	Carthage (Tunisia)
12	CHI	International 1924	175, -38, 113	Chatham 1971 (Chatham,New Zeland)
13	CHU	International 1924	-134, 229, -29	S. American Chua Astro (Paraguay)
14	CNA	Clarke 1866	0, 125, 194	N. American Central America
15	COA	International 1924	-206, 172, -6	S. American Corrego Alegre (Braz-il)
16	CRB	Clarke 1866	-7, 152, 178	N. American Caribbean
17	DJK	Bessel 1841	-377, 681, -50	Djakarta (Indonesia)
18	E90	Earth-90	0, 0, 4	Earth-90 (GLONASS Coordinate system)

**Table B.1:** Available Geodetic Datums (Continued)

N	Datum ID	Reference Ellipsoid	Offset in meters from local system to WGS-84 (dX,dY,dZ)	Datum Description
19	EUA	International 1924	-87, -96, -120	European 1950 (Western Europe:Austria,Denmark,France,F.R. of Germany, Netherlands, Switzerland)
20	EUE	International 1924	-104, -101, -140	European 1950 (Cyprus)
21	EUF	International 1924	-130, -117, -151	European 1950 (Egypt)
22	EUH	International 1924	-117, -132, -164	European 1950 (Iran)
23	EUJ	International 1924	-97, -88, -135	European 1950 (Sicily)
24	EUM	International 1924	-87, -98, -121	European 1950 mean
25	EUS	International 1924	-86, -98, -119	European 1979 (Austria, Finland, Netherlands, Norway, Spain, Sweden, Switzerland)
26	FAH	Clarke 1880	-346, -1, 224	Oman
27	GAA	International 1924	-133, -321, 50	Gandajika Base (Rep. of Maldives)
28	GEO	International 1924	84, -22, 209	Geodetic Datum 1949 (New Zealand)
29	GUA	Clarke 1866	-100, -248, 259	Guam 1963 (Guam Island)
30	HAW	International 1924	89, -279, -183	Hawaiian Hawaii (Old)
31	HJO	International 1924	-73, 46, -86	Hjorsey 195 (Iceland)
32	HNK	International 1924	-156, -271, -189	Hong Kong 1963
33	HRN	International 1924	-333, -222, 114	Herat North (Afghanistan)
34	HTS	International 1924	-634, -549, -201	Hu-Tzu-Shan (Taiwan)
35	INA	Everest	214, 836, 303	Indian (Thailand, Vietnam)
36	INM	Everest	289, 734, 257	Indian (India,Nepal,Bangladesh)
37	IRL	Modified Everest	506, -122, 611	Ireland 1965
38	KAN	Everest	-97, 787, 86	Kandawala (Sri Lanka)
39	KAU	International 1924	45, -290, -172	Hawaiian Kauai (Old)
40	KEA	Modified Everest	-11, 851, 5	Kertau 1948 (West Malayzia, Singapore)
41	KRS	Krasovsky	26, -139, -80	Krassovsky 1942 (Russia)
42	LIB	Clarke 1880	-90, 40, 88	Liberia 1964

**Table B.1:** Available Geodetic Datums (Continued)

N	Datum ID	Reference Ellipsoid	Offset in meters from local system to WGS-84 (dX,dY,dZ)	Datum Description
43	LUZ	Clarke 1880	-133, -77, -51	Luzon (Philippines excluding Mind- anao Is.)
44	MAS	Bessel 1841	639, 405, 60	Massawa (Eritrea,Ethiopia)
45	MAU	International 1924	65, -290, -190	Hawaiian Oahu (Old)
46	MER	Clarke 1880	31, 146, 47	Merchich (Morocco)
47	MIN	Clarke 1880	-92, -93, 122	Minna (Nigeria)
48	MND	Clarke 1866	-133, -79, -72	Mindanao Island
49	MXC	Clarke 1866	-12, 130, 190	N. American Mexico
50	NAC	Clarke 1880	-8, 160, 176	N. American CONUS 1927 (North America)
51	NAD	Clarke 1880	-5, 135, 172	N. American Alaska 1927 (Alaska)
52	NAE	Clarke 1880	-10, 158, 187	N. American Canada 1927 (Canada incl. Newfoundland Island)
53	NAH	Clarke 1880	-231, -196, 482	Nahrwan (Saudi Arabia)
54	NAN	Clarke 1880	-6, 127, 192	Central America (Belize,Costa Rica,El Salvador, Guatemala, Honduras, Nicaragua, Mexico)
55	NAR	GRS1980	0, 0, 0	North American 1983
56	OAH	International 1924	56, -284, -181	Hawaiian Oahu (Old)
57	OEG	Helmert 1906	-130, 110, -13	Old Egyptian
58	OGB	Airy 1830	375, -111, 431	Ordnance Survey of Great Britain 1936 (England,Isle of Man,Scotland,Shetland Islands, Wales)
59	OHA	Clarke 1866	61, -285, -181	Old Hawaiian
60	PIT	International 1924	185, 165, 42	Pitcairn Astro 1967 (Pitcairn Island)
61	PRV	International 1924	-288, 175, -376	S. American (Provisional 1956)
62	PUE	Clarke 1866	11, 72, -101	Puerto Rica and Virgin Islands
63	QAT	International 1924	-128, -283, 22	Qatar National (Qatar)
64	QUO	International 1924	164, 138, -189	Qornoq (South Greenland)

**Table B.1:** Available Geodetic Datums (Continued)

N	Datum ID	Reference Ellipsoid	Offset in meters from local system to WGS-84 (dX,dY,dZ)	Datum Description
65	SAN	South American 1969	-57, 1, -41	S. American 1969 (Argentina,Bolivia,Brazil,Chile,Colombia,Ecuador,Guyan,Paraguay,Peru, Venezuela,Trinidad,Tobago)
66	SCK	Bessel 1841 Namibia	616, 97, -251	Schwarzeck (Namibia)
67	SEG	International 1924	-403, 684, 41	Gunung Segara (Kalimantan-Indonesia)
68	SRD	International 1924	-225, -65, 9	Rome 1940 Sardinia Island
69	TAN	International 1924	-189, -242, -91	Tanarive Observatory 1925 (Madagascar)
70	TIL	Everest	-689, 691, -46	Timbalai 1948 (Brunei,East Malaysia, Sarawak,Sabah)
71	TOY	Bessel 1841	-128, 481, 664	Tokyo (Japan,Korea,Okinawa)
72	TRI	International 1924	-632, 438, -609	Tristan Astro 1968 (Tristan du Cunha)
73	USR	WGS84	0, 0, 0	User defined
74	VIT	Clarke 1866	-51, 391, -36	Viti Levu 1916 (Fiji Islands)
75	W72	WGS72	0, 0, 4.5	World Geodetic System - 72
76	W84	WGS84	0, 0, 0	World Geodetic System - 84
77	YAC	International 1924	-155, 171, 37	S. American Yacare (Uruguay)
78	ZAN	International 1924	-265, 120, -358	Zanderij (Surinam)

**Table B.2:** Reference Ellipsoids

Ellipsoid	a (metres)	1/f	f
Airy 1830	6377563.396	299.3249647	0.00334085064038
Modified Airy	6377340.189	299.3249647	0.00334085064038
Australian National	6378160.0	298.25	0.00335289186924
Bessel 1841	6377397.155	299.1528128	0.00334277318217
Clarke 1866	6378206.4	294.9786982	0.00339007530409
Clarke 1880	6378249.145	293.465	0.00340756137870

**Table B.2: Reference Ellipsoids (Continued)**

Ellipsoid	a (metres)	1/f	f
Earth-90	6378136.0	298.257839303	0.00335280374301
Everest (india 1830)	6377276.345	300.8017	0.00332444929666
Everest (W.Malaysia&Singapore)	6377304.063	300.8017	0.00332444929666
Geodetic Reference System 1980	6378137.0	298.257222101	0.00335281068118
Helmert 1906	6378200.0	298.30	0.00335232986926
International 1924	6378388.0	297.00	0.00336700336700
Krasovsky	6378245.0	298.3	0.00335232986925
South American 1969	6378160.0	298.25	0.00335289186924
World Geodetic System 1972 (WGS-72)	6378135.0	298.26	0.00335277945417
World Geodetic System 1984 (WGS-84)	6378137.0	298.257223563	0.00335281066475

PZ-90 is the official designation of the GLONASS Coordinate System, which is sometimes referred to as Earth-90, E90, or PE-90.



---

# Multipath Mitigation

## Overview

Multipath occurs when GPS signals arrive at the receiver after being reflected off some object. The reflected signals always travel a longer path length than the direct signal. This leads to measurement errors in the receiver which is trying to measure the direct path length to the satellite. The techniques for rejecting the reflected signals are known as multipath mitigation.

The GG24 implements one type of correlator for multipath mitigation: Edge Correlator™. This correlator improves multipath mitigation over the traditional correlator schemes with standard (1-chip) correlator spacing and narrow (1/10 chip) correlator spacing.

The Edge Correlator is standard with all products from the GG family. The performance of an Edge correlator is slightly better than a narrow correlator with 1/10 chip spacing.

A detailed description of the Edge Correlation is given in [1].


## Evaluating Correlator Performance

Theoretical analysis of the different multipath mitigation techniques is a straightforward analysis of how much error hypothetical multipath signals would cause. A plot of multipath mitigation performance is made by assuming a reflected signal with a certain power (usually half the power of the direct signal) and a certain delay. The induced error on the range measurement is then calculated and plotted. Figure B.1 shows the errors induced by a multipath signal half the strength of the direct signal. The x-axis shows the multipath delay, which is the extra distance that the reflected signal travels compared to the direct signal. The y-axis shows the induced range error caused by a multipath signal with the indicated delay.

From this figure, you can see that typical narrow correlator performance and Edge Correlator performance are similar.

In a real situation, multipath is usually a combination of many reflections, all with different delays and different power. Real-life multipath is often described as either close-in multipath or far multipath. Close-in multipath occurs when the reflecting surface is close to the satellite antenna direct line, and the delay is small; usually, these reflections come from a surface near the antenna, for example, an antenna on a tripod on the ground would pick up close-in multipath from reflections off the ground below and around the tripod. Choke-ring antennas are probably the best cure for close-in multipath. Correlator-

based multipath techniques, as shown in Figure C.1, are all bad at rejecting very close-in multipath mitigation.

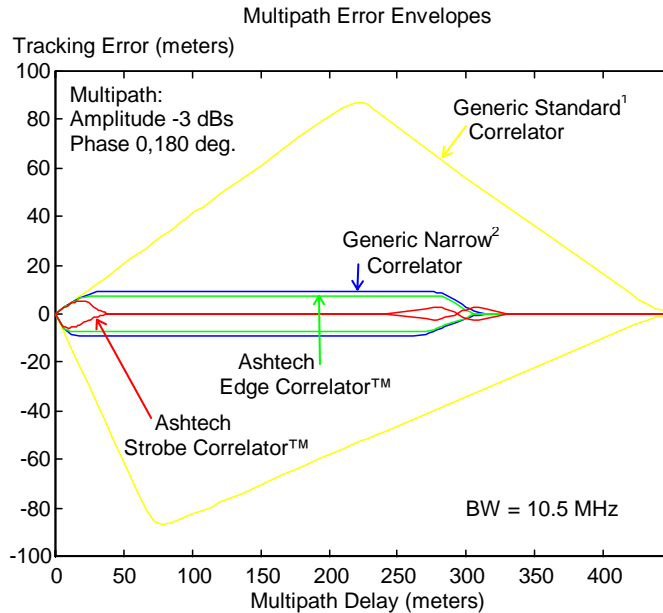

Notes:

- <sup>1</sup> Generic Standard Correlator spacing, 1 chip
- <sup>2</sup> Generic Narrow Correlator spacing, 0.1 chip

**Figure C.1: Relative Performance of Multipath Mitigation Techniques**

Very close-in multipath causes only a small change in the ideal correlation function, so it is almost impossible for the correlator-base multipath integration to determine the error. Far multipath can cause very large errors if a good multipath mitigation technique is not used.

Far multipath occurs when there is a reflecting surface at some distance from the antenna, such as a building, a mast, a mountain, etc. Metal surfaces cause the strongest reflections. Far multipath signals can be very nearly eliminated by good correlator-based multipath mitigation techniques. In an environment where there is a lot of far multipath, Strobe Correlation will be as good as or better than a choke ring. The bottom line on multipath mitigation is that the errors, or lack of errors, are seen in the position accuracy.

[1] “*Strobe & Edge Correlator Multipath Mitigation for Code*”, Lionel Garin, Frank van Diggelen, Jean-Michel Rousseau, Proceedings of ION-GPS’96, Sept. 17-19 1996, Kansas City, Missouri

[2] “*The Ashtech GG Family of Products*”, Frank van Diggelen. Proceedings on ION-GPS’96, Sept. 17-19 1996, Kansas City, Missouri



# Floating Point Data Representation

The GG24 stores the floating point data types using the IEEE single and double precision format. The formats contain a **sign bit field**, an **exponent field**, and a **fraction field**. The value is represented in these three fields.

## Sign Bit Field

The sign bit field of the number being represented is stored in the sign bit field. If the number is positive, the sign bit field contains the value 0. If the number is negative, the sign bit field contains the value 1. The sign bit field is stored in the most significant bit of a floating point value.

## Exponent Field

The exponent of a number is multiplied by the fractional value of the number to get a value. The exponent field of the number contains a biased form of the exponent. The bias is subtracted from the exponent field to get the actual exponent. This allows both positive and negative exponents.

## Fraction Field

The IEEE floating point format stores the fractional part of a number in a normalized form. This form assumes that all non-zero numbers are of the form:

1.xxxxxx (binary)

The character 'x' represents either a 0 or 1 (binary).

Because all floating point binary numbers begin with 1, the 1 becomes the implicit normalized bit and is omitted. It is the most significant bit of the fraction, and the binary point is located immediately to its right. All bits after the binary point represent values less than 1 (binary). For example, the number 1.625 (decimal) can be represented as:

1.101 (binary) which is equal to:

$2^0 + 2^{-1} + 2^{-3}$  (decimal) which is equal to:

$1 + 0.5 + 0.125$  (decimal) which is equal to:

1.625 (decimal).

## The Represented Value

The value of the number being represented is equal to the exponent multiplied by the fractional value, with the sign specified by the sign bit field.



If both the exponent field and the fraction field are equal to zero, the number being represented will also be zero.

Note that in some systems (Intel-based PCs in particular) the order of the bytes will be reversed.

### Single-Precision Float

The single precision format uses four consecutive bytes, with the 32 bits containing a sign bit field, an 8-bit biased exponent field, and a 23-bit fraction field. The exponent has a bias of 7F (hexadecimal). The fraction field is precise to 7 decimal digits. The single-precision format can represent values in the range  $1.18 \times 10^{-38}$  to  $3.4 \times 10^{38}$  (decimal), as presented in Table D.1.

**Table D.1:**Single-Precision Format

31-28	27-24	23-20	19-16	15-12	11-8	7-4	3-0	
S EXONENT		FRACTION						VALUE
0000	0000	0000	0000	0000	0000	0000	0000	0.0
0011	1111	1000	0000	0000	0000	0000	0000	1.0
1111	1111	1111	1111	1111	1111	1111	1111	NAN (not a number)
0011	1111	0100	0000	0000	0000	0000	0000	0.75

In Table D.1, the value 1.0 is calculated as shown below.

1. The sign of the value is positive because the sign bit field is equal to 0.
2. The exponent field is equal to 7F (hexadecimal). The exponent is calculated by subtracting the bias value (7F) from the exponent field value. The result is 0.

$$7F - 7F = 0$$

The exponent multiplier is equal to  $2^0$ , which is equal to 1 (decimal).

3. The fraction field is equal to .0. After adding the implicit normalized bit, the fraction is equal to 1.0 (binary). The fraction value is equal to  $2^0$  (decimal), which is equal to 1 (decimal).
4. The value of the number is positive  $1 \times 1 = 1.0$  (decimal).

In Table D.1, the value 0.75 is calculated as shown below.

1. The sign of the value is positive because the sign bit field is equal to 0.
2. The exponent field is equal to 7E (hexadecimal). The exponent is calculated by subtracting the bias value (7F) from the exponent field value. The result is -1 (decimal).

$$7E - 7F = -1$$

The exponent multiplier is equal to  $2^{-1}$ , which is equal to 0.5 (decimal).

3. The fraction field is equal to .1 (binary). After adding the implicit normalized bit, the fraction is equal to 1.1 (binary). The fraction value is equal to  $2^0 + 2^{-1}$  (decimal), which is equal to 1 + 0.5 (decimal), which is equal to 1.5 (decimal).
4. The value of the number is positive  $0.5 * 1.5 = 0.75$  (decimal).

## Double-Precision Float

The double-precision format uses eight consecutive bytes, with the 64 bits containing a sign bit field, an 11-bit biased exponent field, and a 52-bit fraction field. The exponent has a bias of 3FF (hexadecimal). The fraction field is precise to 15 decimal digits. The double-precision format can represent values in the range  $9.46 * 10^{-308}$  to  $1.79 * 10^{308}$  (decimal), as presented in Table D.2.

**Table D.2:**Double-Precision Format

63-60	59-56	55-62	51-48	47-44	43-40	...	15-12	11-8	7-4	3-0	
S EXPONENT FRACTION										VALUE	
0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0.0
0011	1111	1111	0000	0000	0000	...	0000	0000	0000	0000	1.0
1111	1111	1111	1111	1111	1111	...	1111	1111	1111	1111	NAN (not a number)
0011	1111	1110	1000	0000	0000	...	0000	0000	0000	0000	0.75

In Table D.2, the value 1 is calculated as shown below.

1. The sign of the value is positive because the sign bit field is equal to 0.
2. The exponent field is equal to 3FF (hexadecimal). The exponent is calculated by subtracting the bias value (3FF) from the exponent field value. The result is 0 (decimal).

$$3FF - 3FF = 0$$

The exponent multiplier is equal to  $2^0$ , which is equal to 1 (decimal).

3. The fraction field is equal to .0 (binary). After adding the implicit normalized bit, the fraction is equal to 1.0 (binary). The fraction value is equal to  $2^0$  (decimal), which is equal to 1 (decimal).
4. The value of the number is positive  $1 * 1 = 1.0$  (decimal).

In Table D.2, the value 0.75 is calculated as shown below.

1. The sign of the value is positive because the sign bit field is equal to 0.

2. The exponent field is equal to 3FE (hexadecimal). The exponent is calculated by subtracting the bias value (3FF) from the exponent field value. The result is -1 (decimal).

$$3FE - 3FF = -1$$

3. The fraction field is equal to .1 (binary). After adding the implicit normalized bit, the fraction is equal to 1.1 (binary). The fraction value is equal to  $2^0 + 2^{-1}$  (decimal), which is equal to  $1 + 0.5$  (decimal), which is equal to 1.5 (decimal).
4. The value of the number is positive  $0.5 * 1.5 = 0.75$  (decimal).

---

# Index

## Symbols

\$GLGRS, 155  
\$GLGSA, 158  
\$GLGSN, 162  
\$GLRRE, 189  
\$GPGGA, 147  
\$GPGLL, 150  
\$GPGRS/\$GLGRS, 155  
\$GPGSA, 158  
\$GPGSA/\$GLGSA, 158  
\$GPGSN, 162  
\$GPMSG, 171  
\$GPRRE/\$GLRRE, 189  
\$GPVTG, 199  
\$GPZDA, 201  
\$PASHQ,AIM, 78, 142  
\$PASHQ,ANT, 79  
\$PASHQ,ANT,c, 79  
\$PASHQ,CLK, 81  
\$PASHQ,CPD, 213  
\$PASHQ,CPD,ANT, 216  
\$PASHQ,CPD,DLK, 218  
\$PASHQ,CPD,INF, 222  
\$PASHQ,CPD,MOD, 226  
\$PASHQ,CPD,POS, 228  
\$PASHQ,CTS, 82  
\$PASHQ,DUG, 84  
\$PASHQ,EXF, 87  
\$PASHQ,GGA, 147  
\$PASHQ,GLL, 150  
\$PASHQ,GRS, 155  
\$PASHQ,GSA, 158  
\$PASHQ,GSN, 162  
\$PASHQ,ION, 91  
\$PASHQ,LPS, 93  
\$PASHQ,LTN, 170  
\$PASHQ,MCA, 123  
\$PASHQ,MRX, 95  
\$PASHQ,MSG,x, 171  
\$PASHQ,PAR, 29, 96  
\$PASHQ,PBN, 126  
\$PASHQ,PHE, 99  
\$PASHQ,POS, 185  
\$PASHQ,POW, 101  
\$PASHQ,PPS, 103  
\$PASHQ,PRT, 105  
\$PASHQ,RAW, 29, 128  
\$PASHQ,RID, 108  
\$PASHQ,RIO, 109  
\$PASHQ,RRE, 189  
\$PASHQ,RTC, 29, 30  
\$PASHQ,SAG, 129  
\$PASHQ,SAL, 131  
\$PASHQ,SAT, 192  
\$PASHQ,SMI, 112  
\$PASHQ,SNG, 133  
\$PASHQ,SNR, 113  
\$PASHQ,SNV, 136  
\$PASHQ,STA, 114  
\$PASHQ,STB, 115  
\$PASHQ,TCM, 195  
\$PASHQ,TSC, 116  
\$PASHQ,UDD, 118  
\$PASHQ,UTS, 120  
\$PASHQ,VTG, 199  
\$PASHQ,ZDA, 201  
\$PASHR,ACK\*3D, 75  
\$PASHR,AIM, 142  
\$PASHR,ANT, 80  
\$PASHR,CLK, 81  
\$PASHR,CPD,ANT, 216  
\$PASHR,CPD,DLK, 218  
\$PASHR,CPD,INF, 222  
\$PASHR,CPD,MOD, 226  
\$PASHR,CPD,POS, 228  
\$PASHR,CTS, 82

\$PASHR,EXF, 87  
 \$PASHR,ION, 91  
 \$PASHR,LPS, 93  
 \$PASHR,LTN, 170  
 \$PASHR,MCA, 124  
 \$PASHR,MRX, 95  
 \$PASHR,NAK\*30, 27, 75  
 \$PASHR,PBN, 126  
 \$PASHR,PHE, 99  
 \$PASHR,POS, 185  
 \$PASHR,POW, 102  
 \$PASHR,PPS, 103  
 \$PASHR,RID, 108  
 \$PASHR,SAG, 129  
 \$PASHR,SAL, 131  
 \$PASHR,SAT, 192  
 \$PASHR,SMI, 112  
 \$PASHR,SNG, 133  
 \$PASHR,SNR, 113  
 \$PASHR,SNV, 136  
 \$PASHR,STB, 115  
 \$PASHR,TCM, 195  
 \$PASHR,TSC, 116  
 \$PASHR,TTT, 197  
 \$PASHR,UDD, 118  
 \$PASHR,UTS, 120  
 \$PASHS,AIM, 78  
 \$PASHS,ALT, 78  
 \$PASHS,ANT, 79  
 \$PASHS,ANT,f1,f2,f3,m1,x1, 79  
 \$PASHS,CPD,AFP, 215  
 \$PASHS,CPD,ANT, 216  
 \$PASHS,CPD,FST, 221  
 \$PASHS,CPD,MAX, 226  
 \$PASHS,CPD,MOD, 226  
 \$PASHS,CPD,POS, 228  
 \$PASHS,CPD,RST, 229  
 \$PASHS,CPD,UBP, 229  
 \$PASHS,CTS, 82  
 \$PASHS,description, 74  
 \$PASHS,DSY, 82  
 \$PASHS,DTG, 83

\$PASHS,DTM, 83  
 \$PASHS,ELM, 85  
 \$PASHS,EPG, 85  
 \$PASHS,EXF, 87  
 \$PASHS,FIX, 88  
 \$PASHS,GTF, 88  
 \$PASHS,GTM, 89  
 \$PASHS,GTP, 89  
 \$PASHS,HDP, 90  
 \$PASHS,INI, 90  
 \$PASHS,ION, 91  
 \$PASHS,LPS, 93  
 \$PASHS,LTZ, 94  
 \$PASHS,MRX, 95  
 \$PASHS,MSV, 96  
 \$PASHS,NME, 192  
 \$PASHS,NME,AIM, 142  
 \$PASHS,NME,ALL, 141  
 \$PASHS,NME,GGA, 147  
 \$PASHS,NME,GLL, 150  
 \$PASHS,NME,GRS, 155  
 \$PASHS,NME,GSA, 158  
 \$PASHS,NME,GSN, 162  
 \$PASHS,NME,GST, 165  
 \$PASHS,NME,LTN, 170  
 \$PASHS,NME,MSG, 171  
 \$PASHS,NME,PER, 184  
 \$PASHS,NME,POS, 184  
 \$PASHS,NME,RRE, 189  
 \$PASHS,NME,TCM, 195  
 \$PASHS,NME,TTT, 197  
 \$PASHS,NME,VTG, 199  
 \$PASHS,NME,ZDA, 201  
 \$PASHS,PDP, 98  
 \$PASHS,PEM, 98  
 \$PASHS,PHE, 99  
 \$PASHS,PMD, 99  
 \$PASHS,POP, 100  
 \$PASHS,POS, 100  
 \$PASHS,POS,CUR, 100  
 \$PASHS,POW, 101  
 \$PASHS,PPO, 102

\$PASHS,PPS, 103  
 \$PASHS,RAW,MCA, 123  
 \$PASHS,RAW,PBN, 126  
 \$PASHS,RAW,SAG, 129  
 \$PASHS,RAW,SAL, 131  
 \$PASHS,RAW,SNG, 133  
 \$PASHS,RAW,SNV, 135  
 \$PASHS,RCI, 107  
 \$PASHS,RST, 110  
 \$PASHS,RTC,AUT, 204  
 \$PASHS,RTC,BAS, 205  
 \$PASHS,RTC,M36, 205  
 \$PASHS,RTC,MAX, 205  
 \$PASHS,RTC,MSG, 205  
 \$PASHS,RTC,OFF, 205  
 \$PASHS,RTC,REM, 206  
 \$PASHS,RTC,SEQ, 208  
 \$PASHS,RTC,SPD, 209  
 \$PASHS,RTC,STH, 209  
 \$PASHS,RTC,STI, 210  
 \$PASHS,RTC,TYP, 210  
 \$PASHS,SAV, 110  
 \$PASHS,SIT, 112  
 \$PASHS,SMI, 112  
 \$PASHS,SNR, 113  
 \$PASHS,SPD, 113  
 \$PASHS,STB, 115  
 \$PASHS,SYS, 116  
 \$PASHS,TDP, 116  
 \$PASHS,TSC, 116  
 \$PASHS,UDD, 117  
 \$PASHS,USE, 119  
 \$PASHS,USP, 119  
 \$PASHS,UTS, 120  
 \$PASHS,VDP, 120

## Numerics

1 PPS pulse output, 103  
 1227.60 MHz, 241  
 1575.42 MHz, 241  
 1PPS option, 35  
 2-D, 78, 88, 148  
 2D position, 33

3D position, 33  
 5 Hz output, 40

## A

absolute current time, 134  
 accuracy,real-time monitoring, 67  
 age of differential correction, 148  
 age of ephemeris, 134  
 agument of perigee, 132  
 AIM, 78, 142  
 alarm limit, 78  
 ALL, 141  
 almanac, 42, 135  
     structure, 131  
 ALT, 78  
 altitude fix mod, 88  
 altitude hold, 33  
 ambiguity fixing, 125  
 ambiguity fixing reliability, 65  
 AMP, 113  
 ANT, 79, 216, 222  
 antenna altitude, 34  
 antenna offset, 56, 79  
 Antenna Parameters, 216  
 AS (Anti-Spoofing), 241  
 AUT, 204  
 auto differential, 207  
 Auto Differential Mode, 69  
 auto differential mode, 204  
 autonomous integrity monitoring, 43

## B

BAS, 205  
 Base data latency, 63  
 base station, 49, 70  
 base station baud rate, 209  
 battery backup, 2  
 battery parameters, 101  
 battery-backed-up memory, 87  
 battery-backed-up memory (BBU), 110  
 baud rate, 113  
 BBU, 110  
 bit slippage, 71

bulwn, 92

## C

C/A code, 241

calculated pseudo-range, 120

carrier phase, 5

carrier phase initialization, 64

CDMA, Code Division Multiple Access, 241

changing datums, 44

channel ID, 124

check sequence number, 208

CLK, 81

clock correction, 132

clock errors, 240

Clock Status, 81

code measurement smoothing, 112

combined differential and RTK base station,  
setup, 51

communication link, 49

communication quality factor, 207

communications software, 24

compute altitude, 89

constellation, 1, 33, 35, 246

course message, 199

CPD information, 222

CPD mode, 226

CTS, 82

Current

GPS week number, 92

time of week, 92

UTC time, 185

## D

daisy chain mode, 34

data latency, 61

data link status, 218

date message, 201

datum, 97

datum selection, 83

datums, 44

day number, 134

day of leap second, 91

DBH, 113

DC block, 11, 16

default communication parameters, 25

default receiver parameters, 31

Delta time between GPS and UTC, 91

Differential

correction, 70, 246

GPS, 49

differential base station, 205

differential base station, setup, 49

differential mode, 103

differential remote station, setup, 58

disable all NMEA messages, 141

disable differential mode, 205

DLK, 218

DOP and active satellites message, 158

DSY, 82

DTG, 83

DtLS, 91

DTM, 83

DUG, 84

## E

E90, 83

ECEF, 134

elevation mask, 98

elevation mask, set, 85

ellipsoidal height, 78

ELM, 85

enable type of message, 210

encryption, 241

EPG, 85

Ephemeris, 42

data, 1

ephemeris, 135

structure, 136

Ephemeris & Almanac Upload, 104

ephemeris data, 133, 135

error, position estimate (GST), 165

ERT, 143

Evaluate, 57

event marker, 6

event marker message, 197

EXF, 87

external frequency, 44  
external LED, 8

## **F**

false alarm probability, 43  
fast CPD mode, 221  
fast RTK, 63  
Fast RTK mode, 53  
FDMA, Frequency Division Multiple Access, 241  
firmware version, 108, 109  
FIX, 88  
fixed altitude, 89  
float Mode, 66  
FST, 221

## **G**

geodetic datum, 244  
geoid height, 6  
geoidal separation, 148  
GGA, 147  
GLL, 150  
GLONASS  
    almanac, 134  
    almanac data, 129  
    ephemeris data, 133  
    residual, 155  
    satellite almanac message, 129  
    satellite information, 162  
    time, 240  
    time shift, 89  
    time shift DOP mask, 116  
GLONASS system time, 134  
GLONASS time shift, 83, 89  
GLONASS time shift relative or fixed, 89  
GLONASS to GPS coordinate transformation  
    (MRX), 95  
GMT time, 94  
GNS, 152  
GPGLL, 140

## **GPS**

    almanac data, 131  
    ephemeris data, 135  
    GPS and GLONASS signal structures, 241  
    satellite almanac message, 131  
    satellite information, 158, 162  
    time, 240  
    week number when message was read, 92  
GPS position message, 147  
GPS satellite information, 189  
GPS week, 84  
GPS week number, 134  
GPS+GLONASS Navigation Solution, 152  
GPS-UTC time correction, 84  
GRS, 155  
GSA, 158  
GSN, 162  
GST, 165  
GSV, 168  
GTF, 88  
GTM, 89  
GTP, 89  
GXP, 167

## **H**

handshaking, 82  
hardware reset, 9  
harmonic correction, 136  
HDOP, 90, 148, 186  
HDP, 90  
health of reference station, 209  
horizontal alarm limit, 43  
horizontal dilution of precision, 90

## **I**

ICD-GPS-200, 42  
inclination angle, 132  
INF, 222  
INI, 90  
Initialization Time Reduction, 224  
input messages, 27  
installed options, 108  
integer ambiguity resolution, 64

ION, 91  
Ionosphere  
    data, 91  
    model, 42

## **K**

KPI, 224

## **L**

L1-band, 11  
L2 frequency, 241  
latency, 61  
latency message, 170  
latitude and longitude message, 150  
LED,external, 8  
LI frequency, 241  
LI frequency band, 241  
limitations, 239  
LNA, 7, 11  
local (receiver) clock, 120  
local time zone, 94  
Loop, 93  
loop tracking, 93  
loop tracking parameters, 93  
LPS, 93  
LTN, 170  
LTZ, 94

## **M**

Magellan proprietary NMEA response message,  
    140  
Magellan type 3 data structure, 41  
magnetic course, 200  
magnetic track, 200  
magnetic variation, 6  
MAX, 205, 226  
maximum age, 207, 226  
MCA, 123  
measurement strobe parameters, 115  
measurement tag time, 170  
memory reset, 28  
message rate, 52  
minimum number of satellites, 96, 97

minimum number of SVs, 99  
MIX, 116  
MOD, 226  
monitoring accuracy, 67  
most recently computed position, 185  
MRX, 95  
MSG, 171, 205  
MSV, 96, 125

## **N**

navigational system, 116  
NMEA, 40, 244  
    0183, 40  
    0183 Standard, 140  
    0183 Standards Committee, 245  
NMEA response message format, 139  
NMEA send interval, 98, 184  
not-acknowledged response message, 27  
NPA, 143

## **O**

OFF, 205  
offset between GPS and GLONASS time, 240  
on-board frequency standard, 134  
options, 4, 109  
orbital plane, 242  
orbital slot number, 241  
OSU-91, 242  
output message, 27

## **P**

PAR, 96  
PBN, 126  
PBN position data, 126  
PDOP, 185  
    Position Dilution of Precision, 98  
PDP, 98  
PE-90, 242  
PEM, 98  
PER, 184  
phase differential mode, 6  
PHE, 99  
photogrammetry, 37, 197

photogrammetry edge, 99  
 PMD, 99  
 point positioning, 46  
 point positioning, 102  
 POP, 100, 110  
 port protocol, 82  
 Port Setting, 105  
 POS, 100, 184, 208, 228  
 POS CUR, 100  
 position, 25  
 position dilution of precision, 98  
 position elevation mask, 98  
 position error, 165  
 position fix rate, 100  
 position latency, 63, 64  
 position message, 184  
 position mode, 33, 99  
 position update rate, 5  
 Position/Velocity Filter Control, 106  
 POW, 101  
 power/input/output connector, 8, 14  
 PPO, 102  
 PPR, 103  
 PPS, 103  
 precision estimate, position (GST), 165  
 PRN code, 241  
 protocol for a specified port, 82  
 PRR, 104  
 PRT, 105  
 PSM, 106  
 PZ-90, 83, 242

## Q

query commands, 75  
 query receiver parameter, 96

## R

radio communication, 71  
 RAIM, 43  
 RAIM availability, 6, 78  
 RAIM detection errors, 143  
 RAIM message, 142  
 RAW, 128

raw data elevation mask, 85  
 raw data message, 107  
 raw data output, 5  
 raw data update rate, 107  
 raw measurement update rate, 5  
 RCI, 107  
 received message number, 207  
 Receiver
 

- Autonomous Integrity Monitor, 78
  - time, 35
    - update rate, 40
- receiver autonomous integrity monitor message, 142
- receiver autonomous integrity monitoring, 43
- Receiver ID, 108
- receiver initialization, 26, 90
- Receiver Serial Number and Installed Options, 110
- receiver update rate, 103
- Recording Interval, 107
- Reference
  - station, 49, 246
    - time, 91
      - time for orbit, 132
      - week, 91
  - reference station, 56, 70
  - reference station health, 207
  - reliability, ambiguity fixing, 65
  - REM, 206
  - remote option, 71
  - request for receiver ID, 109
  - reset CPD, 229
  - Reset receiver memory, 90
  - reset receiver to default parameters, 110
  - reset to defaults, 28
- RF
  - Connector, 10, 15
  - Interference, 17
- RID, 108
- RIO, 109
- RMS
  - Position error, 190
- RNG, 109

- RPR, 110
- RRE, 189
- RS-232, 11, 27, 28
- RSO, 110
- RST, 110, 208, 229
- RTC, 206, 208
- RTCM, 244
  - RTCM 104, 70
  - SC-104, 244
- RTCM base, 6
- RTCM bit rate, 209
- RTCM corrections, 207
- RTCM differential parameters, 206
- RTCM message, 171
- RTCM message bit rate, 52
- RTCM message types, 207
- RTCM remote, 5
- RTCM type 16 message, 205
- RTK base station, setup, 50
- RTK remote station, setup, 58

## S

- SA, 103
- SAG, 129
- SAL, 131
- SAT, 192
- Satellite
  - clock, 240
  - constellation, 240
  - residual and position error, 189
- satellite
  - residual and position error message, 189
- Satellite Data, 168
- satellite geometry, 144
- satellite health status flag, 134
- satellite number message, 162
- satellite range residual message, 155
- satellite status message, 192
- satellite tracking, 25
- SAV, 110, 208
- save user parameters, 110
- saving parameter settings, 26
- Secondary Elevation Mask Zone, 111

- select satellite to use in position computation, 119
- self-test, 2
- SEM, 111
- sentence format protocol, 140
- SEQ, 208
- sequence number, 208
- serial number, 109
- serial port baud rate, 40, 113
- set antenna offsets, 79
- set antenna position, 100
- set antenna to current computed position, 100
- set base position, 228
- set commands, 74
- set ellipsoid height, 78
- set frequency input, 87
- set GLONASS time shift, 88
- set ionospheric models, 91
- set kinematic epoch counter, 85
- set local time zone, 94
- set maximum age of RTCM corrections, 205
- set minimum satellites, 96
- set navigational system, 116
- set priority of GLONASS time shift, 89
- set receiver as differential remote, 206
- set signal-to-noise ratio, 113
- set site name, 112
- set transformation matrix from PZ-90 to WGS-84, 95
- set type of time scale, 116
- set user-defined datum, 117
- Setting Query Command, 128
- setup
  - combined differential and RTK base station, 51
  - differential base station, 49
  - differential remote station, 58
  - RTK base station, 50
  - RTK remote station, 58
- Show Status of SVs, 114
- shutter signal, 38
- shutter timing, 39
- signal strength message, 162
- signal to noise ratio, 41

signal-to-noise ratio, 113  
 SIT, 112  
 six-of-eight format, 71  
 SMI, 112  
 SMV, 112  
 SNG, 133  
 SNR, 113  
 SNV, 135  
 SPD, 113, 209  
 speed filtering, 112  
 speed over ground, 185, 200  
 STA, 114  
 station data, 195  
 station identification, 210  
 STB, 115  
 STH, 209  
 STI, 210  
 strobe correlator, 6  
 SV  
     PRN numbers, 42  
 SVI, 116  
 SVS, 144  
 synchronization between base and remote, 206  
 synchronization to GPS time, 103  
 Synchronize with GPS Time, 120  
 synchronized RTK, 63  
 Synchronized RTK mode, 53  
 SYS, 103, 116

## T

TCM, 195  
 TDOP, 186  
 TDP, 116  
 technical specifications, 2  
 TER, 143  
 text message, 208  
 Time  
     difference between UTC and GPS, 84  
     of week when message was read, 92  
     resolution, 149  
     scale, 116  
     shift, 34  
 time and date message, 201

time shift dilution of precision, 97, 116  
 time shift value, 83  
 time-tagging, 38  
 TNC, 15  
 true SNR, 41  
 true track, 185  
 TSC, 116  
 TTT, 197  
 two-color LED, 7  
 TYP, 210  
 type 3 structure, 123

## U

UBP, 229  
 UDD, 117  
 USE, 119, 144  
 use base position, 229  
 use satellites, 119  
 user defined datum, 44  
 user parameters, 110  
 user range accuracy (URA), 137  
 USP, 119  
 UTC, 84, 134, 244  
     time, 202  
     UTC-SU time, 35  
 UTC time, 147  
 UTC-GPS time difference, 84

## V

VDOP, 34, 120, 186  
 VDP, 120  
 Velocity message, 199  
 velocity/course, 199  
 vertical dilution of precision, 120  
 vertical velocity, 185  
 VSWR, 11  
 VTG, 199

## W

Week of leap second correction, 91  
 WGS-84, 83, 97

## Z

ZDA, 201





## Reference Manual

### Magellan

#### GNSS Boards Contact Information:

**In USA** +1 408 615 3970 ■ Fax +1 408 615 5200

**Toll Free (Sales in USA/Canada)** 1 800 922 2401

**In South America** +56 2 273 3214 ■ Fax +56 2 273 3187

Email [gnsboards@magellangps.com](mailto:gnsboards@magellangps.com)

**In Singapore** +65 9838 4229 ■ Fax +65 6777 9881

**In China** +86 10 6566 9866 ■ Fax +86 10 6566 0246

Email [gnsboardsapac@magellangps.com](mailto:gnsboardsapac@magellangps.com)

**In France** +33 2 28 09 38 00 ■ Fax +33 2 28 09 39 39

**In Germany** +49 81 6564 7930 ■ Fax +49 81 6564 7950

**In Russia** +7 495 956 5964 ■ Fax +7 495 956 5965

**In the Netherlands** +31 78 61 57 988 ■ Fax +31 78 61 52 027

Email [gnsboardsemea@magellangps.com](mailto:gnsboardsemea@magellangps.com)

[www.pro.magellanGPS.com](http://www.pro.magellanGPS.com)

