



Survey Pro Field Software



User Guide

From V5.5

SOFTWARE END USER LICENSE AGREEMENT (EULA)

(TNL - TEBV)

IMPORTANT, READ THIS AGREEMENT CAREFULLY. BY INSTALLING OR USING ALL OR ANY PORTION OF THE SOFTWARE, YOU ARE ACCEPTING ALL OF THE TERMS AND CONDITIONS OF THIS AGREEMENT. YOU AGREE THAT THIS AGREEMENT IS ENFORCEABLE LIKE ANY WRITTEN AGREEMENT.

IF YOU DO NOT AGREE TO ALL OF THESE TERMS AND CONDITIONS, DO NOT USE OR ACCESS THE SOFTWARE.

IF YOU HAVE PAID A LICENSE FEE FOR USE OF THE SOFTWARE AND DO NOT AGREE TO THESE TERMS, YOU MAY RETURN THE SOFTWARE (ALONG WITH ANY HARDWARE ON WHICH IT WAS EMBEDDED, IF APPLICABLE) FOR A FULL REFUND PROVIDED YOU (A) DO NOT USE THE SOFTWARE AND (B) RETURN THE SOFTWARE WITHIN THIRTY (30) DAYS OF YOUR INITIAL PURCHASE.

IF YOU WISH TO USE THE SOFTWARE AS AN EMPLOYEE, CONTRACTOR, OR AGENT OF A CORPORATION, PARTNERSHIP OR SIMILAR ENTITY, THEN YOU MUST BE AUTHORIZED TO SIGN FOR AND BIND THE ENTITY IN ORDER TO ACCEPT THE TERMS OF THIS AGREEMENT. THE LICENSES GRANTED UNDER THIS AGREEMENT ARE EXPRESSLY CONDITIONED UPON ACCEPTANCE BY SUCH AUTHORIZED PERSONNEL.

IF YOU HAVE ENTERED INTO A SEPARATE WRITTEN LICENSE AGREEMENT WITH TRIMBLE FOR USE OF THE SOFTWARE, THE TERMS AND CONDITIONS OF SUCH OTHER AGREEMENT SHALL PREVAIL OVER ANY CONFLICTING TERMS OR CONDITIONS IN THIS AGREEMENT.

This End User License Agreement ("**Agreement**") is between Trimble Navigation Limited, located at 935 Stewart Drive, Sunnyvale, CA 94085, U.S.A. and/or its Affiliates ("**Trimble**") and the customer (individual or entity) that has downloaded or otherwise procured the licensed Software (as defined below) for use as an end user ("**You**"). This Agreement covers any Software and supporting technical documentation provided with the Software ("**Documentation**").

1. Definitions

"Affiliate" shall mean any entity that directly or indirectly through one or more entities, controls, is controlled by, or is under common control with a Trimble party. For purposes of this definition, the term **"control"** as applied to any entity, means the possession, directly or indirectly, of the power to direct or cause the direction of the management of that entity, whether through ownership of voting securities or otherwise.

"Effective Date" means the earlier of the date You sign an Order Form or the date on which the Software is first made available to You.

"Order Form" means any order which is entered into by Trimble (or an authorized Trimble distributor or reseller) and You under which You are provided the Software. Each Order Form for the Software shall be deemed a part of this Agreement. This Agreement is binding on You whether or not You executed an Order Form with Trimble. Order Forms may not vary the terms of this Agreement. Only a written agreement, signed by Trimble (not a Trimble distributor or reseller) may vary the terms of this Agreement.

"Software" means the Trimble software product(s) provided in connection with this Agreement in object code form (or as otherwise specified in any related Order Form). "Software" shall also include any releases provided to or purchased by You under any separate support and maintenance agreement You may enter into with Trimble. Unless otherwise noted, the Software and Documentation are referred to collectively herein as "Software".

"Third-Party Software" means any third-party software that is provided to You by Trimble under this Agreement or under separate terms and conditions.

"Trimble Supplier" means either Trimble or an authorized distributor or reseller of Trimble products or services which has entered into an Order Form with You.

2. License

2.1. Grant of License. Subject to all of the terms and conditions of this Agreement, Trimble grants You a non-transferable, non-sublicensable, non-exclusive license to use the Software in machine-readable form on any computer and operating system for which it was intended, but solely (a) for your own internal business purposes at the location specified in the applicable Order Form or otherwise agreed to by Trimble (the **"Site"**); (b) in accordance with the Documentation; and (c) in accordance with any additional license term, subscription term or other user, seat, computer, field of use or other restrictions set forth in the applicable Order Form or otherwise specified by Trimble.

2.2. Installation and Copies. Trimble shall make available the Software and Documentation by disk, other media, or as embedded in a device, or make it available for download in electronic form. Trimble shall also provide You with electronic passwords or other enabling mechanisms if necessary to permit the

licensed usage of the Software. All licenses shall commence, and delivery shall be deemed to occur, as of the Effective Date (or, if later, such date on which the Software and license keys are first made available to You). If your Order Form is with a Trimble distributor or reseller, that distributor or reseller (and not Trimble) is solely responsible for delivery to You and Trimble has no liability for any failure to deliver. If the Software requires license keys to operate as licensed to You, the applicable Trimble Supplier will deliver such license keys to You.

2.3. Software Intended to be Installed on Computers. The Software is licensed as a single product. You may not separate its component parts for use on more than one computer except as specifically authorized in this Agreement. You may copy and install on your computers for use only by your employees the number of copies of the Software for which You have paid the applicable license fee or have been authorized in writing by Trimble. You may transfer the Software from one computer to another computer provided that the computer to which the Software is transferred is located at the Site and the Software is completely removed and de-installed from the prior computer. If You are permitted by Trimble to install the Software on a network server, and You transfer the Software from the Site to a new location, You must provide Trimble with written notice of the new site prior to such transfer. You may also make a reasonable number of copies of the Software only for back-up and archival purposes. This Paragraph 2.3 does not apply to any software embedded on Trimble devices.

2.4. License Restrictions.

2.4.1 You shall not (and shall not allow any third party to): (a) decompile, disassemble or otherwise reverse engineer the Software or attempt to reconstruct or discover any source code, underlying ideas, algorithms, file formats or programming interfaces of the Software by any means whatsoever (except and only to the extent that applicable law prohibits or restricts reverse engineering restrictions). To the extent any applicable mandatory laws give You the right to perform any of the aforementioned activities without Trimble's consent in order to gain certain information about the Software for purposes specified in the respective statutes (e.g., interoperability), You hereby agree that, before exercising any such rights, You shall first request such information from Trimble in writing detailing the purpose for which You need the information. Only if and after Trimble, at its sole discretion, partly or completely denies your request, may You exercise such statutory rights; (b) distribute, sell, sublicense, rent, lease or transfer the Software (or any portion thereof), nor use the Software (or any portion thereof) for time sharing, hosting, service provider or like purposes; (c) provide the Software to a third party on a temporary basis and/or use the Software for the benefit or purposes of a third party whether by means of lease, loan, data processing services (e.g. "fee for service") or otherwise, unless You are a reseller of Trimble products under separate written agreement with Trimble and authorized by Trimble to do so; (d) remove any product identification, proprietary, copyright, or other notices contained in the Software; (e) modify any part of the Software, create a derivative work of any part of the Software, or incorporate the Software into or with other software, except to the extent expressly authorized in writing by Trimble; (f) attempt to circumvent or disable the security key mechanism that protects the Software against unauthorized use (except and only to the extent that applicable law prohibits or restricts such restrictions) and/or any licensing control features; or (g) publicly disseminate performance information or analysis (including, without limitation, benchmarks or comparison testing or analysis) from any source relating to the Software or disclose to any third-party or release any results thereof (all of which information shall be considered Trimble confidential information) without Trimble's prior written consent.

2.4.2 If the Software has been provided to You as embedded in any hardware device, You are not licensed to separate the Software from the hardware device. If the Software has been provided to You separately from a hardware device but is intended to be loaded onto a hardware device specified by Trimble (such as a firmware update), your license is limited to loading the Software on the device specified by Trimble in the Documentation, and for no other use.

2.4.3 You agree to use all reasonable efforts to prevent unauthorized use and disclosure of the Software.

2.5. Evaluation Software. Subject to the terms and conditions of this Agreement and during its term, Trimble may, in its discretion, provide You with pre-release, beta or other software on an evaluation basis ("**Evaluation Software**"). You may use Evaluation Software solely for internal evaluation purposes for thirty (30) days from receipt of the Evaluation Software (unless otherwise agreed by Trimble in writing) (the **"Evaluation Period"**).

Unless You pay the applicable license fee for the Software, the Evaluation Software may become inoperable and, in any event, your right to use the Evaluation Software automatically expires at the end of the Evaluation Period. Evaluation Software shall be subject to all restrictions on Software set forth in this Agreement. You shall treat all Evaluation Software as Confidential Information of Trimble and shall return or destroy any copies of Evaluation Software upon expiration of the applicable Evaluation Period. Any and all suggestions, reports, ideas for

improvement and other feedback of any type You provide regarding the Evaluation Software are the sole property of Trimble, and Trimble may use such information in connection with any of its products or services without any obligation or restriction based on intellectual property rights or otherwise. You acknowledge that all Evaluation Software is provided "AS IS" and may not be functional on any machine or in any environment. THE WARRANTIES OF SECTION 5 DO NOT APPLY TO EVALUATION SOFTWARE. TRIMBLE AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES RELATING TO THE EVALUATION SOFTWARE, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT.

2.6. Internet-Based Services Components. Some features of the Software may require connection to the Internet directly or through a wireless connection in order to function. Such features may result in the transfer of certain data over such connections, which may or may not be secure or encrypted. You are solely responsible for obtaining any necessary Internet wireless subscription plans with the applicable service providers. You further acknowledge that Trimble is not responsible for the availability of Internet or wireless connections or the security or integrity of data transmitted over such connections.

2.7 Ownership. Notwithstanding anything to the contrary contained herein, except for the limited license rights expressly provided herein, Trimble, its licensors and suppliers have and will retain all rights, title and interest (including, without limitation, all patent, copyright, trademark, trade secret and other intellectual property rights) in and to the Software and all copies, modifications and derivative works thereof (including any changes which incorporate any of your ideas, feedback or suggestions). You acknowledge that You are obtaining only a limited license right to the Software and that irrespective of any use of the words "purchase", "sale" or like terms hereunder no ownership rights are being conveyed to you under this Agreement or otherwise.

2.8 Copyright. All title, rights and copyrights in and to the Software (including, but not limited to, any images, photographs, animations, video, audio, music, and text incorporated into the Software, as well as all intellectual property rights), the Documentation and other accompanying written materials, and any copies of the Software are owned by Trimble, its licensors and/or suppliers. You shall not remove, cover, or alter any of Trimble's patent, copyright, or trademark notices placed upon, embedded in, or displayed by the Software or on its Documentation, packaging and related materials.

3. Payment

3.Payment. Unless a Software has been made available by Trimble at no charge, You shall pay all fees associated with the Software licensed and any services purchased hereunder as set forth in the applicable Order Form. All payments shall be made in the currency specified in the applicable invoice within thirty (30) days of your receipt of such invoice, unless otherwise specified in writing by the Trimble Supplier. Except as expressly set forth herein, all fees are non-refundable once paid. You shall be responsible for all taxes, withholdings, duties and levies arising from the order (excluding taxes based on the net income of the Trimble Supplier). Any late payments shall be subject to a service charge equal to 1.5% per month of the amount due or the maximum amount allowed by law, whichever is less.

4. Term of Agreement

4.1.Term. This Agreement is effective as of the Effective Date and expires at such time as all license and service subscriptions hereunder have expired in accordance with their own terms (the "**Term**"). Either party may terminate this Agreement (including all related Order Forms) if the other party: (a) fails to cure any material breach of this Agreement within thirty (30) days after written notice of such breach; (b) ceases operation without a successor; or (c) seeks protection under any bankruptcy, receivership, trust deed, creditors arrangement, composition or comparable proceeding, or if any such proceeding is instituted against such party and not dismissed within sixty (60) days. If You have entered into a separate written agreement with Trimble which governs the Software and that agreement is terminated, then this Agreement automatically terminates and You shall no longer have any right to use the Software. Termination is not an exclusive remedy and the exercise by either party of any remedy under this Agreement will be without prejudice to any other remedies it may have under this Agreement, by law, or otherwise. For clarity, even if You have entered into an Order Form with a Trimble distributor or reseller, Trimble is a third party beneficiary to that Order Form and has the right to terminate this Agreement as set forth in this Section 4 (Term of Agreement).

If a Software has been made available by Trimble at no charge, the license remains effective until terminated in accordance with subparagraphs (b) to (c) mentioned above; You decide to terminate this Agreement by ceasing all use of the Software and destroying or returning all copies; or, without prejudice to

any other rights, Trimble decides to terminate this Agreement with or without notice if You fail to comply with the terms and conditions of this Agreement.

4.2.Termination. Upon any expiration or termination of this Agreement, You shall cease any and all use of any Software and Evaluation Software and destroy all copies thereof and so certify to Trimble in writing.

5.3.Survival. Paragraph 2.4 (License Restrictions), Paragraph 2.7 (Ownership), Paragraph 2.8 (Copyright), Section 3 (Payment), Section 4 (Term of Agreement), Paragraph 5.3 (Disclaimer of Warranties), Section 8 (Limitation of Remedies and Damages), Section 9 (Confidential Information), Section 10 (Export Compliance) and Section 11 (General) shall survive any termination or expiration of this Agreement.

5. Limited Warranty and Disclaimer

6.1.Limited Warranty. Trimble warrants to You that for a period of ninety (90) days from the Effective Date (the "**Warranty Period**") the Software shall operate in substantial conformity with the Documentation. Because the Software is inherently complex and may not be completely free of nonconformities, defects or errors, You are advised to verify your work. Trimble does not warrant that the Software will operate error free or uninterrupted, that it will meet your needs or expectations, that all nonconformities can or will be corrected, or the results obtained through use of the Software. Trimble's sole liability (and your exclusive remedy) for any breach of this warranty shall be, in Trimble's sole discretion, to use commercially reasonable efforts to provide You with an error-correction or work-around which corrects the reported non-conformity, or if Trimble determines such remedies to be impracticable within a reasonable period of time, to refund the license fee paid for the Software. A Trimble Supplier other than Trimble may fulfill Trimble's warranty obligations hereunder on behalf of Trimble. Trimble Suppliers shall have no obligation with respect to a warranty claim unless notified of such claim within the Warranty Period.

5.2.Exclusions. The above warranty shall not apply: (a) if the Software is used with hardware or software not specified in the Documentation; (b) if any modifications are made to the Software by You or any third party; (c) to defects in the Software due to accident, abuse or improper use by You; (d) to Software provided on a no charge or evaluation basis; (e) to any Third Party Software; or (f) to any Software obtained as freeware, whether from Trimble, a Trimble Supplier or otherwise.

5.3.Disclaimer of Warranties. THIS SECTION 5 IS A LIMITED WARRANTY AND, EXCEPT AS EXPRESSLY SET FORTH IN THIS SECTION 5, THE SOFTWARE AND ALL SERVICES ARE PROVIDED "AS IS." NEITHER TRIMBLE NOR ITS SUPPLIERS MAKES ANY OTHER WARRANTIES, CONDITIONS OR UNDERTAKINGS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. YOU MAY HAVE OTHER STATUTORY RIGHTS. HOWEVER, TO THE FULL EXTENT PERMITTED BY LAW, THE DURATION OF STATUTORILY REQUIRED WARRANTIES, IF ANY, SHALL BE LIMITED TO THE LIMITED WARRANTY PERIOD. YOU ASSUME THE ENTIRE RISK AS TO RESULTS AND PERFORMANCE OF THE SOFTWARE. IN ADDITION, TRIMBLE MAKES NO WARRANTY, EXPRESSED OR IMPLIED, TO SOFTWARE PROVIDED TO YOU FREE OF CHARGE INCLUDING WITHOUT LIMITATION FOR ACCURACY, COMPLETENESS, SUITABILITY, PERFORMANCE OR USE. ANY SOFTWARE PROVIDED AT NO COST IS PROVIDED BY TRIMBLE "AS IS."; ALL IMPLIED WARRANTIES ARE IN SUCH CASE DISCLAIMED

6. Support & Maintenance

Trimble shall provide the support and maintenance services, if any, as separately purchased by You and specified in the applicable Order Form. Such support and maintenance shall be provided pursuant to Trimble's standard service terms which are available upon request from Trimble. Trimble Suppliers may provide additional support services under separate written agreement, but Trimble is not responsible for any such support unless being a contracting party.

7. Professional Services.

The Trimble Supplier shall provide the number of person-days, if any, of professional consulting services ("**Professional Services**") purchased in the applicable Order Form and related statement of work. If Trimble is providing Professional Services, unless agreed in a separate written agreement, all Professional Services shall be provided pursuant to Trimble's standard service terms which are available upon request from Trimble. If your Order Form is with a Trimble Supplier other than Trimble, that party (and not Trimble) is solely responsible for providing Professional Services and Trimble, not being a contracting party, has no liability related to such services.

8. Limitation of Remedies and Damages.

8.1. NEITHER TRIMBLE NOR TRIMBLE'S SUPPLIERS SHALL BE LIABLE FOR ANY LOSS OF USE, LOST DATA, FAILURE OF SECURITY MECHANISMS, INTERRUPTION OF BUSINESS, OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING LOST PROFITS), REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, EVEN IF INFORMED OF THE POSSIBILITY OF SUCH DAMAGES IN ADVANCE.

8.2. NOTWITHSTANDING ANY OTHER PROVISION OF THIS AGREEMENT, TRIMBLE AND ITS SUPPLIERS' ENTIRE LIABILITY TO YOU UNDER THIS AGREEMENT SHALL NOT EXCEED THE AMOUNT ACTUALLY PAID BY YOU TO TRIMBLE UNDER THIS AGREEMENT.

8.3. THE SOFTWARE IS NOT FAULT TOLERANT AND IS NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE IN LIFE SUPPORT, MEDICAL, EMERGENCY, MISSION CRITICAL OR OTHER STRICT LIABILITY OR HAZARDOUS ACTIVITIES ("HIGH RISK ACTIVITIES"). TRIMBLE SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR HIGH RISK ACTIVITIES. YOU REPRESENT AND WARRANT THAT YOU WILL NOT USE THE SOFTWARE (OR PERMIT IT TO BE USED) FOR HIGH RISK ACTIVITIES, AND AGREE THAT TRIMBLE WILL HAVE NO LIABILITY FOR USE OF THE SOFTWARE IN HIGH RISK ACTIVITIES. YOU AGREE TO INDEMNIFY AND HOLD HARMLESS TRIMBLE FOR ANY DAMAGES, LIABILITIES OR OTHER LOSSES RESULTING FROM SUCH USE.

8.4. The parties agree that the limitations specified in this Section 8 will survive and apply even if any limited remedy specified in this Agreement is found to have failed of its essential purpose.

9. Confidential Information.

Any software, Documentation or technical information provided by Trimble (or its suppliers and agents) shall be deemed "Trimble Confidential Information" without any marking or further designation. Except as expressly authorized herein, You will hold in confidence and not use or disclose any Trimble Confidential Information. Without limiting the foregoing, You acknowledge that the Software constitutes the valuable confidential information and trade secrets of Trimble and, accordingly, You shall at all times, both during the term of this Agreement and thereafter keep in trust and confidence all the Software, and shall not disclose the same to any third party without Trimble's prior written consent. You acknowledge that disclosure of Trimble Confidential Information would cause substantial harm to Trimble that could not be remedied by the payment of damages alone and therefore that upon any such disclosure by You, Trimble shall be entitled to appropriate equitable relief in addition to whatever remedies it might have at law.

10. Export Compliance

You agree to comply with all applicable laws and regulations of the United States of America ("U.S.") and of other jurisdictions (national, state, and local) to the extent that they may govern your use of the Software. In addition, You acknowledge that the Software may be subject to export restrictions by the U.S. government and by certain other governments. You shall not, and shall not allow any third party to, directly or indirectly, remove or export or allow the export or re-export of any part of the Software or any direct product thereof: (a) into (or to a national or resident of) any embargoed or terrorist-supporting country; (b) to anyone on the U.S. Commerce Department's Table of Denial Orders or U.S. Treasury Department's list of Specially Designated Nationals; (c) to any country to which such export or re-export is restricted or prohibited, or as to which the U.S. government or any agency thereof requires an export license or other governmental approval at the time of export or re-export without first obtaining such license or approval; or (d) otherwise in violation of any export or import restrictions, laws or regulations of any U.S. or foreign agency or authority laws, or in violation of any applicable export control laws in the country where the Software has been obtained or is used. You agree to the foregoing and warrant that You are not located in, under the control of, or a national or resident of any such prohibited country or on any such prohibited party list. The Software is further restricted from being used for the design or development of nuclear, chemical, or biological weapons or missile technology, or for terrorist activity.

11. General.

11.1. *Assignment.* This Agreement will bind and inure to the benefit of each party's permitted successors and assigns. Trimble may assign this Agreement to any Affiliate or in connection with a merger, reorganization, acquisition or other transfer of all or substantially all of Trimble's assets or voting securities. You may not assign or transfer this Agreement, in whole or in part, without Trimble's written consent. Any attempt to transfer or assign this Agreement without such written consent will be null and void. If You obtain such consent from Trimble, You shall permanently assign or transfer all of your rights under this Agreement, provided You retain no copies and You transfer all of the Software (including all

component parts, the media and printed materials, any upgrades, and this Agreement), and the recipient agrees to the terms of this Agreement. If the Software portion is an upgrade, any assignment or transfer must include all prior versions of the Software.

11.2. *Partial Invalidity.* If any provision of this Agreement is held to be invalid, illegal or unenforceable to any extent, that provision shall, if possible, be construed as though more narrowly drawn, if a narrower construction would avoid such invalidity, illegality or unenforceability, or, if that is not possible, such provision shall, to the extent of such invalidity, illegality or unenforceability, be severed, and the remaining provisions of this Agreement shall remain in effect, provided, however, that the court shall have authority and jurisdiction to, and shall, add to this Agreement a provision as similar in terms and intended to effect to such severed provision as may be possible and be legal, valid and enforceable.

11.3. Governing Law; Jurisdiction and Venue.

- 11.3.1. If You obtained this Software in the U.S., this Agreement is governed by the laws of the State of California and the U.S. without regard to conflicts of laws provisions thereof, and without regard to the United Nations Convention on the International Sale of Goods ("UNCISG"). In such case the jurisdiction and venue for actions related to the subject matter hereof are the State of California and U.S. federal courts located in Santa Clara County, California, and both parties hereby submit to the personal jurisdiction of such courts.
- 11.3.2. If You obtained this Software outside the U.S., this Agreement is governed by the laws of The Netherlands (country where Trimble Europe B.V., an Affiliate to Trimble, is located), excluding its rules governing conflicts of laws and without regard to the UNCISG. In such case each jurisdiction and venue for actions related to the subject matter hereof are the Dutch courts of the District of Oost-Brabant, The Netherlands, and both parties hereby submit to the personal jurisdiction of such courts.

11.4. *Attorneys' Fees and Costs.* The prevailing party in any action to enforce this Agreement will be entitled to recover its attorneys' fees and costs in connection with such action.

11.5. *Notices and Reports.* Any notice or report hereunder shall be in writing. If to Trimble, such notice or report shall be sent to "Trimble Navigation Limited, 935 Stewart Drive, Sunnyvale, California 94085, U.S.A." to the attention of "General Counsel – Legal Notice". If to You, such notice or report shall be sent to the address You provided upon placing your order or at the time the Software has been first made available to You. Notices and reports shall be deemed given: (a) upon receipt if by personal delivery; (b) upon receipt if sent by certified or registered U.S. mail (return receipt requested); or (c) three (3) business days after being sent by a reputable international courier requiring signature for receipt, addresses to the party at its notice address. Either party may change its notice address by written notice to the other.

11.6. *Amendments; Waivers.* No supplement, modification, or amendment of this Agreement shall be binding, unless executed in writing by a duly authorized representative of each party to this Agreement. No waiver will be implied from conduct or failure to enforce or exercise rights under this Agreement, nor will any waiver be effective unless in a writing signed by a duly authorized representative on behalf of the party claimed to have waived.

11.7. *Entire Agreement.* This Agreement is the complete and exclusive statement of the mutual understanding of the parties and supersedes and cancels all previous written and oral agreements and communications relating to the subject matter of this Agreement. No provision of any purchase order or in any other business form employed by You will supersede the terms and conditions of this Agreement, and any such document issued by a party hereto relating to this Agreement shall be for administrative purposes only and shall have no legal effect. Notwithstanding the foregoing, if You have entered into a separate written license agreement signed by Trimble for use of the Software, the terms and conditions of such other agreement shall prevail over any conflicting terms or conditions in this Agreement.

11.8. *Independent Contractors.* The parties to this Agreement are independent contractors. There is no relationship of partnership, joint venture, employment, franchise or agency created hereby between the parties. Neither party will have the power to bind the other or incur obligations on the other party's behalf without the other party's prior written consent.

11.9. *Force Majeure.* Neither party shall be liable to the other for any delay or failure to perform any obligation under this Agreement (except for a failure to pay fees) if the delay or failure is due to unforeseen events, which occur after the signing of this Agreement and which are beyond the reasonable control of the parties, such as strikes, blockade, war, terrorism, riots, natural disasters, refusal of license by the government or other governmental agencies, in so far as

such an event prevents or delays the affected party from fulfilling its obligations and such party is not able to prevent or remove the force majeure at reasonable cost.

11.10. Government End-Users. The Software is commercial computer software. If the user or licensee of the Software is an agency, department, or other entity of the U.S. Government, the use, duplication, reproduction, release, modification, disclosure, or transfer of the Software, or any related documentation of any kind, including technical data and manuals, is restricted by a license agreement or by the terms of this Agreement in accordance with Federal Acquisition Regulation 12.212 for civilian purposes and Defense Federal Acquisition Regulation Supplement 227.7202 for military purposes. The Software was developed fully at private expense. All other use is prohibited.

11.11. Third-Party Software. If designated in the Documentation, the Software may contain or be provided with certain Third-Party Software (including software which may be made available to You in source code form). Such Third-Party Software is not licensed hereunder and is licensed pursuant to the terms and conditions indicated in the Documentation and/or on the Third-Party Software conditions ("**Third-Party License**"). Except as may be set forth in the Third-Party License, neither Trimble nor Trimble Suppliers offer any warranty in connection with any Third-Party Software and neither Trimble nor Trimble Suppliers shall be liable to You for such Third-Party Software.

11.12. Official Language. The official language of this Agreement is English. For purposes of interpretation, or in the event of a conflict between English and versions of this Agreement in any other language, the English language version shall be controlling.

11.13. Reservation of Rights. Trimble reserves all rights not expressly granted by this Agreement.

If an executed agreement exists between You and Trimble at any time regarding the Software, the terms of that agreement shall supersede the terms of this Agreement in its entirety. Thus, if You enter into a separate written agreement with Trimble regarding the Software, that agreement (not this one) will control your use of the Software; and further if that agreement is terminated, You will not have the right to use the Software under the terms of this Agreement after termination. Notwithstanding the foregoing, pre-printed terms and conditions on your Order form shall not supersede this Agreement.

Trimble Navigation Limited, 935 Stewart Drive, Sunnyvale, CA 94085, U.S.A.

Data Collector Warranty Program

Spectra Precision would like to make you aware of the warranty program. A new data collector that has been purchased and is still under the one year factory warranty or under an extended warranty will be authorized for software updates. Data collectors that are not currently under a warranty plan are eligible to purchase an extended warranty. There are Survey Pro software only warranties that will authorize the data collector for software updates, and there are warranties that cover both the data collector hardware and Survey Pro software. The extended warranties are a good way to protect your investment in your equipment.

The Survey Pro installation program will use your internet connection to compare the data collector's serial number against a data base that contains the warranty status on all units. If the unit is under a valid warranty, the installation will proceed. If the unit is not covered under warranty, then a message will be displayed informing you of this and the installation will stop.

To receive Survey Pro minor improvement releases, identified by the version numbering system, you only need to be on the current version of the latest minor update. In other words, if you have version 5.0.x you are authorized for a version 5.0.5 improvement release automatically. For minor updates, 5.0 to 5.1 for example, it is now required that the data collector or Survey Pro software be on a current warranty plan.

The warranty plans are listed on Spectra Precision price lists. Data collector serial numbers are required in order to generate the proper registration codes for your unit and to log the warranty plan into the database.

Survey Pro User Guide Release Notes, November 2014

The content of this new Survey Pro User Guide reflects the changes and enhancements made to Survey Pro 5.5 compared to Survey Pro 5.4. The following changes and add-ups have been introduced in this guide:

1. The current coordinates of the instrument (GNSS rover or rod in Optical) are continuously shown in the lower part of the active Map View. The coordinates of the last saved position are also displayed in the upper part of that screen. These new features are described in *Chapter 2 - Introduction to the Survey Pro User Interface (Map View section)*.
2. Central: A new feature allowing you to exchange data via a cloud service named Spectra Precision Central. This is discussed in *Chapter 3 - Creating a job (Connecting to Spectra Precision Central)*.
3. The management of network profiles now makes a distinction between those profiles used by a network rover and those used by a network base (see *Chapter 4 - Choosing a Surveying Mode..., Managing Network Profiles*).
4. RTX: A new feature that can be used with RTX-enabled GNSS receivers. It allows a rover to collect points with centimeter accuracy without the need for a base. A new section (*RTX Correction Service*) was created in the *Appendix* chapter to address this topic. See also *Chapter 4 - Starting an RTK Rover*.
5. A third method, called "Multiple Backsights", was added to set up the station on a known point. See *Chapter 5 - Optical Surveying (Station Setup on Multiple Backsights section)*.
6. The GNSS Data Collection screen has been simplified. The **Control** function has been removed because it is redundant with **Survey > Control Points**. The **Feature** and **Offset** functions have been moved to the Survey menu. This has freed room on this screen for displaying more real-time GNSS status information. See *Chapter 6, GNSS Surveying*.
7. You can now log features at regular intervals of **vertical** distance. See *Chapter 6, GNSS Surveying, Collecting Features*. In optical surveying, using a robotic total station, the **Auto Collect** function (not described in this manual) was modified to benefit from this new capability.
8. Resections are now shown differently in the Raw Data Viewer so it's easier to see the different measurement steps when using the Multiple Backsights method to setup a station.
9. A short explanation on how to use the Quick Pick (the yellow star icon in the command bar) is now provided in the *Appendix* chapter.

Survey Pro V5.5 also includes changes to the Roads function (not described in this manual). Survey Pro can now view (not edit) a road project imported from SPSO in RoadXML (RXL) format. Starting from an RXL file opened in Survey Pro, users can now stake the road project described in this file.


Table of Contents

1. Welcome to Survey Pro	1
Scope.....	1
Conventions Used.....	2
2. Introduction to the Survey Pro User Interface	3
Home Screen and Main Menu.....	3
Switching Between Home Screen and Main Menu.....	4
Command Bar Description.....	4
How to Customize the Home Screen	5
Adding a Function.....	6
Removing a Function.....	6
Moving a Function.....	6
Home Screen Pages	6
Screen Details.....	7
Map View.....	8
Displayed Coordinates	10
Zoom Toolbar.....	10
Snap-To Toolbar.....	11
“User Zoom Extent” Button.....	11
“Follow-me” Function.....	12
3. Creating a Job.....	13
Job Settings.....	14
Importing Data	16
Editing Points	16
Managing Points	16
Creating a New Point.....	18
Modifying a Point.....	19
Multi-Point Selection.....	19
Editing Polylines.....	20
Editing Alignments	20
Exporting Data	20
Generating Survey Reports.....	20
Sharing Files Over the Internet.....	22
Connecting to Spectra Precision Central	23
4. Choosing a Surveying Mode - Connecting Survey Pro to an Instrument.....	24
Instrument Icon and Options List.....	24
Optical Mode - Connecting Survey Pro to an Optical Instrument	26
Remote Control Screen	27
GNSS Mode - Connecting Survey Pro to a GNSS Receiver.....	28
Introduction to Receiver Profiles.....	28
Adding Receiver Profiles	29
Managing Your Receiver Profiles.....	30
Modifying a Receiver Profile.....	32
Managing Network Profiles.....	34
Checking the GNSS Status.....	35
Leveling Mode - Getting Ready for Leveling.....	37
Auto/Manual Leveling Methods.....	37
Choosing Leveling Mode	38

Level Settings.....	38
5. Optical Surveying.....	39
Instrument Setup.....	39
Station Setup on a Known Point.....	39
Station Setup on Unknown Point, Resection Method	42
Station Setup Using Multiple Backsights.....	44
Variant to the Basic Station Setup Procedures	45
Remote Elevation.....	46
Fixing Station Setup.....	46
Point Measurement	47
Introduction to Traverse / Sideshot	47
Sideshot	47
Traverse.....	48
Repetition Shots.....	50
6. GNSS Surveying	52
Starting an RTK Base	52
Starting an RTK Rover	54
Collecting Data	58
Collecting Points.....	58
Collecting Topo SS Points.....	59
Collecting Offset Points	60
Collecting Features.....	61
Collecting Data Out of a Survey	62
Solving Calibration	63
Introduction to Calibration	63
Calibration Procedure, Illustrated	64
Special Case of One-Point Calibration	67
How Survey Pro Deals With Base Location.....	67
Detected Change of Base	68
Managing Reference Stations	68
Ending a Survey	69
7. Leveling	70
Introduction.....	70
What Leveling Is.....	70
Other Definitions	70
Creating or Selecting a Level Loop	72
Collecting Elevations in an Open Level Loop	73
Description of a Simple Level Loop.....	73
Collecting Elevations in a Simple Level Loop	75
Collecting Elevations for Sideshot and Stakeout Points.....	77
Adjusting a Closed Loop.....	78
Running the 2 Peg Test	79
8. Stakeout Routines.....	80
Selecting Points to Be Staked, “Next Point” Scenario.....	80
“By Managed Points” Method	81
Staking Points With a Mechanical Optical Instrument	82
Staking Points With a Robotic Optical Instrument	84
Staking Points With GNSS	86
Other Stakeout Routines	89
9. Survey Pro’s On-Board Version	90
Working With No Job Open.....	90

Working With a Job Open	94
Appendix.....	96
Advanced Information on Point Properties.....	96
Layers.....	96
Descriptions	96
Features & Attributes.....	97
Toggling Between Descriptions and Features.....	98
Quick Codes Function.....	99
Notes.....	100
Raw Data Viewer.....	101
Raw Data Viewer Toolbox	101
Editing Manual Shots	102
Memo for GNSS Users	102
Managing Smart Targets.....	103
Electronic Compass	103
Setting the Electronic Compass	103
Using the Electronic Compass	104
Quick Pick	105
RTX Correction Service.....	106
Using the Quick Start Button to Reduce Convergence Time.....	107

1. Welcome to Survey Pro

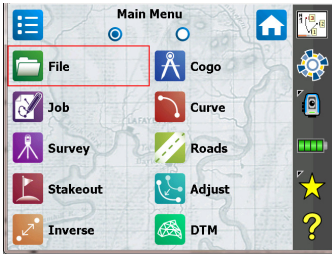

Congratulations on your decision to purchase a Spectra Precision product. Spectra Precision is serious about providing the best possible products to its customers and knows that you are serious about your tools. We are proud to welcome you to the Spectra Precision family.

Scope

This manual will guide you through your first steps using Survey Pro. Whether you are using optical or GNSS equipment, or whether you want to perform leveling fieldwork, you will find here key instructions and explanations for a successful start.

If you are new to Survey Pro, reading the first three sections will help you understand the organization and workflow of the software. Chapter 3 will also give all the details to understand what a “receiver profile” is and how it is used to easily connect to and configure a GNSS receiver for RTK and/or post-processing data collection.

The rest of the guide is dedicated to helping you start your field work.

- Station setup is an essential step when surveying with an optical instrument: this guide discusses the Known Point, Resection and Multiple Backsights routines, followed by a short description of a few standard surveying procedures (traverse/sideshot, repetition).
- Choosing the right coordinate system before starting a job with GNSS is also an essential step: the guide will take you through the different possible scenarios, followed by a short description of standard data collection procedures.
- Collecting elevations in level loops is explained in Chapter 7. *Leveling on page 70.*
- Stakeout routines are functions common to optical and GNSS surveying. These are introduced in 8. *Stakeout Routines on page 80.*
- The last section provides instructions specific to Survey Pro running on Nikon Nivo and Spectra Precision FOCUS total stations.

From your first successful experience with Survey Pro, based on the information provided in this guide, you will be able to extend your knowledge of the software to its many other functions, relying on your own experience as a surveyor and referring to the on-line Help whenever necessary.

Conventions Used

The following conventions are used:

- Text strings in **bold font** represent the names of software items such as fields, buttons, check boxes, tabs, messages, screens, menus, etc.
- The symbol “>” is placed between menus, tabs and/or buttons to indicate that you have to tap on these parts successively in that order.
- When referring to both optical instruments and GNSS receivers, the term “instruments” will be used to encompass the two types of equipment.

The following acronyms and abbreviations are used:

- BS: Backsight
- EDM: Electronic Distance Meter
- NEE: Northing, Easting, Elevation (grid coordinates)
- HA: Horizontal Angle
- LLH: Latitude, Longitude, Height (geodetic coordinates)
- PPM: Part Per Million
- SD: Slope Distance
- SS: Side Shot
- ZA: Zenith Angle

The following conventions are used when inputting or outputting angles:

- **Azimuths, latitudes, longitudes** are entered in degrees-minutes-seconds format and are represented as **DD.MMSSsss**, where:
 - **DD**: One or more digits representing the degrees
 - **MM**: Two digits representing the minutes
 - **SS**: Two digits representing the seconds
 - **sss**: Zero or more digits representing the decimal fraction part of the seconds.

E.g.: 212.0805 would indicate 212 degrees, 8 minutes and 5 seconds.

- **Bearings** can be entered in either of the following formats:
 - S32.0805W to indicate South 32 degrees, 8 minutes, 5 seconds West.
 - 3 32.0805 to indicate 32 degrees, 8 minutes, 5 seconds in quadrant 3.

When a field accepts a time for its input, the time is entered in hours-minutes-seconds format, which is represented as **HH.MMSSsss**, where:

- **HH**: One or more digits representing the hours
- **MM**: Two digits representing the minutes
- **SS**: Two digits representing the seconds
- **sss**: Zero or more digits representing the decimal fraction part of the seconds.





2. Introduction to the Survey Pro User Interface

Home Screen and Main Menu

On launching Survey Pro, you will first be asked to open a job. When done, the software will open at the **Home screen**. The home screen shows a selection of the functions you will most frequently use in the field. You can customize the Home screen based on your needs.

If this is your first time using Survey Pro, a message box will inform you how you can customize the items and layout of the functions on the Home screen (see *How to Customize the Home Screen on page 5*).

Because some of the available Survey Pro functions are mode dependent (optical, GNSS), there is a different Home screen for each mode. That also means there is a slightly different default Home screen depending on which instrument is used. See below, from left to right: Optical, GNSS, Leveling.

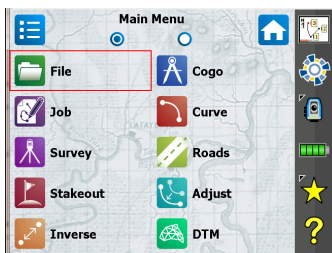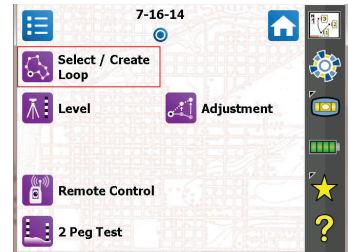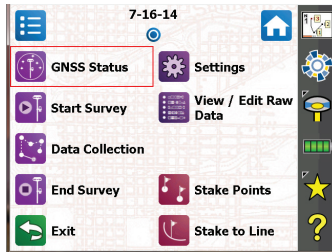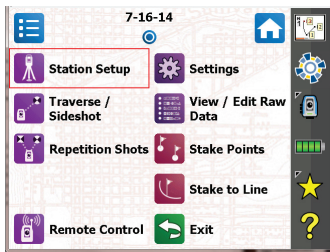





The functions available from the Home screen are taken from the **Main Menu**, which contains all the possible Survey Pro functions.

You can access the functions available from each submenu by tapping the corresponding submenu icon.


Each submenu, and all the functions attached to the submenu, are represented by icons of the same background color. For example the **File** submenu and its functions are all in green.

Switching Between Home Screen and Main Menu

The table below lists the buttons allowing you to navigate between the Home screen and the Main Menu and its submenus.





Icon / Check boxes	Result
	Takes you to the Home screen from the Main Menu or any submenu.
	Takes you back to the Main Menu from the Home screen.
	Takes you back to the Main Menu from an open submenu.
	The default Home screen has only one page so there's only one blue dot (a radio button), and it is necessarily checked. When adding functions through customization, other pages may be created for the Home screen to accommodate all the added functions (see <i>How to Customize the Home Screen on page 5</i>). In that case, tap one of the radio buttons to display the desired page.

Command Bar Description






The command bar is that portion of the Survey Pro screen that remains always displayed whether the Home screen, the Main Menu or one of its submenus is displayed. The command bar contains the following items:

- **Map View [1]:** This button will access the map view of the current job when it is tapped. The map view is available from many screens (see *Map View on page 8*).
- **Central [2]:** This icon shows the status of the connection to the *Spectra Precision Central* cloud file synchronization service. It will be in one of the four states below.

Icon	Spectra Precision Central Status
	Not signed into <i>Spectra Precision Central</i>
	Signed into <i>Spectra Precision Central</i> and file sync state is normal, with no errors.
	Signed into <i>Spectra Precision Central</i> ; file synchronization in progress.
	Signed into <i>Spectra Precision Central</i> , and there is some problem with the file sync state.







Tap this icon to sign in to your organization’s cloud account, or to see more detailed information about the file sync state once you are signed in.

- **Instrument Used [3]:** The Instrument icon indicates the mode (optical, GNSS or leveling) that the software is in, and the type of instrument the software is currently associated with.

Icon	Current Instrument Selection
	Optical instrument
	GNSS receiver
	Leveling

This icon is also used to change the instrument and perform additional settings on this instrument. See *4. Choosing a Surveying Mode - Connecting Survey Pro to an Instrument on page 24.*

- **Battery Level [4]:** The battery icon displays the condition of the data collector's rechargeable battery. The icon has five variations depending on the level of charge remaining, and a sixth variation to indicate battery charging.

Icon	Meaning
	100% charge remaining
	75% charge remaining
	50% charge remaining
	25% charge remaining
	Less than 5% charge remaining
	Battery charging from AC adaptor

Tapping the battery icon is a shortcut to the Windows Mobile Power Settings screen.

- **Quick Pick [5]:** The Quick Pick button will open a customizable list of routines. To quickly access a routine, just tap on it (see *Quick Pick on page 105*).
- **Online Help [6]:** This button opens the online help, which allows you to access information for each screen.

How to Customize the Home Screen

A message is displayed right after opening or creating a job asking you to “**Tap and hold on menu items to manage the Home screen**”. This message prompts you to customize the Home menu so that only the functions you will most frequently be using in the field will be made available from this screen.


After you have become familiar with the customization process and next time you launch Survey Pro, you can dismiss the message by checking the **Don't show this again** prompt before tapping **OK** to close the message.

Adding a Function

This is a three-step procedure:

- Go to the Main Menu, then to the submenu containing the function you would like to add to the Home screen.
- Tap and hold the corresponding function item and select **Add to Home**. Survey Pro then shows the Home screen with all the possible free locations for the new function, all represented as unnamed icons. Note at this point that all the icons are shown with the same background color (see example).
- Tap on a free icon (an unnamed one) or on the icon of an existing function. The new function is inserted at the tapped location. Icon colors are then restored.

If you tap on an existing function, this function and the next ones are shifted down by one location. Survey Pro will automatically create a new page of Home screen if the resulting number of functions on the screen is greater than what the screen can accommodate.

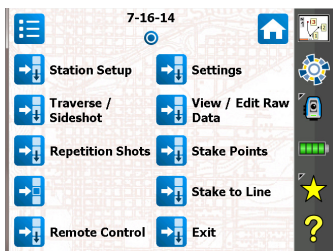

Removing a Function

On the Home screen, tap and hold the function you want to remove and select **Remove Item**. This instantly removes the function from the Home screen.

Moving a Function

- On the Home screen, tap and hold the function you want to move and select **Move Item**. Apart from the function you want to move, which keeps its original appearance, all other function items change color to blue.
- Tap on the location where you wish to move the function. This may be a free location, or the location of an existing function. If you tap on an existing function, the moved function will be inserted at the selected location and the function at that location and the ones that follow will be moved down.


Home Screen Pages

The default home screen consists of a single page. You may add up to three additional pages as part of the Home screen in order to make your many favorite functions accessible from this set of pages.

- Adding a page is done by tapping and holding any function on the Home screen and selecting **Insert Page Before** or **Insert Page After**.
- Switching from one page to the other is done by tapping on radio buttons at the top of the screen.
- Removing a page is done by tapping any location on that page and selecting **Remove Page**. This action requires user confirmation.

Screen Details

The screen example below illustrates the different types of items you will usually encounter on the screen when using the different Survey Pro functions:

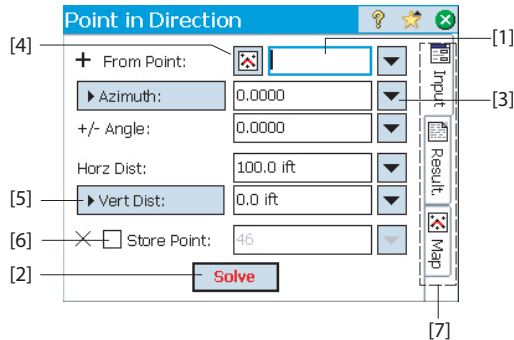







- Input Field **[1]**: An area where you can enter a specific value.
- Output Field: Only displays a value that cannot be changed.
- Simple Button **[2]**: Typically used to run the function described by its name. Just tap it to run the function. When the button name appears in red characters, you can alternately press the Enter key on the keypad to perform the same action.
- Power Button **[3]**: Typically used to provide context-sensitive functions to modify the corresponding field. Once you have tapped on it, a drop-down list will appear with several choices. Simply tap the desired choice from the drop-down list.
- Choose From Map Button **[4]**: Always associated with a field where an existing point is required. When the button is tapped, a map view is displayed. To select a point for the required field, just tap it from the map.


NOTE: If you tap a point from the map view that is located next to other points, another screen will open that displays all of the points in the area that was tapped. Tap the desired point from the list to select it.

- Scroll buttons **[5]**: When a button label is preceded with the > symbol, it indicates that the button label can be changed by tapping it, thus changing the type of value that would be entered in the associated field. As you continue tapping a scroll button, the label will cycle through all the available choices.
- Check boxes **[6]**: Tap on these boxes to successively check or clear the corresponding option.
- Tabs **[7]**: Many screens show tabs, which look like the tabs on index cards. Tapping on a tab displays a subset of information part of the selected screen.

The following buttons will appear in the area usually occupied by the command bar.

Item	Function
	OK button. Accepts the changes made and closes the window.
	Cancels the changes made in the open window
	Closes the current window
	Quick access to the relevant Settings screen
	Quick access to the Help system
	Quick access to the Quick Pick list.

Map View

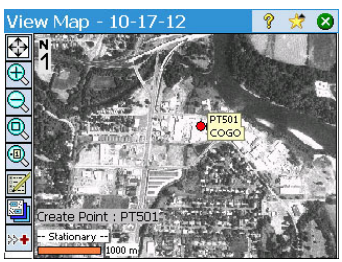



The *map view* is a graphical representation of the objects in the current job. It will show *basemaps* in the background if you are using one (see screen example).

Basemap files may be either raster images (such as a georeferenced TIFF file, or a JPG image with an associated world file) or CAD drawings (DXF files).


There are different map views depending on how the map view is accessed. Each can display slightly different information, such as a vertical profile. A bar is shown at the bottom of every map view that indicates the scale. The buttons along the left edge of the screen allow you to change what is displayed in the map view.

TIP: You can pan around your map by dragging your stylus across the screen.

The “main” map view is the one you get after tapping  in the command bar (from the Home screen or Main Menu).

From all those screens including a  button, you will also display a map view after tapping this button.

The “main” map view, as well as any map view accessible from a survey routine, will also function as an “active” map. That means you can perform several actions directly from the map. Tap and hold on the map to bring up a context menu of available actions. The actions available will depend on what you have selected at the tap-and-hold location.

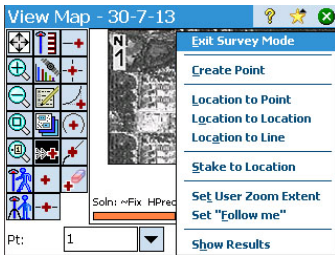

If Optical or GNSS is selected, the main map can also function as an interface to collect measurements. Tap and hold on the main map and choose **Survey Mode** to enable the Measurement interface (see screen example for GNSS).

When in **Survey Mode**, you can collect data from the main map by tapping on one of the available buttons (see table below).

You can also press the Enter key to trigger an observation. By default, the Enter key will trigger a “Topo” observation. You can change the Enter key to trigger a point observation by clearing the **Survey Map Use Enter Button for Topo** prompt on the **Job > Settings > Surveying** tab.

Shortcut buttons are available to optimize your work. These are defined below:

Optical	Function	GNSS	Function
	<ul style="list-style-type: none"> - Mechanical optical instrument: Triggers the instrument to take a shot in the current mode (fine or coarse). - Robotic optical instrument: Similar to GNSS, i.e. takes the latest tracking mode data and stores a point. 		One-epoch point measurement
	<ul style="list-style-type: none"> - Mechanical optical instrument: Takes a fine mode observation. - Robotic optical instrument: Opens up the remote control screen where you will hit the Take Shot button to take a fine mode observation. 		Multi-epoch point measurement (static occupation)
	Setting target height		Setting antenna height
	Station setup		GNSS status


The main map view includes two additional toolbars:

- The Zoom toolbar
- The Snap-To toolbar

These are described below.

- The Zoom toolbar is always shown.

- Tap to show the Snap-To toolbar, to hide it.

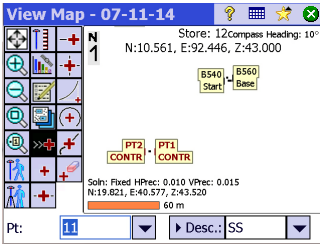



Displayed Coordinates






The last computed coordinates of the GNSS rover or rod (optical) are constantly displayed in the lower part of the active map screen as you move around in the working area. In addition, the name and coordinates of the last point saved (if any) will be displayed on top of the active map view.

Coordinates will all be expressed in either “NEZ”, “ENZ”, “XYZ” or “YXZ” coordinates, depending on your choice of **Coord. Order** in **Job > Settings > Units** tab,

Viewing coordinates on the active map view is activated by default. You can choose not to view coordinates by disabling the corresponding option:

- Tap  on the map view
- Clear the **Show Coordinate** check box.
- Tap  to save your changes and close the **Map Display Options** window.

Zoom Toolbar

Button	Function
	Zoom Extent button: By default, will set the map view so that all the points in the current job can be seen. If configured as a “User Zoom Extent” button, will restore a different view of the map (see “ <i>User Zoom Extent</i> ” Button on page 11).
	Will zoom the current screen in by approximately 25%.
	Will zoom the current screen out by approximately 25%.
	Allows you to drag a box across the screen. When your finger or stylus leaves the screen, the map will zoom to the box that was drawn.
	Prompts you for a point name and then the map view will be centered to the specified point with the point label displayed in red.

Snap-To Toolbar


Button	Function
	Snap to nearby point.
	Snap to the midpoint of the selected line segment.
	Snap to the nearest of the begin point or the end point of the selected line segment.
	Snap to the intersection of two straight line segments. You cannot snap to the intersection of line segments that are curves or spirals.
	Snap to the point of intersection (PI) of the selected curve segment.
	Snap to the radius point (RP) of the selected curve segment.
	Snap to the nearest point on the selected straight line or curve segment.
	Remove all of the Snap To temporary points created on this map.

“User Zoom Extent” Button

The **Zoom Extent** button may be changed into a **User Zoom Extent** button, and vice versa. The button keeps the same aspect but has a slightly different function. Rather than showing all the visible points in the job (**Zoom Extent** button), the **User Zoom Extent** button will restore the view of a specific area on the map that you will have chosen beforehand.

Setting the User Zoom Extent button:


- Adjust the map view so that the area you are interested in entirely occupies the screen (use the zoom buttons and drag the map accordingly).
- Once this is done, tap and hold anywhere on the map view and select **Set User Zoom Extent**. A red frame appears encompassing the entire view, meaning you have now defined your “user area”.

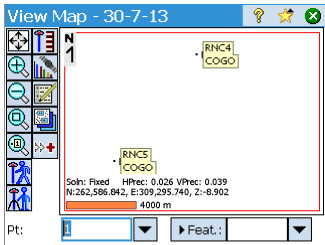

From now on, tapping will always takes you back to the display of the user area, whatever the various zoom/drag changes you may have made in the meantime. Whenever the current zoom & pan setting allows it, the red frame will appear showing the size and location of the user area on the current map view.

Clearing the User Zoom Extent Button:

- Tap and hold anywhere on the map and select **Clear User Zoom Extent**. The user area no longer exists (the red frame disappears from the screen).

From now on, the  button has recovered its default function, which is to set the map view so that all the points stored in the open job can be viewed on the screen.

“Follow-me” Function


When you are holding a GNSS rover or a prism, you may want to keep your current location always visible on the map screen.

This is the purpose of the Follow-me function, which will pan the map so that your location as you walk around can continuously be seen on the map view (it will be shown as close as possible to the map center, usually within an area representing three quarters of the map area around its center).

- To activate the Follow-me function, tap and hold anywhere on the map and select **Set “Follow me”**.

The symbol used to represent your location is a small arrow pointing in your walk direction. About every 4 seconds, and for about 1 second, it is replaced with a GNSS antenna or prism icon, depending on the surveying mode currently used. A gray cross-hair will appear centered on your location clearly indicating that the Follow-me function is on (the cross-hair will always be the same size whatever the zoom setting).

- To deactivate the Follow-me function, tap and hold anywhere on the map and select **Stop “Follow me”**. The gray cross-hair is then removed from the screen.
- The Follow-me function will automatically be stopped whenever you manually drag (pan) the map to such an extent that your current location on the screen is moved outside of the centered “three-quarter area” on the map view.

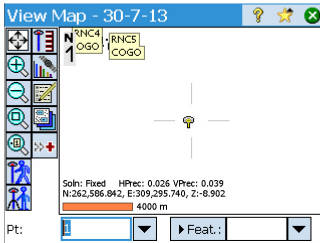


3. Creating a Job

Survey Pro cannot start without a job being open. Upon launching Survey Pro, the **Welcome to Survey Pro** screen will guide you through the process of creating a new job or opening an existing job.

NOTE: Upon launching the onboard version of Survey Pro, the initial screen allows you take measurements without having to open a job. Refer to *9. Survey Pro's On-Board Version on page 90*.

- Tap the **New** button. The **New Job** screen opens, which prompts you for a job name where the current date is the default name.

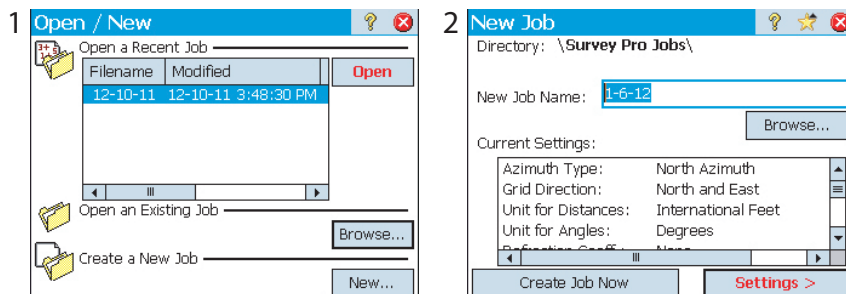

- Either type in a new job name or accept the default name.
- You can create the job in two different ways:
 1. Tap the **Create Job Now** button. The new job will be created with the current default settings (as listed at the bottom of the screen) and will be stored in the default directory (\Survey Pro Jobs\).
 2. Tap the **Settings** button to access the different job settings (see below). After you have gone through the different settings, tap the **Finish** button. This will create and store the new job.

NOTE: The job names listed in the upper portion of the screen are those of the most recent jobs you opened in Survey Pro. This list does not necessarily reflect the list of jobs stored in your data collector. If you are looking for a job stored in your data collector, use the **Browse** button.

Job Settings

The settings and values entered for a new job become the default values for any subsequent new jobs. A short description of the jobs settings is given below.

[1] **New Job**

Azimuth Type: North Azimuth

Grid Direction: North and East

Units for Distances: International Feet

Units for Angles: Degrees

Earth Curvature & Refraction

Refraction Coefficient: None

< Back Next >

[2] **New Job**

☒ Use a Control File

Control File:

Browse...

Points in control file will be imported into new job.

< Back Next >

- **Units [1]:** When creating a new job, set all the desired units for the job. You can also enable the setting for **Earth Curvature and Refraction** correction for optical measurements.
- **Control File [2]:** Control points can optionally be imported from another existing job by checking the **Use a Control File** check box. After tapping **Finish** to create the job, a message will indicate the number of imported points. If you are using a control file, by default the coordinate system of this control file will be used for the new job. You can override this default setting on the coordinate system page. A control file can be imported from either a .Job or .Survey file.

[3] **New Job**

☒ Select Coordinate System

- Select Coordinate System -

☒ Zone from Database ☐ Broadcast RTCM

Region: US State Plane 1983

Zone : Oregon South 3602

Datum: NAD 1983 (Conus)

☒ Use Geoid : GEOID99 (Conus)

< Back Next >

[4] **New Job**

☒ Enter First Point

Point Name: 1

Northing: 5000.0 ft

Easting: 5000.0 ft

Elevation: 100.0 ft

Description: Start

< Back Finish

- **Select Coordinate System [3]:** When you are using a control file, you can start the job with the control file's coordinate system, or you can pick a different coordinate system from the database. If you don't have a control file, you need to choose the coordinate system for the job. To select the coordinate system for the new job:
 - Clear the check box when you are doing an optical survey with a ground scale factor of 1, or if you are doing a GNSS survey and there's no known projection or datum for your local grid coordinates.
 - Check this box when your local grid coordinates are defined by some known map projection and datum. In this case, select **Zone from Database** and specify the region (**Region**), zone (**Zone**) and datum (**Datum**) of your working area. In GNSS Survey only, the datum may be defined in a different way using RTCM messages 1021 and 1023 received from some NTRIP networks that broadcast these messages. In this case, check **Broadcast RTCM** and specify the region (**Region**) and zone (**Zone**) of your working area. The datum will be provided by the RTK network.

Understanding Scale Factor for your coordinate system:

- If your job has “no coordinate system”, Survey Pro automatically sets the scale factor for optical measurements to “1.0”. This means that the distance measured on the ground will be 1:1 to the distance on the grid. If you start a GNSS survey, Survey Pro will use default **Ground Calibration** mode to calculate your grid coordinates from GNSS measurements.
- If your job is using a map projection and datum, Survey Pro will automatically calculate the correct scale factor for each station setup so the distance measured on the ground will properly be reduced to the coordinate grid. If you start a GNSS survey, Survey Pro will use the selected projection to calculate grid coordinates from GNSS measurements.

NOTE: You can modify the default optical scale factor settings in the **Job > Settings > Scale Factor** tab.

- **First Point [4]:** A default point name and coordinates are prompted to become the first point in the job. You can freely change the name and coordinates of this point before creating it. You may also clear the box if you do not want to create a new point at this stage.

You may start your measurements now if you don't need anything else in your job at this time. In that case, go directly to 4. *Choosing a Surveying Mode - Connecting Survey Pro to an Instrument on page 24.*

If you need to add data (points, polylines, alignments, etc.) into your job before starting, the sections below will tell you how to import or create/edit data from within the open job. The last section lists the possible formats in which the data stored in the job can be exported.

Importing Data

Use the **File > Import** function to add points to the open job. The points may be imported from different file formats, using default importers:


- Survey Pro native formats (*.Survey, *.JOB, *.JXL, *.CR5). JXL is the extension for files in JobXML format, a Spectra Precision standard format for point, alignment, and measurement data.
- LandXML (*.XML), an industry standard format for point, alignment, and measurement data.
- Text format (*.TXT, *.CSV). An Import ASCII wizard will help you define the content of every TXT file you will import.

Data may also be imported from other formats (GDM, KOF, SFN, Surpac) using custom importers created in IXL (XML) format.

Survey Pro will parse and import all the known elements from the chosen file. These elements will be added to the current job as points, polylines and alignments. See the definition of these elements in *Editing Points on page 16*, *Editing Polylines on page 20* and *Editing Alignments on page 20*.

The **File > Import Control** function is used to import points onto the control layer of your job. Points on the control layer are protected from being modified. Control files should be in *.Survey or *.JOB format.

Editing Points

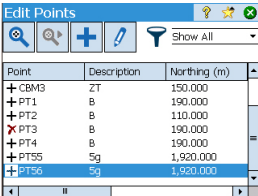

Point	Description	Northing (m)
+ CBM3	ZT	150.000
+ PT1	B	190.000
+ PT2	B	110.000
+ PT3	B	190.000
+ PT4	B	190.000
+ PT55	5g	1,920.000
+ PT56	5g	1,920.000

A point in Survey Pro has coordinates and properties. A point's coordinates can be derived in one of two ways:





- *Key-in point*: The coordinates for this point were entered using the **Job > Points** function or this point was created by importing data to the job.
- *Observed point*: The coordinates for this point are calculated from measurements in the current job.

NOTE: To see the current coordinates and properties of a point, you can tap the point on the map. This will open the **Point Details** screen showing the **Origin** of the point, which describes how the point was created.

Managing Points





All points in a job file, whether keyed-in or computed from observations, can be viewed using the **Job > Points** function. Points in the job will be either active or deleted. Active points can be used in Survey Pro. Deleted points exist in the job file database, but must be undeleted before they can be used in Survey Pro.

The following icons are used to identify the different types of existing points:


Icon	Point type
	Design point
	Staked point
	Point (undifferentiated)
	Deleted point

The drop-down list available from the right-upper corner of the screen allows you to view all the active –i.e. non-deleted– points (select **Show Points**), the previously deleted points (select **Show Deleted**), only the design points (select **Design Pts. only**), only the staked points (select **Staked Pts. Only**), both design and staked points (select **Design & Staked Pts. Only**), or all of them (select **Show All**).

Use the three or four buttons located at the top of the screen to manage your points:

- : Allows you to search for the first point in the displayed list meeting the search criterion you define. You may define a criterion on the point name or the point description. You can also search by point code (FXL auto linework and attribute code).
- : Will become active only after Survey Pro has found the first point in the list meeting your search criterion. Each new press on this button will view the next point in the list also meeting the search criterion.
- : Allows you to insert a new point to the list. A name will be prompted by default for the new point, based on the name of the currently selected point. Entering the definition of a new point is organized into three different tabs (see *Creating a New Point on page 18*). Note that defining a point as a design or staked point can only be done using **Manage Design Points** on the **Stakeout** menu.
- : Allows you to edit the selected point (see *Modifying a Point on page 19*).

Also, when you tap and hold a point in the **Show Points** list, a context-sensitive menu is displayed giving access to the following functions:

- **Delete Point:** Allows you to delete the selected point.
A deleted point is marked with the  icon, placed before its name.
- **Delete Points:** Prompts you to make a multi-selection of points and then deletes all these points.
- **View Point Details:** Allows you to get a read-only view of the point origin, coordinates, properties and notes. The information is split into three different tabs: **Details**, **Derivation** and **Notes**.
- **View Raw:** Takes you to the **Raw Data** view on which the step during which the point was created is highlighted. The **Raw Data** view can also be selected from the main menu by tapping **Job > View / Edit Raw Data**.


- **View Map:** Takes you to the map screen where the selected point is shown at the center of the screen.

Double-clicking a point in the list is equivalent to selecting **View Point Details** in the context-sensitive menu.

When you tap and hold a point in the **Show Deleted** list, a context-sensitive menu is displayed giving access to the following functions:

- **Undelete Point:** Will take this deleted point back to the list of existing points. The undeleted point will recover its original icon.
- **View Point Details:** Same as above.
- **View Raw:** Same as above.

Creating a New Point


Select any point in the list and tap  to insert a new point:

- The **General** tab allows you to name the new point, add a description if necessary, assign a layer to the point and possibly attach a picture to it (using the built-in camera or by selecting an image file from the disk).
- The **Location** tab allows you to enter coordinates for the point. You can enter **Grid**, global geodetic (**WGS84 LLH**) or local geodetic (**Local LLH**) coordinates.
 - **Grid:** This point's local grid coordinates are the Northing, Easting, Elevation values that were keyed in or imported. This point's global geodetic coordinates will be calculated by transforming grid coordinates into latitude, longitude, height coordinates using the current projection.
 - **Global geodetic:** This point's WGS84 coordinates are the latitude, longitude and height values that were keyed in or imported. This point's local grid coordinates will be calculated by transforming geodetic coordinates into Northing, Easting, Elevation coordinates using the current projection.
 - **Local geodetic:** This point's local geodetic coordinates are the latitude, longitude and height values that were keyed in or imported. This point's grid and global geodetic coordinates will be calculated by transforming the local geodetic coordinates with the current projection.

When there is no projection set or solved, there is no way to transform the keyed in values into grid or geodetic coordinates. You will see these coordinates are missing when you look at the point details.

- The **Feature** tab allows you to associate one or more feature codes to the point. For more information on Descriptions, Layers, Feature Codes and Notes *Descriptions*, *Layers* and *Features*, see *Advanced Information on Point Properties on page 96*.

Modifying a Point

Select the point you want to modify and tap .

- Survey Pro will show two additional tabs compared to when you inserted the point:
 - **Derivation:** This is a read-only tab indicating the type and origin of the point.
 - **Notes:** This tab allows you to add as many notes as needed to the point. Each note is date & time tagged.
 - The data shown on the **General**, **Location** and **Feature** tabs can normally be modified.
- **Transforming a computed point into a key-in point:** Use the **Edit Location** button on the **Location** tab to change the two horizontal coordinates or/and the one vertical coordinate.

For example, using a total station or GNSS, you observe a point and measure its three coordinates. This point is in addition a benchmark providing an elevation reference. You may want to fix the vertical coordinate to what is written on the benchmark sheet rather than keep the measured elevation. Using the **Edit Location** button, you can change the measured vertical coordinate to a keyed-in coordinate while keeping the horizontal coordinates as measured.

Multi-Point Selection

With a selection of multiple points, you can use the same button to modify the description and layer of the entire selection in one operation.

Selecting several points not in sequence is obtained by first activating the Control key and then tapping successively on the points to edit. The Control key is accessible from either the virtual keyboard (CTL key on Nomad, Recon or ProMark 220) or the real keyboard (CTRL key on Ranger). The Shift key can also be used to select several points in sequence.

Editing Polylines

A polyline in Survey Pro is a line connecting points together. Each vertex of the line is defined by an existing point, whether an observed or keyed in point. Points in polylines can be connected with either straight segments or horizontal curves.

You can use the polyline editor to modify polylines (go to **Job > Edit Polylines**). The polyline editor is described in the Online Help.

Editing Alignments

An alignment in Survey Pro is a line defined by vectors starting at a Point of Beginning (POB). The POB can be an existing point in the job, or just location coordinates. Alignments can have horizontal segments and optionally a vertical profile. Horizontal segments can be straight segments, circular curves or spiral curves. A vertical profile can be defined using a vertical curve and straight grade segments.

You can use the alignment editor to modify alignments (go to **Job > Edit Alignments**). The alignment editor is described in the Online Help.

You can import alignments for staking, using **Roads > Edit Roads** menu. Alignments imported using this function can be viewed in the alignment editor but cannot be modified.

Exporting Data

Use the **File > Export** function to export data from the open job to one of the supported file formats. For most formats (Survey, JOB, TXT, CSV, CR5 and DXF), you may select the portion of the current job you wish to export. For export to XML, Survey Pro 4.x (Job/RAW) or JobXML format, the entire job database will always be exported.

Generating Survey Reports






Survey Pro can generate a report of your survey based on the content of the currently open job and formatted according to the template you chose at the beginning of the process.


About 20 templates are available (see list below) and most of them are customizable.

- Complete Survey Report, in html format
- Report in fbk format
- Report in kof format
- GNSS Points report in csv format
- LevelLoopReport_doubleSpaced
- Google Earth report in kml format
- LisCAD report in fld format
- Report in Nikon RAW format
- Optical observation report in htm format
- Two different points reports in csv format
- Nine different stakeout reports in csv or htm format

To generate, view, and save a survey report for the open job, follow the instructions below:


- Go to the Main Menu and tap **Job**, then **View Report**.

- Select the desired template, then tap **Next**.
- Whenever prompted, customize the report, then tap  to let Survey Pro generate and then view the report.
- Depending on the chosen template, do the following to access the screen from which you will be able to save the report:
 - For html reports, tap  ,  then  . You then get the screen below.
 - For Google Earth reports, in absence of an application capable of viewing the generated report, Survey Pro will take you directly to the screen below.
 - For all other types of reports, tap  to access the screen below.

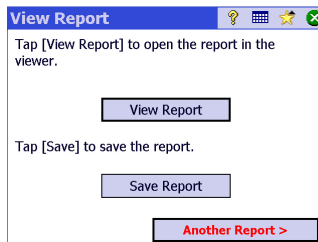

- Tap **Save Report** to save the report to the desired folder.
(On the same screen, the **View Report** button would take you back to the survey report view, and the **Another Report** button would allow you to ask for a new report, based on the same or a different template.)

Sharing Files Over the Internet

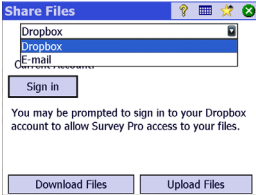

Survey Pro allows you to share files over the Internet. This requires that you first set up an Internet connection on your data collector using Windows Mobile's **Settings > Connections > Connections** function.

After the Internet connection has been established, go to **File > Share** and choose one of the two options below depending on how you wish to share your files:


- **DropBox**, This option provides access to a web service that lets you post your files in a shared folder. Using this service requires that you first create a DropBox account and then you sign in to it every time you open a session to upload or download files. (The shared folder is in fact a remote folder that you can see through the Internet connection.)

For more information on how to create an DropBox account, please refer to: <https://www.dropbox.com/>. DropBox is a free service for volumes of shared data less than 2 Gigabytes.


- **E-mail**: Use this option to send e-mails to one or more recipients, with your files attached to your e-mails. If several files are selected to be attached to an e-mail, Survey Pro will automatically zip the files so there is always one single file attached to the email.

Sending e-mails requires that you use an e-mail profile. You can set up your own e-mail account (e.g. Gmail) or use one of the default e-mail profiles (SMS, ActiveSync) set up by Windows Mobile. After you have set up your own e-mail account, it will appear as an additional option in the **E-mail Profile** list.

The Share function can be called directly from many Survey Pro functions that requires loading or saving a file (e.g. **File > Save as**).

Within these functions, tap  to access the Share function. This button provides access to either DropBox or Central (see below) whichever is suitable.

Connecting to Spectra Precision Central

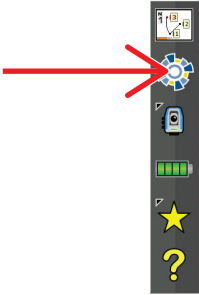

Spectra Precision Central is a cloud file storage and synchronization service allowing an organization to synchronize files and folders across multiple desktop computers, data collectors running Survey Pro, and mobile devices.

Spectra Precision Central automatically keeps files synchronized across devices so that team members can easily exchange data, and everyone is always using the latest up to date copy of any data file.

To access *Spectra Precision Central* from Survey Pro, you need to connect your data collector to the Internet using WiFi, the cellular modem connection, or by plugging it into Windows Mobile Device Center (ActiveSync).

To connect a data collector to *Spectra Precision Central*:


- Tap the icon in the command bar to open up the **Central** screen
- Type in your user name (**Username**), your company's organization name (**Organization**), and your user password (**Password**).
- Tap **Sign in**.

When you are connected, the Central icon will change to

- Once you are signed in to Central, the **Central** screen shows your sign-in status, as well as any current file sync activities going on in the background.

You can then go to **Job > Settings** and select the **Central** tab to configure your file synchronization connection usage preferences:

- **Automatic - All:** Files will get synchronized any time there is a data connection. This is for users who want the file synchronization to be continuous and don't care about mobile data bandwidth usage.
- **Automatic - WiFi:** Files will get synchronized any time there is a data connection that is not cellular, for example, if you are using WiFi, or any time you plug into Windows Mobile Device Center (ActiveSync). This is for users who want automatic file synchronization any time, except when their data connection is using mobile data bandwidth.
- **Manual:** Synchronization takes place only when the **Sync Now** button on the central screen is tapped.

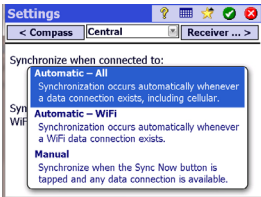

Whenever the **Cloud** button () is shown on the screen, for example when you want to import files, you can tap on this button and select **Central**.

By doing this, you will be allowed to browse through the different folders on the cloud (and not only the subfolder specific to your data collector) so you can download a new file posted elsewhere in the cloud by your team.

After you will have saved this file to your data collector, the sync mechanism will in the background create a copy of this file to your specific data collector subfolder on the cloud.

4. Choosing a Surveying Mode - Connecting Survey Pro to an Instrument

Before you start taking new measurements with Survey Pro, you must configure and activate your instrument. You can activate an optical total station, a GNSS receiver, a digital automatic level, or you can specify to use manual input for three-wire leveling.


NOTE: Selecting an instrument only makes sense when Survey Pro is running on a data collector. If it's running in the instrument you are using (e.g. FOCUS 30), only this instrument can be used in Survey Pro.

Before you make this choice, power on the instrument. This will allow the data collector to detect it and establish a radio, Bluetooth or serial connection with it when asked to do so. Three-wire leveling using manual input does not require Survey Pro to be connected to an instrument.




With GNSS equipment, you may simply use a rover receiver, or both a base receiver and a rover receiver. In the latter case, it's good practice to start your survey having both receivers running side by side. This way, you can complete the setup of both receivers and ensure they are communicating on the data link, and you are getting a fixed position at the rover.

When using a serial connection to start a base and rover, the data collector must be connected to the base receiver first. Once the base is set, disconnect the cable from the base and connect it to the desired rover.

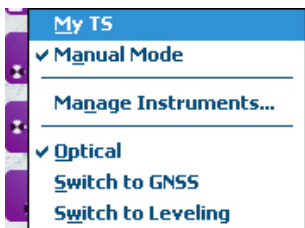Instrument Icon and Options List



- Run Survey Pro.
- Open or create a job.
- Tap on the Instrument icon in the command bar.

(This icon may look like any of the following: ,  or ).

This opens a list of options (see screen example).

- **Manage Instruments** provides access to various functions allowing you to declare a new instrument and make advanced settings for each instrument.
- The available options below the **Manage Instruments** button are for selecting the desired operating mode for Survey Pro:
 - **Optical** for optical instrument (the selected one in the example)
 - **GNSS** for GNSS receiver used in RTK or/and post-processing
 - **Leveling** allows Survey Pro to use the most accurate techniques for measuring elevations. Leveling can be done using an optical total station, a digital automatic level, or a manual automatic level.

NOTE: In surveying, the term "automatic level" refers to a level that can be accurately plumbed without having to be accurately leveled.

All levels built in the last 40 years or so have been automatic levels. They are automatic because the prism through which the light rays pass is suspended by a pendulum. Therefore, as long as the instrument is close to level (which can be achieved $\pm 60''$ using a bubble level), the pendulum mechanism ensures that the light rays are always passing through perpendicular to actual gravity, and they are very accurate.

This means that a digital instrument such as the Trimble Zeiss Dini level is called a digital automatic level, and a non-digital instrument, such as the Nikon AL2s, is also an automatic level.

- In the section above the **Manage Instruments** button is a list of all instruments that have been added to Survey Pro for the currently selected mode. The current active instrument is indicated with a check mark. An additional option is available ("Manual Mode" for optical and leveling; "Demo Mode" for GNSS) allowing you to use Survey Pro standalone.

In optical, you choose "Manual Mode" to manually enter horizontal angle, vertical angle, and slope distance any time Survey Pro is triggered to take an observation. This is useful for training and learning the software, and it can also be used to enter survey measurement data into a job from written field notes.

In GNSS, you can choose "Demo Mode" for demonstration and training purposes only. The "Demo Mode" has no use for handling actual survey measurements.


In leveling, you must choose "Manual Mode" if you wish to do single-wire or three-wire leveling from rod readings.

The "Manual Mode" and "Demo Mode" profiles cannot be deleted or renamed.

In summary, tapping the Instrument icon allows you to:

- Select Optical, GNSS or Leveling mode
- Quickly activate an instrument for use in the selected operating mode
- Quickly access the Instrument Settings screen
- Add a new instrument supported in the selected operating mode.


Optical Mode - Connecting Survey Pro to an Optical Instrument

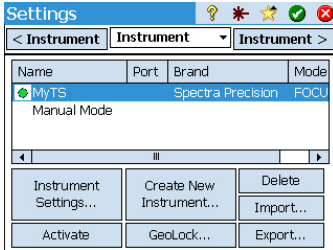

- Tap the Instrument icon and select **Switch to Optical**
- Tap the Instrument icon and select **Manage Instruments**. This opens the Settings screen listing all the current instrument profiles.
- Tap the **Create New Instrument** button and define the new instrument: Choose its brand and model, and then name it.
Depending on the model you select, additional settings may be required (connection, radio, etc.) and status is also provided (port, connection, level bubble, etc.). An **Instrument Settings** button is also available giving access to advanced settings (collimation, EDM, lights, etc.).
- Tap to create the new instrument and close the **Instrument Setup** screen. The new instrument is automatically selected in the list, as indicated by the green spot shown before the instrument name. (You would use the **Activate** button to activate another instrument after selecting it in the list.)
- Tap to close the **Settings** screen.

The **Settings** screen for optical instruments includes the following buttons:

- **Instrument Settings:** Gives quick access to the settings of the instrument selected in the list. The type and number of settings depend on the brand and model of the instrument selected. All instruments have a **Precision** tab through which you can type in the expected precision values of the instrument (angles, distances, PPM). These values are used in the resection routine (see *page 42*) to weight the observations used in the computation process.
- **GeoLock:** Allows you to enable or disable GeoLock, a GPS-assisted target search function usable with some robotic instruments only.
- **Export** and **Import:** These buttons allow you to respectively save or load instrument profiles. Survey Pro saves Instrument profiles as SPI files. Importing an SPI file is a quick way of adding a preset instrument in Survey Pro.
- **Delete:** Allows you to delete the instrument profile you select in the list.

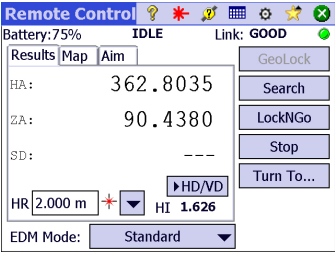

Remote Control Screen

If you are using a robotic total station, use the **Survey > Remote Control** function to control the total station from the data collector running Survey Pro.








In addition to providing the same level of control as Survey Pro's onboard version, the Remote Control screen constantly provides information about:

- The charge status of the battery used in the total station
- The operating status of the total station (IDLE/ MEASURING/Locked)
- The quality of the radio link between the robotic total station and the data collector.

The following buttons are also available from this screen to control the instrument:

- **GeoLock** button: Launches a GPS-assisted search for the prism
- **Search** button: Launches a search for the prism starting at the current instrument direction
- **LockNGo** button: Enables or disables the lock-and-go feature
- **Stop** button: Stops the current turn or search operation
- **Turn To** button: Opens up the “Turn To” screen where you can select a point or angles to turn the instrument to.

The following icons are made available next to the title bar:

Item	Function
	Visible laser pointer off. Tapping on this icon will turn the laser pointer on. Note: Standard safety precautions should be taken to ensure that persons do not look directly into the beam.
	Visible laser pointer on. Shown to indicate the visible laser is currently active. In the command bar, the instrument icon will then look like this:  Tapping  will turn the laser pointer off. Note: Standard safety precautions should be taken to ensure that persons do not look directly into the beam.
	Provides access to the Instrument settings screen.
	Shows or hides the on-screen keyboard.
	Provides access to Geolock activation, status and reset.

GNSS Mode - Connecting Survey Pro to a GNSS Receiver

Introduction to Receiver Profiles

Survey Pro connects to a GNSS receiver through a *receiver profile*, which is a convenient way of connecting to and configuring a GNSS receiver in one click, using information previously saved as a receiver profile.

Receiver profiles allow you to use GNSS receivers for either RTK data collection, post-processing data collection, or both simultaneously.


There are two ways of adding a receiver profile into Survey Pro:

- Using **Spectra Auto-Configure**. This procedure can only be used with Spectra Precision receivers. Survey Pro uses Bluetooth to detect all the nearby Spectra Precision receivers. For each detected receiver, Survey Pro will offer to create a base, rover, and network rover profile using the default settings for that receiver type. You can then choose the receiver profiles you would like to create for the newly detected receivers.

If the receiver has also RTX capability, be aware Survey Pro does not automatically create an RTX profile for a receiver. If you want to use the receiver in RTX mode, you can modify an existing profile, or add a new RTX profile to operate the receiver in this mode.

- Using **Manual Configuration**. This procedure allows you to connect to a single receiver either through a serial connection or over Bluetooth. This procedure is suitable for any of the supported manufacturers and models of GNSS receivers. Once the connection with the receiver is established, you have to define your receiver profile by yourself (see *Modifying a Receiver Profile on page 32* for more information). In the last step, you will name the receiver profile and save it.

Example of Receiver Profiles List

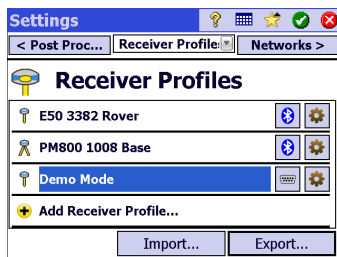

Later, when you start a survey, just select the desired receiver profile –and a *network profile* if you are working in a network; see also *Managing Network Profiles on page 34*– before you ask Survey Pro to connect to the receiver you are using. Survey pro will configure the receiver hardware according to the settings defined in the selected receiver profile.

When you are using Bluetooth to communicate with receivers, you will typically have a different profile for each receiver, since the Bluetooth address is part of the profile. However, you can change the receiver a profile connects to by changing the Bluetooth address.

You may have two or more different profiles for the same receiver. For example, if you use receiver “x” as a rover with a radio base on some days, and as a network rover with an NTRIP server on other days, then you would have two different profiles for this same receiver.

Receiver profiles can be imported or exported as SPR files allowing you to deploy consistent receiver profiles across your surveying crews.

Receiver profiles can be modified, renamed or deleted.

Adding Receiver Profiles

- Tap the Instrument icon and select **Switch to GNSS**.
- Tap the Instrument icon and select **Manage Instruments**. This opens the Settings screen listing the currently existing GNSS receiver profiles.
- Tap **Add Receiver Profile**, then use of the two procedures described below.

Example of Detected Receivers

Example of Selected Standard Receiver Profiles

Example of Serial Connection

Adding Receiver Profiles Using Spectra Auto-Configure:



- Tap on the **Start** button in the **Spectra Auto-Configure** pane. Survey Pro then scans automatically for new Spectra Precision GNSS receivers within Bluetooth range. After a while, the screen lists the names of all the detected receivers.
- Select each of the receiver for which you would like to add a receiver profile.
- Tap **Next**. Survey Pro will in sequence connect to each of the selected receivers and will then return a list of standard receiver profiles, each of them corresponding to a possible usable profile for that receiver.
- Check each of the receiver profiles you would like to add.
- Tap **Finish**. Survey Pro comes back to the Receiver Profiles screen on which you can now see the added profile(s). Receiver profiles may be imported or exported at this point (see *Managing Your Receiver Profiles on page 30* for more information).
- Tap 🏠 to return to the Home screen.

Adding a Receiver Profile Using Manual Configuration:

- In the **Manual Configuration** pane, do the following:
 - Select the brand of your GNSS receiver
 - Select the model of your GNSS receiver
 - Select the type of connection to the receiver.
 - 1) If it's a Bluetooth connection, select **Bluetooth** and then tap the **Bluetooth Settings** button. This button opens up the **Bluetooth Instruments** screen, from which you can scan for Bluetooth devices supporting a serial port service (or open up the Windows OS Bluetooth application). Tap **Start Scan** and let the utility search for all the devices. When the search is complete, select the device corresponding to your GNSS receiver. Then tap **Add Selected**, change the Bluetooth name if you wish, set the Bluetooth PIN if required, and tap 🏠.
 - Tap 🏠 to return to the initial screen. The name of the chosen Bluetooth device now appears in the **Bluetooth Device** field.

NOTE: The **Bluetooth Device** field lists the names of the previously detected Bluetooth devices. Use this field when the receiver you want to connect to was detected beforehand, is still running nearby, or you know its Bluetooth name and this name is still listed in the drop-down menu. Only in that case can you directly select the Bluetooth name from that list and quickly establish a connection with the receiver.


2) If it's a serial connection, check **Serial** and select the port used on the data collector side for this connection.

- Tap **Connect**. You can now define a receiver profile for use in the connected receiver. Complete the four tabs (**Survey**, **Modem**, **General**, **Reset**). See *Modifying a Receiver Profile on page 32* for more information on receiver profiles.
- Tap  to save the new receiver profile. This profile is now available from the list of receiver profiles. Receiver profiles may be imported or exported at this point (see *Managing Your Receiver Profiles on page 30* for more information).
- Tap again  to return to the Home screen.

Managing Your Receiver Profiles



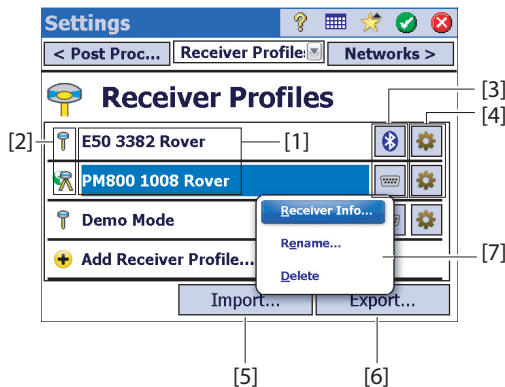


Do the following to access the list of existing receiver profiles in Survey Pro:

- Tap the Instrument icon and select **Switch to GNSS**.
- Tap the Instrument icon and select **Manage Instruments**. Survey Pro lists the receiver profiles as detailed below.








- **[1]: Receiver profile name.** By default, the name includes the receiver model first, followed by its serial number (last four characters), then its survey function.

- **[2]: Survey function icon:** This may be one of the four icons below (see also *Modifying a Receiver Profile on page 32*).

Icon	Meaning
	Rover.
	Base.
	Network Rover.
	Network base.
	RTX (prompted only if the receiver has RTX capability).

- **[3]: Connection icon:** This may be one of the two icons below.

Icon	Function
 or 	Shown when respectively a Bluetooth or cable connection has been set between Survey Pro and the receiver. If the Bluetooth icon is shown, tapping this icon will provide the receiver brand and model as well as the receiver Bluetooth name. If the Serial icon is shown, tapping this icon will provide the receiver brand and model as well as the serial line settings.

- **[4]: Settings icon:** . Provides access to the receiver profile's **Survey**, **Modem**, **General** and **Reset** tabs. See *Modifying a Receiver Profile on page 32* for more information.
- **[5]: Import.** Tap on this button to import a receiver profile, then:
 - Select the SPR file you want to import.
 - Tap . Survey Pro returns the name of the receiver profile contained in the file.
 - Select the profile name to continue.
 - Tap **Import** to complete the import sequence.
- **[6]: Export.** Tap on this button to export a receiver profile, then:
 - Select the receiver profile you want to export.
 - Tap **Export**.
 - Name the file, then tap  to export the profile and save it as an SPR file in the chosen folder.

Example of Receiver Information

Receiver Information

Name: E50 3382 Rover
 Model: Spectra Precision EPOCH 50
 Capabilities:

S/N: 5111813382
 Firmware: 1.0.0
 Nav Process ver.: 00422
 Boot ROM ver.: 00422
 Sig Process ver.: 00422

- [7]: This menu is displayed after you tap and hold a receiver profile in the list. From this menu you can do the following:

- **Receiver Info:** Use this function to view more information on the receiver connected to Survey Pro through this profile (see example). The possible capabilities of a receiver (shown as icons) are identified below.

Icon	Capability
	The receiver has rover capability.
	The receiver has base capability.
	The receiver has data collection capability (for post processing).

- **Rename:** Used to rename the selected receiver profile.
- **Delete:** Used to delete the selected receiver profile. Then tap **Yes** to confirm that you really want to delete the profile.

Modifying a Receiver Profile

Tap on the corresponding button in the receiver profiles list to make changes to a receiver profile. The receiver profile is described on four different tabs, the content of which is receiver-dependent.



IMPORTANT! All changes you make to a receiver profile will be effective only if a receiver is connected to Survey Pro through this profile. In addition, the changes made to a receiver profile will not be effective immediately in the connected receiver, but only next time you start a survey using the modified receiver profile to connect to and configure the receiver.

Epoch 50's Survey tab

E50 3382 Rover

< Reset Survey Modem >

Setup Type: Rover
 Elevation Mask:
 Corrections:
☐ Use Station Index:
 Set to OFF mode

- The **Survey** tab is primarily used to define the following RTK survey parameters:
 - **Setup Type:** Used to assign one of the four functions to the receiver:
 - 1) **Rover:** Corrections received via radio.
 - 2) **Base:** Corrections broadcast via radio.
 - 3) **Network Rover:** Corrections received via a GSM modem.
 - 4) **Network Base:** Corrections sent to an IP address.
 - 5) **RTX:** RTX corrections received via modem.
 - **Elevation Mask:** Limits the use of satellites to those that are high enough in the sky, seen from the receiver antenna. All satellites located under this zenith angle will be rejected (default: 10°).
 - **Corrections:** Used to set the format of corrections received (rover) or broadcast (base). This setting is not used for rover receivers that support automatic detection of correction format.

Epoch 50's Modem tab

SP80's Modem tab

ProMark 800's General tab

- **Use Station Index:** Used to assign a station ID to a base, or identify the base a rover is expected to use.
- **Set to Off mode:** Sets the receiver idle, i.e. no more corrections are sent out if the receiver is a base –or network base– or the receiver stops listening for corrections if it's a rover or network rover. There is an exception with ProMark receivers, which in all cases will keep on operating as rovers.
- The **Modem** tab allows you to configure the RTK data link.
 - If **Setup Type = Rover** or **Base**, allows you to enter the UHF radio settings (i.e. baud rate, frequency channel and sensitivity for most radio models).
 - If **Setup Type = Network Rover, Network Base**, or **RTX**, allows you to set the cell modem used, either the one internal to the data collector (**Current Internet** or **Windows Networking** option), the one internal to the receiver (**Internal GPRS Modem** option), or an external cell phone (**IP Modem** option).
Setting a cell modem mainly implies entering the service provider information (APN) and your connection profile (username & password).
- The **General** tab allows you to configure settings that are specific to the brand and model of this receiver profile. For more information on brand- and model-specific settings, see the online help.
- The **Reset** tab provides additional control over the connected receiver. Three buttons may be available:
 - **Set Rx. to OFF mode:** Same as **Set to Off mode** above.
 - **Soft Reset:** Will reboot the receiver with its current settings.
 - **Hard Reset:** Will reboot the receiver with its default settings (depends on the model of receiver used).

Managing Network Profiles

Network profiles are managed the same way as receiver profiles. Network profiles are required:

- To specify the source of RTK corrections a GNSS receiver acquires when it is set as a network rover.
- To specify the destination of the RTK corrections a GNSS receiver will generate when it is set as a network base.

Example of Network Profile

To add a new network profile:

- Tap the Instrument icon and select **Switch to GNSS**.
- Tap the Instrument icon and select **Manage Instruments**. This opens the Settings screen listing the currently existing GNSS receiver profiles.
- Tap on the **Networks** tab
- Tap **Add Network**. Enter your network parameters (see below), then tap

A network profile is defined by the following parameters:


- **Name:** Enter a name for your network profile.
- **Setup Type:** Tell whether the network profile is to be used by a base (choose **Network Base**) or a rover (choose **Network Rover**).
- **Server Type:** Depending on the selected **Setup Type**, define the type of IP connection used:

For a network rover:

- **Automatic:** Make this choice if you want Survey Pro to determine the type of connection and server from which the rover will acquire corrections (recommended).
- **NTRIP:** Make this choice if you want your rover to acquire corrections from an NTRIP server.
- **Direct IP:** Make this choice if you want your rover to connect directly to a Direct IP single base server or to a static IP base.



For a network base:

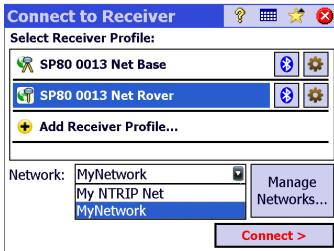- **Direct Connect:** Make this choice for your base if you want the rover to connect directly to that base over the Internet.
- **TCP/IP Forwarding:** Make this choice if you want the base to forward its corrections to a TCP/IP server.
- **NTRIP Forwarding:** Make this choice if you want the base to forward its corrections to an NTRIP server.
- **Address:** IP address of the server that the receiver connects to for sending or acquiring corrections. With **Direct Connect** chosen for a network base, the IP address is assigned dynamically by the network provider. That's why in that case, the **Address** field reads "**Dynamic**" and is read-only.
- **Port:** IP port of the server that the receiver connects to for sending or acquiring corrections.



- **User Name** and **Password**: Credentials required to be allowed to access the server.
- **Mount Point**: (for a network base in **NTRIP Forwarding** only) Enter the mount point where to send corrections to.
- **Force NTRIP password** (for a network rover in **Automatic** or **NTRIP** setup type). With this option enabled, you will be prompted for user name and password for every NTRIP mount point, even if the NTRIP table specifies that they are not required. This option is to deal with poorly formatted NTRIP tables, where the source table says that password is not required, but the selected mount point actually requires one.
- **Corrections**: Whenever required, specify the format of corrections (ATOM, CMR, RTCM) the receiver should generate (base) or receive (rover).

When later starting a survey, you will be requested to specify the network profile your receiver will work with. Choose the name of that network profile. At this point, the **Manage Networks** button allows you to return to the list of existing network profiles to make changes if necessary. In the networks list, an icon placed ahead of each network profile name tells you the type of receiver the network profile is intended for:


-  : Network base profile
-  : Network rover profile

Checking the GNSS Status

Checking the GNSS status of the connected receiver is recommended before starting a job. This implies that the GNSS receiver is in real conditions of use, preferably in an open sky environment.

Use the **GNSS Status** function on the **Survey** menu to read this information. The GNSS status is split into six different tabs:


- **Receiver**: Provides additional information describing the position solution computed by the receiver. In RTK, the **Reset Ambiguities** button allows you to re-initialize the computation of the position. For more information, see *6. GNSS Surveying on page 52*.
- **Data Link**: Describes how a rover is provided with RTK corrections, or the type of RTK corrections generated by a base. For more information, see *6. GNSS Surveying on page 52*.
- **Post Process**: This tab shows the data recording status (Yes/No), the recording interval (1 or 2 sec), the name of the point on which data recording takes place (only when static) and the time elapsed since data recording was started. Additionally, this tab shows the receiver's battery and memory statuses (plus remaining, estimated recording time for some receivers). When there is no data recording in progress, most of these fields are left empty.

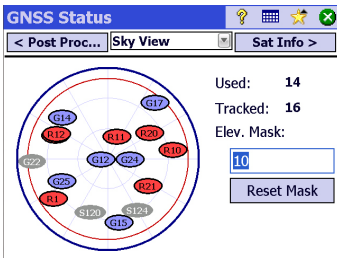

- **Sky View:** Provides a polar view of the sky showing the location and type of each satellite being tracked and the total number being used in position solutions (see example). You may change the value of the elevation mask on this screen. This will update the value read on the **General** tab as well (see *Managing Your Receiver Profiles on page 30*).

Color code and letter code used for the different constellations:

Color	Gray	Blue	Red	Green	Yellow	Magenta	Cyan
Satellites used in position	Not used	GPS	GLONASS	BeiDou	Galileo	QZSS	SBAS
Sat label ("xx"= Sat PRN)	-	Gxx	Rxx	Cxx	Exx	Jxx	Sxx

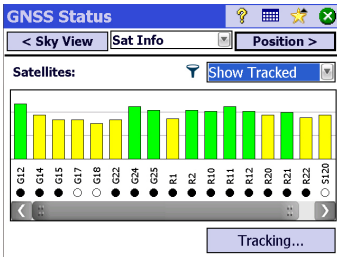

- **Sat Info:** For each visible satellite, provides the satellite identifier (e.g. G8), the current status (Used/not Used) and the L1 signal strength (SNR) as a color-coded vertical bar. See table below.

Vertical Bar	L1 Signal Strength
Green	Very Good
Yellow	Good
Red	Poor


Used/Not Used Indicator	Status
Solid dot	Used
Hollow Dot	Not Used

The **Tracking** button allows you to enable or disable each of the constellations the receiver can track.

Depending on the receiver used, you may be given the ability to reject some satellites through a context-sensitive menu attached to each vertical bar (you may want to not use a satellite because the signal received from it is too weak, or because it is officially declared unhealthy). In this case, a filter is also available on this screen allowing you to show all the visible satellites or only those that are currently tracked.

(NOTE: The same satellite labels as on the **Sky View** above are shown on this screen.)

- **Position:** Provides the three coordinates of the position solution currently computed by the GNSS receiver, the solution status, as well as heading and speed if the receiver is currently moving. The position may be expressed in WGS84 (always possible), in a local coordinate system (if selected and solved) or as grid coordinates (if the grid is selected and solved).

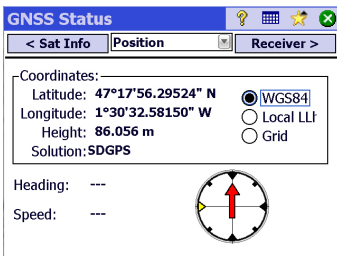

Before going any further in your work, you should check that at least 6 satellites are received and used, each satellite providing a good signal level, and the receiver delivers a 3D position solution.

During your survey, should your GNSS receiver raise some alerts (loss of RTK position status, low memory or low battery), Survey Pro will automatically forward them to you in the form of message boxes. This is to make sure you get this information in a timely manner as some GNSS receivers may not be able to warn you directly.

Leveling Mode - Getting Ready for Leveling

Leveling can be performed using one of two techniques:

- *Automatic leveling:* An automatic level is used to take readings on a graduated level rod. This is the traditional leveling technique for surveying. It can be performed by manually reading the rod, or by using a digital automatic level such as the DiNi to electronically read the rod.
- *Trigonometric leveling:* An optical total station is used to measure zenith angle and slope distance to a prism on a pole. This alternative leveling can be performed with a total station and a prism on a fixed height pole.

Depending on the technique you wish to use, you must configure your instrument and possibly select a leveling method.

Auto/Manual Leveling Methods

Survey Pro supports the following leveling methods:



- *Three Wire:* An automatic level is used and the operator observes the leveling rod at the upper, middle, and lower wire of the level stadia. This method is used with the “Manual Mode” instrument profile.
- *Single Wire:* Same as three-wire leveling, except that only the middle wire is read and entered using the “Manual Mode” instrument profile.
- *Electronic:* An electronic automatic level is used to digitally observe a bar-coded level rod. This method is used with one of the supported electronic level instrument profiles.
- *Trigonometric:* An optical total station is used to observe a prism on a prism pole to measure vertical distance. This method is used with any electronic total station instrument profile. It can also be used with the “Manual Mode” instrument profile if you wish to hand enter zenith and slope distance observations from a field book.


NOTE: Trigonometric leveling (trig leveling) is a different survey technique than performing a 3D optical survey with a total station.

In trig leveling, you do not set up the optical total station on a known point, and you do not measure the height of the instrument or the height of the rod at any time during the survey.

Trig leveling is more like traditional leveling in that you set up the instrument in between the points in each turn, you observe the rod at the backsight to establish the height of the instrument, then you observe the rod at the foresight to establish the foresight elevation. Because the foresight observation is subtracted from the backsight observation, the height of the rod, which must be kept constant between the backsight and foresight of each turn, cancels out. Therefore, in trig leveling, you never need to enter the height of the rod. The height of the instrument above the ground at each location is also not used in this procedure.

Choosing Leveling Mode

1. If your active instrument is an electronic automatic level, then Survey Pro will automatically use Electronic leveling method.
2. If your active instrument is an optical total station, then Survey Pro will automatically use the Trigonometric leveling method. Creating and activating either an electronic level instrument profile or an optical total station profile is the same procedure used to create an instrument profile in optical surveying mode (see *Optical Mode - Connecting Survey Pro to an Optical Instrument on page 26*).
3. If your active instrument is the “Manual Mode” profile, then you must choose your leveling method:
 - Tap the Instrument icon and select **Switch to Leveling**.
 - Tap the Instrument icon again and select **Manage Instruments**. This opens the **Settings** screen.
 - Select **Manual Mode** and then tap **Instrument Settings**. This opens the **Level Method** screen.
 - Select the desired leveling method among the four possible,
 - Tap  to validate your choice. As a result, you can see that **Manual Mode** in the list of instruments has now been activated automatically.
 - Tap  to close the **Settings** screen. Survey Pro is now ready to perform manual leveling.

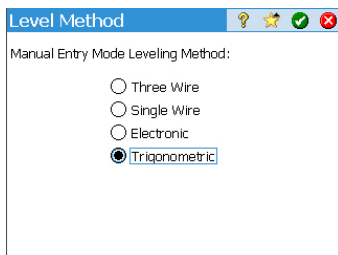


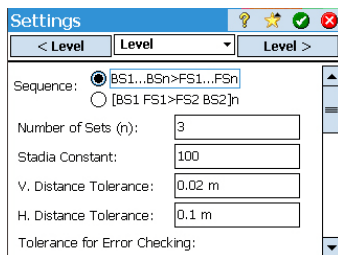
Level Settings

- Now that you have selected the **Leveling** mode, go back to the main menu and select **Job > Settings**. This opens the **Settings** screen
- Select **Level** from the upper tab. This screen allows you to set the shooting sequence (**BS1...BSn>FS1...FSn** or **[BS1 FS1>FS2BS2]n**), the number of sets (n) and a few leveling tolerances (vertical distance, horizontal distance, etc.) Survey Pro will be using in Leveling mode.

The **Load FGCS Defaults** button allows you to specify a particular order and class for the level loop. This will automatically fill in all the tolerances on the **Settings** screen with the default FGCS values.

Setting tolerances allows Survey Pro to issue warning messages when tolerances are not met. It's up to you to determine if the level loop meets the criteria for a particular standard.

- Tap  to enter all your settings and close the **Settings** screen.
- Go to the main menu and select **Survey** to start your leveling work. Refer to Section 7. *Leveling on page 70* for more information.



5. Optical Surveying

What you have done already:

- You have set up the optical instrument on a tripod over a point of your choice and measured the instrument height.
- You have selected **Optical** from the instrument icon located on the Home screen or Main Menu.
- You have activated the instrument for use with Survey Pro. See *Optical Mode - Connecting Survey Pro to an Optical Instrument* on page 26.
- You have configured the proper settings in the **Job > Settings > Surveying** tab. This tab allows you to configure:
 - **Earth Curvature & Refraction** correction: To adjust measured zenith angles for the effects of earth curvature and refraction.
 - **PPM**: To adjust the measured slope distances for the atmospheric effects on the EDM.
 - **Survey with True Azimuths**: Automatically sets the Circle on the instrument to match the BS Azimuth that is set when pointed at the backsight.

What you should do now: You have to position and orient the total station in your local coordinate system before you start measuring points. This can be done using one of the methods below, by choosing whichever is most appropriate:

- **Known Point:** Station setup on a point with known coordinates.
- **Unknown Point /Resection:** Station setup on an unknown point using the resection method to determine the position of the point.
- **Multiple Backsights:** Station setup on a known point using several backsight points to determine the orientation.
- **Use Last Setup:** This method is made available only after a station has been set up in the current job. Use it only if you are certain the tripod is still exactly at the same location as when the last setup was performed, and the same BS and Circle are being used.

The first three methods are described below. The point or points used should have previously been stored in or imported into the job.

Instrument Setup Station Setup on a Known Point


The name and coordinates of the known point where the station is set up can be picked from within the open job. This method offers three different scenarios:

- **BS Azimuth [1]:** Backsight azimuth. The station location will be set from the coordinates of the known point. The backsight azimuth will be the value you enter in the **BS Azimuth** field.

Typically, this is an “assumed” backsight and the value will be 0 or North. The backsight circle orientation will be set to 0°00’00” automatically.

- **BS Point [2]:** Backsight point. The station location will be set from the coordinates of the known point. The backsight circle orientation will also be set to 0°00’00” in that case.
- **New Point [3]:** This is a variant of backsight azimuth in which the azimuth is given to a new point you would like to measure and add to the job.

The diagram below illustrates the three possible scenarios.

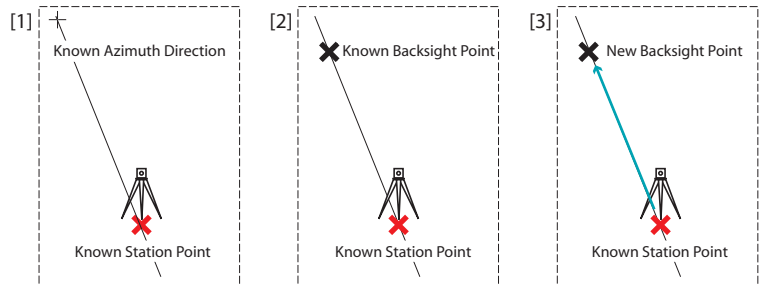

NOTE: A variant to this procedure exists (whatever the scenario used) if the **Survey with True Azimuths** setting is enabled (see **Job > Settings > Surveying** tab). In this case, the backsight circle will always be set automatically to the true azimuth, either the entered one (**BS Azimuth** then renamed “**True Azimuth**” scenario and **New Point** scenario) or the calculated one (**BS Point** scenario).

The three scenarios are detailed below with the **Survey with True Azimuths** option disabled.

Start the station setup as follows:

- Go to the Main Menu, then tap **Survey > Station Setup**.
- Choose **Setup Type= Known Point**.
- Enter the name of the station setup point in the **Occupy Point** field. The point name can be entered directly, or, picked from the map or point list using the button.
- If you wish to ignore elevations in your job, check the **2D Survey** box. You will otherwise enter the height of instrument in the **HI** field.
- Tap **Next**.

Then, of the three possible options, choose the one that is suitable for your job:

1. If you choose **BS Azimuth**:

- Aim the instrument in the direction of a known or assumed azimuth.

The screenshot shows the 'Station Setup' dialog box. At the top, 'Setup Type:' is set to 'Known Point'. Below this, there is a '+' icon, 'Occupy Point:' with a dropdown menu showing 'ST_SETUP', and a '2D Survey (Ignore Elevations)' checkbox. Under 'Information:', there are fields for 'N:', 'E:', 'Elev:', and 'Desc:', with values '5,000.000', '5,000.000', '100.000', and 'Cogo' respectively. There is also an 'HI:' field with the value '5.300 ft' and a 'Remote Elevation' checkbox. At the bottom, there is a message 'No current Setup!' and a 'Next >' button.

Station Setup

BS Azimuth: 0.0000

Please make sure you are pointed at the backsight with instrument in direct face.

< Back **Set Backsight>**

- Enter the known or assumed value of azimuth in the **BS Azimuth** field.
- Tap **Set Backsight**. The screen provides a summary of what you have just done and prompts you to check the setup.

NOTE: If the equipment used is unable to set the backsight circle, the button is labeled **"Read Backsight"** instead of **"Set Backsight"**.

Check the Setup:

- If you choose the **By Angle** option, just make sure the instrument is still aimed in the direction of known azimuth, then tap **Check**. You should read the previously set backsight circle.
 - If you choose the **By Point** option, enter the name of the point used for checking, specify the target used on that point, correct the target height if necessary and tap **Check**. A measurement is then made. Check the delta values reported on the screen, which should be as close as possible to zero.
 - You cannot use the **By Distance** option in this case.
- If you are satisfied with the read values, tap **Finish**. You can now start measuring new points.

2. If you choose **BS Point**:

Station Setup

BS Point: PT1

BS Azimuth: 319°58'36"

Roving Target HR: 7.349 ft


Please make sure you are pointed at the backsight with instrument in direct face.

< Back **Set Backsight>**

- Enter the name of the backsight point. It can also be picked from the map or the list of points. The resulting backsight azimuth is then calculated and displayed just underneath the **BS Point** field.
- Specify the type of target used at the backsight point (**Fixed Target** or **Roving Target**).

A "roving target" is when you measure to the backsight with the same rod and prism you will be using for your subsequent data collection.

A "fixed target" is when you have a tripod and prism that will remain at the backsight and that will be different from the rod and prism you will be using for subsequent data collection. See also *Managing Smart Targets on page 103* for more information on the Survey Pro target database and the fixed backsight target.

- Using , select the name of this target. As a result, the **HR** (height of rod) field is updated to provide the height of this target.
- Aim the instrument at the known backsight point.
- Tap **Set Backsight**. The screen provides a summary of what you have just done and prompts you to check the setup. Note that the backsight circle has been set to 0°00'00".


NOTE: If the equipment used is unable to set the backsight circle, the button is labeled **"Read Backsight"** instead of **"Set Backsight"**.

As previously explained for **BS Azimuth**, you can in the same way check the setup either **By Angle** or **By Point** (see **Check the Setup** above).


You can also use the **By Distance** option. Just make sure the instrument is still aimed in the direction of the backsight point and tap **Check**. The measured horizontal and vertical distance errors are reported on the screen. They should be as close as possible to zero.

- If you are satisfied with the read values, tap **Finish**. You can now start measuring new points.

3. If you choose **New Point**:


- Place a target at the unknown (new) backsight point.
- Aim the instrument at this point.
- Enter the known or an assumed value of azimuth along this direction.
- Specify the type of target used at the backsight point (**Fixed Target** or **Roving Target**).
- Using , select the name of this target. As a result, the **HR** field is updated to provide the height of this target. Update the height value if necessary.
- Tap **Measure & Set** to measure the new point and set the backsight.

NOTE: If the equipment used is unable to set the backsight circle, the button is labeled “**Measure & Read**” instead of “**Measure & Set**”.

- Enter a name and description for the new backsight point.
- Tap  to store the point.
- Review the summary of the station setup, as shown on the screen. If it's not as expected, tap **Back** and resume the setup.
- If the setup is fine, tap **Finish**. You can now start measuring new points.

Station Setup on Unknown Point, Resection Method

The resection method is illustrated below.

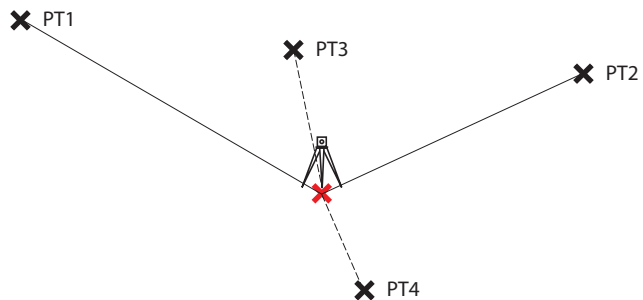

At least two known points should be observed to solve the station setup (e.g. PT1, PT2). Other known points (PT3, PT4,..) may be added to refine the computation.

- Go to the Main Menu, then tap **Survey > Station Setup**.
- Choose **Setup Type= Unknown Point/Resection**.
- Use the **Store Pt** and **Description** (or **Feature**) fields to enter respectively the name and description of the point where the instrument is set up. (This is a new point, with unknown coordinates.)
- If you will ignore elevations in your job, check the **2D Survey** box. You will otherwise enter the height of instrument in the **HI** field.
- You can take one or more shots of each point. Enter the desired number of shots in the **Shots per Resect Point** field.
- You may want the instrument to perform either **Direct and Reverse** measurements (recommended for station setup) or a **Direct Only** measurement. Use the **Sequence** field to make this choice.
- Tap **Next**. This opens the **Station Setup** screen on which you should define the following parameters:
 - **Resect Point:** Enter the name of the first point used (PT1 for example).
 - **Option:** Define the type of measurement you will perform on the point (**Distance and Angle** or **Angle Only**).
 - Define the type of target used and its height (**HR**).
- Tap **Observe** then **Take Shot** to start a measurement. You are then taken back to the **Station Setup** screen where the measured point is listed as the first point involved in the station setup.
- Repeat the previous two steps for the next point (PT2 for example), and then for additional points (PT3, PT4, etc.) for data redundancy.

As you get new points, Survey Pro tries to compute a solution for the station location.

When a solution is available, the RMS values of the solution are shown in the lower part of the screen.

You may reject the horizontal or vertical contribution of a point by tapping on the corresponding “Yes” which will then be changed into a blank field. Again, you will immediately see the impact of this change on the quality of the solution.

- When you are satisfied with the results, tap **Next**. The screen then shows the properties of the station setup. If you scroll down the list of results, you will see the components of the final error ellipse for the solved point.
- On this screen, Survey Pro defines one of the control points you have just used in the resection method as a backsight point.
- At this stage, you can tap **Finish** to complete the station setup. The instrument circle used for this setup will be the direct circle reading on the first resection point used in the setup, unless you are surveying in true azimuth mode.

Point	H	V	Desc	dHD	dHA
PT1	Yes	Yes	CONTR	0.000	0°00'00"
PT2	Yes	Yes	CONTR	0.001	0°00'01"
PT3	Yes	Yes	CONTR	-0.002	0°00'00"


In true azimuth mode, the instrument circle will be adjusted so that your circle will now read the true azimuth when pointed at the first resection point used in the setup.

Alternatively, you can tap **Backsight** to proceed to the normal backsight setup, with your newly calculated station point as the setup point, and your last resection point as the backsight point. It is a good practice to do a backsight check after a resection to ensure the instrument circle is oriented as you expected.

When this is done, tap **Finish**. You can now start measuring new points.

Station Setup Using Multiple Backsights

The multiple backsights method is illustrated below.

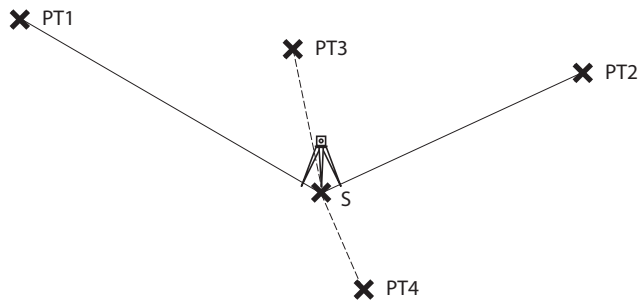

S, where the station is set up, is a known point. At least one known point should be observed to determine the orientation of the instrument and correct it accordingly. Other known points (PT3, PT4,..) may be added to refine the computation of the correction angle.

- Go to the Main Menu, then tap **Survey > Station Setup**.
- Choose **Setup Type= Multiple Backsights**.
- Use the **Occupy Point** field to enter the name of the point where the instrument is set up. (This is a known point, i.e. with known coordinates.)
- If you will ignore elevations in your job, check the **2D Survey** box. You will otherwise enter the height of instrument in the **HI** field.
- You may want the instrument to perform either **Direct and Reverse** measurements (recommended for station setup) or a **Direct Only** measurement. Use the **Sequence** field to make this choice.
- You can take one or more shots of each point. Enter the desired number of shots in the **# of Sets** field.
- Tap **Next**. This opens the **Station Setup** screen on which you should define the following parameters:

Station Setup	
Setup Type:	Multiple Backsights
+ Occupy Point:	S
N:	50,000
E:	100,000
Elev:	23,000
Desc:	Ref
Sequence:	Direct Only
# of Sets	1
No current Setup!	
Next >	

Point	Used	Desc	dHD	dHA	N
PT1	Yes	Ref	0.000	0°00'38"	80.000
PT2	Yes	Ref	0.000	0°00'00"	150.000
PT3	Yes	Ref	0.000	0°03'47"	80.000

F1 Correction: 0°01'29"

< Back Observe Next >

- **BS Point:** Enter the name of the first backsight point used (PT1 for example).
- **Option:** Define the type of measurement you will perform on the point (**Distance and Angle** or **Angle Only**).
- Define the type of target used, and possibly its height (**HR**).
- Tap **Observe** then **Take Shot** to start a measurement. You are then taken back to the **Station Setup** screen where the measured point is listed as the first point involved in the station setup.
Survey Pro indicates the correction angle needed to the instrument orientation so this instrument can accurately measure the azimuth angle to this point. This angle is called **F1 correction**. It is positive for an anticlockwise correction, negative for a clockwise correction.
- You may repeat the previous two steps using additional points (PT2, PT3, PT4, etc.) for data redundancy.
You may reject the contribution of a point by tapping on the corresponding “Yes” which will then be changed into a blank field. You will immediately see the impact of this change on the correction value.
- To accept the computed correction value, tap **Next>**. Survey Pro suggests you use the first point measured as the backsight. If you agree, just tap **Finish** to complete the Station Setup.

Variant to the Basic Station Setup Procedures

There is a variant to the basic step-by-step procedures described above, related to your current job settings (in **Job > Settings > Surveying** tab):

- **PPM Correction:** By default, the PPM will not show up in the station setup routine. But, if you check the box for **Prompt for PPM during Station Setup**, the PPM will become the first step in your station setup routine.

The PPM correction is applied to all measured slope distances. This may be achieved in one of two different ways:

1. You enter the PPM in the instrument which in return will provide Survey Pro with slope distances corrected for the PPM.
2. Or you enter the PPM in Survey Pro, in which case the instrument will return uncorrected slope distances (make sure the PPM is set to “0” in the instrument). Survey Pro will apply the PPM correction to any slope distances that will be used in further calculations.

NOTE: With some instruments (e.g. FOCUS 30 and S6), the PPM correction can only be set using the second method.

For any station setup, you can also set the elevation of the station point independently using the Remote Elevation routine (see *Remote Elevation on page 46*).

Remote Elevation

This routine will set the elevation coordinate of the station from a point with known elevation. It is accessible from within the first station setup screen by tapping the **Remote Elevation** button (provided the **2D Survey** box is unchecked). The known elevation is either that of:

- A point stored in the job. You will select this point from the map or from the list of points.
- A point not stored in the job, but its elevation is known, perhaps through past results, by calculation, or printed on a data sheet.

Step-by-step procedure:

- Have a target set up on the point.
- Aim the instrument at the point.
- Go to **Station Setup** and then tap the **Remote Elevation** button.
- Enter the elevation according to the suitable method.
- Check the **HI** value.
- Select the target and check the **HR** value.
- Tap **Take Shot**. The results of the shot then appears in the lower part of the screen.
- Tap to return to the Station Setup screen and complete the setup according to the method you chose.

Fixing Station Setup

You may need to apply corrections to all the measured points sharing the same station setup. This can be done using the **Fix Station Setup** function in the **Adjust** menu.

Two types of transformation can be done:

- *Rotation*, based on a known azimuth between two points sharing the same station setup. You need to specify the value of known azimuth and the two point names. When applying the change, all the concerned points will be rotated the same way. The original backsight azimuth will be updated as well to achieve the desired result (which **Adjust** > **Rotate** would not do).
- *Translation*, based on two points that you specify. The first one is an observed point that you would like to translate to another location, and the second one is a key-in point created with the coordinates that you would like to assign to the first point. When applying the change, all the concerned points will be translated the same way. The original occupy point will be moved accordingly to achieve the desired results (which **Adjust** > **Translate** would not do).

Point Measurement

Introduction to Traverse / Sideshot

- Tap **Survey > Traverse / Sideshot**. This screen allows you to make traverse and sideshot measurements. It also provides access to the station setup via the **Backsight** button allowing you to either check the current setup or start a new setup. The current setup is summarized at the top of the screen.
- Enter the name (**Foresight**) and description (**Desc.**) of the point you will now be measuring, as well as the type and height (**HR**) of the target used on that point.
- The next step is choosing between sideshot or traverse.

Choosing “Sideshot” means you simply want to take a measurement of the point. (See *Sideshot on page 47*.)

Choosing “Traverse” (see illustration below) means you are expected to move the instrument to that point either immediately or after measuring other points (sideshot).



Traverse/Sideshot

OCC:ST1 HI:2.000 BS:ST5, 328°46'54"

Foresight: SS11

Desc.: HR: 2.240 m

Backsight... Traverse Sideshot

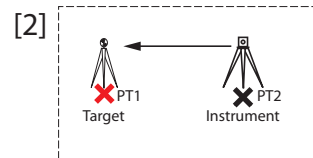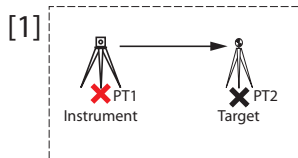

This implies a new station setup is required after moving the instrument. (See *Traverse on page 48*.)

Sideshot

- Be sure the instrument is pointed at the target placed over the point.
- Tap **Sideshot**. Survey Pro returns the results of the measurement in the lower portion of the screen ([1]). The point name is automatically incremented for the next measurement. Tapping on the **Result** tab will provide more information on the measurement made ([2]).

[1]

Traverse/Sideshot

OCC:PT3 HI:2.030 BS:PT2, 27°00'00", BS HR:

Foresight: SS11

Desc.: SS HR: 2.123 m

Angle Right: 12°26'50" deg

Zenith: 10°23'50" deg

Slope Dist: 126.356 m

Elevation: 134.002 m

Point: SS10

Backsight... Traverse Sideshot

[2]

Traverse/Sideshot

Point: SS11

N: 638.172 m

E: 166.087 m

Elev.: 134.002 m

Description: SS

Angle Right: 12°26'50" deg

Zenith: 10°23'50" deg

Slope Dist: 126.356 m

Horz Dist: 22.804 m

Point: Point name

N: Point coordinate Y

E: Point coordinate X

Elev.: Point coordinate Z

Description: Point description

Angle Right: Azimuth angle measured from the occupy point to the foresight point (measured in a horizontal plane)

Zenith: Zenith angle measured from the occupy point to the foresight point (Zenith is measured in the vertical plane, relative to gravity, where 0 is pointing straight up, parallel to gravity, and 90 is pointing straight ahead, orthogonal to gravity.)

Slope Dist: Slope distance measured from the occupy point to the target

Horz Dist: Horizontal distance calculated from the occupy point to the target

Vert Dist: Vertical distance measured from the occupy point to the target.

- Repeat the above two steps until all your points have been measured.

Traverse

- Be sure the instrument is pointed at the target placed over the point.
- Tap **Traverse**. The screen prompts you to measure a new point, or to pick a point that was previously measured from the current station setup (Survey Pro will display a list of appropriate points), and then move the instrument to that point. If you create a new point to traverse to, you will then be asked to enter the description of the point before measuring it.

Point	Description
1	SS

- After the measurement is done or the point selected, Survey Pro provides a summary of what the new station setup will be (see [1] below).
- Move the instrument to the new station point and level it on its tripod.
- Measure the new instrument height and enter the measured value (**HI**).
- Aim the instrument in the direction of the point you came from (now the backsight point).
- Enter the type and height (**HR**) of the target used on the backsight point (see [1]).

[1] Station Setup

HI: 2.030 m

New Occupy Point: PT5

New Backsight Point: PT3

New Backsight Circle: 0°00'00"

Fixed Target ▼ HR: 0.000 m ▼

Next >

[2] Station Setup

OCC:PT5 HI:2.030 BS:PT3, 219°56'40", BS HR

By Distance ▼ Check

Occupying Point	PT5
Backsight Point	PT3
BS Circle	0°00'00" deg
BS Azimuth:	219°56'40" deg
(BS Bearing:	S39°56'40"W deg)

< Back Finish

The **New Backsight Circle** will be preset to zero, unless you are surveying with true azimuths.


In the true azimuth case, the circle will be the azimuth from the new location occupied by the station back to its previous location, which is now your backsight point.


- Tap **Next** and complete the station setup as you would normally do using the Known Point (backsight) method (see [2]).

NOTE: The **Station Setup** routine can be used at any point to occupy any existing point in the job at any time. It is up to you to determine if and when this is appropriate.


Repetition Shots


The Repetition shots function allows you to perform sideshots or traverse shots using any number (between 1 and 99) of repeated measurements ("Sets").

- Go to the **Survey** menu and tap **Repetition Shots**.
- Tap  in the command bar to access the job settings relating to repetition shots (equivalent to navigating to the **Job > Settings > Repetition** tab).
- Tap the **Repetition** tab. The **Rep Shoot Sequence** field allows you to choose the desired sequence of repetitions (7 available):
 - "FS" stands for "Foresight":
 - "BS" stands for "Backsight"
 - The ">" symbol is used to denote the next shot coming in the sequence using the same face of the instrument (direct or reverse).
 - The "^" symbol is used to denote when in the sequence you will flip the instrument to take observations in the opposite face.

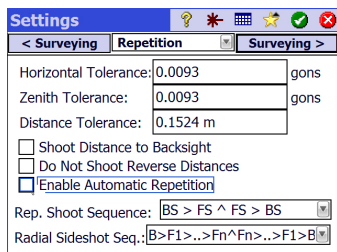

The other parameters on this screen are self-explanatory. Set them to meet your application. The **Radial Sideshot Seq** field allows you to specify the sequence of observations to be taken in the Radial Side Shot routine. This setting is NOT used for either regular repetition shots or multiple side shots.

- Tap  to return to the **Repetition Shots** window.
- Use the **Foresight** field to enter a name for the point you will measure through repetition shots.
- Enter the number of Sets you want the sequence to be repeated.
- Select the type and enter the height (HR) of the target used on the foresight point.
- Start the sequence by tapping either **HA**, **ZA**, **SD** or **All**, whichever is appropriate in your case. Depending on the instrument used, run the series of measurements manually or let the instrument do this automatically. Results are displayed at the end of the sequence (see illustrated).
 - **Average of**: Shows the average angle or distance to the point from all the shots taken. The number in parenthesis is the total number of repetitions performed.
 - **Worst Residual**: Displays the worst residual calculated from all the sets of the selected measurement type.

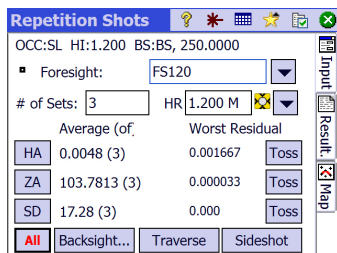

You may use one or more of the **Toss** buttons to remove from the solution the set of measurements that provided the worst residual. A **Toss** button can only be used if three or more sets have been collected.

When you tap **HA**, **ZA**, **SD** or **All**, Survey Pro will collect an additional observation of that type (or all of them) and add it to the sets already collected.

EXAMPLE: If you had three complete sets, then selected to toss the worst HA, you would now have two HA sets, three ZA sets and three SD sets. If you tapped HA, you would collect an additional set of horizontal angles only, and on return to this screen, you would now have three HA, three ZA, and three SD sets. If you hit HA again, on return to this screen you would have four HA, three ZA and three SD sets.

Repetition Shots		
Point:	FS120	
X:	999.779	m
Y:	999.779	m
Z:	5.109	m
Description:	SS	
Angle Right:	0.0036	grad
Zenith:	103.7813	grad
Slope Dist:	17.30	m
Horz Dist:	17.27	m
Vert Dist:	-0.103	m

- Additionally from this screen, you can either traverse to the point (tap **Traverse** and then follow the usual traverse procedure) or tap **Sideshot** to store a measurement of the point, based on all the data gathered during the repetition shots, to store the point with the measurements taken.

NOTE: The **Sideshot** or **Traverse** buttons will not become active unless at least one observation for each type of measurement (HA, ZA, SD) has been performed.

If you tapped **Sideshot**, the observation is used to store a new point, and you view the results (see example). If you tapped **Traverse**, the traverse prompt will open and you will be guided through moving and setting the instrument on the new occupy station point. The traverse procedure is described above (see *Traverse on page 48*).

Tap **Sideshot** if you plan to occupy the measured point at a later time. You can use the **Traverse** button later to initiate moving the instrument to any point measured from the current station.

Tap  to quit the Repetition Shots function.

6. GNSS Surveying

Starting an RTK Base

NOTE: You don't need to set up a base if you are working in a network. Just make sure your rover is configured to receive network corrections, and actually receives them before you start taking measurements in your job. See *Starting an RTK Rover on page 54*.

What you have done already:

- You have set up the base GNSS receiver on a tripod over a point of your choice and measured the antenna height.
- You have selected **GNSS** from the instrument icon located on the Home screen or Main Menu.
- You have created a receiver profile that matches the use of your receiver as a base (or network base) and the receiver has been reported as being “base” capable. See *GNSS Mode - Connecting Survey Pro to a GNSS Receiver on page 28*.
- You have made sure the GNSS status is correct at the location where the base is to be operated. See *Checking the GNSS Status on page 35*.

What you should do now:


- Go to the **Survey** menu and tap **Start Survey**. You may also find the **Start Survey** function on your Home screen.
- Unless already done, highlight the name of the receiver profile you intend to use for operating your base.

For a “network base”, select the network to which the base will deliver its corrections by selecting the relevant network profile name. For a “base”, there may be additional settings required using the **Configure Modem** button (the radio settings provided by the selected receiver profile may not match your case of use).

- Tap **Connect**.

When creating a job, if you decided not to choose a coordinate system, you will be asked to reconsider this choice when starting the base. The **Start Survey Prompt Projection** screen will appear at this time with two possible options:

1. **Ground Calibration:** Choose this option if there is no known projection or datum to relate your local grid coordinates to geodetic coordinates (through this choice, you confirm your decision to use local control to set up a coordinate system). The selection of a geoid is possible after making that choice.

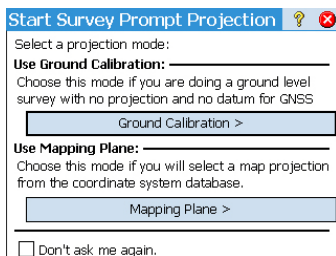

2. **Mapping Plane:** Tap on this button if you now wish to use a coordinate system (i.e. known origin and type of projection + known datum or broadcast RTCM datum) that can either be keyed in or picked from Survey Pro's coordinate system database. For more information on the projection mode, refer to *Introduction to Calibration on page 63*.

NOTE: If you always start your GNSS surveys with the same type of projection mode, then you can tap **Don't ask me again** at this prompt, and Survey Pro will start the GNSS survey with the settings you used to create the job.

Start GNSS Survey

Code Radio: 0% SV: 14 HRMS: 0.51

Base Receiver

Base is ready to set.
Check the antenna height then tap [Next>].

Base Antenna:

Type: ASH802147 Setup ...

Measured: 5.9 To: Slant measure mark

Post Processing
Recording Interval: Off

Next >

- Survey Pro will poll for the base position. While Survey Pro does this, enter the antenna height you measured previously (**Measured** field) and how you measured it (**To** field).
You may ask the base to log raw data (for post-processing) by just specifying a recording interval in the **Post Processing Recording Interval** field. When you start a rover, by default it will automatically use the same recording interval as the base you set. Set the recording interval to “Off” if you do not want to record raw data.
- Tap **Next**. Survey Pro searches the point database for a location that matches the current base position (the one that was checked on the previous screen). If a matching point is found in the job, or else in the reference station database (see *Managing Reference Stations on page 68*), then Survey Pro offers this as the default base point. Tap **Change** to choose a different point or to create a new point for the base setup.
- Tap **Next**. The base is now started. Survey Pro prompts you to start the rover (tap **Set Rover**) (as if you had tapped **Start Survey** on the Home screen). Underneath the GNSS receiver profiles list, the name of the modem for the selected profile is displayed).

NOTE: if you only want to set the base at this time, tap **Finish Base Setup**. Survey Pro will then exit the Start Survey wizard and open the GNSS status page connected to the base.

Starting an RTK Rover

This section describes how to configure and start an RTK rover.

What you have done already:

- You have set up the GNSS receiver on a pole and measured the antenna height.
- You have selected **GNSS** from the instrument icon located on the Home screen or Main Menu.
- You have created a receiver profile that matches the use of your receiver as a rover (or network rover) and the receiver has been reported as being “rover” capable. See *GNSS Mode - Connecting Survey Pro to a GNSS Receiver on page 28*.
- You have made sure the GNSS status is correct where you start your survey. See *Checking the GNSS Status on page 35*.

What you should do now:


- Go to the **Survey** menu and tap **Start Survey**. You may also find the **Start Survey** function on your Home screen.
- Unless already done, highlight the name of the receiver profile you intend to use for operating your rover.

For a “network rover”, select the network from which the rover will receive corrections by selecting the relevant network profile name. For a “rover”, there may be additional settings required using the **Configure Modem** button (the radio settings provided by the selected receiver profile may not match your case of use).

For an "RTX" rover, no additional settings are required.


- Tap **Connect**. If your receiver operates in RTX, refer to *RTX Correction Service on page 106* to read about the additional steps that take place at this point.

When creating a job, if you decided not to choose a coordinate system, you will be asked to reconsider this choice when starting the survey (unless you started your own base and you were already prompted to make a choice at that time). The **Start Survey Prompt Projection** screen will appear at this time with two possible options:

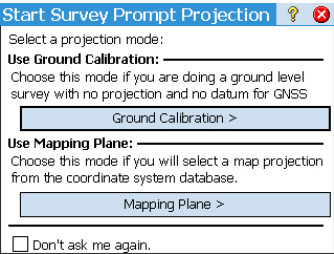

1. **Ground Calibration:** Choose this option if there is no known projection or datum to relate your local grid coordinates to geodetic coordinates (through this choice, you confirm that you will be using a local coordinate system defined by existing control points). The selection of a geoid is possible after making that choice.
2. **Mapping Plane:** Tap on this button if you wish to use a coordinate system (i.e. known origin and type of projection + known datum or broadcast RTCM datum) that can either be keyed in or picked from Survey Pro's coordinate system database. For more information on the projection mode, refer to *Introduction to Calibration on page 63*.

NOTE: If you always start your GNSS surveys with the same type of projection mode, then you can tap **Don't ask me again** at this prompt, and Survey Pro will start the GNSS survey with the settings you used to create the job.

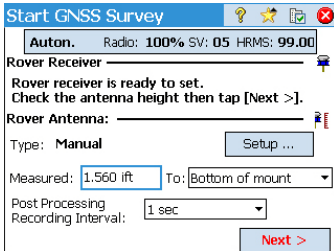

- While the rover receives data (corrections and position) from the base, enter the rover antenna height you measured previously (**Measured** field) and how you measured it (**To** field).

You may ask the rover to log raw data (for post-processing) by just specifying a recording interval in the **Post Processing Recording Interval** field. If you earlier set up a base doing the same, then make sure you are using the same recording interval for both receivers. Select “Off” if data logging is not required.

- Tap **Next**.
- Confirm or change the point where the base is located.

For most receivers, the height of the base antenna is broadcast over the data link, so you do not need to change the base antenna height displayed on this page.

NOTE: The broadcast height will be reduced to the antenna phase center, and will show as an “Unknown” antenna brand.

If your rover receiver does not get the base antenna height from the data link (**Measured**= “0.000”, **Base Brand**= “Unknown” and **Antenna Type**= “Unknown Broadcast”), you need to specify the antenna brand and type used at the base, enter the measured height and specify the mark used to measure the height (tap on the **Change** button to access the base’s **Antenna Height** definition screen).


NOTE: Next time you run your rover, Survey Pro will automatically query the Base Info list (see *Managing Reference Stations on page 68*) for the suitable base to use with the rover, thus skipping the base location selection step described here.

If both the base location and antenna type match, Survey Pro will automatically use the antenna parameters stored in the Base Info list for that base, and not the antenna parameters broadcast by the base.

The message **Rover is ready to set with reference station ‘x’**. will indicate that the base was picked from the reference station data base, whereas the message **Rover is ready to start a survey with base point ‘x’**. will indicate it was found in the survey file.

Any time a VRS (Virtual Reference Station) survey is started, excluding a PRS (Physical Reference Station) in a VRS survey, automatic base selection will be done as well. The message **Rover is ready to start a survey with virtual base ‘x’** will be displayed in this case.

- If the **Finish** button is displayed, this means the coordinate system is fully solved, and you are ready to collect data.

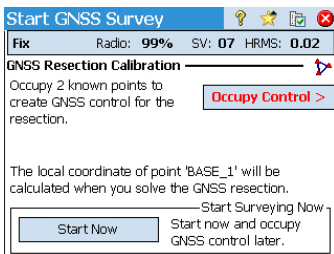

If the **Next** button is displayed instead, this means you are working in Default Ground mode, where a calibration is always required, or you are working in mapping plane mode but you started your base on a new point with a new autonomous position. Tap this button. You will see a new screen asking for occupation of control points (see screen example).


For the sake of clarity, calibration is discussed in a separate section (see *Solving Calibration on page 63*).


NOTE: Solving the calibration is optional when your coordinate system is a known map projection and datum, and your base was setup on a known point.

At this stage, you may tap **Start Now** to begin surveying with a temporary calibration solution, which will solve your translation, but the scale and orientation parameters will remain unknown. You can collect data points; their local coordinates will be calculated with this temporary calibration.

At any time during the survey, you can collect the required number of GNSS control points and solve the proper calibration for your site. After you solve the calibration, any data collected points will automatically be recalculated using the latest solution of coordinate system.

Some routines, such as point stakeout or offset points, cannot be run until the calibration is properly solved.

- Before starting data collection, tap  in the command bar. This directly opens the **Meas. Mode** tab (part of the **Job Settings** screen) where you can set the acceptance criteria for different types of point collection:
 - On the **Data** tab, define the criteria for all the points you will collect using **Point** from the **Data Collection** screen or from the active survey map.
 - On the **Topo** tab, define the criteria for all the points you will collect using **Topo SS** from any measurement screen or from the active survey map. Topo criteria are also used for feature collection.
 - On the **Check** tab, define the criteria for all the points you will collect after tapping successively **Control** (on the **Data Collection** screen), then **Check**.
 - On the **Control** tab, define the criteria for all the points you will collect after tapping successively **Control** (on the **Data Collection** screen), then **Control**.
 - On the **Stakeout** tab, define the criteria for all the points you will collect through any stakeout routine.
 - On the **RTX** tab, define the criteria for all the points you will collect if you have selected “RTX” as the survey function for your receiver (if the receiver allows it). See also **Setup Type** field in *Modifying a Receiver Profile on page 32* or *Managing Your Receiver Profiles on page 30*.
If you collect a topo point in RTX, the **Occupy for** and **Automatically accept when criteria is met** fields on the **RTX** tab are simply ignored.

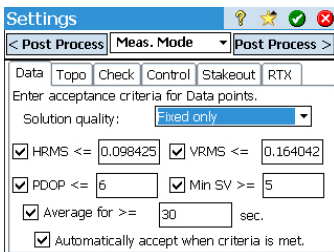

The value you choose in the **HRMS** field is used to test RTX convergence for the computed position. If no HRMS value is specified (the check button is cleared), a default value of 5 centimeters will be used to test the convergence.

Independently for each type, you can set the following criteria:

- **Solution quality:** “Fixed RTK only” or “Code, Float or Fix”
- Max. tolerated **HRMS** and **VRMS** values
- Max. tolerated **PDOP** value
- Minimum number of satellites required (**Min SV**).
- Minimum position averaging time, in seconds (**Average for**)
- Automatically accept data collection or not when criteria are met.

NOTE: The last two criteria make sense when the receiver is set to static to give the best averaged position. Since in **Topo SS** point collection Survey Pro is allowed to store a point using the single latest epoch of data, these two criteria are irrelevant in that case (compare the two screen examples on the left).

If you enabled raw data logging for post processing, the **Post Process** tab is also accessible through which you will set the **RTK autonomous points** field as follows:

- **Allow in PPK Survey:** Choose this option to allow Survey Pro to store an autonomous solution for a data point. This will happen during an RTK survey in case of intermittent or prolonged data link failure. By doing this, you will be able, after the survey and through post-processing, to calculate a precise solution for the point using the data from the GNSS raw data file (PPK logging file).
- **Do Not Store:** No autonomous point will be stored.

On the **Post Process** tab, you can also set an alarm to warn you if the number of satellites, or the remaining free memory size drops below a preset threshold, or if the HDOP exceeds a preset limit.

- Tap to save your settings. Survey Pro displays the **Data Collection** screen.

Collecting Data

Standard data collection routines are presented below. Keep in mind that you may have to solve the calibration before your measured GNSS coordinates are properly transformed into your local grid (see *Solving Calibration on page 63*).

Remember also that you can access the data collection functions from the active map after you have tapped and held on the map and selected **Survey Mode** from the popup menu.

From the **Data Collection** screen, you can perform several types of point collection:

- **Point:** Tap this button to collect the averaged position of a point after a timed, static occupation on that point. The acceptance criteria defined on the **Data** tab will apply. (The corresponding markers will be inserted into the GNSS raw data file if raw data logging for post-processing is activated.)
- **Topo SS:** Tap this button to collect the “instant” position solution of a point. The acceptance criteria defined on the **Topo** tab will apply.

In its upper part, this screen provides detailed, real-time GNSS status information, including status (fixed, float, RTX,...) and coordinates of the last computed position, expressed in the chosen coordinate system, PDOP, VRMS and HRMS.

The screenshot shows the 'Data Collection' screen with the following details:

- Fix:** Radio: 99%, SV: 07, HRMS: 0.020, VRMS: 0.030
- Coordinates:** Northing: 12,833,076.285, Easting: -5,569,427.443, Elevation: 66.707
- PDOP:** 4.00
- Point:** PT1
- Description:** SS
- Set HR:** 2.000 m
- to:** Bottom of antenna mount
- Buttons:** Topo SS, Point

Collecting Points

Place the pole in vertical position over the point to be surveyed and tap **Point** to start collecting data on this point.


The workflow of this routine will depend on the choice you made for the following acceptance criteria:

- **Average for** checked and a minimum averaging time (in seconds) requested: After tapping **Point**, you will see screen type [1] on which the lower-left button label will show Survey Pro counting down from the requested averaging time (**Wait xx**). After that time, **Accept** is restored as the button label so you can decide on what to do: Accept the point collection now or wait more time for an even better averaged position.

NOTE: You can tap the **Wait xx** button to accept the point before the minimum duration has expired. You will in return be informed that the minimum duration is not yet met, at which point you can discard the warning by tapping **Accept anyway**.

- **Average for** cleared: Screen type [2] will be displayed for an unlimited period of time, until you tap **Accept**. Point collection is then complete, unless some other acceptance criteria are not met in which case you will see screen type [3] after you tap **Accept**. You can also choose to accept the point before the wait time expires. Still with this option cleared, you can spend some time checking GNSS reception: This is done by pressing the **GNSS Status** button on screen type [2]. Closing the GNSS status screen will take you back directly to screen type [2].

- **Automatically accept when criteria is met** checked: The use of this parameter makes sense when it is combined with **Average for** checked. Survey Pro will automatically store the point at the end of the averaging time, unless some other acceptance criteria are not met. In that case, at the end of the count down, the **Accept** button will be restored on the screen and when you tap on it, you will see screen type [3].

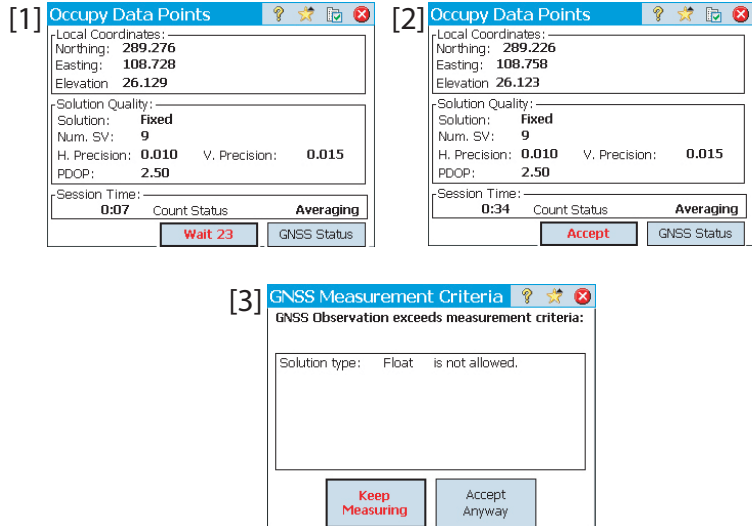

When screen type [3] is displayed, you can either ignore the warning message (tap **Accept Anyway**), or ask for more data collection on the point (tap **Keep Measuring**) until you are satisfied with the collected data (you will then tap **Accept** to end the point collection).


Collecting Topo SS Points

This is the simplest way of collecting a point. Just tap on the **Topo SS** button when you are physically on the point and you have previously named and described the point (see **Name** and **Description** fields). Survey Pro will save the point position right away (no position averaging), assigning the last computed position to the point. A new position being computed every second, the best possible accuracy for the point is achieved if you wait about 1 second, once physically on the point, before tapping on the **Topo SS** button. The **Point** field is then automatically incremented, ready for storing a new point.

Collecting Offset Points


- Go to the **Survey** menu and tap on **Collect Offset**.
- Enter the offset point name and description.
- Tap **Azimuth/Bearing** to indicate that you will be measuring either the azimuth or bearing angle from the occupy point to the offset point. Then tap **Zenith/Vertical Dist** to indicate that you will be measuring either the zenith angle and slope distance or the vertical and horizontal distances from the occupy point to the offset point
You can take these measurements using a compass and a tape, or a laser range finder. The laser interface is shown in the lower-right corner: Enter the instrument height before taking a shot.
- Tap **Occupancy GNSS** to collect the position of the occupy point. The acceptance criteria are those defined for **Data**.
- Tap **Store** to collect the offset point.

Another method exists to measure the direction from the occupy point to the offset point which is to collect another point **(3)** aligned with the offset point **(1)** and the “occupy” point **(2)**. See diagrams below:

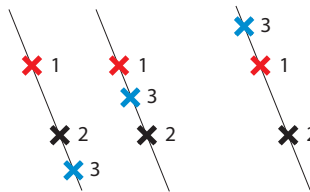

- Choose a suitable point **(3)** and place the pole over it.
- Tap **Direction from two Points** to collect this additional point. The acceptance criteria are those defined for **Data**.
- You will then be asked to define the location of this point compared to the offset and occupy points. This is to allow Survey Pro to determine the correct angle: Choose **In Front** if the offset point is located at one end of the line connecting the three points (see the two diagrams above, left), or choose **In Between** if the offset point is located somewhere between the occupy point and the additional point (see diagram above, right).
- Then you can collect occupy point **(2)** and then store offset point **(1)**.

Collecting Features

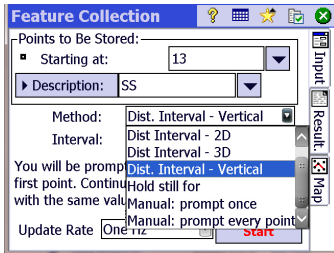


Go to the **Survey** menu and tap on **Collect Feature**. Features can be collected using one of the methods below. In all methods, each new point name is incremented automatically to the next available name.

- **Time Interval:** After accepting the first point, additional points will automatically be stored after the specified time interval (in seconds) has elapsed.
- **Dist Interval - 2D or 3D:** After accepting the first point, additional points will automatically be stored after traveling the specified 2D or 3D distance.
- **Dist. Interval - Vertical:** After accepting the first point, additional points will automatically be stored after traveling the specified vertical distance.
- **Hold Still For:** After accepting the first point, additional points are automatically stored when the pole is held in the same spot for the specified interval of time (in seconds).
- **Manual: Prompt Once:** Will store points in the same way as **Topo SS** from the **Data collection** screen, incrementing the point name automatically after each stored point.
- **Manual: Prompt Every Point:** Same as **Manual: Prompt Once** except that you are prompted for a new description, layer and attribute with each point stored.

When shown, **Interval** is the field where you should enter the time or distance interval used for continuous data collection.

Use the **Update Rate** field to set the speed at which the rover receiver should deliver position solutions. When **Five Hz** is selected, the receiver will compute positions five times a second minimizing the measurement latency.

Collecting Data Out of a Survey

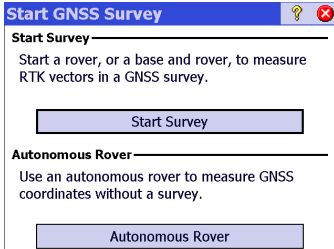

Start GNSS Survey ?

Start Survey

Start a rover, or a base and rover, to measure RTK vectors in a GNSS survey.

Start Survey

Autonomous Rover

Use an autonomous rover to measure GNSS coordinates without a survey.

Autonomous Rover

If you tap **Data Collection** on the **Survey** menu to work with the selected GNSS receiver but without having first started a survey, Survey Pro will invite you to choose between two options:

- Start the survey first, then collect data (this is the recommended way of using Survey Pro).
- Start collecting data right away (and possibly running any stakeout routines) using your receiver in *Autonomous Rover* mode, that is, with the receiver only capable of delivering autonomous position solutions. You will need to confirm this choice.

Working in this mode means you will collect LLH coordinates in the open job regardless of the chosen acceptance criteria in the Data Collection function.

NOTE: Most receiver models will provide autonomous position solutions in that mode. However some may keep the ability to deliver more accurate solutions (i.e. DGPS, Float or Fixed).

If you are using such a receiver, to remind you at all times that you are working with no survey started, position solutions will be reported with a tilde character (~) placed before the position status if better than Autonomous (e.g. “~Float” instead of “Float”, “~Fixed” instead of “Fixed”, “~RTX” instead of “RTX”).

Solving Calibration Introduction to Calibration

A GNSS calibration is a 2D similarity transformation. The GNSS LLH coordinates are transformed using a map projection into XY mapping plane coordinates. The XY mapping plane coordinates are then translated, scaled and rotated into your local grid using the calibration.

Your choice of projection mode will determine the mapping plane used for this procedure:

1. If you started your job with no coordinate system, then there is no projection and no datum available to relate the LLH coordinates to the local grid coordinates. In this case, Survey Pro will initialize a default map projection when you collect your first GNSS control point. This default projection will be created to give ground distances at the height of the first control point.

Because the orientation of your local grid relative to geodetic North is unknown, you must collect **at least two GNSS control points** to solve the scale, rotation, and translation between the default map projection and your local grid coordinates.

2. If you started your job with a map projection and datum, then the measured LLH coordinates can be transformed into local coordinates using this selected map projection. In this case, because the scale and orientation is defined by the map projection, you need only to solve for the translation parameter.

If you set your base on a known point, then no calibration will be required.

If you set your base on a new autonomous point, then you must collect **at least one GNSS control point** to solve the translation parameter.


A calibration with multiple points can still be performed to give extra redundancy to the calibration solution.

A calibration is solved by collecting GNSS control points. A GNSS control point is a point with an accurate local grid coordinate that you occupy with the GNSS rover. The LLH from the GNSS measurement is combined with the accurate grid point to form a calibration point pair. The calibration is then solved from these control points to give you the best fit between your GNSS measurements and the local ENE grid coordinate system.


Calibration Procedure, Illustrated

The calibration procedure can be split into three distinct steps. These are described below as flowcharts:


- **Step 1:** When you start a survey, Survey Pro will report the need for calibration on the Calibration Status page, which will guide you through the process of collecting the minimum amount of control points required for a unique solution of the calibration.

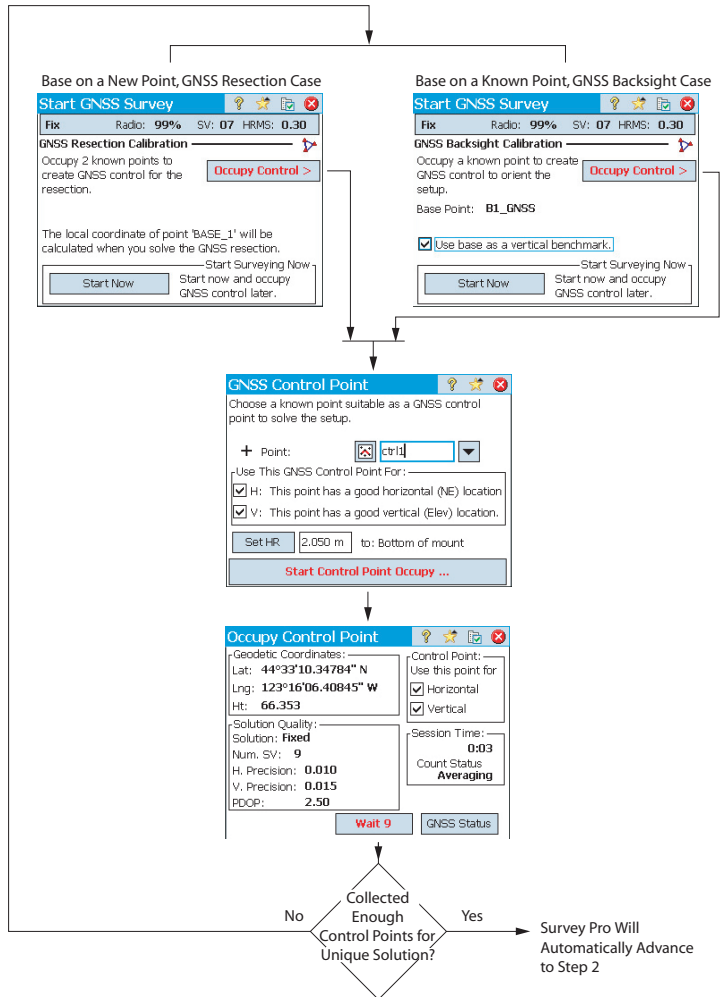

- **Step 2:** The Calibration check page will guide you through the process of collecting an additional GNSS control point to check the solution, and to provide redundancy for the best fit least squares solution.

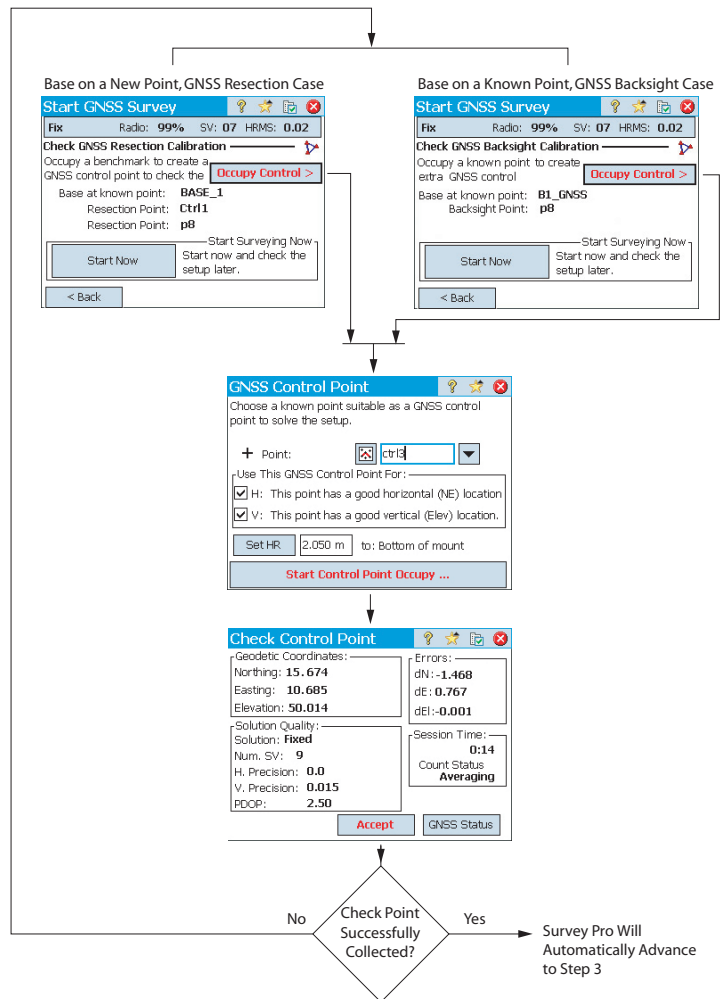

- **Step 3:** The calibration results page will solve the calibration and display the results.

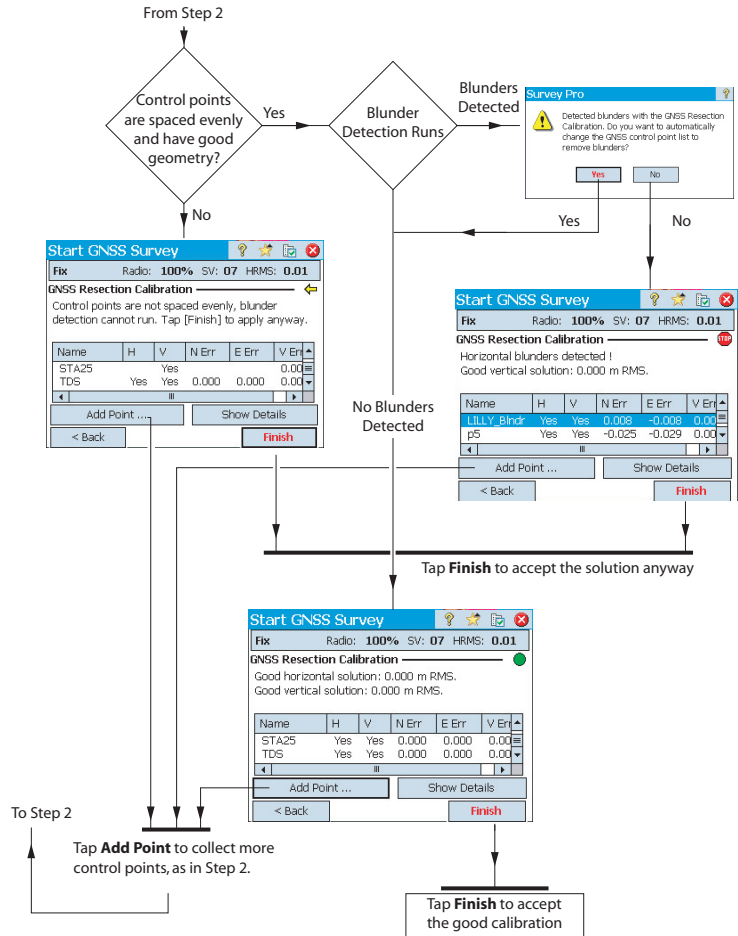

You can change the contribution of your control points to the calibration solution by tapping on the columns next to each point name in the list:

- Tap in the **H** column to deselect or select a point to be used in the horizontal calibration.
- Tap in the **V** column to deselect or select a point to be used in the vertical calibration.


Any time you change the contribution of a control point, the **Finish** button will change to a **Re-Solve** button. Tap this button to re-solve the calibration using the new contribution of that control point.

After you have solved the calibration as part of the Start Survey wizard, you can use the **Survey > Control > Control** routine, or the **Survey > Projection > Solve Calibration > Add Point** routine to add additional GNSS control points, re-solve the calibration, and have all the collected points updated with the latest calculation.

Special Case of One-Point Calibration

When you are using the Default Ground Calibration projection mode, and you have started a new job with no points, or only one point in it, you have the option of doing a one-point calibration to create the coordinate system for your job. If these conditions are met, the screen will look as illustrated.

You can tap **One Point** to set up the calibration for a ground level survey at the reference height displayed on this screen. Since there is only one point in the job to start, the orientation is not fixed by the local grid coordinates, so only the translation needs to be solved, which is possible from a single point.

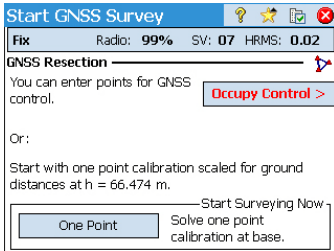

How Survey Pro Deals With Base Location

With no known coordinate system used:

- If you set up the base on a known point, a geodetic point will be created for the base location, using the autonomous LLH coordinates from the GNSS receiver as the geodetic position for the base.

EXAMPLE: Base location “B1” will have for geodetic counterpart a point named “B1_GNSS” with description “B1”.

This point will automatically become a GNSS control point, with the known grid location of the base paired with its new geodetic coordinates.

- If you set up the base on an unknown point, Survey Pro will create a default point named “BASE_1” using the autonomous LLH coordinates from the GNSS receiver as the geodetic position for the base. This point is not eligible as a GNSS control point, because the grid coordinates are not known until they can be calculated with a calibration solution. Until the calibration is available, the grid coordinates of this point will be “-- -- --”.

NOTE: You can set only one new autonomous base position in each job.

With a known coordinate system used:

- If you set up the base on a known point, the selection of a known coordinate system will allow Survey Pro to compute and attach the equivalent geodetic (LLH) coordinates to that point.
- If you set up the base on an unknown point: Same as with no coordinate system used.

Detected Change of Base

If the rover receives the coordinates of a new base station (through the broadcast corrections message), a warning message will then be displayed. This may occur when the receiver switches to a new network cell, or when using a radio link and another operator is also broadcasting on the same radio channel.

In this case, tap **OK** to acknowledge the warning message. This will take you to the **Start GNSS Survey** screen. From that screen, you can verify and validate the new base.

Managing Reference Stations

Survey Pro keeps up to date a list of reference stations that the software uses to enhance the search for base points when starting a survey. To view this list:


- Go to the Main Menu.
- Tap **Survey**, then **Base Info**.



The **Current Base** tab shows the properties of the base point currently used in the survey.

The **Ref Stn List** tab lists all the base points Survey Pro has been using so far. The list includes:

- Base point names followed by the term “(database)”: These are read from the *reference station database*. By default, any NTRIP station set up in a survey –whether a single base, or a PRS in a VRS survey– is automatically saved to that database (in addition to being part of the survey). This is done because it is assumed that these stations are likely to be re-used in other survey jobs to provide the required base points.
- Base point names followed by the term “(survey)”: These are read from the current survey and so belong to the survey file. These are considered to be temporary base points (reference stations using radios) not likely to be re-used. That’s why they are not by default saved to the reference station database. You may however do so if you wish (see below).

From the **Ref Stn List** tab, you can:

- Tap  to view all the properties of any reference station: base point name, geodetic location, antenna used, and if applicable, additional information about the NTRIP mount point used.

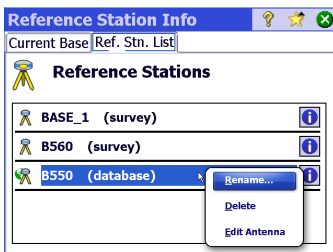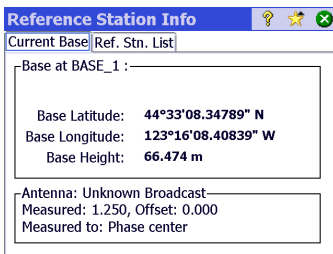

- For a “re-usable” reference station (<base point name> (database)), you can use the context menu (tap and hold the base point name) to either rename or delete the reference station, or edit the properties of its antenna.
- For a “temporary” reference point (<base point name> (survey)), you can use the context menu to save the reference point to the *reference station database*.

Ending a Survey

Go to the Home screen and tap **End Survey**. Confirm the end of survey by tapping **End**.

A survey in progress implies that either a base or a rover or both are running. You will need to end the currently running survey if you wish to reset the base or rover.

Opening an existing job or creating a new one while a survey is in progress will automatically end the current survey.

When an RTK rover or/and an RTK base is used in a survey, then ending this survey will cause the rover to stop listening for corrections, and/or the base to stop sending out corrections. (ProMark will however continue to operate as rovers.)

7. Leveling

Introduction What Leveling Is

Leveling is a surveying method that allows the most accurate measurement of vertical distances between points. Using a starting point with known elevation, the leveling survey method allows you to transfer the elevation to new points by measuring vertical distance differences between the known elevation and the position of the level instrument.

Leveling data collection is organized into *level loops*. A *level loop* is a sequence of measurements that starts and ends on a point of known elevation. Many level loops start and end on the same point, hence the name “loop”. However, you can start and end a level loop on different points, provided the elevation is known for both points.

NOTE: Collecting and storing points in a level loop is different than optical or GNSS surveying in that for leveling, you often need to take many measurements before you reach the point of interest in the survey where you want to store a new elevation.

The procedure for leveling with Survey Pro is almost the same no matter which leveling method you are using. The main difference for each method is the type of information that is collected with each shot taken.

You should have now selected a leveling method and possibly connected an instrument to Survey Pro (if you are using an electronic level or an electronic total station for trig leveling). See *Leveling Mode - Getting Ready for Leveling on page 37* for more information.

It's a good idea, in the current job, to create the point from which your first level loop will start. This point, which must have an accurate elevation, can also be created when creating the level loop.

Other Definitions

- A *level loop* is a series of level measurements that start with a backsight measurement on a known point with a valid elevation. This point is referred to as the *opening Control Benchmark* (or *opening CBM*). The elevation of the opening CBM will NOT be modified by the elevation measurements you will collect in the loop.

A level loop is closed by taking a measurement to a point with a valid elevation. This point is referred to as the *closing Control Benchmark* (or *closing CBM*). Often, the closing CBM is the same point as the one where you started the level loop, but it can also be any known point with an accurate elevation.

A level loop can have two states: *open* or *closed*. Once a new loop is created, it is automatically opened. It will remain open until you decide to close the loop. A level loop is closed after shots are taken to the closing CBM.

Level loops are stored within the current Survey file, which can contain any number of level loops.


Any level loop can be selected from the current job as the active loop for data collection. Once a loop is closed, it cannot be re-opened for data collection. It can only be viewed or adjusted. Only closed loops can be adjusted.

- A *level turn* represents the set of backsight-foresight observations collected from a given location where your instrument is set up. Each *level turn* calculates the elevation of the point in the loop for which the foresight observation is made. A *level loop* typically consists of many *level turns* between each level benchmark point stored.
- A *benchmark* is a point in your level loop for which you will store the elevation as a point record in Survey Pro. A benchmark is usually a permanent mark, such as a brass survey disk or a stable iron rod in the ground, that can be reoccupied at a later date.
- A *turning point* is an intermediate point used to connect two benchmarks. Because a *level turn* is usually short (typically less than 50 meters), many turning points are often needed to make the connection between two consecutive benchmarks.

As opposed to benchmarks, turning points are not permanent marks on the ground and are not stored in the job. They only exist while the rod occupies them during the foresight/backsight measurements.


- A *sideshot point* is a point of interest for which you will store the elevation as a point record in Survey Pro. Unlike benchmarks, you do not turn through sideshot points in the level loop, they are spur observations to the loop.
- A *stakeout point* is like a sideshot point in that you do not turn through these points. They are spurs to your loop. A stakeout point is used to display the cut/fill information from the level observation and some design elevation.

Creating or Selecting a Level Loop

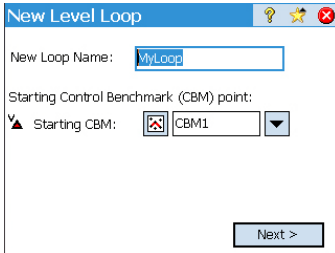

- From the main menu, tap **Survey** > **Select/Create Loop**.

NOTE: Survey Pro will list all the level loops that haven't been closed yet. You may select one of them and tap **Activate Selected Loop** to choose to work in this level loop.

- To create a new level loop, tap on the **New Loop** button. This opens the **New Level Loop** screen.
- Enter a name for the new level loop (e.g. MyLoop).
- Tap on  to define the opening CBM. The point may be selected from either the map or the list of points. You may also create the opening CBM at this stage.


NOTE: The opening CBM must be a point in the job with a user-entered, keyed-in elevation. You cannot select points derived from measurements for your opening CBM.

- Tap **Next**.
- Use the **Desc** field to enter a description for the level loop (e.g. "Boundaries"). Below this field, the current definition of the level loop you want to create is displayed. You may tap **Back** if you wish to modify this definition.
- When the definition of the level loop is complete, tap the **Create Loop** button. A message is then displayed prompting you to proceed with level measurements in the loop.
- Tap **OK** to close the message. This automatically opens the screen from which you can start collecting elevations in the level loop. (This screen can also be accessed from the main menu by tapping **Survey** then **Level**.)

Collecting Elevations in an Open Level Loop

Description of a Simple Level Loop

A simple level loop is illustrated below.

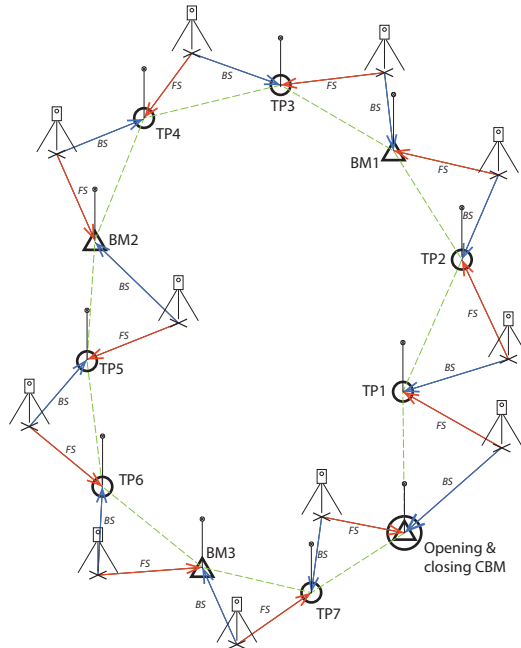

Collecting elevations in a simple level loop consists of the following:

1. In every level loop, you will start with a backsight observation to the opening CBM.
2. You will observe some number of turning points next. Turning points are not stored in the survey file. They are used as intermediate points to transfer the elevation between benchmarks.
3. After some number of turning points, you will reach a point you wish to store an elevation for. You will observe this point as a benchmark. You can observe a brand new point as a benchmark, in which case a new point with only an elevation coordinate will be created. You can observe an existing point as a benchmark, in which case you will have the option of updating only the elevation of the existing point, and its horizontal coordinate will remain unchanged.
4. After some number of turning points and benchmarks stored, you will reach the end of your level loop. You will close the loop by collecting a foresight observation to the closing CBM. This can be either your starting point, or it can be another point of known elevation.

In practice, the sequence of observations will be as follows:

1. The instrument is set up somewhere close to the maximum allowable sight distance (typically 30 meters) away from the opening CBM. A backsight observation is taken to the opening CBM.
2. A foresight observation is made to the first turning point. This turning point should be chosen in such a way that the instrument is located midway between the opening CBM and that turning point.

Steps 1 and 2 are called *the first turn*, and are indicated as BS and FS in the above diagram.

NOTE: A usually observed tolerance is that the foresight and backsight distances for each turn should not be different from each other by more than ± 5 meters, or some similar value. Refer to *Level Settings on page 38* to set this tolerance.

3. The instrument is set up midway between the first turning point (TP1) and the second turning point (TP2). A backsight observation is made to TP1 and a foresight observation is made to TP2. These observations constitute the second turn.
4. The instrument is set up midway between the second turning point (TP2) and the first point of interest (BM1). A backsight observation is made to TP2 and a foresight observation is made to BM1. These observations constitute the third level turn.
5. Make the same types of observations for the next level turns (TP3-BM1, TP4-TP3, BM2-TP4, TP5-BM2, TP6-TP5, BM3-TP6, TP7-BM3).
6. In the last level turn, a backsight observation is made to TP7 and a foresight observation is made to the closing CBM, which here is the same point as the opening CBM (it could be a different one as long as it has accurate elevation).

There may be variants to this simple level loop. You can for example shoot sideshot points or stakeout points as you go along the level loop. This is explained in *Collecting Elevations for Sideshot and Stakeout Points on page 77*.

MyLoop

Current Loop Details:

Last Benchmark Point: ---
Total BMs: 0 Total Turns: 0

BS-FS Sight Lengths: 0.000 m
Total BS+FS Lengths: 0.000 m

Backsight Point: CBM1
Elev: 50.000 H. Dist: ---
Rod: --- HI: ---

Slideshow > Turn to Benchmark >
Stakeout > Turn to Turning Point...

Collecting Elevations in a Simple Level Loop

After creating/selecting a loop, Survey Pro prompts you to start collecting elevations in the loop. A new screen is displayed providing the list of possible actions. The name of the open level loop is indicated in the upper bar.

NOTE: The button provides access to the level settings (see *Level Settings* on page 38).

Follow the procedure below to complete a typical level loop:

1. Set up your instrument midway between the opening CBM and the first turning point and have your rods ready for backsight and foresight observations.
2. Unless already done, select **Survey** from the main menu, then **Level**.
3. Tap **Turn to Turning Point**. Based on the shooting sequence you have chosen, Survey Pro will prompt you successively to take all the necessary direct and reverse shots to the backsight point (the opening CBM) and the foresight point (the first turning point in the level loop).

If in manual leveling, you will be requested to enter the following parameters measured with your standalone instrument:

Measurements:	Upper Wire	Center Wire	Lower Wire	Vert. Dist.	Hor. Dist.	Zenith	Slope Dist.
Leveling Method:							
Three Wire	•	•	•				
Single Wire		•					
Electronic				•	•		
Trigonometric						•	•

Shot Results

Backsight Point: CBM

Average (of) Worst Residual

V. Dist: 2.000(3) 0.0 Toss

H. Dist: 20.000(3)

Resulting HI: 52.000

Foresight Point: \$TP1

Description:

V. Dist: 2.000(3) 0.0 Toss

H. Dist: 20.000(3)

Resulting FS Elev: 50.000 m

BS... FS... All... Store Observation


4. After completing the shooting sequence, Survey Pro will show the results. Tap **Store Observation** if you are satisfied with the results. If these are of poor quality you can remove some of them (use the **Toss** button) or add new backsight (**BS**) and/or foresight (**FS**) observations.
5. After you have tapped **Store Observation**, thus accepting the results, Survey Pro will prompt you to start a second level turn.

NOTE: As you move along the loop, at the end of each level turn, Survey Pro provides an up-to-date summary of the measurements made so far (total number of level turns made, etc.).

If you tap on the **Notes** vertical tab, you will see a summary of all the measurements made so far.


6. Move the instrument for the next level turn and then start a new shooting sequence.



If the foresight point is a turning point, tap **Turn to Turning Point** again. If the foresight point is a point of interest (i.e. a benchmark), tap **Turn to Benchmark**. In both cases, proceed as explained above.

Again, Survey Pro will provide results at the end of the second level turn that you will need to accept by tapping **Store Observation**. Additionally for a benchmark, you will need to enter a name and description for that point. This may be an existing point in the job (select it from the list or the map), in which case Survey Pro will prompt you to update its elevation, or a new point, in which case Survey Pro will create this point with just its elevation. Tap  to continue.

7. For the last level turn, tap **Turn to Benchmark** when you are ready for the shooting sequence. Proceed in the same way as for any benchmark.

The difference is when you name the point once the observation is accepted, you will have to select the closing CBM from the list of existing points. In our example, this point is also the opening CBM, a point named "CBM". Survey Pro will then alert you that this point cannot be modified but will give you the option to close the level loop (see screen example).

8. Tap **Close Loop on Existing Point**. Survey Pro will then provide a report on the level loop you are about to close.
9. Tap **Close Level Loop**. A message informs you that the loop has been closed successfully.
10. Tap **OK**. Survey Pro goes back to the loop summary screen from which you will notice that no more action can be taken for the loop.
11. Tap  to return to the home screen.

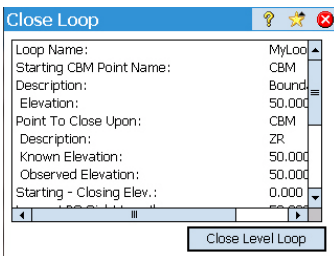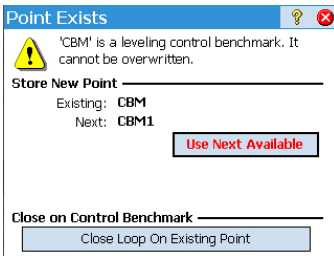


Collecting Elevations for Sideshot and Stakeout Points


For some level turn, you have made your backsight measurement to the previous turning point or benchmark. At this stage, the elevation of the instrument is known.

Before completing the turn with a foresight measurement to the next benchmark or turning point, you can shoot any number of sideshot or stakeout points. These points are spurs to the loop, as they are never used in any backsight measurements. They are stored in the job file.

Typically with stakeout points, you will want to compare the measured elevations to design points so you can compute cut/fill values.

Follow the instructions below to collect elevations of sideshot or stakeout points in an open loop:

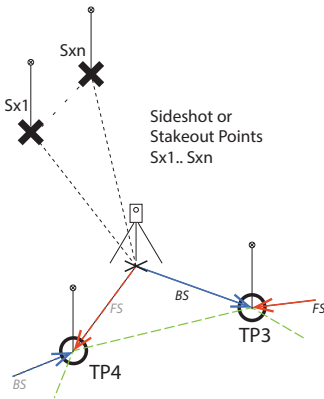

- For the next level turn, instead of tapping **Turn to Turning Point** or **Turn to Benchmark**, tap **Sideshot** or **Stakeout**.
- Have your instrument and rods set up accordingly.
- Start the shooting sequence: First make a backsight measurement to the last measured benchmark or turning point, then shoot the sideshot or stakeout point. For a stakeout point, you will need to specify which point you want to measure. This may be an already existing point or a point you create on the spot.
- If your measurements are all good, tap **Store Observation**.
- Name the point and tap .

For a sideshot point, you just need to name the point (**Point** field).

For a stakeout point, Survey Pro will ask you to name the as-staked point (**Point** field) and will suggest to add a default description for this point in the form “pt<stakeout_point_name>” (**Description** field).

NOTE: If you wish to collect a series of sideshot or stakeout points from the same instrument setup, Survey Pro will ask you to perform foresight measurements directly to the second and next points (no backsight measurements need to be repeated in this case as Survey Pro has already collected these measurements for the first of these points).

- When you are finished with the collection of your sideshot or stakeout points, tap **Turn to Turning Point** or **Turn to Benchmark** to complete the level turn. Once again, you will just have to perform foresight measurements to this point, the backsight measurements having been already made.
- Start a new level turn.

Adjusting a Closed Loop

Adjustment

Error Distribution:

- ☒ Weigh by # of Setups
- ☐ Weigh by Length of Setups
- ☐ Adjust Loop From a Specific Point To End

Closed Loop Name:

▼ Begin CBM Pt:

Desc: Resect
Elev: 50.0 m

Next >

Adjustment may be used to remove the error computed from any existing closed loop. This is a simple arithmetic adjustment where the computed error can be either distributed equally among each instrument setup in the loop, or a weighted adjustment can be applied where the error is distributed based on the length of the backsight and foresight distance of each turn.


1. From the main menu, tap **Survey > Adjustment**
2. Choose how you want Survey Pro to distribute errors. **Weigh by # of Setups** divides the computed error equally among each instrument setup selected in the loop. **Weigh by length of Setups** distributes the error where each instrument setup is adjusted by an error proportional to the length between them, so that instrument setups that are farther apart will carry a larger portion of the error adjustment than those closer together.
3. Choose the portion of the loop you want to adjust. **Adjust Loop from Begin to End** will include every instrument setup of the selected level loop in the error adjustment. **Adjust Loop From a Specific Point to End** will only adjust the turning points and benchmarks starting from an alternative benchmark (that you need to specify in the **Begin CBM Pt** field) to the end of the loop.
4. Use the **Closed Loop Name** drop-down list to select the name of the loop you want to adjust. Only closed loops are listed here.
5. Tap **Next** to access the **Adjustment Preview** screen.
6. Tap **Adjust** to start the adjustment. At the end of this process, a message will inform you that the job file has been backed up and this backup file includes the archive of the adjustment.
7. Tap **OK** to close the message and read the results of the adjustment.
8. Tap to close the results screen.



Running the 2 Peg Test

The *2 Peg test* is used to check the collimation error of an automatic level instrument. This test can be used for electronic automatic levels and manual automatic levels. The test will compute the error, which can then be used to adjust the horizontal cross-hair of the instrument.

1. Position two rods 50 to 90 meters apart (165 to 300 feet).
2. Pace off the distance between the rods and set up the level midway between them. (The placement of the rod over Point B can be adjusted after shooting Point A.)
3. Carefully level the instrument. You should be able to rotate the instrument 180° around its vertical axis without the bubble moving away from the center.
4. From the main menu, tap **Survey > 2 Peg Test**.
5. Tap **Take Shot**. You are now prompted to take each set of shots to the rod over Point A. Once each shot is completed for the number of sets entered in the **Level Settings** screen, you will return to the **Peg Test** screen.
6. Turn the instrument to the rod over Point B.
7. You can optionally tap **Check H Dist** to verify the instrument is centered between the two rods.

The distance to Point B will be measured and compared to the horizontal distances previously measured to Point A and a come/go distance will be provided so the rod at Point B can be moved to equal the horizontal distance to Point A prior to taking the shots that will be used to compute the error.

8. Tap **Take Shot**. You are now prompted to take the required shots to the rod over Point B. Once completed, the Peg Test screen will open with a new graphic showing the next instrument setup.
9. Move the instrument as close as possible to the rod over Point A where a shot can still be taken to it. This is typically about 3 meters (10 feet) from the rod.
10. Tap **Take Shot**. You can now take the required shots to Point A from the new instrument setup.
11. Once complete, turn to Point B and take the required shots to that point.
12. After the final shot is taken, the **Peg Test Results** screen will open showing the details of the shots taken and the computed error.
13. Tap  to close the results screen.

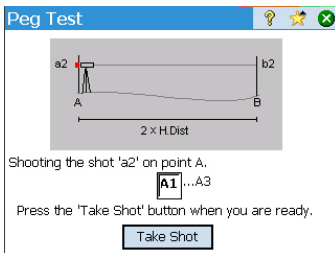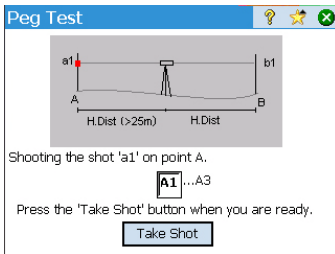

8. Stakeout Routines

This section introduces the basic stakeout routines with optical and GNSS instruments. When you become familiar with these routines, you will be able to extend your knowledge on more specific stakeout routines, such as stake to line, slope staking, etc.

What you should have done already:

- You should have now completed the station setup with your optical instrument.
- You should have now solved the calibration with your GNSS receiver.
- If the points to stake are not in your job, you can use the **File > Import** function to import your points to the job (see *Importing Data on page 16*).


The built-in electronic compass (if there is one in your data collector) may be a valuable tool during the guidance phase as its activation will translate into accurate N/S indications on the stakeout screen (see *Electronic Compass on page 103* for more information).

Selecting Points to Be Staked, “Next Point” Scenario

Whether you are working in GNSS or optical, Survey Pro offers two different ways of selecting points for stakeout work:

- **By Points** method (see screen [1] below): This is the simplest method. You just select the point, from the open job, from either the list of points or the map view, and then you stake it out. Icons assigned to points remain the same (+) at every step of the stakeout procedure.
- **By Managed Points** method (see screen [2] below): This method gives better control over the whole stakeout process. You need to create a list of design points. Icons assigned to these points are distinct from other points and later will change after the points have been staked. See “*By Managed Points*” Method on page 81 for more information on this method.

To choose one of the two methods, go to **Stakeout > Stake Points** and use the button located in the upper-left corner (see diagram below).

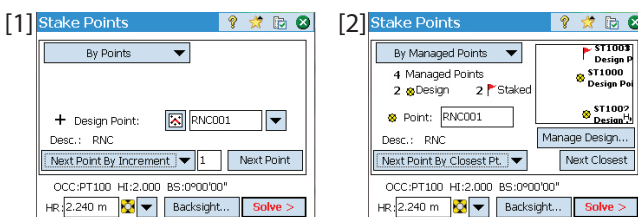


“Next Point” Scenario. After you have staked out a point, Survey Pro may help you select the next point to be staked. This may be:

- The point whose name matches the increment you specify (see screen [1] above).
e.g. “ST101” first staked and Increment= 2, then next point will be “ST103”.
- Or the point the closest to the one you have just staked (see screen [2] above). If the **By Managed Points** method is used, Survey Pro will search for and prompt the closest **design** point, ignoring all the other types of points. With the **By Points** method, Survey Pro will search for the closest point, regardless of its type (design, staked or undifferentiated).

“By Managed Points” Method

- Tap **Stakeout** > **Manage Design Points** (or tap **Stakeout** > **Stake Points** and then tap on the **Manage Design** button).
- All design points are necessarily picked from the open job. When added to the list, points are allotted the design point icon (📍). For more details, see screen and instructions below.

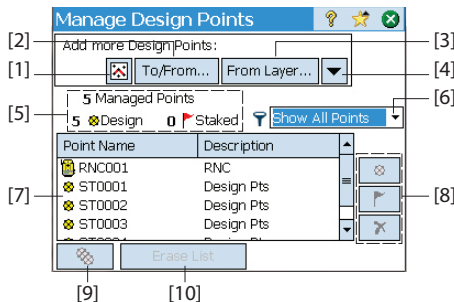

- [1]: Used to select points from the map.
- [2]: Used to select points by specifying a point name (e.g. “ST100”) or a range of point names (e.g. “ST200-ST300”).
- [3]: Used to select all the points from the layer you specify.
- [4]: Used to select points using another selection criterion (non-control points, distance, description, feature code or layer).
- [5]: Indicates the current number of managed points:
Managed Points= Design Points + Staked Points


When you start a new list, that list can only contain design points. As you progress in your stakeout work, design points will change into staked points.

- [6]: Used to choose which type of points to view in the list (all, design points only, or staked points only)
- [7]: Current content of the managed points list according to viewing option [6].

- [8]: Set of three buttons allowing you to manually change the selected point in the list ([7]) into a design point, a staked point or a deleted point (respectively from top to bottom). Deleting a point means it disappears from the list and, seen from the list of points (in **Job > Points**), it becomes an “undifferentiated” point (+).
 - [9]: Used to change all the staked points in the list back into design points.
 - [10]: Used to erase the current list of managed points. (No point is deleted from the job through this action.)
- When the list is complete, tap . You can then start staking out the first design point.

NOTE: The icon of the design point will change from to only if you store the measured position as a new point in the job (which will be assigned a (+) icon).

Staking Points With a Mechanical Optical Instrument

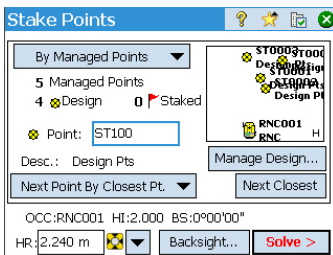

- Go to the **Stakeout** menu and tap **Stake Points**.
- Select the point to be staked using one of the two possible methods, as well as the criterion allowing Survey Pro to prompt the next point to be staked (see *Selecting Points to Be Staked*, “Next Point” Scenario on page 80).
- Choose the type of target used and set the height of the rod (**HR** field). The information underneath describes the current station setup.
(You may use the **Backsight** button to check the station setup or start a new setup.)
- Tap **Solve**. The **Stake Points** screen now indicates the angle and distances the instrument should measure with the target placed exactly over the design point.
It may be convenient at this point to change the circle setting so that it reads zero when the total station is facing toward the design point. This can be done by tapping the **Circle Zero** button. The first time you tap this button during a stakeout session, a message will warn that the original backsight reference will be lost.

Stake Points

Design Point: **ST100**

Description: **Stakes**

Instrument to Design Pt:

Angle Right: **0°00'00"**

Horz Dist: **19.857**

Vert Dist: **-6.598**

ZE to Rod: **110°52'40"**

OCC:BASE_1 HI:2.500 BS:54°00'00"

Circle Zero < Back Stake >

Stake Points

Design Pnt: **ST100**

Design Elev: **10.360** Change...

From instrument to ROD:

BACK: **0.128**

Go LEFT: **0.001**

EDM: Inst: EDM HR: 2.123 m

FILL: **0.579**

Rod Elev: **9.781**

Shot

Shot Data:

Angle Right: **0°00'10"**

Zenith: **110°02'00"**

Slope Dist: **21.000**

Store... Store/Tape... Topo SS... < Back Stake Next >

The following appears when zeroing the circle:



- A new backsight circle value is computed, sent to the instrument and stored in the raw data.
- The **Angle Right** value is changed to zero to reflect the change (see example). **The instrument now needs to be turned horizontally to zero to face the design point.**
- To prevent errors, the backsight setup is invalidated when exiting the **Stakeout** function. You will need to reset your backsight circle to the proper reference after exiting stakeout before collecting any new data.


- Whatever your choice about the circle setting, orient the instrument as requested so the instrument is facing the target.
- Tap **Stake** then **Shot** to take a measurement. The screen returns the results of the measurement, providing information to adjust the position of the target (see screen example):
 - **FORWARD / BACK:** Indicates if the rod must move forward (toward the instrument) or backward (away from the instrument).
 - **Go RIGHT / Go LEFT:** Indicates if the rod must move to the right or left from the instrument's point of view.

NOTE: You can also get the reverse indication (i.e. displaying directions from the rod's viewpoint) by clearing the **View From Instrument to Rod (non-remote)** option in **Job > Settings > Stakeout** tab.

- **CUT / FILL:** Displays the required amount of cut or fill to bring the stake point to the design point's elevation.
- **Rod Elev:** Displays the elevation at the rod's location computed from the last shot.
- When you are satisfied with the location of the target, stake the point and then do one of the following:
 1. Before moving on to the next point, you may want to store the location of the as-staked point: While still standing on the target, tap **Store**, name and describe the point (the default description prompted by Survey Pro is in the form "ST<name_of_point_you_have_just_staked>"), then tap to collect the point. This point will be marked with a **+** icon.
 2. Or If you wish to stake the next point without storing the results of this staked point, tap **Stake Next**.



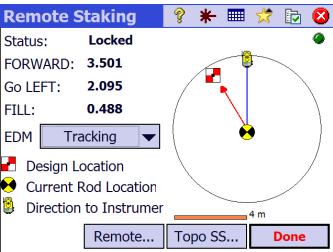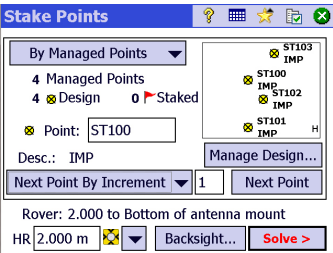

Staking Points With a Robotic Optical Instrument



- Go to the **Stakeout** menu and tap **Stake Points**.
- Select the point to be staked using one of the two possible methods, as well as the criterion allowing Survey Pro to prompt the next point to be staked (see *Selecting Points to Be Staked*, “*Next Point*” Scenario on page 80).
- Choose the type of target used and set the height of the rod (**HR** field). The information underneath describes the current station setup.
(You may use the **Backsight** button to check the station setup or start a new setup.)
- Tap **Stake**. This opens the **Remote Staking** screen.
If the status on that screen indicates that robotic tracking is not locked on, you can tap the **Remote** button to open up the **Remote Control** screen, where you can initiate a search for the target. Then tap  to close this screen.
The **Remote Staking** screen (illustrated) will guide you to the design point. The screen provides information on how far you are from the design point:


- FORWARD / BACK**: Indicates if the rod must move forward (toward the instrument) or backward (away from the instrument).
- Go RIGHT / Go LEFT**: Indicates if the rod must move to the right or left from the rod’s point of view. This requires that you have cleared the **View From Instrument to Rod (remote)** option in **Job > Settings > Stakeout** tab, otherwise you will get the reverse indication, i.e. directions from the instrument’s viewpoint.
- CUT / FILL**: Displays the required amount of cut or fill to bring the stake point to the design point’s elevation.
- Rod Elev**: Displays the elevation at the rod’s location computed from the last shot.

- Walk toward the design point following the instructions on the screen:

Symbol	Meaning
	Design point location.
	Your current location.
	Instrument location.
 10 m	Scale used on the graphic. Represents the circle radius.
FORWARD/BACK: xxx Go LEFT/Go RIGHT: xxx FILL/CUT: xxx	Horizontal and vertical components of the distance still to go.

When you get closer to the design point, the graphic will change to assist you in more precisely locating the design point. The point to stake becomes the fixed center of the display and the rod becomes the object that is

moving. This aids in precisely positioning the rod over the point. A red arrow indicates the direction in which to go.

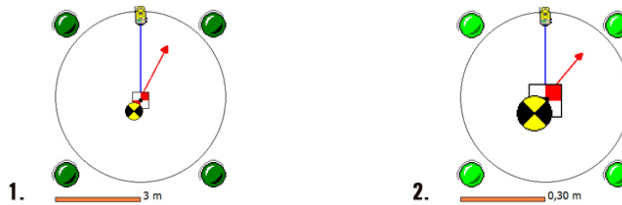

1. Distance to go is between 3.0 and 0.3 m (10 and 1 ft): Four dark-green spots appear around the graphic.
2. Distance to go is less than 0.3 m (1 ft): The spots around the graphic turn light green.

Stake Points	
Design Pnt: ST100	From ROD to Instrument: FORWARD: 0.006 Go RIGHT: 0.009
Design Elev: 4.504 <input type="button" value="Change..."/>	HR: 2.000 M <input type="button" value="X"/> <input type="button" value="v"/>
<input type="button" value="Shot..."/>	FILL: 0.085 Rod Elev: 4.419
Shot Data: Angle Right: 393.6123 Zenith: 104.2570 Slope Dist: 15.72	<input type="button" value="Store..."/> <input type="button" value="Store/Tape..."/> <input type="button" value="Topo SS..."/>
<input type="button" value="Turn"/> <input type="button" value=" < Back"/>	<input type="button" value="Stake Next >"/>

- When you are satisfied with the location of the target, tap **Done** to access the **Stake Points** screen. The screen indicates how close you are to the design point.
- Stake the point and then do one of the following:
 1. Before moving on to the next point, you may want to store the location of the as-staked point: While still standing on the target, tap **Store**, name and describe the point (the default description prompted by Survey Pro is in the form "ST<name_of_point_you_have_just_staked>"), then tap to collect the point. This point will be marked with a **+** icon.
 2. Or If you wish to stake the next point without storing the results of this staked point, tap **Stake Next**.

Whatever your choice, you will then be taken back to the **Stake Points** screen with the next point to stake automatically selected, (based on the **Increment** value you entered previously).




NOTE: At this stage, you may:

- Change the elevation of the design point after tapping **Change**.
- Tap the **Turn** button to automatically turn the instrument toward the design point.
- Tap the **Shot** button to re-measure the point.
- Collect a **Topo SS** point using the **Topo SS** button.



WARNING: Be sure you are using the **Store** button to store stakeout data. The **Topo SS** button only stores sideshot data.

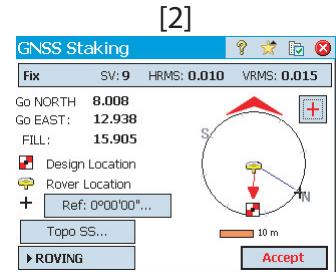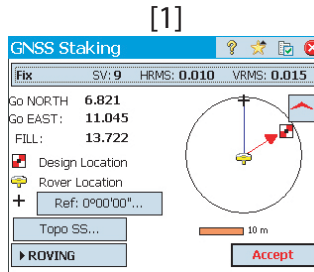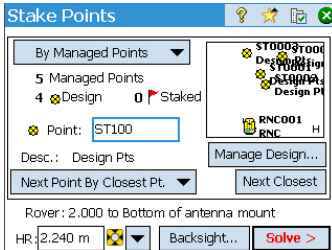

Staking Points With GNSS

- Go to the **Stakeout** menu and tap **Stake Points**
- Select the point to be staked using one of the two possible methods, as well as the criterion allowing Survey Pro to prompt the next point to be staked (see *Selecting Points to Be Staked*, “Next Point” Scenario on page 80)
- Set the rover antenna height.
- Tap **Stake**. This opens the screen that will guide you to the point. Survey Pro offers two different navigation modes to help you walk to the design point.







NOTE: In the example above, the direction to follow is provided as **Go North / Go East** instructions. Survey Pro can instead provide **Azimuth / Distance** to the point if it's more convenient for you. Go to **Job > Settings > Stakeout** tab to change the setting of the **Display Directions As** field. Point tolerance (different from acceptance criteria) can also be set on this tab.

Tap on the  /  button to select one of these modes:


- : The top of the screen will always show the selected reference point or azimuth you select through the **Ref...** button ([1]).
- : The top of the screen will always show the direction in which you are walking ([2]). A large red arrow will appear as you walk. The North (**N**) and South (**S**) directions will be shown as well. You can also define a reference point or azimuth using the **Ref...** button. The resulting direction will appear as a blue line starting from your current position.
- Walk toward the design point following the instructions on the screen (see table below).

Remember the rover receiver is always in dynamic mode (>**ROVING** button displayed) as you navigate to the design point:

Symbol	Meaning
	Design point location.
	Your current location.
	Reference point or azimuth.
 10 m	Scale used on the graphic. Represents the circle radius.
Go N/S: xxx Go E/W: xxx FILL/CUT: xxx	Horizontal and vertical components of the distance still to go.

NOTE: You can use the **Topo SS** button any time along the way to store any point of interest. Survey Pro will ask you to name and describe that point before storing it.

When you get closer to the design point, the graphic will change to assist you in more precisely locating the design point. The point to stake becomes the fixed center of the display and the rod becomes the object that is moving. This aids in precisely positioning the rod over the point. A red arrow indicates the direction in which to go.

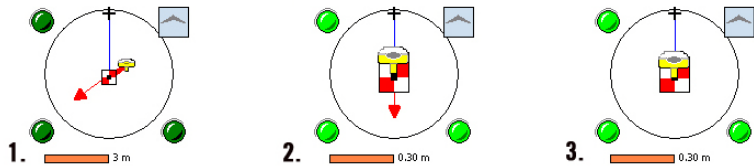

1. Distance to go is between 3.0 and 0.3 m (10 and 1 ft): Dark-green spots appear around the graphic.
2. Distance to go is less than 0.3 m (1 ft): The spots around the graphic turn light green.
3. Your current position is within the acceptance criteria defined on the **Stakeout** tab: The rover and the design point are practically superimposed at the center of the graphic.

Stake Points

Design Pnt: **ST100**

Design Elev: **10.000** Change...

Shot...

HR: 3.574

Results:

Go SOUTH: **0.094**

Go WEST: **0.060**

CUT: **0.106**

-Shot Data:

Northing: **500.094**

Easting: **101.060**

Elevation: **10.106** Store...

GNSS Status... < Back Stake Next >

- When you have located the design point and you wish to collect a static RTK occupation at this point in order to get a more precise position averaged from multiple epochs, you should toggle to occupying mode by tapping the **>ROVING** button (which is then changed into an **>OCCUPYING** button). This will turn the receiver into static mode for the occupation.
- When you are satisfied with the occupation results, you can tap **Accept** to finish the stakeout measurement. Depending on the acceptance criteria you set on the **Stakeout** tab, the button label may show **Wait xx** before it becomes an **Accept** button. The screen then shows the results of the position computation for the staked point.

NOTE 1: At this stage, you may tap **Shot** to re-measure the point. You may also change the elevation of the design point by tapping **Change**.

NOTE 2: If you are simultaneously collecting raw data for post-processing, the as-staked point is automatically stored when you tap **Accept** on the previous screen, provided you did a static occupation on the point.


WARNING: Be sure you are using the **Store** button to store stakeout data. The **Topo SS** button only stores sideshot data.

- Stake the point and then do one of the following:
 1. Before moving on to the next point, you may want to store the location of the as-staked point: While still standing on the target, tap **Store**, name and describe the point (the default description prompted by Survey Pro is in the form "ST<name_of_point_you_have_just_staked>"), then tap to collect the point. This point will be marked with a **+** icon.
 2. Or If you wish to stake the next point without storing the results of this staked point, tap **Stake Next**.

Whatever your choice, you will then be taken back to the **Stake Points** screen with the next point to stake automatically selected, (based on the **Increment** value you entered previously).


Other Stakeout Routines

You can use Survey Pro for other stakeout routines:

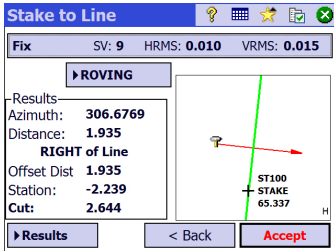



- **Stake to Line:** Allows you to locate any position in relation to a predefined line. The line can be defined by two points, a point and direction, a polyline or the centerline of an alignment. Distance, direction and cut/fill information is provided so the rod/the rover can locate the line by traveling the shortest possible distance (a perpendicular offset to the line). Compared to point stakeout, the guidance screen (illustrated) will be automatically restored after you have stored a point, ready for storing the next point. This routine is often used to keep the rod on-line while clearing line along a property boundary.
- **Offset Staking:** Is used to stake the center of a road, the road edge, the curb/ditch edge, or any offset at fixed intervals. An existing polyline, alignment, or a specified point range can define the centerline of the road.
- **Slope Staking:** Is used to locate the catch points for a roadway in any terrain. The first screen is used to define or select the line that describes the centerline of the road to be slope staked. An existing polyline or alignment can be selected, or a series of existing points can be entered to define the centerline.
- **Point Slope Staking:** Is a simplified version of the **Slope Staking** routine.
- **Stake Skew Line:** is used to stake a usually short straight line (a skew line) intersecting the current polyline at a given point and with a given skew angle (for example this function is useful for staking a culvert going under a road).
- **Line and Offset, Curve and Offset and Spiral and Offset:** Are used to stake stations at fixed intervals on respectively a line, curve or spiral, or at an offset to it.
- **Show Station:** Allows you to see where the rodman/rover standing anywhere near a polyline, a range of points that define a line, or an alignment is located in relation to the line.
- **Store Offset Points:** Is used to store points in the current job at a specified offset from an existing polyline or alignment at a specified interval.
- **Stake DTM:** Allows you to stake an area and get cut/fill information between the point being staked and a reference DTM surface at the same horizontal coordinates.
- **Define a Location:** Is used to manually enter the distance and direction to a new point from any existing reference point and then stake out the new point.
- **Where is Next Pt?:** Provides instructions to locate the next point in the job taking into account the current location of the operator (or rodman) and a reference point.
- **Navigation:** Allows you to navigate to existing points using autonomous positions from a GPS receiver that outputs a NMEA signal. The routine also allows you to store coarse-precision GPS points.

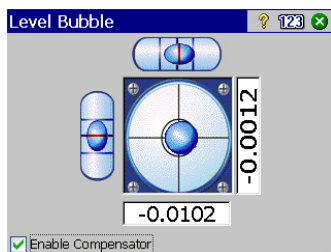9. Survey Pro's On-Board Version



Survey Pro is used on board a Nikon Nivo or Spectra Precision FOCUS total station. After you have powered on the instrument, wait until the screen displays the desktop. Then do the following:

- Double-tap the Survey Pro icon: . Survey Pro starts initializing the instrument. The Level Bubble screen is then shown (see screen example).
- Level the instrument and enable or disable the compensator, as required.
- Tap  when done. This opens the **Quick Shot** screen.

You may take measurements with Survey Pro without opening a job. You may also create or open a job where you can collect all your measurements and/or use as reference other measurements you collected earlier in that job.


NOTE: The onboard version of Survey Pro will always start with no job open regardless of whether you ended your last Survey Pro session with a job open or not.

Working With No Job Open


The **Quick Shot** screen you get at startup can be split into different parts:

- Command bar ([1] to [9])
- Function buttons ([10] to [13])
- Result pane ([14])
- Target management and EDM measurement mode ([15])
- Other control buttons ([16] to [18]).

Robotic Instrument:

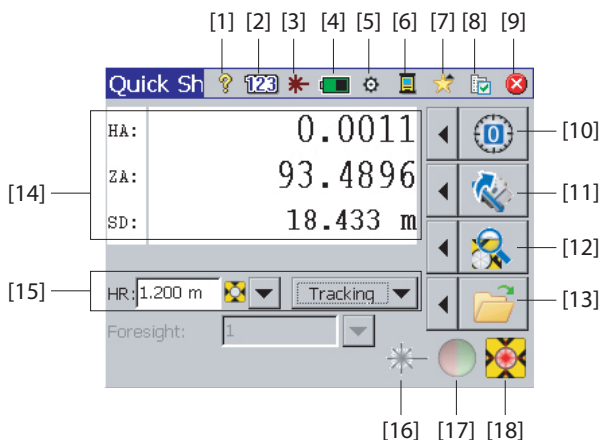

Mechanical Instrument:

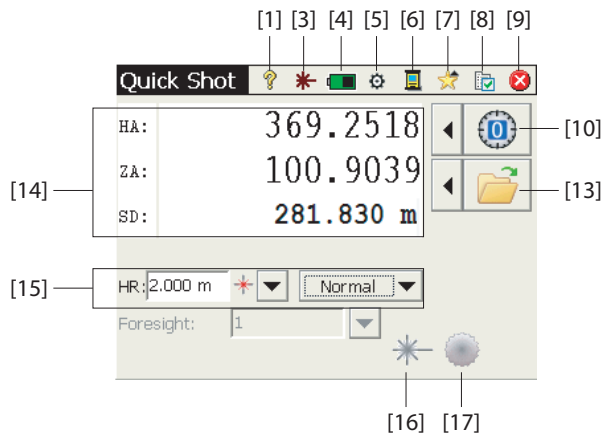

Command bar:

- [1]: Provides access to Online Help.
- [2]: (Robotic instrument only) Denotes keyboard used in numeric mode.
- [3]: Provides status of visible laser pointer:
 - ✖: Off. Tapping this icon will toggle it On.

NOTE: Standard safety precautions should be taken to ensure that persons do not look directly into the beam.

- ✖: On. Tapping this icon will toggle it Off.

For safety reasons, this button is always accessible so that at all times you can easily disable the laser pointer whatever the screen you are on.

- [4]: Battery status. This icon provides access to the power off setting through which you can set an idle time at the end of which the instrument will be turned off automatically.
- [5]: Provides access to the instrument settings (specific to each instrument).
- [6]: This icon allows you to switch to another data collection mode (using a data collector through a serial cable, Bluetooth or in Robotic mode).
- [7]: Quick Pick function: Provides quick access to common Survey Pro functions. **About** and **Level Bubble** are the only two selections available unless a job is open. After a job is opened, the list will populate with available functions.

- **[8]:** Provides access to Survey Pro settings:
 - **Units** tab: Used to set distance and angle units, directions, azimuth type and the order in which to display/deliver coordinates.
 - **Format** tab: Used to set the number of decimal places displayed by the instrument for each type of measurement.
 - **Quick Shot** tab: Used to choose which results to display (HA, ZA, SD or HA, HD, VD) and which function to assign to the Measurement key (**Measure Only** or **Measure and Store**). **Measure and Store** requires an open job. See *Working With a Job Open on page 94.*)
- **[9]:** Used to exit.

Function buttons:

(More functions are available from these buttons with a job open. See *Working With a Job Open on page 94.*)

The left-arrow button located before each function button opens a related menu. Tapping directly on the function button is equivalent to selecting the first option on the menu.

- **[10]:** Sets the circle to 0 or to any value you specify.
- **[11]:** (Robotic instrument only) Turns to angles you specify, or to flip the instrument.
- **[12]:** (Robotic instrument only) Starts the search target or LockNGo function or stops the one you last activated.
- **[13]:** Opens or creates a job where measurements will be stored.

Result pane:

(Item **[14]**) on the screen example.)



Depending on how you set the **Display** field on the **Quick Shot** tab (see **[8]** above), this pane will either provide the measured values of:

- Horizontal angle (HA), zenith angle (ZA) and slope distance (SD)
- Or horizontal angle (HA), horizontal distance (HD) and vertical distance (VD).

Tapping on the display over these labels will also toggle between the display modes.

Target management:

(Item [15]) on the screen example.)

- **HR** field: Enter the height of rod for the selected target
-  /  button: Specify the type of target used. Also provides access to the management of smart targets.
- Choose the EDM measurement mode. This is an instrument-dependent setting but these are the usual available options:
 - **Standard:** (Focus 30) Precise measurement mode, activated only when you trigger a measurement
 - **Tracking:** (Focus 30) EDM continuously measuring distances
 - **Normal:** (Nivo) Normal measurement mode
 - **Precise:** (Nivo) Precise measurement mode

Other control buttons:


- **[16]:** A button equivalent to and bigger than button **[3]**.
- **[17]:** Turns on or off the instrument's track light. The track light is for helping the rodman stay online when staking. It will flash more quickly when the instrument is locked to the target.

The track light is instrument dependent. For example, the Focus 30 has two different colors (green and red) located on either side of the instrument. Nivo has two red colors, one that flashes and the other that doesn't.
- **[18]:** Instrument dependent. Shows LockNGo status (IDLE, MEASURING or Locked). Also shows if the current measuring mode uses a prism or reflectorless target.


Working With a Job Open

If you open or create a job using button [13], the **Quick Shot** screen will then show different options.

Robotic Instrument:

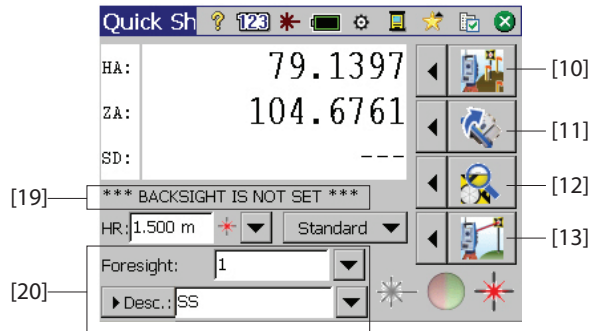

Mechanical Instrument:

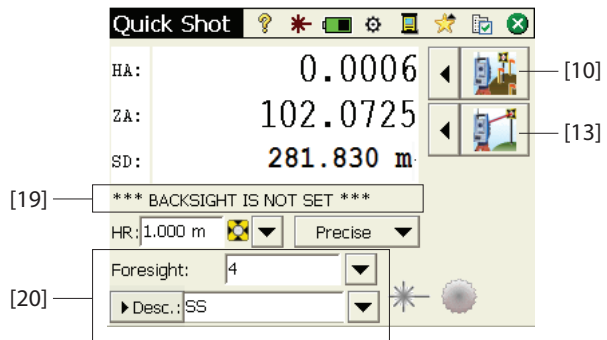

The differences are listed below:

- [10]: With a job open, the **Quick Stake** screen can be accessed through this button. The **Stakeout**, **Station Setup** and **Check Setup** functions can be accessed by clicking on the arrow to the left of this button.
- [11] and [12]: Same as with no job open.
- [13]: With a job open, a sideshot can be taken and stored by pressing this button. The **Sideshot** and **Traverse** functions can be accessed by clicking on the arrow to the left of this button.
- [19]: The current station setup status is reported in this area.
- [20]: Use this area to name and describe each point you will be measuring and storing in the job. Make sure **MSR Key= Measure and Store** on the **Quick**

Shot tab if you plan to store measurement data (see [8] described earlier in this section).

With a job open, you can perform a lot of the most commonly used functions from the **Quick Shot** screen. To access the full set of Survey Pro functions, you can close the **Quick Shot** screen and access the Survey Pro main menu. Survey Pro can be used either in optical or leveling mode.

NOTE: To access the **Quick Shot** screen at any time, simply press the “star”/F1 hard key on the instrument.

Advanced Information on Point Properties

Layers

Layers help you manage the data in a job. Any number of layers can exist in a job and any new objects (points, polyline alignments) can be assigned to any particular layer.

The visibility of any layer can be toggled on and off, which gives full control over the data that is displayed in a map view. This is useful to reduce clutter in a job that contains several objects.

Layers can be added, deleted and renamed with the exception of Layer 0 and the Control Layer. Layer 0 is a special layer that must exist in every job for compatibility with AutoCAD and for storing objects not assigned to any other layer. The Control layer is a special layer used by Survey Pro to denote control points in the job. Control points are protected and cannot be modified.

Use the Power button located near the **Layer** field to manage your layers. Use the **Set Active** button on the Manage Layers screen to set the default layer used in your measurements.


Descriptions

A description may be defined for each point you store in a job (e.g. tree, pavement). You can create a description list to automate the task of entering descriptions for points when they are stored. This is particularly useful when the same description is used frequently.

A description list is stored in Survey Pro as a description file (a TXT file you store in /Survey Pro Jobs/ for example), which may be in two different formats. Choosing one rather than the other determines how descriptions are entered:

- **Description list without codes [1]:** Only contains the list of descriptions you want to use.
- **Description list with codes [2]:** Similar to the previous one except a short code precedes each description (with a space or tab in between). Tapping the code rather than the full description will speed up entering descriptions.

You can use simultaneously two lists, one of each type. Use the Power button located near the **Description** field to manage your lists.

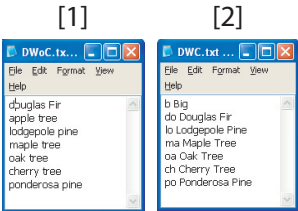

Features & Attributes

Features can be used to quickly describe objects (points, lines), and in more detail than a standard text description, particularly when data is collected for several points that fit into the same object (e.g. a line).

A feature describes what an object is while attributes describe the details of that object.

Features and attributes can be entered as you collect data, or later by editing the points in your job. Lists of features are usually pre-defined and saved in XML format (file with FXL extension) for direct use in Survey Pro.

Choosing a Feature Database:


- Go to **Job > Settings** and open the **Auto Linework** tab. By default, Survey Pro prompts you to use the *GlobalFeatures.fxl* file as the feature definition file. You can choose any other FXL file prepared specifically for your work, and stored on the data collector.


The *GlobalFeatures.FXL* file lists more than 10 categories of features (Buildings, Earth Drainage, Landscaping, etc.). Each of these categories contains 5 to 10 different features. Some additional 10 features also exist in the file that are not part of any of these categories.

Each feature has an icon, a name and a *feature code*, which is an abbreviation of the feature name (e.g. "cp" for "concrete pad").

- After you have chosen your FXL file, tap .


Enabling Feature Entry While Collecting Data:

- Go to **Job > Settings** and open the **Surveying** tab.
- Enable the **Prompt for Feature and Attributes** option, then tap .

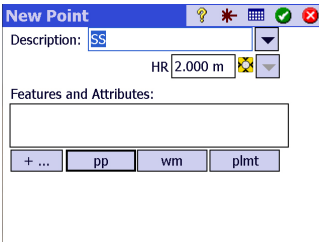

Entering Features While Collecting Data: When collecting points, features and attributes can be assigned to each point individually. When collecting lines, you just need to assign features to the first point when starting collecting the line. Then all the points collected along the line will be assigned the same features as the first point.

Before you store a point, Survey Pro will show a list of feature codes already used in the job (see screen example). Just tap on a feature code button to enter the corresponding feature.

 **+ ...** can also be used to pick a new feature code from the selected FXL file. Within the frame, you can then define each of the attributes for the point. This may be an image file, or a description of the point in relation to its location along the line.

Edit Point - BM7

General | Location | Derivation | **Feature** | Notes

gt		
pp		
wm		
gwp		

Pick a Feature

Filtered By: Manmade boundary

Feature Code: gt

Feature	Code
gate	gt
wire fence	wifr
wood fence	wodf

Adding/Modifying Features By Editing Points:

- Go to **Job > Points**.
- Select the point for which extra features are required, or attributes need to be corrected.
- Tap then open the **Feature** tab.
- Tap to add a new feature (and define its attributes), or directly edit the attributes of the existing features if necessary.

Handling the Feature Database:

- Assuming you have tapped to access the feature database,
- Tap to set a filter on the list of available features so you can focus on the features you are interested in:
 - Selecting **All** will list all the features (no filter)
 - Selecting **Codes In Use** will only list the features already in use in the job
 - Selecting a category of features (e.g. “Manmade Boundary”) will list only the features pertaining to this category (see screen example).

Toggle Between Descriptions and Features

You can easily change the type of identification information attached to a point you are about to collect. The field accompanying the point name just before the point is collected may be either a description (**Desc.**) or a feature (**Feat.**). To toggle between the two types, just tap on the field label **[1]** (a scroll button). The power button (**[2]**) adjacent to the field may then be used to set a value for the field (see below).

Traverse/Sideshot

OCC:ST1 HI:2.000 BS:ST5, 328°46'54"

Foresight: PT32

Desc.: HR:2.240 m

[1] **[2]**

Description Settings...
Edit Description List...
Show Description List

Traverse/Sideshot

OCC:ST1 HI:2.000 BS:ST5, 328°46'54"

Foresight: PT32

Feat.: gwp
wm

HR:2.240 m

[1] **[2]**

It is worth mentioning that the Description/Feature toggle button only controls what you have as an edit field when you start data collection. You can still use the **Prompt for Description** and **Prompt for Feature and Attributes** on the **Surveying**

tab in **Job > Settings** to control what you will be prompted for before you store the point. See the different possible scenarios in the table below.

	Edit field is:	Prompt for Description	Prompt for Feature	Comments
1	Description	ON	ON	You are prompted for Description and Feature: <ul style="list-style-type: none"> The default value prompted for Description is the one you defined before collecting the point. When prompted, the Feature field is shown empty.
2	Description	ON	OFF	You are prompted for Description only: <ul style="list-style-type: none"> The default value prompted for Description is the one you defined before collecting the point. No Feature stored for the point.
3	Description	OFF	OFF	No Prompt: <ul style="list-style-type: none"> The Description stored for the point is the one assigned to the Description field before collecting the point. No Feature stored for the point.
4	Feature	ON	ON	You are prompted for Description and Feature: <ul style="list-style-type: none"> The default value prompted for the Feature field is the one you defined before collecting the point. When prompted, the Description field is shown empty.
5	Feature	OFF	ON	You are prompted for Feature only: <ul style="list-style-type: none"> The default value prompted for the Feature field is the one you defined before collecting the point. No Description stored for the point.
6	Feature	OFF	OFF	No Prompt: <ul style="list-style-type: none"> The Feature stored for the point is the one assigned to the Field field before collecting the point. No Description stored for the point.

Quick Codes Function

The Quick Codes function is available in both Optical and GNSS Surveying. It is particularly useful when you have to collect a series of points for which you anticipate that a different description or feature will have to be defined for each new point you collect.

- To access the function, go to the main menu and tap **Survey > Quick Codes**.

The Quick Codes function allows you to quickly choose a description or feature from a table of 12 user-preset descriptions or features.


- To toggle between Description and Feature, tap on the **Description/Feature** button and select the desired option. The table underneath is updated accordingly to show respectively the 12 preset descriptions or features.
- To define or change the description or feature attached to a cell, tap and hold the cell until Survey Pro shows a new screen allowing you to define or change the Description or Feature. An empty cell means the cell has no Description or Feature attached to it.




- To store a point with a Description or Feature, enter the point name and then tap on the cell holding the Description or Feature you wish to assign to the point. The point is then stored right away.

Notes

Survey Pro lets you attach one or more notes to each of your points so you can freely add any comment you will find useful to better describe them. Once created, a note CANNOT be deleted.



While creating or modifying a point, do the following to add a note:

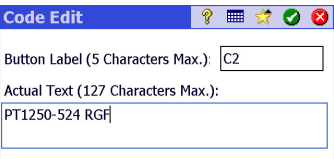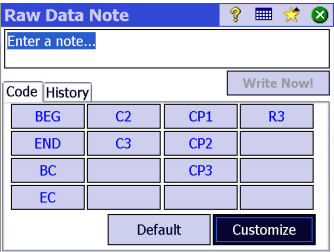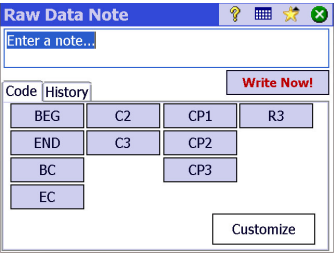- Tap on the **Notes** tab.
- Tap on the **Add Note** button.
- Tap your note in the upper edit field.
- When finished, tap **Write Now!** to validate the note.
- Tap  to return to the **Notes** tab. The new note appears at the bottom of the list. The note header shows the date and time when the note was created.




Survey Pro allows you to customize the note editor so you can enter your notes more quickly. Up to 16 buttons are made available for this purpose. Through each of them, you can preset up to 127 characters of text and/or numerals. The label of each button (5 characters max., also editable). should reflect the character string held by the button.

While creating or modifying a point, do the following to customize a button:

- Tap on the **Notes** tab.
- Tap on the **Add Note** button.
- Tap **Customize**.
- Tap on the button you want to customize (for example “C2”). This opens the **Code Edit** screen on which you can define a new character string for the button. You can also change the label if appropriate.
- Tap  to validate the new button definition and return to the previous screen.
- Tap **Customize** again to end the button definition sequence.
- If you now tap the button you have just defined, this will preset the edit field with the new text held by the button. You may complete or modify this text if necessary before tapping **Write Now!** to validate your entry.
- As previously, tap  to return to the **Notes** tab.

Note the presence of the **History** tab, which you can use to list all the notes you have entered previously. These can be listed either in alphabetical order, from the most recent to the oldest, or from the most to the least frequently used.

Raw Data Viewer

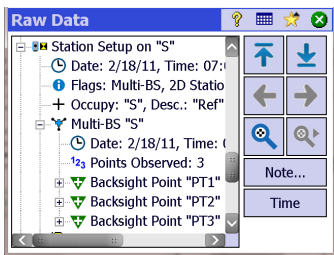









The Raw Data Viewer lists every action performed in the current job since it was created. The reported actions are always listed from the oldest (top of the list) to the most recent one (bottom of the list).


By default, each action is represented in one line but you can extend the line by tapping on the “+” sign to read more details on this action. Conversely, you can collapse the line by tapping the “-” sign

When you open the Raw Data Viewer from **Job > View/Edit Raw Data**, the last action will be highlighted. If you access the Raw Data Viewer while you are editing a point (i.e. by tapping **View Raw** on the **Derivation** tab), the viewer will spot the action the point originates from (manual entry, measured point, imported point, etc.).

Raw Data Viewer Toolbox


The Raw Data Viewer is fitted with a toolbox that you can use as explained below.

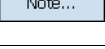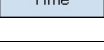Icon	Function
	Takes you to the first action logged in the job.
	Takes you to the last action logged in the job.
	Takes you back to the previous action you highlighted in the list of actions.
	Valid only after you have used the left-arrow button just above. Allows you to scroll back through the different actions you went through previously with the left-arrow button.
	Opens the “Find Point” function where you can define a search criterion (point name).
	Valid only after the Find Point function has been set. Takes you to the next occurrence of the point name in the list.
	Allows you to add a note as a new entry at the bottom of the list of actions. Adding a note in this case is done in the same way as when adding one for a point.
	Instantly adds the current date & time in a new line at the bottom of the list of actions.

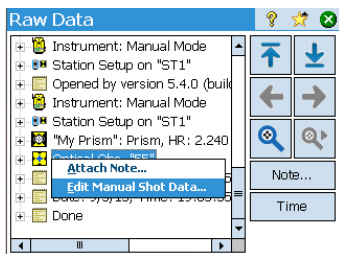

Editing Manual Shots

All manual shots performed in traverse/sideshot, repetition shots or leveling (single- or three-wire) may be edited from within the Raw Data Viewer:

- In the Raw/Data Viewer, tap and hold the stylus on the desired observation and select **Edit Manual Shot Data**. This opens the **Enter Shot Data** window showing the measurements currently stored for this observation.
- Correct the measurements as desired and then tap .

Following this action, the observation is automatically updated with the measurements you have just modified and all the points affected by this change are re-calculated as well.

Memo for GNSS Users


Assuming the following:

- A receiver profile has been created previously so you can use your RTK rover in a network.
- If you are using a “network rover”, a network has also been defined previously for the purpose of receiving corrections from an IP server. (No network profile needs to be created if you are using a “rover” receiving corrections from a base via radio.)
- A new job file needs to be created in which a known coordinate system and a geoid are used.

Then proceed as indicated below:

- Turn on your receiver.
- Start Survey Pro on the data collector.
- Create a job in which you select the coordinate system and geoid used.
- Tap the instrument icon and select **Switch to GNSS**.
- Go to **Survey > Start Survey**.
- Select the receiver profile prepared earlier for your rover.
- Select the network used (skip this step if you are using a “rover”, and not a “network rover”).
- Tap **Connect**.
- Wait until the rover receives data from the base.
- Confirm/change the point where the base is located.
- Set acceptance criteria for all your measurements.
- Make sure the receiver continuously delivers a “Fixed” position solution. (You may also go to **Survey > GNSS Status** to check the GNSS reception status and then come back to **Survey > Data Collection**.)
- Start collecting your data (points, offset points, lines). Data may be collected using one epoch of data (always the case when collecting data along a line), or by averaging the position through a static occupation on each point.

Managing Smart Targets

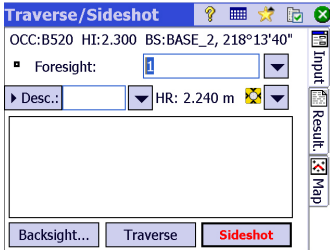

- When finished, select **End Survey** on the Home screen.

In earlier versions of Survey Pro, there was a separate list for backsight and foresight targets. With Survey Pro 5.2 and 5.3, there is now a single list of optical targets, so you can choose to take an observation to any target from any measurement routine.

This enhancement makes certain routines, such as repetition, multiple sideshots and shoot from two ends, much easier to use.

With all optical targets now managed from a single list of targets, you will notice some changes to the way “height of target” edit fields are handled in the case where you have a fixed backsight target defined in the station setup: When you choose your fixed backsight target as the target for the current observation, the edit field disappears and the height of the fixed backsight target is shown in static text next to the smart target selector. This prevents you from changing the height of the fixed backsight target.

When you upgrade to Survey Pro 5.2 or higher, you will notice that all of your optical targets are now merged into a single target selection list. There is no longer a separate list of backsight and foresight targets.



Electronic Compass

Survey Pro can integrate the use of an electronic compass if the model of data collector you are using is fitted with one.

Setting the Electronic Compass

Go to **Job > Settings**. If your data collector is fitted with a built-in electronic compass, a **Compass** tab can be selected from the **Settings** screen. Open this tab. Different functions can be performed from this tab:

- Check or clear the **Enable data collector compass** box to respectively enable or disable the use of the electronic compass in Survey Pro.
- Enter the magnetic declination (in degrees and fractions of a degree)
- If the compass is active, view the compass reading:

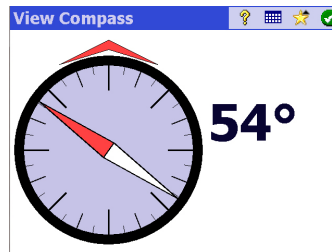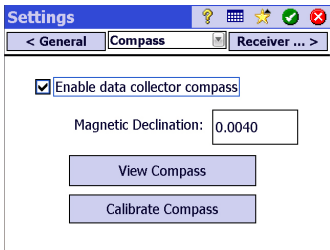


- Calibrate the compass. The calibration procedure is specific to the model of data collector used. Usually however, you are requested to rotate the data collector in the vertical and/or horizontal plane. The data collector will provide the necessary instructions on the screen as you progress, until the procedure is complete.

Using the Electronic Compass

Once running and if properly calibrated, the electronic compass will assist you in the following ways while using Survey Pro:

- The current value of heading will continuously be displayed in the upper-left corner of the active map (e.g. **Compass Heading:** 111°)
- In optical stakeout, North and south indicators will be placed on the compass screen.
- In GNSS stakeout, for which these indications already exist without an electronic compass running, the heading value given by the compass being more accurate than the one provided by the GNSS –especially when the rover is stationary or moving slowly– the N/S indicators shown on the stakeout screen are those derived from the electronic compass, and not from the GNSS.


While staking out a point with the electronic compass active, the  button on the stakeout screen gives access to the compass settings as well.

Quick Pick



This tool provides a shortcut to preset Survey Pro functions/routines. When you tap on the yellow star, you have direct access to a list of Survey Pro functions (the *Quick Pick* list). Just tap on one of the items in that list to run the corresponding function.

A list of functions is defined by default, picked from the different Survey Pro menus. You can customize the list by selecting **Edit Quick Pick** at the bottom of the Quick Pick list. This opens the quick pick editor (**Quick Pick Editor**).

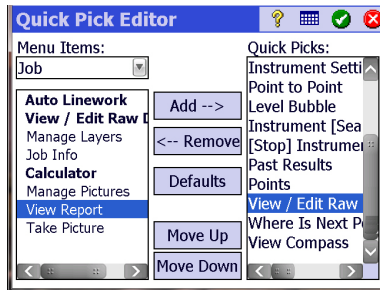

In the right-hand pane, you can read the currently active shortcuts (i.e. the Survey Pro functions listed when tapping on the yellow star). In the left-hand pane, you can read the list of available functions per menu. Use the **Menu Items** field to select the menu you want to pick functions from. In this list, the functions already defined as shortcuts in the Quick Pick list are shown in bold characters.

For example, you want to add **View Report** in the Quick Pick list:

- Select **Job** from the **Menu Items** field.
- Scroll down the list of functions available from that menu until you can select **View Report** in the list.
- Tap on the **Add -->** button. The **View Report** function is added at the bottom of the Quick Pick list. It can now be run directly from this list.
- Tap to save your changes and close the quick pick editor.

Other buttons are available in the quick pick editor:

- **<-- Remove:** Use this button to remove the function selected in the right-hand pane from the Quick Pick list.
- **Defaults:** Use this button to revert to the default Quick Pick list. Confirmation is required before the default Quick Pick is restored.
- **Move Up / Move Down:** Use this button to rearrange your Quick Pick list. The selected function is respectively moved by one position, up or down respectively.



RTX Correction Service

RTX™ (for Real Time eXtended) is a Trimble worldwide service delivering corrections to RTX-enabled GNSS receivers allowing them to compute centimeter-accurate positions without the need to work from a particular base. With Survey Pro, RTX corrections are delivered via the Internet. With the offered service (*CenterPoint*™ RTX), accuracy is 3.8 cm after 30 minutes of convergence time¹ (accuracy is 30 cm after 10 minutes, 20 cm after 15 minutes).

RTX supports GPS, GLONASS, QZSS and BeiDou constellations.

NOTE: RTX corrections will be received only if your data collector is connected to the Internet.


Using an RTX-enabled GNSS receiver with Survey Pro:

- In Survey Pro, select **Manage Instruments** from the GNSS icon in the command bar, and then tap on **Add Receiver Profile**.
- Scan for an RTX-enabled GNSS receiver through Bluetooth. Wait until the scan is complete.
- Select the receiver from the list of Bluetooth-detected receivers, tap **Next>**, choose a “network type” profile for this receiver and then tap **Finish**.
- In the **Receiver Profiles** list, select the newly added receiver and tap .
- Select “**RTX**” from the **Setup Type** scroll-down list and tap .
- Go back to the **Survey** menu and tap **Start Survey**.
- Select the receiver from the list of receiver profiles and tap **Connect** directly (you don't need to specify the network from which RTX corrections are delivered).

Survey Pro then tests the RTX service subscription validity. If you have 10 or less days left, a warning message will pop up prompting you to take the necessary steps to renew the subscription. If the subscription has expired, another message will show up reporting this situation and the receiver will not be allowed to proceed.

If the subscription is still valid, the message “**Waiting for RTX engine to initialize...**” is displayed. This initialization step may take a while. In the meantime, you can set the antenna (model, height value, height type) and possibly start raw data recording for further post-processing (see in the lower part of the screen).

NOTE: A message will be reported if initialization fails, prompting you to try again.

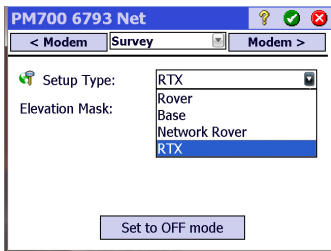

1. The convergence time is the time required before the expected, nominal accuracy is achieved for the delivered RTX positions.

After the RTX engine has initialized, the message “**Waiting for position to converge**” is displayed (this step usually takes more time than RTX engine initialization). When the position has converged, the message “**Rover receiver is ready to set. Press [Finish] to continue**”.

- Tap **Finish**. You can now start collecting data.

NOTE: Convergence is achieved when the computed HRMS has been less than the requested value for five epochs in a row. The requested value of HRMS is the one specified on the **RTX** tab in **Job >Settings>Meas. Mode**.

If the **HRMS** box is left unchecked, Survey Pro will use a default value of 5 cm for the HRMS to decide on whether the position has converged or not.

Using the Quick Start Button to Reduce Convergence Time

While waiting for the position to converge, you may speed up the process by using the Quick Start procedure:

- Make sure the antenna height is set at the right value.
- Tap on the **Quick Start** button.
- Pick a point from the job where to start initialization (the location of this point in the field must be visible). Its coordinates must be geodetic ones (in ITRF2008 epoch 2005.0).
- Move your receiver in the field to the selected point and keep it motionless right over this point.
- Tap on the **Start** button. This button is changed into a **Stop** button. Wait until the process is complete, which is effective when the **Stop** button is changed into a **Done** button.
- Tap **Done**. You can now start collecting data.

Index

Symbols

\$PASH commands 105

Numerics

2D Survey 40, 43, 44, 46

3D position solution 36

A

Accept Anyway 59

Acceptance criteria (GNSS) 56

Activate 26

Active map 8

Add Receiver 29

Add to Home 6

Adjusting a close level loop 78

Alarm 57

Alignments 20

All 50

Allow in PPK Survey 57

Angle only 43, 45

Angle Right 48

Angle right 83

Antenna type 55

Attributes 97

Automatic-All 23

Automatically accept when criteria is met 59

Automatic-WiFi 23

Autonomous rover mode 62

Average for 57, 58

Average of 50

Azimuth 60

Azimuth (entering) 2

Azimuth/Distance 86

B

Backsight 44, 47

Base (change) 68

Base (Start Base) 52

Base brand 55

Base capability 32

Base location 67

Basemap files 8

Battery level 5

Battery status 91

Bearing 60

Bearing (entering) 2

Benchmark 71

Bluetooth 29

Broadcast RTCM 15, 53, 54

BS 2

BS Azimuth 39, 40

BS Point 40

By Angle 41

By Distance 41

By managed points 80

By Point 41

By points 80

C

CAD 8

Calibration (Introduction to) 63

Calibration (one-point) 67

Calibration (procedure) 64

Calibration (solve) 67

Calibration requirements 56

CenterPoint RTX 106

Central (cloud service) 4, 23

Check 41

Check box 7

Circle 92

Circle Zero 82

Close loop on existing point 76

Collecting data out of a survey 62

Collimation 26, 91

Color code (for constellations) 36

Command bar 4

Compensator 90

Control benchmark (CBM) 70

Control file 14

Convergence time 106

Coordinate system (select) 15

Corrections 32

CR5 (file format) 16, 20

Create New Instrument 26

CSV 16, 20

CSV format 20

Curve and Offset 89

Customize (home screen) 5

CUT/FILL 83, 84

D

Data collection 55, 58

Data collection capability 32

Data Link 35

Datum 15

Define a Location 89

Deleted point icon 17

Demo mode 25

Description vs. feature (Toggling between) 98

Descriptions 18, 96

Design point icon 17

Direct and Reverse 43, 44

Direct only 43, 44

Direction from two Points 60

Display Directions as 86

Dist Interval.. 61

Dist. Interval - Vertical 61

Distance and Angle 43, 45

Do Not Store 57

DropBox 22

DXF (file format) 8, 20

E

Earth Curvature & Refraction 39

Earth curvature & refraction 14

Edit (manual shots) 102

Edit points 16

EDM 2, 26, 91, 93

Electronic compass 80, 103

Electronic leveling 37

Elevation Mask 32

E-mail 22

End survey 69

Error ellipse 43

Export data 20

F

FBK format 20

Feature (data collection) 61

Feature vs. description (Toggling between) 98

Features 18, 97

First point 15

Fixed Target 42

Fixing station setup 46

FLD format 20

Follow-me function 12

Foresight 47, 50

Format 92

FORWARD/BACK 83, 84

G

GDM 16

Geolock 26, 27

Global geodetic 18

GNSS 24, 52, 54, 105

GNSS reception status 35

Go North/Go East 86

Go RIGHT/Go LEFT 83, 84

Google Earth 20

Grid 15, 18

Ground calibration 15, 52, 54

H

HA 50, 92

HD 92

HI 40, 43, 44, 46, 48

Hold Still For 61

Home screen 3

Horizontal distance 48

HR 42, 43, 45, 46, 48, 82, 84, 93

HRMS 57

HTML format 20

I

Icons (for points) 17

Import data 16
In Between 60
In Front 60
Insert Page Before (or After) 6
Instrument icon 4
Instrument Settings 26
Instrument settings 26
IXL 16

J

JOB (file format) 16, 20
Job settings 14
Jobs 13
JobXML 16, 20
JPG 8
JXL (file format) 16

K

Keep Measuring 59
Key-in points 16
KML format 20
Known Point 39
KOF 16
KOF format 20

L

LandXML 16
Layer 16
Layers 18, 96
Letter code (for constellations) 36
Level bubble 26, 90
Level loop 1, 70, 73
Level loop report 20
Level settings 38
Level turn 71
Leveling 1, 24, 37, 70
Leveling mode (choice of) 38
Lights 26, 91
Line and Offset 89
LisCAD 20
LLH 2
Local geodetic 18
LockNGo 92, 93
LockNgo 27

M

Main menu 3
Manage design points 17
Manage Instruments 24, 29, 30, 31, 32, 34
Manual 23
 Prompt Every Point 61
Manual Configuration 28
Manual mode 25
Manual Prompt Once 61
Map projection 15
Map view 4, 8

Mapping plane 53, 54
Meas. Mode 56
Measure and Store 92, 94
Measure Backsight 42
Measure Only 92
Min SV 57
Move Item 6
MSR key 94
Multiple Backsights 44
Multiple backsights 44

N

Navigation 89
NEE 2
Network base 34
Network profile 28, 52, 54
Network profile (Manage) 34
Network rover 34
New Backsight Circle 49
New Point 40, 42
Normal 93
Notes 100

O

Observe 43, 45
Observed points 16
Occupy GNSS 60
Occupy Point 40
OCCUPYING 88
Offset (data collection) 60
Offset Staking 89
On-line help 5
Optical 24
Origin (of a point) 16

P

PDOP 57
POB 20
Point (data collection) 58
Point Details screen 16
Point icon (general case) 17
Point Slope Staking 89
Points (management) 16
Polylines 20
Position (GNSS) 36
Post Process 57
Post Processing 24, 35
Post Processing Recording Interval 53, 55
Power button 7
PPM 2, 39
PPM Correction 45
Precise 93
Precision tab (optical equipment) 26
Profile 20
Prompt for PPM during Station Setup

45

Proprietary commands 105

Q

Quick codes 99
Quick Pick 5, 91, 105
Quick Shot 90, 92, 94, 95
Quick Start (RTX) 107

R

Radial Sideshot Seq 50
Radio 26
Raw Data Viewer 101
RAW format 20
Receiver profile 1, 52, 54
Receiver profile (Add) 29
Receiver profile (Export) 31
Receiver profile (Import) 31
Receiver profile (introduction to) 28
Receiver profile (Manage) 30
Receiver profile (Modify) 32
Ref... button 86
Reference station database 53, 68
Refraction 14
Remote Control screen 27, 84
Remote Elevation 46
Remote Staking 84
Remove Item 6
Remove Page 6
Rep Shoot Sequence 50
Repetition shots 50
Resect Point 43, 45
Resection 39, 42
Reset Ambiguities 35
Roads 20
Rod Elev. 83, 84
Rotate 46
Rover (Start Survey) 53, 54
Rover capability 32
ROVING 87
Roving Target 42
RTK 35
RTK autonomous points 57
RTX 28, 31, 32, 33, 54, 56, 106

S

Sat Info 36
Scale factor 15
Scroll button 7
SD 50, 92
Search 27, 91, 92
Sequence 43, 44
Serial connection 30
Set circle 92
Set to Off mode 33
Setup Type 40, 43, 44

SFN 16
Sharing files over the Internet 22
Shots per Resect Point 43, 44
Show Station 89
Sideshot 47, 51, 94
Sideshot point 71
Signal strength 36
Single-wire leveling 37
Sky View 36
Slope distance 48
Slope Staking 89
Smart targets 41, 103
Snap-To toolbar 11
Solution quality 57
Solve 82
Spectra Auto-Configure 28
SPI files 26
Spiral and Offset 89
SS 2
Stake DTM 89
Stake Next 83, 85, 88
Stake Points 82, 84, 85, 86
Stake Skew Line 89
Stake to Line 89
staked point icon 17
Stakeout 94
Stakeout point 71
Stakeout points, managing the list of 80
Stakeout, GNSS 86
Stakeout, mechanical 82
Stakeout, robotic 84
Standard 93
Start Manual Setup 29
Start Now 56
Start Survey Prompt Projection 54
Station Setup 40, 43, 44, 94
Stop 27
Store Offset Points 89
Store Pt 43, 44
Submenus 3
Surpac 16
Survey (file format) 16, 20
Survey Mode 58
Survey reports (generate) 20

T
Tab 7
Take Shot 43, 45
Tap and hold on menu items to manage the Home screen 5
Three-wire leveling 24, 37
TIFF 8
Time Interval 61
Topo SS (acceptance criteria) 56

Topo SS (data collection) 58
Toss 50
Track light 93
Tracking 93
Transform computed point to key-in point 19
Translate 46
Traverse 47, 48, 51, 94
Traverse/Sideshot 47
Trigonometric leveling 37
True Azimuths 39
Turn To 27
Turn to 92
Turn to benchmark 76
Turn to turning point 75, 76
Turning point 71
Two-peg test 79
TXT 16, 20

U

Units 14, 92
Unknown Point/Resection 39, 43
Update Rate 61
Use Last Setup 39
Use Station Index 33

V

VD 92
Vertical distance 48, 60
View From Instrument to Rod (non-remote) 83
View From Instrument to Rod (remote) 84
Visible laser pointer 27
Visible laser pointer status 91, 93
VRMS 57

W

Wait xx 88
Wait.. 58
Where is Next Pt? 89
Worst Residual 50

X

XML 16
XML (file format) 20

Z

ZA 50, 92
Zenith 48, 60
Zoom extent button 10, 11
Zoom toolbar 10

SPECTRA PRECISION

Survey Support:

Email: support@spectraprecision.com

US & Canada: +1 888 477 7516

Latin America: +1 720 587 4700

Europe, Middle East and Africa: +49 7112 2954 463

Australia: +61 7 3188 6001

New Zealand: +64 4 831 9410

Singapore: +65 3158 1421

China: 10 800 130 1559

Contact Information:

AMERICAS

Spectra Precision Division

10368 Westmoor Drive,
Westminster, CO 80021
USA

www.spectraprecision.com

EUROPE, MIDDLE EAST AND AFRICA

Spectra Precision Division

Rue Thomas Edison
ZAC de la Fleuriaye, CS 60433
44474 Carquefou Cedex, FRANCE

ASIA-PACIFIC

Spectra Precision Division

80 Marine Parade Road
#22-06, Parkway Parade
Singapore 449269, Singapore

