
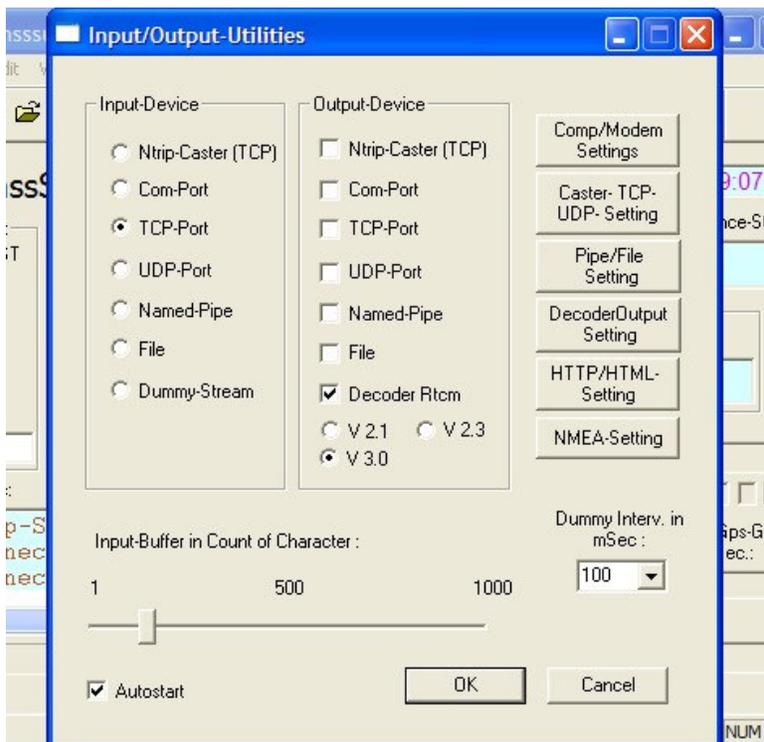



# Using GNSS Surfer to check the RTK base station

Start GNSS Surfer. Click on the Adjustments popdown menu and choose Input/Output from the menu.

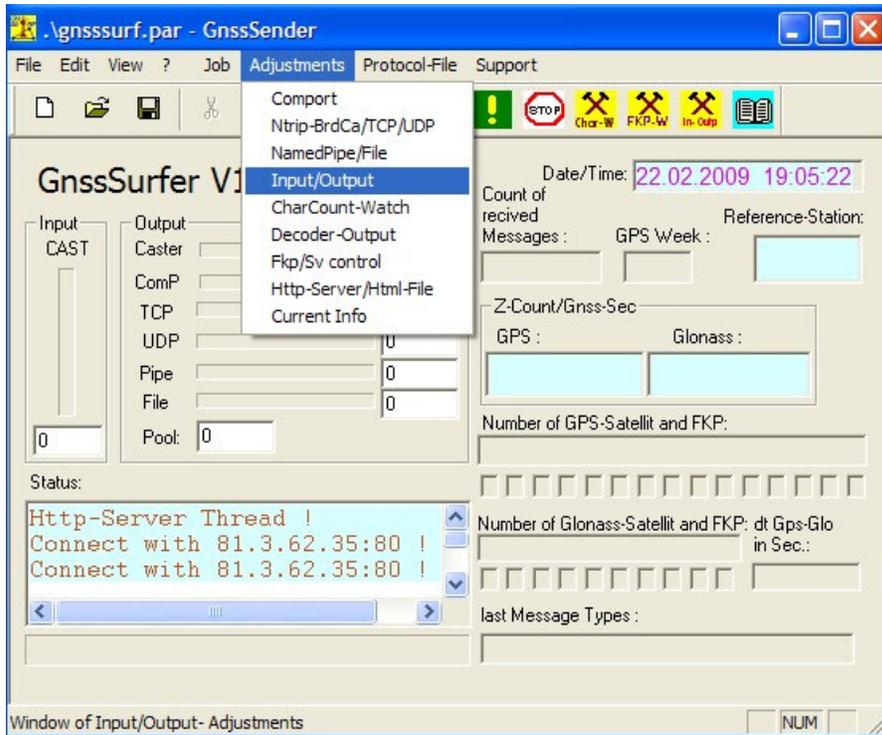


From the Input-Device menu choose TCP-Port. From the Output-Device menu choose Decoder RtcM V3.0


In the right hand column click on Caster-TCP-UDP-Setting

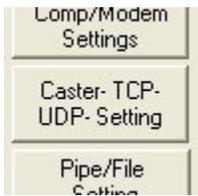


In the Input TCP options change the IP Address to the IP address for the base station. Change the port number to the port number for the base station.

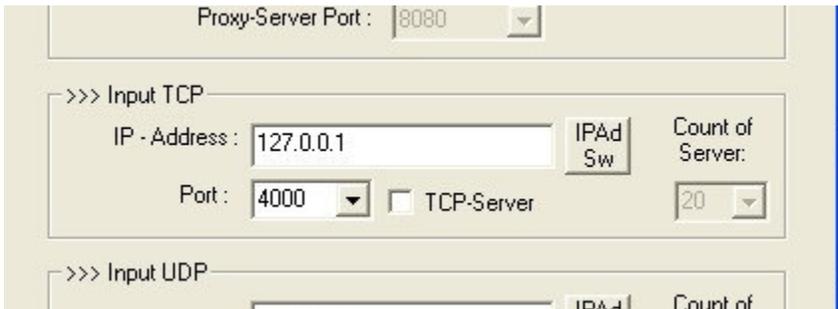


After editing the Input TCP click on OK near the bottom left corner.

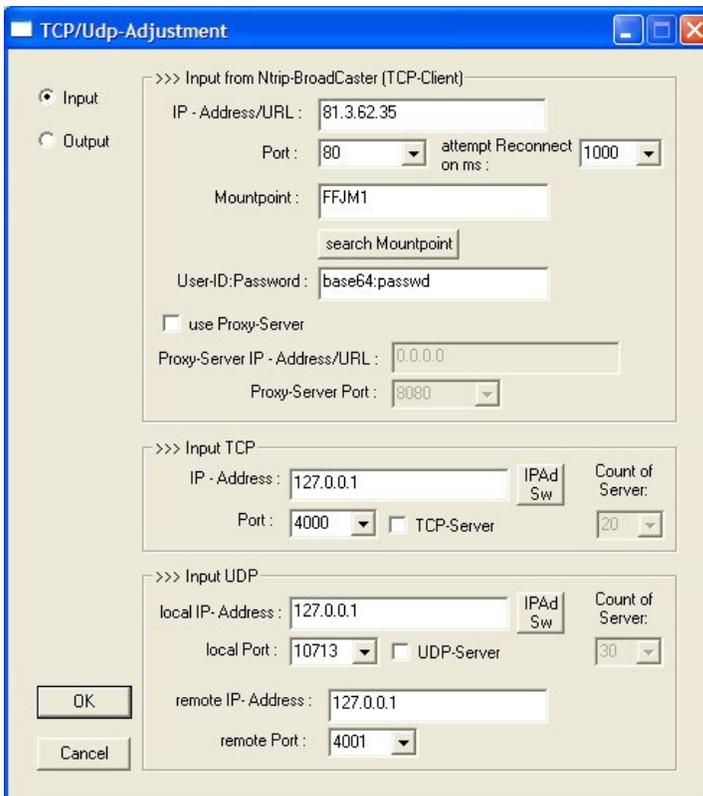


Click OK on the Input/Output-Utilities screen.

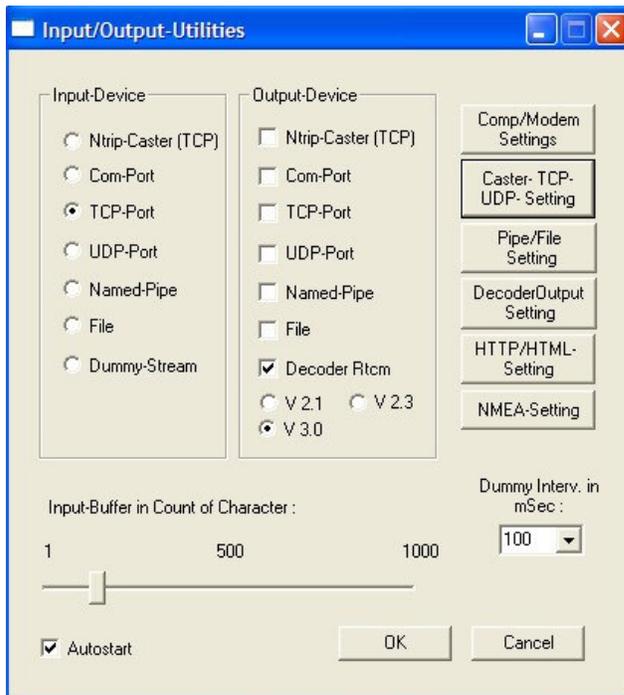


Click OK on the No action! warning.

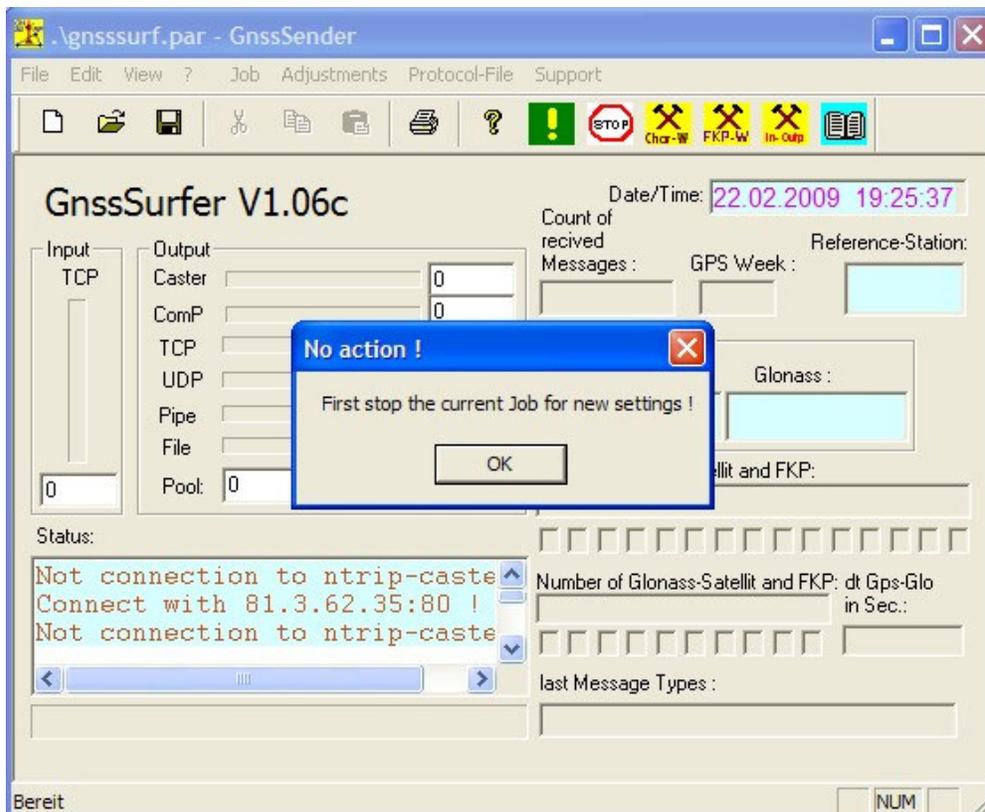

Click on the Stop sign to Stop the session and then the exclamation mark to start the current session.

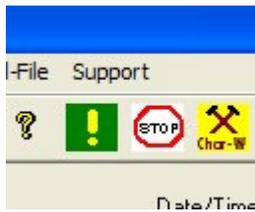

Observe the flow of RTK data with the GNSS Surfer.

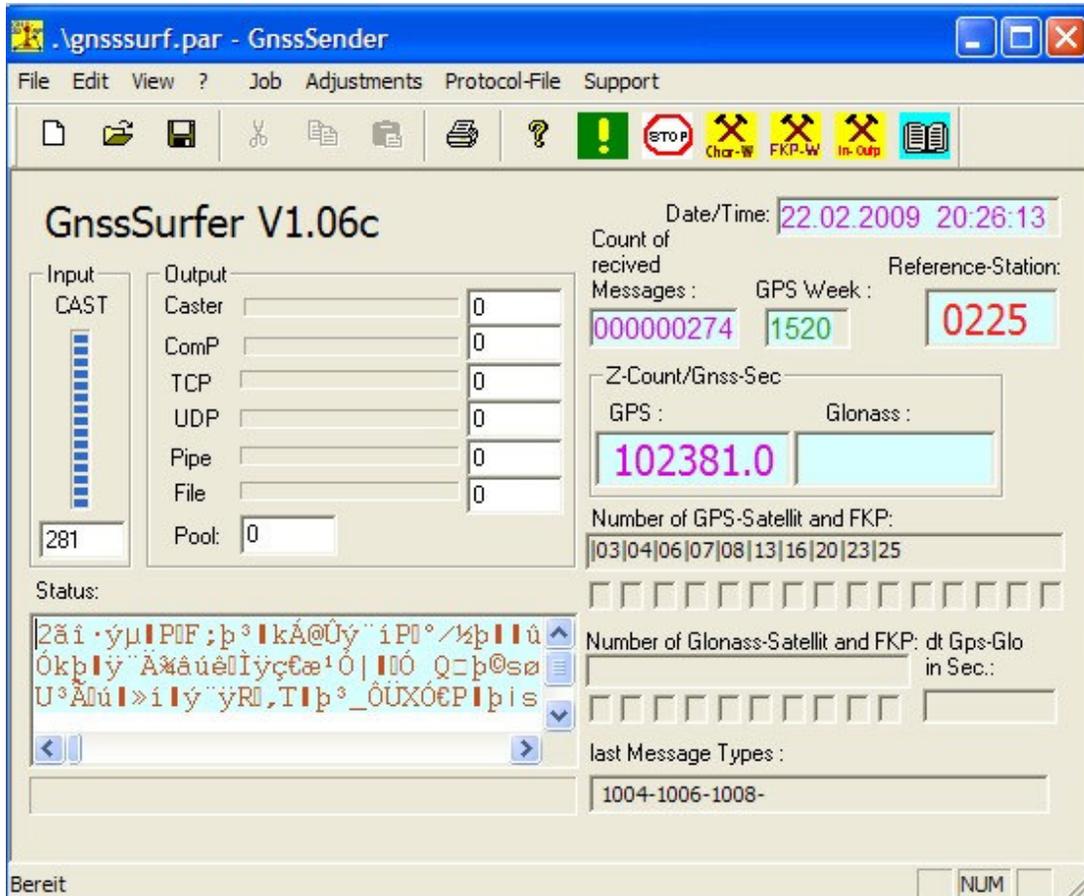

Phil Stevenson  
February 22, 2009