

**Conf Pack**  
Configuration Software  
for THALES GNSS receivers  
**REFERENCE MANUAL**

Documentation Part No. :  
DSNP0311373  
Rev. C  
Supersedes Rev. B (dated Jan 1999)

Issue: April 2001

THALES Navigation makes no warranty of any kind with regard to this software product, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. THALES Navigation shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this software product.

This manual contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated into another language without the prior written consent of THALES Navigation.

The information contained in this manual is subject to change without notice.

## Table of contents

<b>1. Installation</b> .....	<b>1-1</b>
Introduction .....	1-1
Protection .....	1-1
Computer requirements .....	1-1
Installation procedure from the CD-ROM .....	1-2
Installation procedure from a set of 3¼" diskettes .....	1-2
Running Conf Pack for the first time .....	1-5
<input type="checkbox"/> If you chose the <i>hardware</i> protection option .....	1-5
<input type="checkbox"/> If you chose the <i>software</i> protection option .....	1-6
<b>2. Introduction</b> .....	<b>2-1</b>
Configurations stored in GNSS receivers .....	2-1
Introduction to Conf Pack .....	2-3
How a configuration file is shown with Conf Pack .....	2-4
<input type="checkbox"/> Using the Select Pane .....	2-7
<input type="checkbox"/> Using the Edit Pane .....	2-8
<input type="checkbox"/> Using the Graphic Pane .....	2-12
<input type="checkbox"/> Changing the Options of Conf Pack .....	2-13
<b>3. Creating files with Conf Pack</b> .....	<b>3-1</b>
Creating a new configuration file .....	3-1
Creating a new configuration template .....	3-2
About templates .....	3-3
<input type="checkbox"/> How to create a new template .....	3-4
<input type="checkbox"/> How to remove a template from the New dialog box .....	3-4
Copying all the data from an open configuration file to another open file .....	3-5
Defining waypoints and routes with a simple click of the mouse .....	3-5
<input type="checkbox"/> Defining the region where to place your waypoints using the World Map editor .....	3-6
<input type="checkbox"/> Zooming in .....	3-7
<input type="checkbox"/> Zooming out .....	3-7
<input type="checkbox"/> Moving the map within the Graphic pane .....	3-8
<input type="checkbox"/> Adjusting the Zoom so as to view all the waypoints .....	3-8

- Placing waypoints on the map .....3-9
- Importing waypoints from the 3SPack software.....3-10
- Defining routes on the map.....3-11
- Defining beacons with a simple click of the mouse.....3-13
  - Placing beacons on the map.....3-14
- Using the World Map Editor.....3-17
  - Defining your work region using the World Map editor .....3-17
  - Rotating the globe.....3-18
  - Zooming in .....3-18
  - Zooming out.....3-19
  - Selecting a region on the World Map.....3-20
  - Changing the viewing options of the World Map .....3-21
- Viewing the resulting configuration file.....3-22
- How to quit Conf Pack .....3-22
- 4. Using Conf Pack connected to a THALES GNSS receiver ..... 4-1**
  - Preliminary steps ..... 4-1
  - Writing a configuration into a receiver..... 4-2
  - Reading the currently used configuration from a receiver ..... 4-3
  - Reading the initial configuration from a receiver ..... 4-4
  - Sending commands to a receiver ..... 4-5
    - Adding new commands to the combo box.....4-7
    - Using the Commands Editor dialog box .....4-8
  - Logging data sent by the receiver ..... 4-9
    - Simple GPS recorder.....4-10
    - Programmable GPS recorder .....4-12
  - Display Pane / Window .....4-16
  - Loading a new geoid.....4-18
- 5. Complete description of the nine modules of Configuration Parameters ..... 5-1**
  - Modules and sub-modules..... 5-1
  - DESCRIPTION ..... 5-2
  - GEODETIC SYSTEMS ..... 5-3
    - Coordinate Systems.....5-3

<input type="checkbox"/> Current .....	5-5
<input type="checkbox"/> Altitude .....	5-5
PROCESS .....	5-6
<input type="checkbox"/> Satellites .....	5-6
<input type="checkbox"/> Reference Position .....	5-6
<input type="checkbox"/> Time .....	5-7
<input type="checkbox"/> Filter .....	5-7
<input type="checkbox"/> Main Mode .....	5-8
<input type="checkbox"/> Maximum DOP .....	5-10
<input type="checkbox"/> Quality Control .....	5-10
INPUT / OUTPUT .....	5-11
<input type="checkbox"/> Communications .....	5-11
<input type="checkbox"/> Formats .....	5-11
<input type="checkbox"/> Computed Data .....	5-12
<input type="checkbox"/> Pseudoranges .....	5-14
<input type="checkbox"/> GPS Data .....	5-15
<input type="checkbox"/> Bit flow .....	5-16
<input type="checkbox"/> Event Time Mark .....	5-17
SCREEN .....	5-18
<input type="checkbox"/> Appearance .....	5-18
<input type="checkbox"/> Preferences .....	5-18
NAVIGATION .....	5-19
<input type="checkbox"/> Waypoints .....	5-19
<input type="checkbox"/> Routes .....	5-21
<input type="checkbox"/> Mode .....	5-22
SESSIONS .....	5-25
<input type="checkbox"/> Description .....	5-25
<input type="checkbox"/> Sequencing .....	5-26
DGNSS .....	5-28
<input type="checkbox"/> Beacons .....	5-28
<input type="checkbox"/> Mode .....	5-30
<input type="checkbox"/> PRCs Time Out .....	5-31
<input type="checkbox"/> DGNSS data .....	5-31
WAAS \ EGNOS .....	5-34
<input type="checkbox"/> Mode .....	5-34
<input type="checkbox"/> Data .....	5-35

**6. Programming Instructions for the design of screens and data outputs ..... 6-1**

- Terminology ..... 6-1
- Creating formats ..... 6-2
  - General expression ..... 6-2
  - Possible notations ..... 6-3
  - Numerals ..... 6-4
  - Leading spaces ..... 6-4
  - Control characters ..... 6-5
  - Overflow condition ..... 6-5
- Operators ..... 6-6
  - Operators list ..... 6-6
  - More about some the available operators ..... 6-8
- Macros ..... 6-13
  - Macros list ..... 6-13
  - Syntax ..... 6-14
  - ALM:n:d ..... 6-15
  - DTM:n:d ..... 6-18
  - GGA:n:d ..... 6-19
  - GLL:n:d ..... 6-21
  - GRS:n:d ..... 6-23
  - GSA:n:d ..... 6-24
  - GST:n:d ..... 6-25
  - GSV:n:d ..... 6-26
  - RMC:n:d ..... 6-27
  - VTG:n:d ..... 6-29
  - ZDA:n:d ..... 6-30
- Variables ..... 6-31
  - Time Data ..... 6-31
  - Position Data ..... 6-31
  - Speed Data ..... 6-32
  - Position status ..... 6-32
  - External Integrity Control ..... 6-35
  - GNSS Status ..... 6-35
  - DGPS Status ..... 6-36
  - Current Position ..... 6-38
  - Kinematic Data ..... 6-39
  - Station Data ..... 6-40
  - "Intermediate" Points Data ..... 6-40

- Anomalies & Alarms ..... 6-44
- Other Variables ..... 6-49

**7. Review of the Conf Pack Commands ..... 7-1**

- File menu ..... 7-1
- Edit menu ..... 7-2
- View menu ..... 7-2
- Transfer menu ..... 7-2
- Tools menu ..... 7-3
- Window menu ..... 7-3
- Help menu ..... 7-4



# 1. Installation

## Introduction

Conf Pack is delivered on the *Software Package* CD-ROM. A set of installation diskettes can be generated from the CD-ROM to allow installation on PCs not equipped with CD-ROM drives.

1

## Protection

When ordering this program, you were asked whether a *hardware* device (a *dongle*) or a *software* device (a license file) should be supplied for the implementation of the software protection on your PC.

Although more exacting than the *hardware* protection when first running Conf Pack (see the two procedures in page 1-5), the *software* protection should be preferred whenever the risk of losing dongles is real. Traveling users for example are advised to choose this option. On the other hand, dongles are better suited for sedentary users.

In the absence of a protection device on your PC, you will still be allowed to run Conf Pack, but in this case only the DGNSS-related section of your configuration files will be accessible from the Select pane. In this particular way of using Conf Pack, long-time users of the *Aquarius* series will have recognized *DSet Pack*. As a matter of fact, *DSet Pack* is no longer provided with receivers from the *Aquarius* series as users continue to have the same tool at their disposal if they use Conf Pack without a protection.

## Computer requirements

- Processor : DX2-66 minimum, Pentium recommended
- RAM : 16 Mbytes minimum, 24 Mbytes recommended
- Operating system : Windows 95, 98 or NT
- Display screen : SVGA, 17 inches recommended

## Installation procedure from the CD-ROM

- Insert the CD-ROM into the drive  
The Auto-start procedure presents a selection of software packages to be installed
- Select Conf Pack and proceed with the installation as described in the next pages using diskettes.

## Installation procedure from a set of 3¼" diskettes

- Insert the first diskette into the PC drive
- From the Windows taskbar, click **Start**
- Select **Run** from the pop-up menu
- In the text box which then appears, type:

a:setup

and click the **OK** button (or press [Enter]). This causes the Setup program to be started from the diskette. This program will assist you through the entire installation procedure.

Below are the main stages in the installation.

- **Welcome Dialog box**

As mentioned in this box, we recommend you to close all the active applications before proceeding with the installation.



- **Registration**

- Specify the following in the two text boxes:
  - your name
  - your company's name

- **Destination directory**

- Specify the name of the target directory where you would like the software to be installed. You can specify a non-existing directory: the program will create it for you after confirmation.

- **Program folder**

- Specify the name of the folder where you would like the program shortcuts to be created.

- **Start copying files**


- Click the **Next** button to start installing the software (or click the **Back** button to come back to the installation parameters if you want to change any of them).
- After you have clicked **Next**, insert the next diskette when prompted by the Setup program (step to be repeated until the files from all the diskettes have been installed).

- **End of installation**

- The end of installation is denoted by the message "Setup is complete".

- **Program folders and shortcuts**

- After successful installation and using the explorer, the following is now visible on your disk:

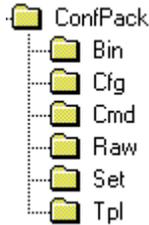

Bin : Contains all the program files (mainly \*.exe, \*.dll, \*.hlp, \*.ocx, etc.)

Cfg : Default directory for the configuration files that you will create

Cmd : Default directory used to save all Win Comm command files

Raw : Default directory invoked when acquiring data records

Set : Default directory invoked when saving port settings

Tpl : Default directory for the configuration templates that you will create

- In addition, a new folder (the "program folder") is present in C:\WIN.\Start Menu\Programs\D.S.N.P., containing the shortcut below:



Conf Pack


## Running Conf Pack for the first time

### □ If you chose the *hardware* protection option


- Connect the dongle to the parallel port of your PC (the one usually used for printers). If a printer is already connected, insert the dongle between the printer cable and the PC connector. Then check that the printer is "on line".
- Double-click on the Conf Pack icon to start the program.

As long as the dongle remains present on the parallel port, Conf Pack will run normally every time you double-click on the Conf Pack icon.

If you accidentally remove the dongle, or if you are not in possession of the dongle, the following will appear on the screen when you start Conf Pack:

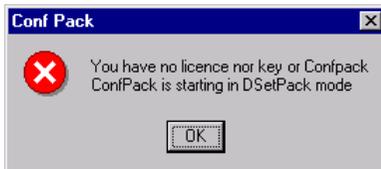

After clicking the **OK** button, you will be allowed to use Conf Pack in its "light" version (equivalent to former DSet Pack software) offering a set of modules reduced to the following:

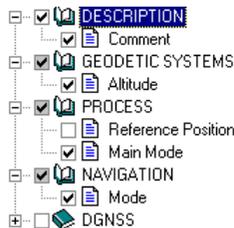

(This operation mode is precisely the desired one when for example you just have to set the DGNSS-related section of an Aquarius receiver)



## □ If you chose the **software protection option**

After installing Conf Pack as described earlier, do the following:

- Run Conf Pack. A warning message (same as on preceding page) informs you that only the “light” version of Conf Pack can be run
- Click **OK**. The Conf Pack main window then opens.

If you just want to work with the “light” version of Conf Pack, you can now start working on your configuration files. If you want to install the full version, do the following:

- Select **Tools>Unprotect**
- Check the **using software protection method** button. The dialog box then looks like this:




- As prompted in the lower part of this dialog box, contact us so that we can generate a license file for you. This will be possible only after you have passed on your personal soft code to us (this code is also indicated in the above dialog box).

In the example above, this code is “983808” but yours will probably be a different one.

1

- After receiving the license file (filename: dsnp.lic) and installing it somewhere on your PC, come back to the **Unprotect Software Component** dialog box above and select this file using the **Browse..** button so that the filename appears in the field on the left
- Click the **Go** button. After successful installation, the following is displayed:

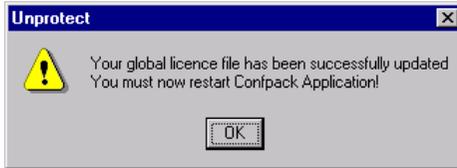

- Click the **OK** button and then re-start Conf Pack in order to benefit from the full version.



# 1

## **Installation**

*Running Conf Pack for the first time*

## 2. Introduction

### Configurations stored in GNSS receivers


Three types of configurations are stored in a GNSS receiver:

- *Default configuration*, resident in the firmware. This configuration cannot be modified. It resets all parameters in the unit to known values (operating mode, serial port configuration, output messages, etc.)
- *Initial configuration*, saved in a non-volatile memory. It can be modified using Conf Pack. It contains the necessary parameter settings for the reference configuration of an application or for any particular operating mode (mobile, reference station, etc.).
- *Current configuration*, saved in a non-volatile memory. This configuration is modified by the operator's actions (through commands).

With Aquarius or Scorpio units, the *Default configuration* can be loaded in place of the *current configuration* by pressing the push-button on the integrated display and holding it depressed, at power-on, or by sending the following command : \$PDAS, CONFIG,RESET.

The command \$PDAS,CONFIG,INIT can be used to load the *Initial configuration* in place of the current configuration.

The command \$PDAS,CONFIG,LOAD can be used to load a configuration file from a PCMCIA to a receiver unit to become its new *initial* and *current configurations*.

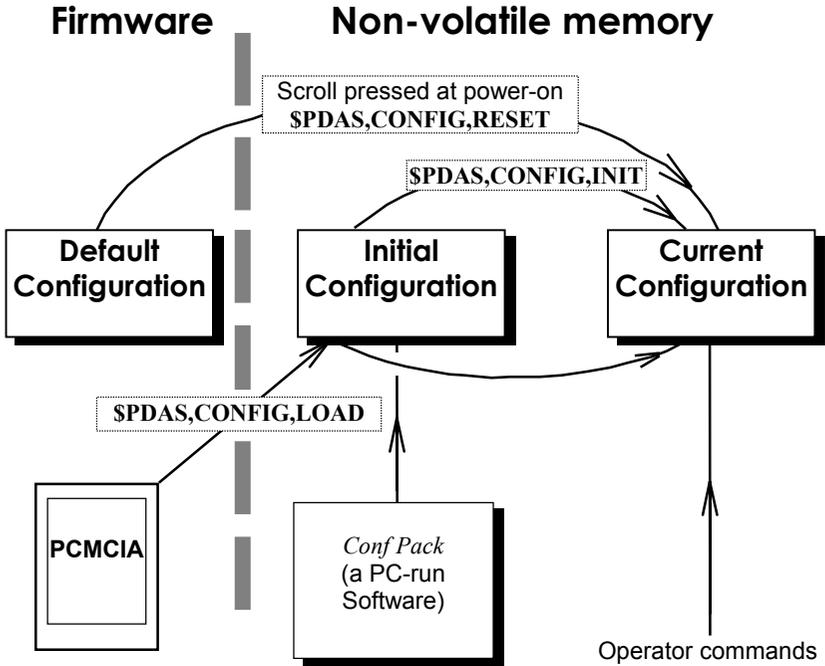

## Introduction to Conf Pack

- Conf Pack is designed to help you create the configuration files needed to operate your GNSS receivers.
- Conf Pack is the only tool required for your configuration operations, whether your receivers are used in land or marine applications, at reference stations or in mobile receivers.
- Some configuration parameters being interdependent, Conf Pack will force the selection or deselection of some of them following your own selections or deselections.
- Conf Pack does not show the configuration file under its final aspect (i.e. a list of command lines executable in receivers) but instead provides **a more user-friendly view, using three different panes**, from which you can more easily create or modify the file. The resulting file can however be viewed using the **Print Preview** command from the **File** menu.
- Conf Pack lets you open several files concurrently if necessary. This feature allows you for example **to overwrite an open file with the content of another open file**.
- For effortless entry of such navigation parameters as waypoints, routes and beacons, Conf Pack lets you define these parameters **through a simple click of the mouse on a map of your work region** (conventional entry from the keyboard remains possible however). Waypoints can also be created **by importing points from the 3SPack software**.


# 2

- Conf Pack lets you **write the scripts of your display screens and output messages** according to a syntax specific to Conf Pack.
- Conf Pack also includes a communication tool so that, among other things, **configuration files can be directly loaded into or read from your receivers.**

When creating a new configuration file, you should constantly keep in mind the nature of the target receiver, and so define only those parameters relevant to this receiver. For example, do not define anything in the SCREEN module if you use the receiver as a black box, etc.

## How a configuration file is shown with Conf Pack

- When opening a configuration file with Conf Pack, a new window appears describing the file content through three distinct Panes (Select, Edit and Graphic), as illustrated below.
- These three panes have been designed so that you can work more easily on your configuration files (see illustration below).

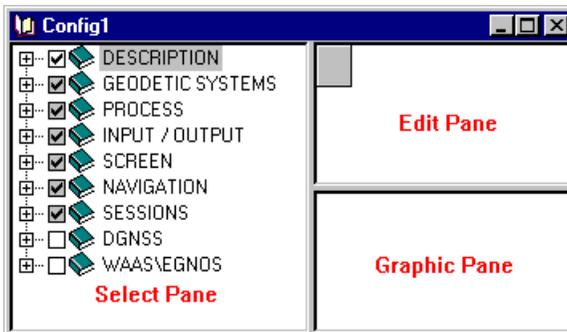

- **Select Pane:**

- Used to select/unselect parameter modules and sub-modules so that they be included or not in the configuration file currently created or modified. The Select Pane will automatically force the selection or deselection of parameters for those dependent on the presence or absence of others. Some sub-modules of parameters are necessarily part of any configuration you design.
- Also provides viewing options for each module (sub-modules can be shown or hidden by a simple click of the mouse).

- **Edit Pane:**

- Shows the Editor table corresponding to the parameter sub-module you select.
- The number of columns in the Editor table is specific to the selected sub-module.
- The number of rows depends on the number of entries you make for this sub-module.
- The Edit Pane is updated whenever you click the document icon of a sub-module, whether selected or not, in the Select Pane. If the sub-module corresponding to the clicked icon is not currently selected, then the Edit Pane will turn blank.

- **Graphic Pane:**

- Shows the entries you make in the Edit Pane in a more synthetic, user-friendly way (not an entry pane).
- In the case of the **Navigation** and **DGNSS** modules however, this pane operates as a graphic editor as any click of the mouse in this pane will be translated directly into an alpha-numerical entry (a waypoint, a route or a beacon) in the Edit pane.

- **Re-sizing the 3 panes of the Conf Pack main window**

- Position the pointer inside the main window, on either a vertical or horizontal pane border. This causes the pointer to change shape:

 if the pointer is on a vertical border,

or

 if the pointer is on a horizontal border

- Using the left mouse button, drag the border to the desired location
- When you reach this location, release the mouse. This causes the three panes to be re-sized accordingly.

## □ Using the Select Pane

The Select Pane shows the eight possible modules of parameters which can be part of a configuration file.



Handling the Select Pane is much similar to working with Windows 95 explorer. For each parameter module:

- The leftmost '+/-' button is used to show/hide all the sub-modules of a module:

  : sub-modules shown (book open)

  : sub-modules hidden (book close)

- The check button right-adjacent to the '+/-' button is used to select the module in order that it be part of the configuration file being created. Some of the modules cannot be unselected:

: button checked: module selected

: button cleared: module unselected

: button turns gray when checked: only part of the sub-modules are currently selected

- The check button left-adjacent to a sub-module name is used to select that sub-module in order that it be part of the configuration file being created:

   : button checked: sub-module selected

Clicking the document icon will cause the Editor table corresponding to that sub-module to appear in the Edit Pane.


   : button cleared: sub-module unselected

Clicking the document icon will cause the Edit Pane to turn blank.

## □ Using the Edit Pane

The Editor Pane shows the Editor table.

The Editor table consists of a top row (in gray), a Status column (leftmost column in gray) and a variable number of editable or non-editable cells arranged in rows and columns (data rows and columns).

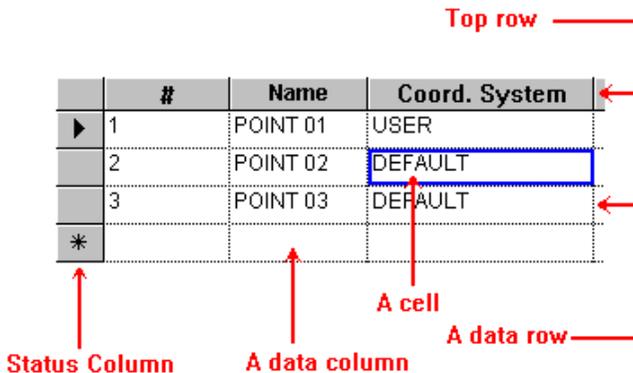

	#	Name	Coord. System
▶	1	POINT 01	USER
	2	POINT 02	DEFAULT
	3	POINT 03	DEFAULT
*			

Annotations in the diagram:

- Top row**: Points to the header row (gray).
- Status Column**: Points to the leftmost column (gray).
- A data column**: Points to the 'Name' column.
- A cell**: Points to the 'DEFAULT' cell in the second data row.
- A data row**: Points to the second data row.


- **Cell types**

- There are 4 different types of cells:


Combo cells : Only the options from the combo box can be selected to be inserted into this type of cell




Text cells : Can contain a limited number of alpha-numerical characters



Numeral cells : Can only contain numerical values (with delimited range)



Software-set cells : Controlled by Conf Pack



- Whenever the content of a cell is irrelevant to the current context, then the cell is locked (no data entry possible).

- **Re-sizing the editor table**

Re-sizing rows:

- Position the pointer on the bottom border of any cell in the status column (leftmost gray column). The pointer shape then looks like this: 
- Using the left mouse button, drag the pointer downward to increase the row height, or upward to decrease it
- Release the mouse button when you get the desired height.

Note that all other rows, if any, in the Editor table, are also resized according to your new setting.

Note also that re-sizing the Editor table rows from any sub-module will also affect the Editor Table of all other modules and sub-modules

Re-sizing a column:

- Move the pointer into the in the header (top gray cell) of the column you want to re-size and position the pointer on the right-hand border of this cell. The pointer shape then looks like this: 
- Using the left mouse button, drag the pointer to the right to enlarge the column, or to the left to narrow it
- Release the mouse button when you obtain the desired width.

## • Editing instructions

- To move the cursor from cell to cell within the Editor table, use any of the 4 arrow keys. Alternately, you can use the tab key for horizontal forward jump, or the Shift+Tab keys for horizontal backward jump
- The Status column can contain the following symbols:



indicates that a cell is selected somewhere in this row



denotes an editing operation in progress somewhere in the row



denotes the last row of the Editor table (necessarily an empty row). Unless you have created the last row possible in the table, this symbol will disappear as soon as you enter a single character anywhere in the row. A new empty row will then be created with this symbol in the first cell.

- The pointer will take the following shape if you move it on any cell (except the top cell) in the Status column:




which means that you will select the entire row if you then click the left mouse button. This is useful when for example you want to delete the definition of a waypoint, a route or a coordinate system. In this case you just need to select the corresponding row and then depress the Delete key.

- When the definition of a row is finished, simply press the Enter key to stop editing.

### □ Using the Graphic Pane

- In most cases, the Graphic Pane will just display a summary of all the choices you have made in the selected sub-module. For example, choosing an elevation angle of 5 ° will be illustrated as follows in the Graphic Pane:

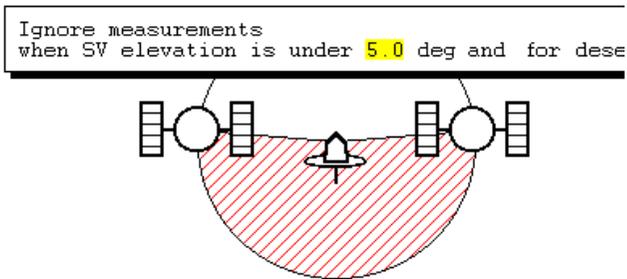

- The Graphic pane also provides an immediate simulation of the formats you have written whenever they are the subject of the Edit Pane, i.e. when either of the following sub-modules is selected:
  - . Formats, Computed data (**INPUT / OUTPUT** module)
  - . Presentation (**SCREEN** module)
- The Graphic Pane can also be used as an input device to define waypoints, routes and beacons.

## □ Changing the Options of Conf Pack

- In the toolbar, click  or from the menu bar, select **Tool** and then **Options**. A dialog box appears in which you can set the options of the process:

### General tab

**Timeout** : Maximum time allowed for a receiver to send an acknowledgment to Conf Pack. At the end of this time, if no connection is made, Conf Pack will cancel the operation in progress.


**Screen Type** : Defines the screen size of your receiver(s), as shown on the Graphic Pane when selecting the **Appearance** sub-module (from the **SCREEN** module)

**Line** : Number of lines on the screen

**Column** : Number of characters in a line

**Auto Line Feed** : If checked, this option will terminate a too long character string at the end of a line and will place the extra characters on the next line (beneath).

If cleared, this option will let the character string extend beyond the end of the line. Extra characters, if any, will therefore be invisible on the receiver screen.

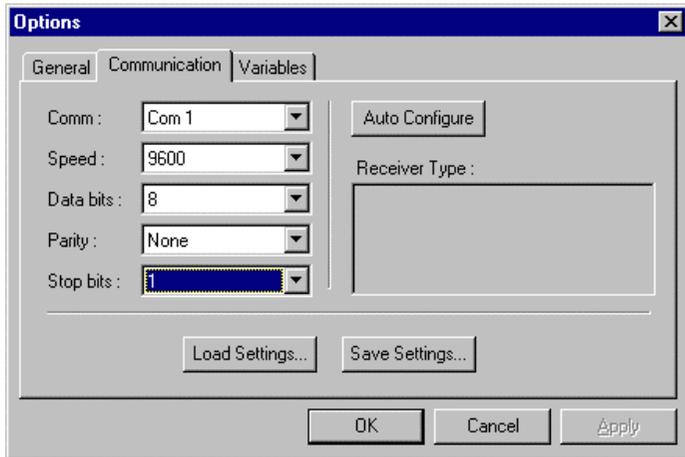**Communications tab**

- Performs automatic settings of the serial port connected to a THALES receiver or lets you enter these settings manually:

Assuming a receiver is connected to your computer through a serial port:

**Automatic:**

- Click the **Auto Configure** button to initiate an automatic search for the Baud rate. Use this button if you are not sure about the Baud rate.
- An automatic search for the Baud rate is only allowed with THALES receivers as this requires that the receiver be capable of returning a consistent reply to a proprietary command.

After choosing **Auto Configure** you are allowed to:

- disable the communication by clicking "**Cancel**"
- or, if the identification is successful, close the **Communication Settings** dialog box, by clicking **OK**. This enables communications between the computer and the GPS receiver and allows you to transfer configuration files to the receiver.

### Manual

- Enter the following communication parameters
  - Serial port No.
  - Baud rate
  - number of bits per character
  - parity check option
  - number of stop bits
- Click the **OK** button.

# 2

- Allows you to save/restore port settings:

**Saving port settings:**

- Click the **Save settings** button. This opens a dialog box that allows you to save the serial port configuration currently enabled so that you can quickly retrieve it at a later date using the **Load Settings** push-button.
- In the **File Name** text box, enter a name for the file to which the serial port configuration should be saved (typically with '.set' as extension). Typically, serial port configuration parameters are saved to the 'set' directory.
- Click the **Save** button to save the following communication parameters
  - serial port No.
  - Baud rate
  - number of bits per character
  - parity check option
  - number of stop bits
- Clicking **Cancel** would take you back to the **Communication Settings** dialog box without saving any settings.

### Restoring port settings

- Click the **Load settings** button. This opens a dialog box that allows you to select any serial port configuration file saved earlier using the **Save Settings** button.
- Click the desired file name in the list box, to select it (typically in the 'set' directory), and click **Open**. As a result the serial port parameters in the **Communication Settings** dialog box are automatically set as specified in the file you selected.
- Clicking **Cancel** would take you back to the **Communication Settings** dialog box without loading any settings.

# 2

### Variables tab

- User-set values arbitrarily assigned to variables in Conf Pack. These variables are in fact those handled by a GNSS receiver in operation (L84, G84, H84, etc.)
- In Conf Pack these arbitrary values are used by the Graphic Pane to simulate screens or messages whenever the variables are invoked by the Editor Pane. ♣



## 3. Creating files with Conf Pack

### Creating a new configuration file

- In the Toolbar, click   
or  
from the menu bar, select **File** and then **New**
- In the **New** dialog box which then appears, select any line containing “Configuration File” or “Configuration File (...)” and click **OK**  
or double-click directly on this line. For more information on the bracketed term, see page 3-3.
- A new window appears showing a copy of the file selected earlier in the **New** dialog box. As shown in the title bar, the file is given the default name “Config1” (or “Config $n$ ” if “ $n-1$ ” files have been created in the current ConfPack session).  
The file is unsaved, which means that you will have to confirm or change this name whether you select **File** and **Save**, or **File** and **Save As**, after defining the content of the file.
- Select and view the desired modules and sub-modules of parameters as described in **Using the Select Pane**.
- Define all your parameters. Refer to section 5 for more information on these parameters.

- To save your file, in the toolbar, click  or from the menu bar, select **File** and then **Save**
- In the **Save As** dialog box which then appears, confirm or change the file name. The default extension is `cfg`, which we recommend to keep, and the default directory is `Cfg` (parent directory: `ConfPack`).
- Click the **Save** button to complete the operation or **Cancel** to discard it.

## Creating a new configuration template

In its content, a template file does not differ from a configuration file. The only difference resides in the fact that a template is prompted as a possible model for a new configuration, which cannot be the case with a “simple” configuration file (although you can create a new file, using the **Save As** command, from the currently displayed and active configuration file).

- In the Toolbar, click  or select **File** from the menu bar and then **New**
- In the **New** dialog box which then appears, select “Template File” and click **OK** (or double-click directly on this line).
- A new window appears showing a copy of the file selected earlier in the **New** dialog box. As shown in the title bar, the file is given the default name “Templ1” (or “Templ $n$ ” if “ $n-1$ ” files have been created in the current ConfPack session).

The file is unsaved, which means that you will have to confirm or change this name whether you select **File** and **Save**, or **File** and **Save As**, after defining the content of the file.


- Select and view the desired modules and sub-modules of parameters as described in **Using the Select Pane**.
- Define all your parameters. Refer to section 5 for more information on these parameters.
- To save your file, in the toolbar, click  or select **File** from the menu bar and then **Save**
- In the **Save As** dialog box which then appears, confirm or change the file name. The default extension is tpl, which you should not change, and the default directory is Tpl (parent directory: ConfPack).
- Click the **Save** button to complete the operation or **Cancel** to discard it.

The name that you give to your template will appear between brackets in the **New** dialog box when you next use it.

# 4

## About templates

Templates are used when you create a new file. When you select **File** from the main menu, and then **New**, the **New** dialog box which then appears lists a number of lines referring to templates, as explained below.

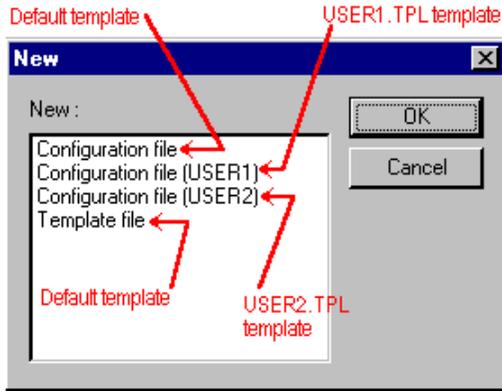

After you choose a line from the **New** dialog box and you click the **OK** button, a copy of the corresponding template appears in the Conf Pack main window from which you can create your configuration.

#### □ How to create a new template

You can create a new template only from the “Template file” line (default template) shown in the **New** dialog box. See procedure in **Creating a new configuration template** (see page 3-2).

#### □ How to remove a template from the New dialog box

Using Windows 95 explorer, list the content of the Tpl directory (parent directory: ConfPack). Move the unwanted templates elsewhere or delete them.

Note that the default template (“Template file” in the New dialog box) cannot be removed as it is required to create new templates.

## Copying all the data from an open configuration file to another open file

Assuming the two configuration files are open, do the following:


- Click the left mouse button anywhere within the Select Pane of the *source* file
- In the toolbar, click 
- Move the mouse pointer to the Select Pane of the *target* file and click the left mouse button anywhere within this pane
- In the toolbar, click . A message box appears asking you to confirm the copy operation.
- Click the **Yes** button if you really want to overwrite the entire target file with the data from the source file.

## Defining waypoints and routes with a simple click of the mouse

- When you first select the Waypoints or Routes sub-module (by clicking the corresponding document icon in the Select Pane), the Graphic Pane is changed into a map centered around the point 0° 0' 0.000"N - 0° 0' 0.000" E (WGS84 coordinate system used necessarily).

A grid is represented, adapted to the size of the Graphic Pane. The map is magnified with the maximum zoom-in ratio possible.

The coordinates of the mouse pointer, as you move it within the pane, are reported in white, with red background, in the upper-right corner of the map.

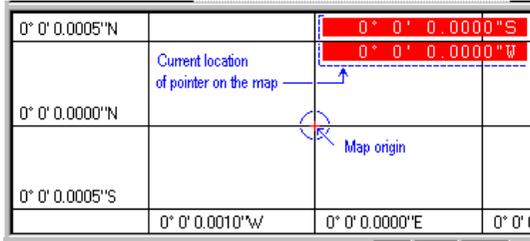

- A Shortcut menu is available from within this pane through which you can perform the following operations (described in detail in the next pages):
  - . Defining the region where to place your waypoints using the World Map editor
  - . Zooming in, zooming out
  - . Moving the map within the Graphic pane
  - . Adjusting the Zoom so as to view all the waypoints
  - . Placing waypoints on the map
  - . Importing waypoints from the 3SPack software
  - . Defining routes on the map
- **Defining the region where to place your waypoints using the World Map editor**

See page 3-17.

## □ Zooming in

- Position the mouse pointer anywhere on the Graphic Pane.
- Click with the right mouse button. The shortcut menu pops up.
- Choose the **Zoom In** command from the menu. As a result the menu vanishes and the pointer looks like .
- Position the pointer somewhere on the region on which you want to zoom in and click with the left mouse button. As a result the window displays a magnified view of the region, centered around the clicked point
- You can zoom in repeatedly (i.e. so long as the mouse pointer looks like  ). The buzzer will sound if you try to zoom in and you have already reached the maximum zoom-in ratio.

## □ Zooming out

- Position the mouse pointer anywhere on the Graphic Pane.
- Click with the right mouse button. The shortcut menu pops up.
- Choose the **Zoom Out** command from this menu. As a result the menu vanishes and the pointer looks like .
- Position the pointer somewhere on the region and click with the left mouse button. As a result the window displays a larger-scale view centered around the region

- You can zoom out repeatedly (i.e. so long as the mouse pointer looks like ). The buzzer will sound if you try to zoom out and you have already reached the minimum zoom-out ratio.

#### □ Moving the map within the Graphic pane

- Position the mouse pointer anywhere on the Graphic Pane.
- Click with the right mouse button. The shortcut menu pops up.
- Choose the **Grabber** command from this shortcut menu. As a result the menu vanishes and the pointer looks like .
- Depress the left mouse button and drag the pointer in the direction where you want the map to be moved. Note that the move will take place only when you release the mouse button and it will be proportional to the distance covered by the pointer when you drag it.

#### □ Adjusting the Zoom so as to view all the waypoints

- Select the **Zoom to Fit** command from the Shortcut menu. This causes the map to be re-adjusted (through a zoom-and-grab operation) so that it can view all the waypoints you have defined.
- The **Zoom to Fit** command is executed automatically whenever corrections are made to the Editor table of the **Waypoints** sub-module

## □ Placing waypoints on the map

- Position the mouse pointer anywhere on the Graphic Pane.
- Click with the right mouse button. In the shortcut menu which then appears, choose the **Draw** command.

As a result the menu vanishes and the pointer shape is changed to .

- Watching the pointer coordinates displayed in the upper-right corner of the Graphic pane, position the pointer where you want a new waypoint to be created and click with the left mouse button.

As a result, a waypoint is created at this location: a flag is placed to indicate its location and a default name (WayPt nn) is assigned to it.



What's more, a new row is created at the bottom of the Editor table (Edit Pane) containing the definition of that new waypoint, expressed in the Default coordinate system.

#	Name	Coord. System	Input	L
1	WayPt 01	DEFAULT	L - G - A	0° 0' 0.0

## • Notes:

- Subsequent modifications to a waypoint defined graphically will be possible only from the corresponding row in the Editor table (and the Graphic Pane will then be updated accordingly).


- Following any correction to the definition of a waypoint in the Editor table, the Graphic Pane is refreshed and the **Zoom to Fit** command is executed automatically.
- When deleting a waypoint named 'WayPt nn' from the Editor table, then all the next waypoints also named 'WayPt nn' are re-numbered accordingly.
- You cannot delete a waypoint if it is involved in the Navigation mode or in the definition of a route.

### ❑ Importing waypoints from the 3SPack software

This command can be used only if 3SPack has been installed on your computer (otherwise the command in the shortcut menu is dimmed).

- Position the mouse pointer anywhere on the Graphic Pane, click with the right mouse button and choose the **Import from 3SPack...** command.

A dialog box appears listing the names of all the points available from 3SPack. Example:

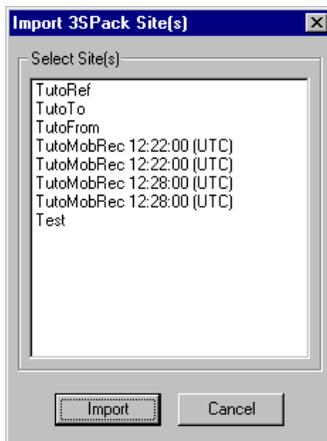

- Choose one or more of the prompted points (combining the Shift or Ctrl key with a click on the mouse) and then click the **Import** button.


This causes the points to be added both in the Editor table and on the Graphic Pane. The **Zoom to Fit** command is then automatically run in order that the Graphic Pane can view all the points.

## □ Defining routes on the map

(after having created the necessary waypoints and after having selected the Routes sub-module from the Select Pane))

- Position the mouse pointer anywhere on the Graphic Pane, click with the right mouse button and choose the **Draw** command.  
As a result the menu vanishes and the pointer shape is changed to .
- Click successively with the left mouse button on all the waypoints making up the route. Proceed in chronological order, from the first to the last waypoint:
- Click on the first waypoint. Conf Pack automatically assigns a default name to the new route (ROUTE nn), which appears beside this point with a software-set color.
- Move the pointer to the next waypoint and click with the left mouse button again. Note the segment drawn from the previous waypoint as you move the pointer. Note also the attraction of the waypoint location if you do not click exactly on the cross (at the base of the flag).

- When arriving on the last waypoint, double-click on that waypoint to tell Conf Pack the route definition is complete (or double-click anywhere on the map, except on a waypoint, after clicking on the last waypoint of the route).

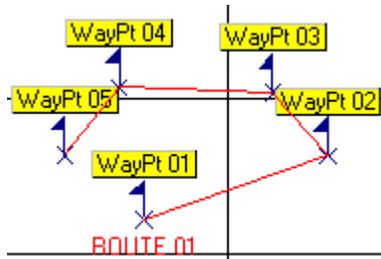

What's more, a new row is created at the bottom of the Editor table (Edit Pane) containing the complete definition of that new route

#	Name	Waypoint 1	Waypoint 2	Waypoint 3	Waypoint 4
1	ROUTE 01	WayPt 01	WayPt 02	WayPt 03	WayPt 04

- **Notes:**


- Subsequent modifications to a route defined graphically will be possible only from the corresponding row in the Editor table (and the Graphic Pane will then be refreshed accordingly).
- When deleting a route named 'ROUTE nn' from the Editor table, then all the next routes also named 'ROUTE nn' are re-numbered accordingly.
- You cannot delete a route if it is involved in the Navigation mode.

## Defining beacons with a simple click of the mouse

- As this also happens with the **Waypoints** and **Routes** sub-modules, when you first select the **Beacons** sub-module (by clicking the corresponding document icon in the Select Pane), the Graphic Pane is changed into a map centered around the point  $0^{\circ} 0' 0.000''\text{N} - 0^{\circ} 0' 0.000''\text{E}$  (WGS84 coordinate system used necessarily).

A grid is represented, adapted to the size of the Graphic Pane. The map is magnified with the maximum zoom-in ratio possible.

The coordinates of the mouse pointer, as you move it within the pane, are reported in white, with red background, in the upper-right corner of the map.

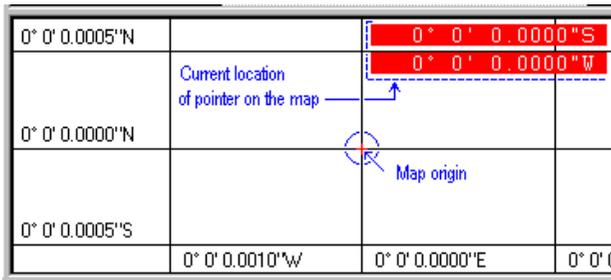

- A Shortcut menu is available from within this pane, much similar to the one accessible from the Graphic Pane of the **Waypoints** or **Routes** sub-module. The same operations can be performed:
  - Defining the region where to place your beacons using the World Map editor: see page 3-17.

- Zooming in/out on the map: see page 3-7.
- Moving the map within the Graphic pane: see page 3-8.
- Adjusting the zoom so that all the beacons can be viewed on the map: same as waypoints, see page 3-8
- Placing beacons on the map: see below.

#### □ Placing beacons on the map


- Position the mouse pointer anywhere on the Graphic Pane, click with the right mouse button and choose the **Draw** command from the shortcut menu.

As a result the menu vanishes and the pointer shape is changed



- Watching the pointer coordinates displayed in the upper-right corner of the Graphic pane, position the pointer where you want a new beacon to be created and click with the left mouse button.

As a result, a beacon is created at this location: a milestone is placed to indicate its location and a default range (20 km is assigned to it, represented by a circle centered around that location).

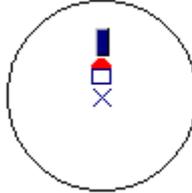

What's more, a new row is created at the bottom of the Editor table (Edit Pane) containing the complete definition of that new beacon. Example (excerpt):

Beacon ID	Name	Lat	Long	Band. 1
0		0° 0'59.9999"N	0° 1'11.2455"E	UHF

- **Notes:**


- No default name is assigned to a beacon defined graphically. The corresponding field in the Editor table is left blank and a blue rectangle is shown above the milestone in the Graphic Pane (see above). You should therefore enter a name in the corresponding **Name** field (in the Editor table).
- Also, in the same row, you will need to verify/change a number of parameters, such as transmission band, carrier frequency, modulation, encryption, etc, as these parameters are defined with defaults in the case of a beacon defined graphically.
- Subsequent modifications to a beacon defined graphically will be possible only from the corresponding row in the Editor table (and the Graphic Pane will then be refreshed accordingly).
- You cannot delete a beacon if it is involved anywhere in the **Mode** sub-module (**DGNSS** module).

## Using the World Map Editor

When from the Select Pane, you choose Waypoints or Routes (**NAVIGATION** module) or Beacons (**DGNSS** module), a shortcut menu is available from the Graphic Pane from which you can define the region of survey. This function uses the World Map editor described below.

### □ Defining your work region using the World Map editor

- Position the mouse pointer anywhere on the Graphic Pane, click the right mouse button to display the Map Shortcut menu and then select the **Region...** command. A new window appears showing the World Map editor.

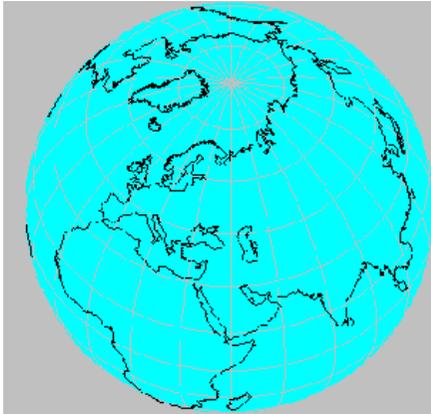

A Shortcut menu is available from within this pane through which you can perform the following operations:

## □ Rotating the globe

If the current view of the globe does not display the region where you would like to work in, a function is available allowing you to rotate the globe:

- Position the mouse pointer anywhere on the pane of the World Map window.
- Click the right mouse button. The **World Map** shortcut menu pops up.
- Choose the **Grabber** command from this menu. The menu vanishes and the pointer looks like 
- Depress the left mouse button and drag the pointer in the direction where your region is. Note that the globe will rotate only when you release the mouse button. Note also that the rotation angle is defined by the distance covered by the pointer when you drag it.

## □ Zooming in

- Position the mouse pointer anywhere on the pane of the World Map window.
- Click with the right mouse button. The **World Map** shortcut menu pops up.
- Choose the **Zoom In** command from the menu. As a result the menu vanishes and the pointer looks like .
- Position the pointer somewhere on the region on which you want to zoom in and click with the left mouse button. As a result the window displays a magnified view of the region, centered around the clicked point

- You can zoom in repeatedly (i.e. so long as the mouse pointer looks like ). Up to 6 successive zoom-in operations are possible from the initial view of the World Map.


## □ Zooming out

- Position the mouse pointer anywhere on the pane of the World Map window.
- Click with the right mouse button. The **World Map** shortcut menu pops up.
- Choose the **Zoom Out** command from this shortcut menu. As a result the menu vanishes and the pointer looks like .
- Position the pointer somewhere on the region and click with the left mouse button. As a result the window displays a larger-scale view centred around the region
- You can zoom out repeatedly (i.e. so long as the mouse pointer looks like  ) until you reach the view of the entire globe.

### □ Selecting a region on the World Map

Assuming the desired region is now visible on the World Map, after rotation and Zoom-in operations, do the following:

- Choose the **Draw** command from the World Map shortcut menu
- Drag the mouse button so as to surround the desired region. Release the mouse when you agree with the selection

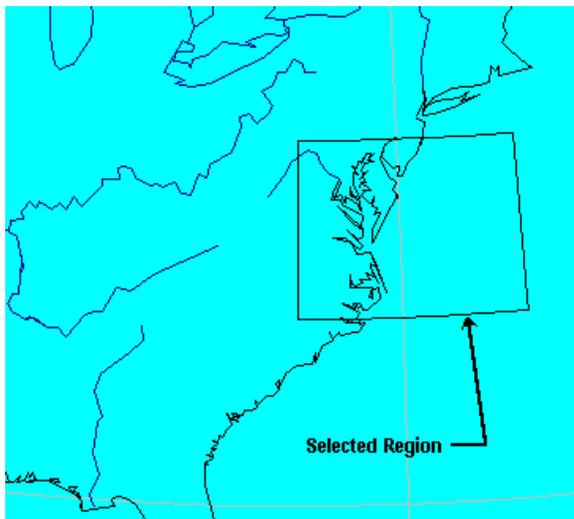

- Click the **OK** button.

On the Graphic pane which then displays again, note that that the graduations have been updated to comply with your choice.

## ❑ Changing the viewing options of the World Map

- Position the mouse pointer anywhere on the pane of the World Map window.
- Click with the right mouse button. The **World Map** shortcut menu pops up.
- Choose the **Options** command from this shortcut menu. As a result the Options dialog box appears. The default options are shown below.



Four levels of map resolution are available:

- Low
- Medium
- High
- Very High

The higher the resolution, the more accurate the details on the map... but the longer the time required to display the map.

## Viewing the resulting configuration file

- Click the left mouse button anywhere within the Select Pane.

- In the toolbar, click 

or

from the menu bar, select **File** and then **Print Preview**.

The preview shows the current content of the configuration file (a list of command lines interpretable by THALES GNSS receivers).

Example (partial view):

```
$PDAS,CONFIG,BEGIN,69
$PDAS,COMMENT,2,1,MR302K DEFAULT CONFIGURATION
$PDAS,COMMENT,2,2,BY PATRICE BONNIN
$PDAS,GEO,5,1,,
$PDAS,GEO,5,2,1,NTF
$PDAS,GEO,5,3,8,6378249.145,1/F,293.465000000,S,1.000000000,1
$PDAS,GEO,5,4,Dx,-168.000,Dy,-72.000,Dz,318.500,1
$PDAS,GEO,5,5,8x,0.000000,8y,0.000000,8z,0.554000,e
$PDAS,GEO,5,6,00,LGH NTF
$PDAS,GEO,8,1,,
$PDAS,GEO,8,2,2,NTF
$PDAS,GEO,8,3,8,6378249.145,1/F,293.465000000,S,1.000000000,1
$PDAS,GEO,8,4,Dx,-168.000,Dy,-72.000,Dz,318.500,1
$PDAS,GEO,8,5,8x,0.000000,8y,0.000000,8z,0.554000,e
ENDAS CPD 8 6 02 1 MMRPRT 1
```

## How to quit Conf Pack

- From the menu bar, select **File** and then **Exit**. Unless an unsaved configuration is still open, this causes the **Conf Pack** main window to be closed immediately.

If one or more unsaved configurations are still open in the **Conf Pack** window, warning messages appear successively for each of these configurations asking you to save the last changes made to the file before quitting **Conf Pack**. Click the **Yes** button to save the last changes made, or the **No** button to discard them. ✖

## 4. Using Conf Pack connected to a THALES GNSS receiver

### Preliminary steps

Using one of the serial ports of your computer, Conf Pack can connect to a THALES GNSS receiver so that you can work on its configuration.

You can also use the *Win Comm* tool to send commands to the receiver or to log data from the receiver.

Prior to performing any of these functions, you should configure the PC serial port properly, using the **Communications** tab in the **Options** dialog box. (see page 2-14).

Then, and depending on what you intend to do, follow one of the procedures described in the next pages.




Before downloading or uploading a configuration file via one of the PC's serial ports using **ConfPack**, do not forget to close the **WinComm** or **Geoids** window if these programs also use the same serial port. By doing this, you will make the port available to ConfPack.

Remember the port settings may be specific to each utility program. For example **WinComm** may use port settings different from those requested by **ConfPack**.

4

## Writing a configuration into a receiver

- **Direction of transfer:**

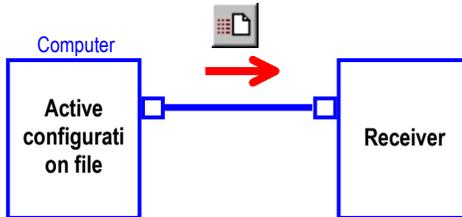

Assuming the receiver is properly connected and the serial line is properly configured:

- Open the configuration file you want to write into the receiver
- In the toolbar, click  or in the menu bar, select the **Transfer** menu and then **Write Initial**

A dialog box appears asking you to confirm the write operation.

- Press the **Yes** button to start writing the active file into the receiver. A dialog box appears asking you to confirm or change the unit number assigned to the attached receiver.


After sending the file, Conf Pack waits for a transfer acknowledgment from the receiver.

If the acknowledge signal is returned in time, then the write operation is considered to be successful (the transferred file is then the receiver's new initial and current configurations).

If no acknowledge signal is received, the write operation is aborted after the user-set time out (see page 2-13).

## Reading the currently used configuration from a receiver

- **Direction of transfer:**

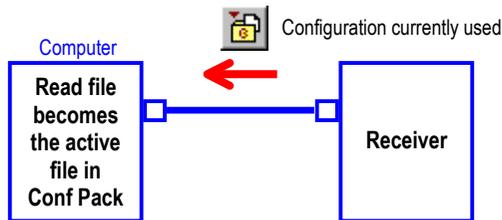


Assuming the receiver is properly connected and the serial line is properly configured:

- In the toolbar, click  or in the menu bar, select the **Transfer** menu and then **Read Current**

Conf Pack then starts reading the current configuration file from the receiver. A new window is opened in Conf Pack showing this file (default name: *Confign*).

## Reading the initial configuration from a receiver

- **Direction of transfer:**

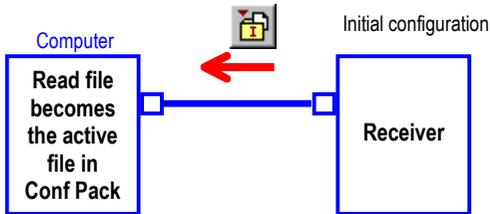

Assuming the receiver is properly connected and the serial line is properly configured:


- In the toolbar, click  or in the menu bar, select the **Transfer** menu and then **Read Initial**

Conf Pack then starts reading the initial configuration file from the receiver. A new window is opened in Conf Pack showing this file (default name: *Confign*).

## Sending commands to a receiver

After connecting the receiver to the PC via the desired port, do the following:


- In the toolbar, click  or in the menu bar, select **Tools** and then **Win Comm**. A new window is displayed showing the **Communication Settings** dialog box. Use this box to set the PC port connected to the receiver:

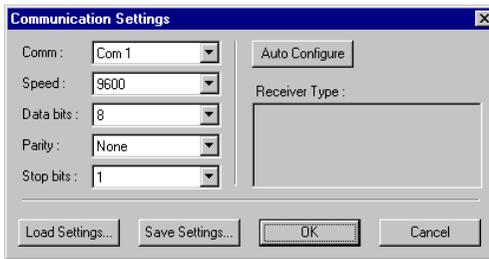

There are three different ways of setting the PC port:

- either manually by selecting the desired parameter in each of the fields shown in the above window
- or by asking ConfPack to determine automatically which parameters should be used to communicate with the receiver. This is obtained by clicking on the **Auto Configure** button. After testing a number of combinations, ConfPack will finally position each of the fields so that communication can take place with the receiver
- or by loading a set of parameters which was saved earlier as a SET file (the **Save Settings...** button was then used for that purpose). This is simply obtained by first clicking on the **Load Settings..** button and then choosing the desired SET file.


- Once the fields are properly filled, click **OK**. The **Win Comm** dialog box then appears. For more information on the **Display Pane**, see page 4-16.

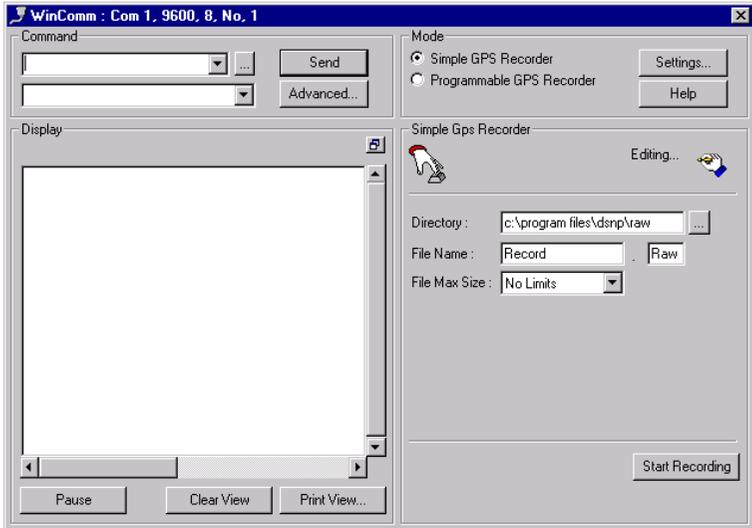

- To send a command, use the **Command Pane** (upper-left):
  - . Directly type the command in the upper combo box, or select it from that combo box, or fill that box by choosing the corresponding label from the lower combo box.
  - . Click the **Send** button.

## ❑ Adding new commands to the combo box

- Click the **Advanced** button in the **Command** Pane. The **Commands Editor** dialog box appears allowing you to set up a group of commands interpretable by the connected receiver. The commands you select in this dialog box will be prompted in the main window. (As a result, you will only need to choose the desired command from the list in the main window and click to send the command to the connected receiver).

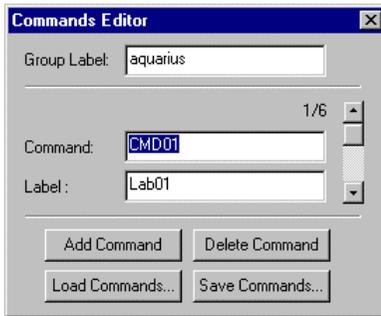

The buttons in the **Commands Editor** dialog box allow you to load any command-group file available, make any change to the group and save your own command groups.

The selected command group will be available in the main window after you close the Commands Editor dialog box (by clicking in the upper-right corner).

## □ Using the Commands Editor dialog box

**Group Label** : Text box used to enter and/or view the name given to a command group. For example, this name can suggest the type of receiver connected when this command group should be used.

**Command** : Text box used to enter and/or view each command script. Use the associated scrollbar to browse through the list of available commands.

**Label** : Text box used to enter and/or view a plain label for each command script. Use the associated scrollbar to browse through the list of available commands.

**Add command** : Adds the command viewed in the text box to the list of available commands.

**Delete command** : Removes the command viewed in the text box from the list of available commands.

**Load commands** : Opens a dialog box that allows you to choose the appropriate command group file for the connected receiver so that the command group becomes available in the main window after you close the Commands Editor dialog box.

**Save commands** : Opens a dialog box that allows you to save your own command group (as viewed in the Commands Editor dialog box) (cmd extension).

- Click  to close the Commands Editor dialog box. This loads the selected command group to the main window.

## Logging data sent by the receiver

Assuming the receiver is properly connected to the PC port:

- In the toolbar, click  or in the menu bar, select **Tools** and then **Win Comm**.
- In the window that appears, set the PC port as explained in page 4-5 in order to allow communication with the receiver.
- Press **OK**. A new window appears showing the **Win Comm** dialog box. For more information on the **Display** Pane, see page 4-16.

As shown in the right-hand part of the window, there are two different ways of logging the data, depending on the type of receiver used:

- . simple recorder
- . programmable recorder.

## □ Simple GPS recorder

All data output from the receiver's port is viewed in the main window's *Display* pane / window. The data can be recorded to the file specified in the File Name and Directory text boxes.

When the **Simple GPS Recorder** option is activated, you start and stop the recording manually, by simply clicking the **Start/Stop Recording** button.



**File Name** : This text box is used to specify the name of the file to which you wish to record the data from the receiver.

Unless a maximum size is selected for the file, you are also allowed to enter an extension into the associated box.

**File Max Size** : This option box is used to specify whether a single file should be created on the disk (**No Limits** option) or the file should be split into 0.7 MB or 1.4 MB segments (with a view to storing it to floppy disks).

If you elect to split the file into segments, then the system will automatically add 001 as extension to the name of the first segment. This will automatically be incremented for each file segment generated, if the file exceeds the **File Max Size** selected.

**Start Recording** : Clicking this button causes the data to be recorded to the specified file until you click the button again. (The label of the button changes from **Start Recording** to **Stop Recording**).

## ❑ Programmable GPS recorder

The **Programmable GPS Recorder** option allows you to prepare one or more requests for recording the data output on the connected receiver port, by specifying a start date, time and duration for each planned recording session, and also a disk file name, directory and maximum size.

You can save the recording session requests you prepare (using the **Save** button) so that you can load them back at a later date (using the **Load** button).



**Directory** : This text box is used to specify the directory to which you wish to record the data from the receiver. Clicking the button to the right opens a dialog box that allows you to navigate through the directory tree on your hard disk or a floppy disk, and select the desired destination directory.

**File Name** : This text box is used to specify the name of the file to which you wish to record the data from the receiver.

- If you choose the **Automatic File Name** option (i. e. if the option box is checked), then the **File Name** text box is dimmed and the name is automatically assigned by the system, based on the date (month, day number) and time (hour, minute) of the recording session.

Example: *12240929* for a file recorded on *December 24* at *9:29* a. m.

- If you do not select the **Automatic File Name** option, then you can enter a name of your own. Unless a maximum size is selected for the file, you are also allowed to enter an extension into the associated box.

**File Max Size** : This option box is used to specify whether a single file should be created on the disk (No Limits option) or the file should be split into 0.7 MB or 1.4 MB segments (with a view to storing it to floppy disks).

If you elect to split the file into segments, then the system will automatically add 001 as extension to the name of the first segment. This will automatically be incremented for each file segment generated, if the file exceeds the **File Max Size** selected.

**Start Date** : This text box is used to specify the day on which the recording session should begin. The current date is prompted by default.

**Start Time** : This text box is used to specify the time when the recording session should begin. The current time is prompted by default.

**Duration** : This text box is used to specify the planned duration of the recording session.

**Automatic**

**File Name** : If you choose this option (i. e. if the option box is checked), then the **File Name** text box is dimmed and the name is automatically assigned by the system, based on the date (month, day number) and time (hour, minute) of the recording session. Example: *12240929* for a file recorded on *December 24* at *9:29 a. m.*

If you do not select the **Automatic File Name** option, then you can enter a name of your own. Unless a maximum size is selected for the file, you are also allowed to enter an extension.

**Add Request** : This button saves the recording session description currently displayed and increments the number of programmed sessions that appears at the bottom of the scrollbar. (This automatically selects the **Automatic File Name** option and prompts the next possible session, considering the specified **Duration**).


**Delete Request** : This button deletes the recording session description currently displayed and decrements the number of programmed sessions that appears at the bottom of the scrollbar.

**Run Program** : This button activates the Programmable GPS Recorder mode. This causes **Win Comm** to wait for the next scheduled recording session and perform recording as planned. The label of the button changes from **Run Program** to **Stop Program**. Until the planned recording is complete or you click **Stop Program**, all other buttons in the Programmable GPS Recorder pane are inhibited and you cannot change to another mode.

- Load Program** : This button opens a dialog box that allows you to select a file (typically a .pgm file) containing descriptions of planned recording sessions (saved earlier using the **Save Program** button). Select the desired file name and click **Open**.
- Save Program** : This button opens a dialog box that allows you to save descriptions of planned recording sessions so that they can be used at a later date (using the Load Program button). Enter a name into the File Name text box and click Save.
- Print Program** : This button opens a **Print** dialog box that allows you to print the descriptions of planned recording sessions currently loaded.

## Display Pane / Window

After communication is enabled between the computer and a GPS receiver the **Display** pane allows you to view the data stream on the receiver port, including data output in response to any command generated by **Win Comm**.

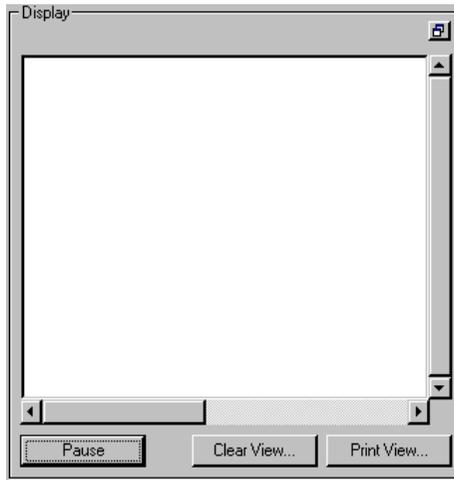

If you wish to enlarge the **Display** pane, click  in this pane (top right). This causes the pane to be transformed into a separate window which you can move/re-size using the usual commands assigned to windows in the Windows95 environment. To restore the Display pane at the initial location, click  or  (top right).

As the data may be refreshed every 0.1 seconds, it is not possible to log all that is relayed through the port so that it can be displayed at a later date, or this would require a huge memory size. For that reason, only the latest 100 data lines are stored and can be viewed using the vertical scroll bar available.

Each data line ends with a CR LF code and/or when it reaches the maximum length (90 characters).

The Display pane contains the following buttons:

**Pause** : Freezes the Display pane and changes the label of the button to Resume.

Pressing the Pause button does not suspend the data flow on the receiver port or the recording in progress.

Pressing this button again (now changed to a Resume button) will re-activate the Display pane.

**Clear View...** : Deletes any data displayed in the Display pane / window.

**Print View...** : Opens a Print dialog box that allows you to print any data displayed in the Display pane / window.

## Loading a new geoid

The Geoids module, a separate module that can be directly launched from Conf Pack, allows you to:

- import geoids
- extract data from a geoid to create a smaller file containing just the necessary data for your working area
- load partial or complete geoid models directly into a GNSS receiver.

Three geoid models are available in the Geoids module: RAF98 (France), EGM96 (Global) and GDS95 (Canada)

### Starting the Geoids module:

- On the **Conf Pack Tools** menu, select **Geoids**. This starts the **Geoids** module.

### Importing a new geoid model:

- In the **Geoids** window, select **File>Import** and indicate the location of the corresponding file.

### Opening a geoid model:

- In the **Geoids** window, select **File>Open**. This function indicates the following: geoid name, limits of geographical area, grid step, file size, number of points.

**Extracting data from a geoid model:**

- A geoid model must be open in the window
- In the **Geoids** window, select **File>Extract As...** Define the characteristics of the data extraction (name, format). To indicate the limits of your working area, you can advantageously use the World Map function, by clicking the **World Map** button, rather than type the coordinates of the N-W and S-E limits of the area.
- Click the **Extract** button to create the new file. This file is automatically opened in the **Geoids** window after being created by the module.

**Loading a geoid model into a receiver:**

- A geoid model must be open in the window (a complete or partial geoid). Establish a serial link between one of the ports on your PC and, for example, port A on the Scorpio (any RS232 port can be used on the Scorpio), using the appropriate cable.
- In the **Geoids** window, select **Transfer>Write**. A dialog box appears asking you to choose and set the serial port on your PC now connected to the Scorpio.

After setting the port, click **OK** to start and complete the file transfer.

♣

4



## 5. Complete description of the nine modules of Configuration Parameters

### Modules and sub-modules

As shown in the Select Pane, the modules and sub-modules of configuration parameters are the following:

DESCRIPTION	SCREEN
Comment	Appearance
<b>GEODETTIC SYSTEMS</b>	Preferences
Coordinate Systems	<b>NAVIGATION</b>
Current	Waypoints
Altitude	Routes
<b>PROCESS</b>	Mode
Satellites	<b>SESSIONS</b>
Reference Position	Description
Time	Sequencing
Filter	<b>DGNSS</b>
Main Mode	Beacons
Maximum DOP	Mode
Quality Control	PRCs Time Out
<b>INPUT \ OUTPUT</b>	DGNSS data
Communications	<b>WAAS \ EGNOS</b>
Formats	Mode
Computed data	Data
Pseudo Ranges	
GPS data	
Bit flow	
Event Time Mark	



## DESCRIPTION

**Comment** : Free text limited to 30 characters per line; 6 lines max; a key note for clear identification of the configuration.

Example of comment as reported in the Graphic Pane:

CONFIGURATION REQUIRED BY
RECEIVERS NOS. 412,413,414
GEOGRAPHICAL AREAS:
REF A541 & C215
OPERATORS: WILLIAM, ROGER

## GEODETTIC SYSTEMS

### □ Coordinate Systems

You can create up to 10 rows in the Editor table. Each row should contain the complete description of a coordinate system, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this coordinate system is defined

**Coord. System** : Name of the coordinate system

**Datum** : Name of the datum used

**a** : Semi-major axis of the datum used (in meters)

**1/f** : Inverse of the flattening coefficient

**k** : Scale Factor

**Dx, Dy, Dz** : X, Y, Z deviations of the datum compared with the reference ellipsoid (signed values in meters)

**Rx, Ry, Rz** : Angular deviations of the datum around the X, Y Z axes compared with the reference ellipsoid (angles in seconds)

**Proj. Kind** : Kind of projection used (Geocentric, Lat/Long, 1P-Lambert, 2P-Lambert, Stereographic, Rect-SkewOrtho or SkewOrtho, utm)

- False Easting** : Easting for projection center
- False Northing** : Northing for projection center
- Central Meridian** : Longitude of projection center
- Central or North Lat.** : Latitude of projection center or latitude of 1st parallel respectively
- Scale or Ref Lat.** : Scale factor or latitude of projection center respectively
- Skew or South Lat.** : Azimuth of initial line or latitude of 2nd parallel respectively

Example of coordinate system, as reported in the Graphic Pane:

```

Coord. System 1/1
System Name      : Txr
Datum Name      : Txr_dat
a               : 6378537.000 m
1/f            : 298.257223463
k              : 1.000000000000
DX             : 0.004 m
DY            : 0.020 m
DZ            : 0.000 m
RX            : 0.008500"
RY            : 0.000020"
RZ            : 0.000700"
Proj. Kind     : 2P-Lambert
False East     : 600000.000 m
False North    : 200000.000 m
Central Merid  : 0° 0' 0.0000"E
North Lat.    : 0° 0' 0.0000"N
Ref. Lat.     : 57°17'44.8062"N
South Lat.    : 0° 0' 0.0000"N
  
```

## □ Current

**Current Coord. System** : Name of the coordinate system which your receiver(s) will use by default.

Following the choice you make in this cell, the Graphic pane shows a sample of coordinate transformation resulting from your choice. The sample uses as input the coordinates entered in the **Variables** window (accessed by selecting **Tools>Options>Variables** tab)

## □ Altitude

**Mode** : Choose the default altitude computation mode for your receiver(s):

**WGS84 – MSL** : Altitude computed on Stanag geoid grid

**WGS84** : Altitude computed on the WGS84 ellipsoid

**Ellipsoid** : Altitude computed on user ellipsoid

**User geoid** : Altitude computed on user geoid

**Offset** : Specify the antenna height with respect to the chosen reference (in meters)

Example of Altitude as reported in the Graphic Pane:

```
H = H84 - MSL - Offset
Offset : 2.000 m
```

## PROCESS

### □ Satellites

**Minimum elevation** : By default, only the satellites above this elevation angle, seen from the current location(s) of your receiver(s), will be used in the position processing

**Deselected SVs** : PRN numbers of the satellites you do not want your receiver(s) to use (whatever their elevation angles) (Default deselection).

(from 1 to 33 for GPS satellites, from 120 to 138 for WAAS/EGNOS satellites)

### □ Reference Position

Precise coordinates of the DGPS reference station, or of the mobile receiver if KART or LRK initialization must be performed from this location.

(A single row possible in the Editor table).

**Coord. System** : Specify the coordinate system in which the reference position is expressed (choose one of the coordinate systems you have defined, or the default one)

**Input** : Type of coordinates used to express the reference position

**Latitude/Northing** : Latitude, or Easting of the reference position, depending on the coordinate system used

**Longitude/Easting** : Longitude, or Northing of the reference position, depending on the coordinate system used

**Altitude/Height** : Altitude of the reference position, depending on the coordinate system used

□ **Time**

(A single row possible in the Editor table)

**Date** : Local date

**Time** : Local time

**Time Zone** : Time zone of the operating area

Example of time setting as reported in the Graphic Pane:

November 1997

S	M	T	W	T	F	S
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30						



Time Zone : UTC

Greenwich, Dublin, Edinburgh, London, Monrovia, Casablanca



□ **Filter**

**Speed Filter Time Constant** : Default Speed Filter time constant (0.0 to 1000.0 seconds)  
(default: 6.0 seconds)

## □ Main Mode

**Process** : Position process type (this choice depends on the destination of your receiver)

**Reference Station** : Configuration file intended for a stationary receiver, associated with a reference station transmitting corrections

**Monitoring Station** : Configuration file intended for a stationary receiver, associated with a monitoring station

**GPS Natural** : Configuration file intended for a "pure" GPS receiver (i.e. not including a DGPS correction receiver)

**DGPS** : Configuration file intended for a GPS receiver capable of receiving and processing DGPS corrections

**Reserved** : (For future use)

**EDGPS** : Configuration file intended for a GPS receiver capable of receiving KART/LRK data and processing EDGPS solutions

**KART/LRK** : Configuration file intended for a GPS receiver capable of delivering a KART or LRK position solution with OTF initialization

**L1...L2** : Indicates which GPS frequencies will be processed (L1 or L1+L2) in the receiver. The only possible choice is **L1/L2** for the first 4 options of **Process** (Reference station, Monitoring station, GPS Natural, DGPS). If **Process=EDGPS** or **KART/LRK**, the possible options are:

**L1/L2** : Dual-frequency processing

**L1/L2 WL** : Wide-Lane dual-frequency processing

**L1 only** : Single-frequency processing

The type of processing performed in the receiver will depend on the GPS & DGPS data received and the type of firmware options installed in the receiver.

**System** : Allows you to select the source of positioning data (GPS + corrections data) needed for the process you have chosen in the **Process** cell (previous cell). The possible options for this cell are also deduced from the selection you have made in the previous cell.

**DGNSS Sta. or Geo. SV**

**Fix Type or Data Ref.** : Identification number(s) of the reference station(s) used (up to 4 stations) or GEO PRN, according to the selections in the Process and **System** cells (see table below).

The possible combinations of parameters are listed below:

Process	System	Corresponding source of corrections or data	L1...L2	DGNSS Sta. or Geo. SV Fix Type or Data Ref.
Reference station	GPS Nat	GPS	L1/L2	-
Monitoring station	GPS Nat	GPS	L1/L2	-
	DGPS/KART/LRK	GPS + Reference station or NMEA message	L1/L2	DGNSS station number
	WADGPS	GPS + GEO SV	L1/L2	-
GPS Nat	GPS Nat	GPS	L1/L2	-
DGPS	DGPS/KART/LRK	GPS + Reference station or NMEA message	L1/L2	DGNSS station numbers
	WADGPS	GPS + GEO SV	L1/L2	Geo SV Numbers
EDGPS or KART/LRK	DGPS/KART/LRK	GPS + Reference station or NMEA message	L1/L2, L1/L2 WL or L1 only	DGNSS station numbers



### ❑ **Maximum DOP**

**Maximum DOP** : Maximum Dilution of Position permitted (1 to 99) (future use)

### ❑ **Quality Control**

**Autonomous QC** : From the associated combo box, choose the desired option:

None  
or UKOOA

**External QC** : From the associated combo box, choose the external source of data ensuring Quality Control:

None  
or WAAS\EGNOS  
or RTCM\_SC104

**DGNSS Station**

**or GEO. SV** : Identification number of the reference station used or GEO PRN, according to the selection in the preceding cell.

## INPUT / OUTPUT

### □ Communications

You can create as many rows as necessary in the Editor table. Each row should contain the complete description of a receiver port, as defined below:

**Port** : Port name (A, B, C or D)

**Baud Rate** : Port speed (300 to 115200 Bd)

**Data Bits** : Number of data bits (7 or 8)

**Stop Bits** : Number of stop bits (1 or 2)

**Parity** : None, odd or even

### □ Formats

You can create up to 40 rows in the Editor table. Each row should contain the complete description of a format, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this format is defined

**Format** : Expression of the format.

(See **Programming instructions for the design of screens & data outputs** to learn how to write a format with the proper syntax.

## □ Computed Data

You can create up to 20 rows in the Editor table. Each row should contain the complete description of a computed-data message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this computed-data message is defined

**Port** : Receiver port on which this computed-data message will be available (A, B, C, D, P)

**Output Mode** : Event triggering the message:

**STOP** : Message inhibited (no trigger event, forces **On/Off** to OFF)

**TIME** : Message delivered at regular intervals of time (defined by **Rate** below)

**EVENT** : Message triggered by an external event

**IMMEDIATE** : Message triggered on releasing the message output (when changing the **On/Off** status to ON)

**1PPS** : Message triggered by the 1PPS output signal

**MANUAL** : Message triggered by operator

**TR** : Message triggered by the TR command sent by an external equipment through a serial port

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Rate**  
**(in 1/10 s or ticks)** : Factor (0 to 99 999) defining the output rate for this message:

In TIME output mode, the value of output rate is expressed in 100-ms units

In all other output modes, the value of output rate will result from both the occurrence of the chosen trigger event, which is variable (except for the 1-Hz fixed frequency 1PPS), and the value of **Rate**, which specifies the required count of occurrences of the chosen trigger event before a new message is delivered.

For example, in EVENT mode, with **Rate**=2, a message will be issued every two occurrences of the external event signal. In 1PPS mode, with **Rate**=10, a message will be issued every ten seconds

In MANUAL output mode, **Rate** will generally be set at 1.

**Format 1...**

**Format 10** : Numbers of 1st, 2nd, ..., 10th format in the script generating this message

## □ Pseudoranges

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a pseudorange message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this pseudorange message is defined

**Port** : Port on which this Pseudoranges message will be available (A, B, C, D, P)

**Output Mode** : Event triggering this message:

**STOP** : Message inhibited (no trigger event)

**TIME** : Message triggered at regular intervals of time defined in the **Rate** column

**EVENT** : Message triggered at every occurrence of the signal chosen from the **Rate** column

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Rate** : In TIME output mode, **Rate** is a factor defining the output rate of the message (expressed in 100-ms units)

In EVENT output mode, **Rate** is a drop-down menu from which you should choose the trigger event (EVT1 or 1PPS). In this mode, the value of output rate will simply result from the occurrence of the chosen trigger event (1 second with 1PPS).

**Format** : SBIN@r, SBIN@R, SBIN@Q, SVAR!R or SVAR!Q

**Antenna** : Main or All

**GPS C/P Filter** : GPS Code/Phase filter (0 to 600 s)

**Minimum elevation** : Minimum elevation angle setting for the satellite from which the pseudorange originates.

## □ GPS Data

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a GPS-data message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this GPS-data message is defined

**Port** : Port on which this GPS-data message will be available (A, B, C, D, P)

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Format** : S\_VAR! or S\_BIN@

**Ephemeris** : Yes if ephemeris data included in the message, otherwise No

**Almanacs** : Yes if almanac data included in the message, otherwise No

**Iono-UTC** : Yes if Iono-UTC data included in the message, otherwise No

**Health & A/S** : Yes if Health & A/S data included in the message, otherwise No

### □ Bit flow

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a bit-flow message, as defined below:

- #** : Software-set field, identifies the row in the Editor table where this bit-flow message is defined
- Port** : Port on which this bit-flow message will be available (A, B, D, P)
- On/Off** : Message type: OFF (none), SBIN@b or SVAR!B
- Rate** : Factor (1 to 15) defining the output rate of the message (0.6 to 9 seconds)  
(expressed in 0.6-second units)

## □ Event Time Mark

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a Time-Mark message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this message is defined

**Port** : Port on which this message will be available (A, B, C, D, P)

**Output mode** :

**STOP** : Message inhibited (no trigger event)

**EVT1** : Message triggered at every occurrence of the signal chosen from the **Rate** column

**1PPS** : Message triggered at regular intervals of time defined in the **Rate** column

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Rate** : Factor defining the output rate of the message (1/factor of event or 1PPS))

**Format** : Message type: S\_VAR!M or S\_BIN@M

## SCREEN

### □ Appearance

You can create up to 10 rows in the Editor table. Each row should contain the complete description of a screen, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this screen is defined.

**Format 1... Format 10** : Numbers of 1st, 2nd, 3rd,... 10th format in the script generating this screen

### □ Preferences

(A single row possible in the Editor table)

**Language** : Language used in the operator interface of receivers (French or English)

**Lat Long Format** : Specify the angle unit which Conf Pack should use: Degrees Minutes Seconds or Degrees Minutes

**Distance Unit** : Specify the distance unit which Conf Pack should use: Meters or Nautical Mile

**North** : Specify the definition of the North which Conf Pack should use: Geographic, Grid or Magnetic

## NAVIGATION

### □ Waypoints

You can create as many rows as necessary in the Editor table. Each row should contain the complete description of a waypoint, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this waypoint is defined

**Name** : Name of the waypoint

**Coord. System** : Coordinate system in which the coordinates of this waypoint are expressed. Choose one of the coordinate systems you have defined, or the default one.


**Input** : Type of coordinates used to express the reference position

**Latitude/Northing** : Latitude or Northing of the waypoint, depending on the type of coordinate system used

**Longitude/Easting** : Longitude or Easting of the waypoint, depending on the type of coordinate system used

**Altitude/Height** : Altitude of the waypoint, depending on the altitude computation mode used

Example of waypoints as reported in the Graphic Pane:

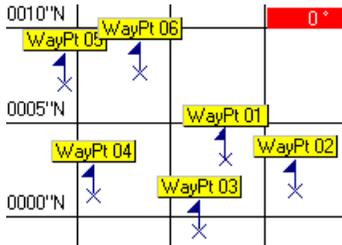

- **Alternate procedure:**

Waypoints can be defined directly from the Graphic Pane (see page 3-5)

## □ Routes


You can create as many rows as necessary in the Editor table. Each row should contain the complete description of a route, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this route is defined

**Name** : Route name

**Waypoint 01 to Waypoint 12** : Numbers of the waypoints forming the route (up to 12 waypoints)

Example of routes as reported in the Graphic Pane:

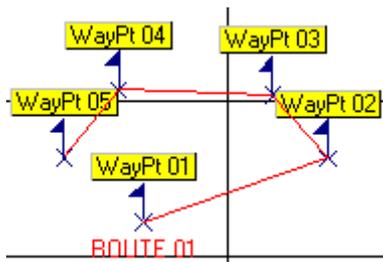

## • Alternate procedure:

Routes can be defined directly from the Graphic Pane (see page 3-5).

## □ **Mode**

(A single row possible in the Editor table)

**Working Mode** : Specify the nature of the position solution used in the navigation function. The available options are tied to the option you chose in the **Process** module, **Mode** sub-module (see page 5-8):

"(D)GPS" is the only possible option if you chose GPS Natural, DGPS or MDGPS

"(D)GPS" and "EDGPS" are the 2 options possible if you chose EDGPS

"(D)GPS", "EDGPS", "KART\_A" and "KART\_R" are the 4 options possible if you chose KART/LRK

This field, and also the whole **Mode** sub-module, is irrelevant to a station (reference or monitoring)


**Mode** : Choose the default Navigation mode (Position, Homing, Bearing or Profile) which should be used in your receiver(s)

**POSITION** : Provides basic positioning information (position, speed, course, etc.). This mode can be used when no further navigation information is required.

**HOMING** : Navigation mode based on a waypoint that you specify. This mode will provide information to help the operator reach that point along a great circle (basic positioning information also available).

Variables specific to the Homing Mode:


- CTW : Course To Waypoint
- DTW : Distance To Waypoint
- TTG : Time To Go

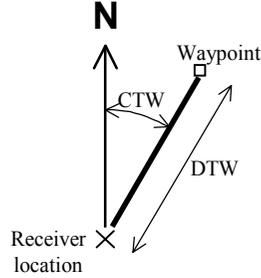

**BEARING** : Navigation mode also based on a waypoint that you specify. This mode will provide information to help the operator reach that point according to the bearing angle defined by the waypoint location and the current location when he/she selects this mode (basic positioning information also available).

Variables specific to the Bearing Mode:


- CTS : Course To Steer
- XTE : Cross Track Error
- ATD : Along Track Distance
- CTW : Course To Waypoint
- DTW : Distance To Waypoint
- TTG : Time To Go

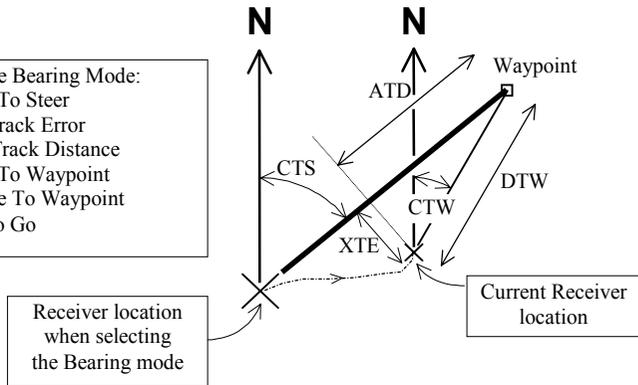

**PROFILE** : Navigation mode based on a route that you specify. This mode will provide the information required to help the operator navigate along this route (basic positioning information also available).

Route:

- 1st segment : WPTaa-WPTbb
- 2nd segment : WPTbb-WPTcc
- 3rd segment : WPTcc-WPTdd

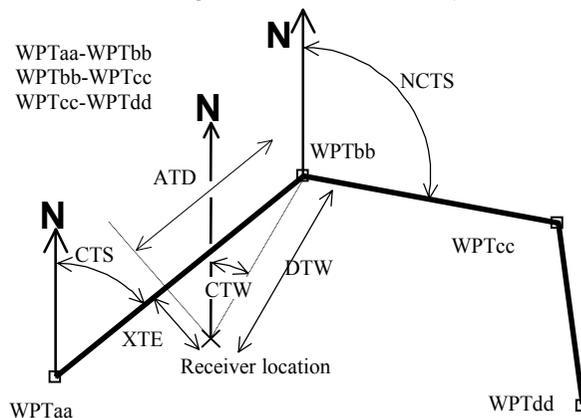

Variables specific to the Profile Mode:

CTS : Course To Steer	CTW : Course To Waypoint
NCTS : Next Course To Steer	DTW : Distance To Waypoint
XTE : Cross Track Error	ATD : Along Track Distance
TTG : Time To Go	

**Waypoint or Route** : If the Homing or Bearing mode is selected, specify the number of the target waypoint

If the Profile mode is selected, specify the route along which to navigate

**Direction** : If the Profile mode is selected, specify whether the route must be traveled Forward (from first to last waypoint) or Backward

**Bearing** : If the Bearing mode is selected, specify the Course To Steer

**Start on WPT** : If the Profile mode is selected, specify the name of the waypoint to reach first (necessarily a waypoint part of the selected route).

## SESSIONS

### □ Description

You can create up to 8 rows in the Editor table. Each row should contain the complete description of a session, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this session is defined

**Session Label** : Label assigned to the session (8 characters max.)

**Start Time** : Session start time (format: hh mm ss.s)

**Stop Time** : Session stop time (format: hh mm ss.s). The maximum duration of a session is 24 hours (i.e. when Start Time= Stop Time)

**Record** : Recording indicator:

Yes: session with recording

No: session without recording

## □ Sequencing

(A single row possible in the Editor table)

**Working Mode** : Specify the type of sequencing for the programmed sessions:

**END** : All sessions are disabled

**IMMED** : Will cause the receiver to start operating and recording data on PCMCIA (if this option is installed) as soon as it is turned on)

**ON** : Programmed sessions are run once

**CYCLE** : Programmed sessions will be repeated, if this may happen (i.e. the receiver is maintained in that working mode for a sufficient time)

**Power Mode** : Specify the control mode of the power supply:

**AUTPW** : Automatic control. The receiver will operate according to the sessions programmed. If no session is programmed, the receiver will automatically turn off at the end of 30 seconds of operation

**MANPW** : Manual control. The operator has full control of the receiver: she/he will be able to freely turn it off and on outside work sessions.

**Session 1...**

**Session 8** : Give the order in which sessions should be run (8 cells: up to 8 sessions possible).

In each cell, choose a session number from the drop-down menu listing all the existing sessions, as defined in SESSIONS, Description.

A session number can be specified in several cells (in which case running all the sessions will necessarily two (or more) days.

## DGNSS

### □ Beacons

You can create up to 20 rows in the Editor table. Each row should contain the complete description of a beacon, as defined below:

**Beacon ID** : Identification number of the beacon

**Name** : Beacon name

**Lat** : Beacon latitude

**Long** : Beacon longitude

**Band. 1** : Transmission band used

**Freq. 1 (Hz)** : Carrier frequency

**Band. 2** : For future use

**Freq. 2 (Hz)** : For future use

**Range (km)** : Estimated beacon range


**Baud Rate** : Data Transmission baud rate

**Modulation** : DQPSK (D) or GMSK (G)

**Encryption** : Yes (corrections encrypted) or No (corrections in plain)

**C3 code** : C3 encryption code, provided by the beacon's owner. You may not type C3 at this stage, but when later the receiver user wishes to work with that beacon, the receiver will request that code (6 figures).

Example of beacon as reported in the Graphic Pane

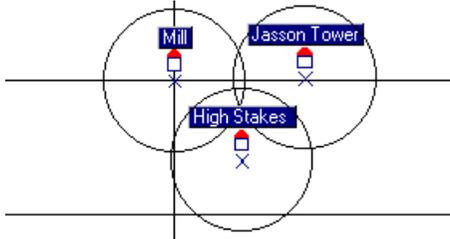

- **Other procedure:**

Beacons can be defined directly from the Graphic Pane (see page 3-14).

## □ Mode

You can create up to 3 rows in the Editor table.

In each row, you define the receiver either as a corrections generator (a reference station) or a corrections receiver (a user receiver). You can define only a single reference station and two corrections receivers max.

**#** : Software-set field, identifies the row in the Editor table where this reference station is defined

**Port** : A, B, C or D

**Mode** : Reference station (XMTR) or corrections receiver (RCVR)

**Beacon ID** : Identification of the beacon connected to the reference station (if a reference station) or from which corrections are received (if a user receiver)

**Period (XMTR)** : Data transmission rate (if a reference station)

**Slot (XMTR)** : Number of the slot during which corrections are received from the specified beacon (if a user receiver)

**Station ID (RCVR)** : Number of the reference station connected to the specified beacon

**Station ID (RCVR)** : Number of the reference station connected to the specified beacon (if there is a second one)

**Station ID (RCVR)** : Number of the reference station connected to the specified beacon (if there is a third one)

**Station ID (RCVR)** : Number of the reference station connected to the specified beacon (if there is a fourth one).

You can only enter 4 different station ID's over the possible three rows of the Editor table.

#### □ PRCs Time Out

**PRC Time Out** : Maximum age of corrections (1.0 to 100.0 seconds)

#### □ DGNSS data

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a DGNSS-data message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this DGNSS-data message is defined

**Port** : Port on which this DGNSS-data message will be available (A, B, C, D, P)

**Output Mode** : Event triggering this message:

**STOP** : Message inhibited (no trigger event)

**TIME** : Message triggered at regular intervals of time defined in the **Rate** column

**EVENT** : Message triggered at every occurrence of the signal chosen from the **Rate** column

**IMMEDIATE** : Message triggered on releasing the message output (when changing the **On/Off** status to ON).

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Rate** : In TIME output mode, **Rate** is a factor defining the output rate of the message (expressed in 100-ms units).

In EVENT output mode, **Rate** is a drop-down menu from which you should choose the trigger event (EVT1 or 1PPS). In this mode, the value of output rate will simply result from the occurrence of the chosen trigger event (1 second with 1PPS).

In IMMEDIATE output mode, **Rate** is irrelevant

**Format** : Type of DGPS data contained in the message:

**RTCM\_SC104** : RTCM SC104-formatted data

**LRK\_UHF** : DSNP-formatted data transmitted in the UHF band to operate in LRK

**DSNP\_UHF** : DSNP-formatted data, transmitted in the UHF band, allowing operation in KART mode

**SVAR!ID** : Non-configurable GPS data in ASCII format with field delimiters

**USERS\_DATA** : Data transmitted in a user format

**Station Type** : Type of the station generating the DGPS corrections contained in the message:

**ALL** : Any type

**UHF** : Station transmitting in the UHF band

**HF** : Station transmitting in the HF band

**MF** : Station transmitting in the MF band

**RTCM numeric** : Station transmitting data in the RTCM format

**Message**

**Number** : Number of the corrections sentence, from the selected type of station, chosen to be part of the message (excluding the others) (for RTCM-SC104 and KART formats only).

5

## WAAS \ EGNOS

### □ Mode

(A single row possible in the Editor table)

**Selection mode** : Choose the type of integrity control you want to implement using the WAAS \ EGNOS:

**OFF:** none

**Auto:** the receiver will automatically find the GEO with which to work

**Manual:** the receiver will only work with the specified GEO (s) (see below)

**First selected SV** : If **Manual** selected (see first cell), enter the PRN of the GEO to be used first for the integrity control and WADGPS

**Second selected SV** : If **Manual** selected (see first cell), enter the PRN of the GEO to be used for the integrity control and WADGPS if the 1st one is not (or is no longer) available.

□ **Data**

You can create up to 2 rows in the Editor table. Each row should contain the complete description of a data message, as defined below:

**#** : Software-set field, identifies the row in the Editor table where this GPS-data message is defined

**Port** : Port on which this data message will be available (A, B, C, D, P)

**On/Off** : Default message status when turning on the receiver (ON or OFF)

**Format** : S\_VAR!W or S\_BIN@W

♣



## 6. Programming Instructions for the design of screens and data outputs

### Terminology

- Element* : Basically, a piece of information whose *result* should be seen on the receiver screen or inserted into an output message. This can be text, the name of a *variable* or the expression of a mathematical operation on one or more *variables*, etc.
- Format* : A character string consisting of an *element* and *notation* instructions applying to this *element*.
- Macro* : A ready-to-use *script*, simply invoked by a three-letter name, and from which the receiver can generate a standard NMEA0183 output message.
- Notation* : Refers to how an *element* should be presented in a screen or output message: maximum length permitted, number of decimal places, etc.
- Result* : A character string (numeric or alphanumeric) generated by the receiver, computed from what is contained in a *format* (i.e. *element+notation*). This can be text, the current value of a *variable* or the result of a mathematical operation on one or more *variables*, etc.
- Script* : A series of *formats* from which a receiver can generate a complete screen or output message.
- Variable* : Any numeric or alphanumeric data handled by a receiver.

## Creating formats

### □ General expression

The general expression of a format is: **E:n:d**

where:

- **E** identifies the element contained in the format. **E** may be of different forms:
  - . A character string (text)  
between single quotation marks: e.g.: **'Latitude'**
  - . A single variable:  
or a macro: e.g.: **L84**  
e.g.: **GGA**
  - . A combination of variables,  
operators and numerals: e.g.: **SEXAM(LAT)**  
e.g.: **INT(DRMS)/2**
  
- In general, **n** and **d** are two numerals defining the **notation** of the format. When **E** stands for a macro, **n** and **d** have a different meaning (see page 6-14)

The “:” symbol is used as a separator between **E**, **n** and **d**.

## □ Possible notations

### Fixed notation: $n > d$

In this notation:

- **n** is the total number of characters, including the decimal point, used to display the result ( $n \leq 20$ )
- **d** is the number of characters reserved for the fractional part of the result (**n** includes **d**)

### Free notation: $n \leq d$

In this notation:

- **n** is irrelevant
- **d** is the number of characters reserved for the fractional part of the result
- The result is presented with the number of characters needed, provided it is less than 20.

### Particular cases:

n and d not specified


- Default values are then used for **n** and **d**. With most operators,  $n = d = 0$ , which means that the free notation is used, with no fractional part since  $d = 0$ .
- For some operators (HMS, LATM, LONM, SEXAM, SEXAS), the default value for **d** is "0", unlike **n** as the size of the result is generally known and **n** is adapted to the size.

n specified, d not specified

- The default value  $d = 0$  is chosen. The fixed notation is therefore used with no fractional part since  $d = 0$ .

## □ Numerals

General form:

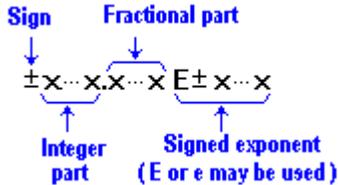

Examples:

**-451**  
**17.58**  
**-2.e-51 (=  $-2 \times 10^{-51}$ )**  
**173.8E3 (=  $173.8 \times 10^3$ )**

All operations with numerals are processed with double precision.

## □ Leading spaces

All values are pushed to the right with leading spaces ahead of the value if the data field is larger than required. There are three exceptions, however:

- TXT pushes characters to the left (trailing spaces)
- ZERO pushes to the right, and adds leading zeros
- HEXA pushes to the right and adds leading spaces.

## □ Control characters

**Comma :** delimiter between any two adjacent parameters  
e.g.: `CHR(3),CHR(10)`

**Quotation marks :** used to replicate the character string specified in between.

e.g.: `'Longitude'` or `'User"s'`

When present in text, the apostrophe character must be doubled to appear in the result, as shown in the second example above (resulting text: `User's)`

**Colon :** used in the data formatting syntax  
e.g.: `COS(BR):5:3`

**Parentheses :** used to bound an operation within an expression. 6 parenthesis levels are possible.  
e.g.: `HEXA(INT(GDOP*100)+300):4`

**Square brackets :** used in indexed variables (indexes from 1 to n according to variable type)  
e.g.: `CSV[5]`

**Braces :** used by IF operator

**Dot :** Decimal point

## □ Overflow condition

Any overflow will result in the following type of value: `*999 . . .9`. Depending on the chosen notation (fixed or free), the number of 9's may vary and the decimal point may be present or not.

## Operators

### □ Operators list

- + Addition
- Subtraction
- \* Multiplication
- / Division
- = Assigns a variable to UV[n]
- ABS(x):n:d** Absolute value of the x variable
- ARCTAN(x):n:d** Arctangent of the x variable
- CAN:x** Provides satellite status data for the specified channel number (**x**) and for the next three ones
- CHR(x)** Returns the ASCII character whose code is x
- CHK:e:f** Computes the complement parity from the **e**th character up to the **f**th character
- COS(x):n:d** Cosine of the x variable
- CRC:e:f** Computes parity from the **e**th character up to the **f**th character
- DAT(x):m:c** Returns the date with m characters in a format depending on c
- DEG(x):n:d** Converts the x variable from radians to degrees
- FRACT(x):n:d** Fractional part of the x variable
- HEXA(x):m** Returns the x variable in hexadecimal notation with m characters
- HMS(x):n:d** Converts the x variable from seconds to hours, minutes, seconds
- INT(x):n:d** Returns the integer part of the x variable

- KMH(x):n:d** Converts the x variable from m/s to km/hr
- IF(x\$y){f1}{f2}** Returns f1 or f2 depending on whether the x\$y relation is true or not
- KN(x):n:d** Converts the x variable from m/s to knots
- LATM(x):n:d** Converts latitude x from radians to degrees, minutes, direction
- LN(x):n:d** Natural logarithm of the x variable
- LOG(x):n:d** Common logarithm of the x variable
- LONM(x):n:d** Converts longitude x from radians to degrees, minutes, direction
- NM(x):n:d** Converts the x variable from meters to nautical miles
- SEXAM(x):n:d** Converts the x variable to sexagesimal value (degrees or hours, minutes)
- SEXAS(x):n:d** Converts the x variable to sexagesimal value (degrees or hours, minutes, seconds)
- SIGN(x):p:q** Returns p or q (ASCII characters), depending on the sign of the x variable
- SIN(x):n:d** Sine of the x variable
- SQRT(x):n:d** Square root of the x variable
- TXT:x:n** Returns the text associated with the x variable, with n characters
- ZERO(x:n:d)** Puts leading zeros ahead of x (x: variable or expression)

For all operators using n and d, the format notation complies with the information provided in the fixed/free notation paragraph.

## □ More about some the available operators

### CAN:

Delivers four lines of status data:

- the first line contains satellite status data corresponding to the specified reception channel (x),
- the 2nd, 3rd and 4th lines contain the status data corresponding respectively to reception channels x+1, x+2 and x+3 (if any)

Each line generated by this operator is formatted as follows:

CAN,<x>,<SV>,<elevation>,<azimuth>,<SVorbit>,<status>,<S/N>,<CR><LF>

where:

x : channel number, as specified by operator

SV : PRN number of the SV being processed on that channel

Elevation : Satellite elevation (0.. 90°)

Azimuth : Satellite azimuth (0.. 360°)

SV orbit : Satellite orbit : Ascending (1) or descending (0)  
(Ascending=negative Doppler; descending=positive Doppler)

Status : Channel status:

- 0**: No satellite received (unused channel)
- 1**: Satellite received (SV received & used)
- 2**: Satellite received so far on that channel has been lost
- 3**: Satellite usable (SV received, ephemeris available)
- 4**: Same as **3** + SV involved in PVT processing (PVT=Position Velocity Time)
- 5**: Specified SV being tracked
- 6**: SV received on that channel intentionally rejected
- 7**: SV rejected by WAAS integrity test

S/N : Signal/Noise ratio, in dB

Any unavailable data will be denoted by the 3 symbols "\*\*\*\*" in the corresponding field.

As the data block generated by the CAN operator is about 100 characters in size, and the maximum length of a computed-data message is 255 characters, you should do the following to output the status data of 16 channels:

- From the Formats sub-module of Conf Pack, define two formats as follows:

Format #1:

**CAN:1,CAN:5**

(will generate status data for channels. 1 to 8)

Format #2:

**CAN:9,CAN:13**

(will generate status data for channels. 9 to 16)

- From the **Computed Data** sub-module of Conf Pack, define two messages as follows:

**<port>,<output mode>,<On/Off>,<rate>,1**

**<port>,<output mode>,<On/Off>,<rate>,2**

**CHK:**

Same as CRC except that CHK provides the complement of the parity processing.

**CRC:**

Computes the parity on all characters from the *eth* to the *ft* characters in the message. The result is a hexadecimal value expressed with two characters, transmitted along with the message

**DAT:**

If  $c=1$ , then dd/mm/yyyy

$c=2$ , then yyyy/mm/dd

$c=3$ , then dd,mm,yyyy

The result occupies 9 or 10 characters, depending on day (1 or 2 characters). A date with 10 characters will not be truncated if  $m=9$

If  $m$  and  $c$  are not specified, default values are used ( $m=10$  and  $c=1$ )

**HEXA:**

If  $m$  is not specified, then  $m=1$

Leading spaces are added ahead of the result if too many characters have been reserved

Overflow condition not reported with this operator

**IF:**

\$ can be one of the following six relation operators:

<  
>  
≥  
≤  
=  
<>

f1 and f2 are formats each bound by braces.

Example: **IF(SOG<20){KN(SM):5:1}{'\$.\$.}'**

**SIGN:**

If  $x \geq 0$ , then the result is p

If  $x < 0$ , then the result is q

If p and q are not specified, the following notation is used:

p = {space}  
q = {hyphen}

**TXT:**

The following variables can be combined with this operator, thus issuing the following character strings (within quotation marks below) depending on context:

Variables	Output strings
DATM	"WGS84", "<Datum Name>"
DFT	". GPS.", "DGPS1", "DGPS2", "DGPS3", "DGPS4", "MDGPS", "EDGPS", "KINEA", "KINER", "GNOS", "WDGPS"
DS	"DIFF", "NAT", "HOLD"
FIXS	"GOOD", "BAD"
INTEGAP	"YES", "NO"
MODE	"H", "DR", "T", "2", "2T", "3", "3T"
NSVU	Lists all the SVs used (e.g. 3, 5, 12, 17, 24, 27)
SA	"ON", "OFF"
SALARM	see page 6-44
ULA to ULD	"<Port A label>",... to "<Port D label>"

**ZERO:**

Inserts zeros ahead of the x variable if there is room, with n and d defining the notation of the variable (or expression). There are no default values for n and d, as the function is irrelevant unless n and d are specified.

## Macros

### □ Macros list

<b>ALM</b> :n:d	GPS almanac data
<b>BEC</b> :n:d	Bearing and Distance to Waypoint (DR) (*)
<b>BOC</b> :n:d	Bearing and Origin to Destination (*)
<b>BWC</b> :n:d	Bearing and Distance to Waypoint (*)
<b>DTM</b> :n:d	Datum Reference
<b>GBS</b> :n:d	GPS Satellite Fault Detection (*)
<b>GGA</b> :n:d	GPS Fix Data
<b>GLL</b> :n:d	Lat-Long Geographic Position
<b>GRS</b> :n:d	GPS Range Residual
<b>GSA</b> :n:d	GPS DOP and Active Satellite
<b>GST</b> :n:d	GPS Pseudorange Noise Statistics
<b>GSV</b> :n:d	GPS Satellites in View
<b>HDT</b> :n:d	Heading, True (*)
<b>RMB</b> :n:d	Recommended Minimum Navigation Information (*)
<b>RMC</b> :n:d	Recommended Minimum Specific GPS Data
<b>TTL</b> :n:d	Target Latitude and Longitude (*)
<b>VTG</b> :n:d	Course Over Ground and Ground Speed
<b>WCV</b> :n:d	Waypoint Closure Velocity (*)
<b>WNC</b> :n:d	Distance to Waypoint (*)
<b>WPL</b> :n:d	Waypoint Location (*)
<b>XTE</b> :n:d	Cross Track Error, Measured (*)
<b>XTR</b> :n:d	Cross Track Error, Dead-Reckoning (*)
<b>ZDA</b> :n:d	Time & Date
<b>ZDL</b> :n:d	Time and Distance to Variable Point (*)
<b>ZFO</b> :n:d	UTC and Time from Origin Waypoint (*)
<b>ZTG</b> :n:d	Origin and Time to Destination Waypoint (*)

(\* : Available at a later date)

## □ Syntax

All macros are in the form:

<b>XXX:n:d</b>
----------------

where:

**XXX** Macro name (3 letters)

- n** Basically, **n** defines the number of decimal places for values of angles expressed in minutes (see detail in each macro). Indirectly, **n** also controls the number of decimal places for values of distances expressed in meters (number of decimal places =  $n - 3$  for  $n > 3$ ) and for values of speed expressed in meters/second (number of decimal places =  $n - 4$  for  $n > 4$ ). If omitted, **n** is assumed to be 0 (except in GSA and ZDA where it is equal to 2).

Although **n** has no function in some macros it must be present when the checksum has to be placed at the end of the output string. With such macros, any value can be used for **n**.

- d** Checksum code:

**d** = 0 → no checksum at the end of the output string

**d** = 1 → checksum added at the end of the output string

If omitted, **d** is assumed to be 0.

**Use precautions:**

Several macros can be chained to form a message. Remember however that the generated message should not exceed 511 characters in length.

**Examples:**

**GGA:2:1** Global Positioning System Fix Data, 2 decimal places for variables expressed in minutes; checksum provided.

**ALM:1** First 5 almanacs; no checksum

□ **ALM:n:d**

The output string is in the form:

```
$GPALM,x.x,x.x,xx,x.x,hh,hhh,hh,hhh,hhh,hhhhh,hhhhh,hhhhh,
hhhhh,hhh,hh*hh<cr><lf>
```

- \$GPALM** : NMEA0183 message identifier
- x.x** : Total number of messages
- x.x** : Message number
- xx** : Satellite PRN number 01..32
- x.x** : GPS week number
- hh** : SV health
- hhh** : e, eccentricity
- hh** :  $t_{\text{og}}$ , almanac reference time



<b>hhhh</b>	:	(sigma), inclination angle
<b>hhhh</b>	:	OMEGADOT, Rate of right ascension
<b>hhhhhh</b>	:	Root (A), root of semi major axis
<b>hhhhhh</b>	:	$\Omega$ , argument of perigee
<b>hhhhhh</b>	:	$\Omega_0$ , longitude of ascension node
<b>hhhhhh</b>	:	$M_0$ , mean anomaly
<b>hhh</b>	:	$af_0$ , clock parameter
<b>hhh</b>	:	$af_1$ , clock parameter
<b>*hh</b>	:	Checksum, if requested ( <b>d=1</b> )

#### Output String Example:

```

SGPALM,27,1,01,982,00,21CB,7B,08E0,FD40,A10D57,BAEB05,435714,
BD2E73,00C,080
SGPALM,27,2,02,982,00,9603,7B,FCEB,FD4A,A10CE9,A4C0D6,957F28,
04E8E1,FF6,B7F
SGPALM,27,3,03,982,00,0B52,7B,0368,FD21,A10D06,60E6B4,C18F80,7
7A2A7,02D,080
SGPALM,27,4,04,982,00,2752,7B,16D8,FD43,A10CFD,DFD64E,EDD6E1
,659931,19E,190
SGPALM,27,5,05,982,00,0B1C,7B,FED2,FD4B,A10E1E,F40F7A,963923,
6EE9AB,00F,160

```

**Comments:**

You cannot output all the almanacs through a single macro, due to the size of the formatter buffer which is limited to 512 characters. Instead, define a value for **n** to tell the formatter which group of almanacs must be output through the macro (the output string then consists of about 400 characters).

**ALM :1** initializes the acquisition of all the almanacs and outputs the first 5 almanacs (or the existing 1 to 5 ones)

**ALM :1** *must be run* before running any macro of the type ALM :n (where n=2..7)

**ALM :2** outputs 6th to 10th almanacs for SVs 6 to 10 (if any)

**ALM :3** outputs 11th to 15th almanacs (if any)

**ALM :4** outputs 16th to 20th almanacs (if any)

**ALM :5** outputs 21st to 25th almanacs (if any)

**ALM :6** outputs 26th to 30th almanacs (if any)

**ALM :7** outputs 31st and 32nd almanacs (if any)

□ **DTM:n:d**

The output string is in the form:

**\$GPDTM,ccc,,x.x,a,x.x,a,x.x,ccc\*hh**<cr><lf>

<b>\$GPDTM</b>	:	NMEA0183 message identifier
<b>ccc</b>	:	Local datum code : WGS84 = <b>W84</b> , User defined = <b>999</b>
<b>x.x,a</b>	:	Latitude offset, in minutes (number of decimal places controlled by <b>n</b> ), N/S
<b>x.x,a</b>	:	Longitude offset, in minutes (number of decimal places controlled by <b>n</b> ), E/W
<b>x.x</b>	:	Altitude offset, in meters (number of decimal places= <b>n-3</b> if <b>n&gt;3</b> )
<b>ccc</b>	:	Reference datum code : WGS84 = <b>W84</b>
<b>*hh</b>	:	Checksum, if requested ( <b>d=1</b> )

**Output String Example:**

\$GPDTM,W84,,0.000,N,0.000,E,0,W84\*71

□ **GGA:n:d**

The output string is in the form:

**\$GPGGA,hhmmss.ss,llll.llll,a,yyyy.yyyyy,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxx  
x\*hh<cr><lf>**

Field type	Variable	Field Designation
<b>\$GPGGA</b>	<b>:</b>	<b>:</b> NMEA0183 message identifier
<b>hhmmss.ss</b>	<b>: TUTC</b>	<b>:</b> UTC time of position computation (2 decimal places)
<b>llll.l ,a</b>	<b>: LAT</b>	<b>:</b> Latitude in degrees (2 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), N/S indicator
<b>yyyyy.y,a</b>	<b>: LON</b>	<b>:</b> Longitude degrees (3 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), E/W indicator
<b>x</b>	<b>: DS</b>	<b>:</b> GPS quality figure : 0 : fix not available, or invalid 1 : straight GPS fix 2 : Differential GPS fix 4 : Real Time Kinematic (KINE A, KINE R, LRK or LRKW) 5 : Real Time Kinematic (EDGPS, KART or LRK initialization) 6 : Estimated (dead reckoning) mode

<b>xx</b>	<b>: NSVU</b>	: Number of SVs used to compute the fix
<b>x.x</b>	<b>: HDOP</b>	: Horizontal Dilution of Precision (-1 if not computed)
<b>x.x,M</b>	<b>: HP</b>	: Antenna altitude above MSL, in meters (if MSL $\neq 0$ ) (number of decimal places= $n-3$ if $n > 3$ , otherwise ( $n < 3$ ) no decimal places). If MSL = 0, ZP is the altitude above the WGS84
<b>x.x,M</b>	<b>: MSL</b>	: Geoidal separation (between ellipsoid and Mean Sea Level) (number of decimal places= $n-3$ if $n > 3$ , otherwise ( $n < 3$ ) no decimal places)
<b>x.x</b>	<b>: DAGE</b>	: Age of Differential corrections, on average (null field if DGPS not used) (number of decimal places controlled by $n$ )
<b>xxxx</b>	<b>: DSTA</b>	: Identification of reference station used (null field if not used).
<b>*hh</b>		: Checksum, if requested ( $d=1$ )

**Example:**

```

$GPGGA,192348.99,4716.10435,N,00129.45430,W,4,09,1.1,93.83,M,0.00,
M,2.0,0055*5C
$GPGGA,192349.99,4716.10435,N,00129.45430,W,4,09,1.1,93.79,M,0.00,
M,3.0,0055*5D
$GPGGA,192350.99,4716.10435,N,00129.45430,W,4,09,1.1,93.78,M,0.00,
M,2.0,0055*51

```

□ **GLL:n:d**

The output string is in the form:

```
$GPGLL,lll.l,a,yyyyy.y,a,hhmmss.ss,A,a *hh<cr><lf>
```

Field type	Variable	Field Designation
<b>\$GPGLL</b>		: NMEA0183 message identifier
<b>lll.l,a</b>	: <b>LAT</b>	: Latitude in degrees (2 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), N/S indicator
<b>yyyyy.y,a</b>	: <b>LON</b>	: Longitude in degrees (3 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), E/W indicator
<b>hhmmss.ss</b>	: <b>TUTC</b>	: UTC time of position computation (2 decimal places)
<b>A</b>	: <b>FIXS</b>	: GPS quality figure V = Fix not available, or invalid A = GPS fix available



- a** : Mode indicator:  
A = Autonomous mode  
D = Differential mode  
E = Estimated (dead reckoning) mode  
N = Data not valid
- \*hh** : Checksum, if requested (**d=1**)

**Example:**

```
$GPGLL,4716.10435,N,00129.45430,W,192531.99,A,D*70  
$GPGLL,4716.10435,N,00129.45430,W,192532.99,A,D*71  
$GPGLL,4716.10435,N,00129.45430,W,192533.99,A,D*7E
```

□ **GRS:n:d**

The output string is in the form:

```
$GPGRS,hhmmss.ss,1,x.xx,x.xx,x.xx,x.x,,,,,,,,,*hh <cr><lf>
```

Field type	Variable	Field Designation
<b>\$GPGRS</b>		: NMEA0183 message identifier
<b>hhmmss.ss</b>	: <b>TUTC</b>	: UTC time (2 decimal places)
<b>1</b>		: This "1" means that residuals were re-computed after the GGA GNS position was computed
<b>x.x</b>	: <b>CRE[ i ]</b>	: Range residuals in meters for satellites used in the navigation solution (null for unused field) (number of decimal places controlled by <b>n</b> ),
<b>*hh</b>		: Checksum, if requested ( <b>d=1</b> )

**Example:**

```
$GPGRS,143322.99,1,10.34,,3.40,0.12,-24.49,-0.91,-6.47,6.90,,27.81,-16.70,,,,*46
$GPGRS,143323.99,1,10.56,,3.46,0.11,-24.81,-0.77,-6.55,7.01,,28.03,-16.82,,,,*42
$GPGRS,143324.99,1,10.71,,3.44,0.09,-25.23,-0.49,-6.72,7.08,,28.12,-16.92,,,,*4C
```



### □ GSA:n:d

The output string is in the form:

```
$GPGSA,A,x,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx,,,,,
x.x,x.x,x.x*hh <cr><lf>
```

Field type	Variable	Field Designation
\$GPGSA		: NMEA0183 message identifier
A		: 2D/3D automatic switching mode
x	: <b>MODE</b>	: Fix mode 1 = invalid fix 2 = 2D mode 3 = 3D mode
xx, ..., xx	: <b>NSVU</b>	: PRN of SVs used in the solution (use <b>n=3</b> to issue a 3-figure PRN; if omitted, <b>n=2</b> )
x.x	: <b>PDOP</b>	: Position DOP (-1.0 if not computed)
x.x	: <b>HDOP</b>	: Horizontal DOP (-1.0 if not computed)
x.x	: <b>VDOP</b>	: Vertical DOP (-1.0 if not computed)
*hh		: Checksum, if requested ( <b>d=1</b> )

#### Example:

```
$GPGSA,A,3,24,18,25,07,15,19,16,,04,14,,,,,,,,,2.0,1.1,-1.0*19
```

```
$GPGSA,A,3,24,18,25,07,15,19,16,,04,14,,,,,,,,,2.0,1.1,-1.0*19
```

□ **GST:n:d**

The output string is in the form:

**\$GPGST,hhmmss.ss,,,,,x.xx,x.x,x.x\*hh** <cr><lf>

Field type	Variable	Field Designation
<b>\$GPGST</b>		: NMEA0183 message identifier
<b>hhmmss.ss</b>	: <b>TUTC</b>	: UTC time (2 decimal places)
<b>,,,,</b>		: Null fields
<b>x.x</b>	: <b>NPSD</b>	: Standard deviation of latitude error (meters) (number of decimal places controlled by <b>n</b> )
<b>x.x</b>	: <b>EPSD</b>	: Standard deviation of longitude error (meters) (number of decimal places controlled by <b>n</b> )
<b>x.x</b>	: <b>HPSD</b>	: Standard deviation of altitude error (meters) (number of decimal places controlled by <b>n</b> )
<b>*hh</b>		: Checksum, if requested ( <b>d=1</b> )

**Example:**

```
$GPGST,080154.99,,,,,0.02,0.02,0.03*6C
$GPGST,080155.99,,,,,0.02,0.02,0.04*6A
$GPGST,080156.99,,,,,0.02,0.02,0.03*6E
$GPGST,080157.99,,,,,0.02,0.02,0.04*68
```

### □ **GSV:n:d**

The output string is in the form:

```
$GPGSV,x,x,xx,xx,xx,xxx,xx.....,xx,xx,xxx,xx*hh
<cr><lf>
```

Field type	Variable	Field Designation
<b>\$GPGSV</b>		: NMEA0183 message identifier
<b>x</b>		: Total number of messages
<b>x</b>		: Message number
<b>xx</b>	: <b>NSVR</b>	: Total number of satellites in view
<b>xx</b>	: <b>CSV[ i ]</b>	: Satellite ID number
<b>xx</b>	: <b>CEL[ i ]</b>	: Elevation, in degrees (90 max.)
<b>xxx</b>	: <b>CAZ[ i ]</b>	: Azimuth, in degrees, True (0 to 359)
<b>xx</b>	: <b>CSB[ i ]</b>	: SNR (C/No) (00 to 99 dB-Hz)
<b>*hh</b>		: Checksum, if requested (d=1)

The last four parameters are provided for each satellite in view. Depending on the number of satellites in view, the message can occupy up to 3 lines.

#### **Example:**

```
$GPGSV,3,1,10,24,13,313,41,18,61,206,50,25,07,031,38,07,29,234,43*72
$GPGSV,3,2,10,15,08,136,41,19,09,168,39,16,78,020,50,13,03,222,37*78
$GPGSV,3,3,10,04,53,303,49,14,41,077,47*74
```

□ **RMC:n:d**

The output string is in the form:

```
$GPRMC, hhmss.ss,a,lll.l,a,yyyyy.y,a,  
x.x,x.x,xxxxxx,,a*hh <cr><lf>
```

Field type	Variable	Field Designation
<b>\$GPRMC</b>		: NMEA0183 message identifier
<b>hhmss.ss</b>	: <b>TUTC</b>	: UTC time (2 decimal places)
<b>a</b>	: <b>FIXS</b>	: GPS quality figure V = Fix not available, or invalid A = GPS fix available
<b>lll.l,a</b>	: <b>LAT</b>	: Latitude in degrees (2 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), N/S indicator
<b>yyyyy.y,a</b>	: <b>LON</b>	: Longitude in degrees (3 char.), minutes (2 char.), fraction of a minute (number of decimal places controlled by <b>n</b> ), E/W indicator
<b>x.x</b>	: <b>SOG</b>	: Speed Over Ground (knots) (number of decimal places= <b>n</b> -4 if <b>n</b> >4, otherwise ( <b>n</b> <4) no decimal places)
<b>x.x</b>	: <b>COG</b>	: Course Over Ground (in degrees)



**xxxxxx** : Date (ddmmyy)  
**a** : Mode indicator:  
A = Autonomous mode  
D = Differential mode  
E = Estimated (dead reckoning) mode  
N = Data not valid  
**\*hh** : Checksum, if requested (**d=1**)

**Example:**

```
$GPRMC,193612.99,A,4716.10435,N,00129.45430,W,0.0,0.0,041198,,D*  
64  
$GPRMC,193613.99,A,4716.10435,N,00129.45430,W,0.0,0.0,041198,,D*  
65  
$GPRMC,193614.99,A,4716.10435,N,00129.45430,W,0.0,0.0,041198,,D*  
61
```

□ **VTG:n:d**

The output string is in the form:

**\$GPVTG,x.x,T,x.x,N,x.x,K,a\*hh<cr><lf>**

Field type	Variable	Field Designation
<b>\$GPVTG</b>		: NMEA0183 message identifier
<b>x.x,T</b>	: <b>COG</b>	: Course Over Ground (in degrees)
<b>x.x,N</b>	: <b>SOG</b>	: Speed Over Ground (in knots) (number of decimal places controlled by <b>n</b> )
<b>x.x,K</b>	: <b>SOG</b>	: Speed Over Ground (in km/hr) (number of decimal places controlled by <b>n</b> )
<b>a</b>		: Mode indicator: <div style="margin-left: 20px;">                     A = Autonomous mode                      D = Differential mode                      E = Estimated (dead reckoning) mode                      N = Data not valid                 </div>
<b>*hh</b>		: Checksum, if requested ( <b>d=1</b> )

**Example:**

```
$GPVTG,120.4,T,,,5.74,N,10.63,K,D*45
$GPVTG,119.1,T,,,5.81,N,10.76,K,D*4E
```

□ **ZDA:n:d**

The output string is in the form:

**\$GPZDA,hhmmss.ss,xx,xx,xxxx,xx,xx\*hh**<cr><lf>

Field type	Variable (ConfPack)	Field Designation
<b>\$GPZDA</b>		NMEA0183 message identifier
<b>hhmmss.s</b>	: <b>TUTC</b>	: UTC time (number of decimal places controlled by <b>n</b> )
<b>xx,xx,xxxx</b>	: <b>DUTC</b>	: UTC date (day, month, year)
<b>xx</b>		: Local zone hours (00 to ± 13 hr)
<b>xx</b>		: Local zone minutes (00 to + 59)
<b>*hh</b>		: Checksum, if requested ( <b>d=1</b> )

**Example:**

\$GPZDA,075448.99,04,11,1998,+00,00\*4A

\$GPZDA,075449.99,04,11,1998,+00,00\*4B

## Variables

### □ Time Data

<b>DP</b>	Local Date (yyyymmdd) (*)
<b>DUTC</b>	UTC Date (yyyymmdd) (*)
<b>GPSD</b>	GPS - UTC time deviation, in seconds
<b>GPST</b>	GPS time in week, in seconds (*)
<b>GPSW</b>	GPS time week number
<b>TP</b>	Local Time, in seconds (*)
<b>TUTC</b>	UTC Time, in seconds (*)

(\*) : Interpolated variable

### □ Position Data

<b>L84</b>	WGS84 Latitude, in radians (**)
<b>G84</b>	WGS84 Longitude, in radians (**)
<b>H84</b>	Altitude above WGS84 ellipsoid, in meters (**)
<b>L84AVR</b>	Averaged WGS84 Latitude, in radians
<b>G84AVR</b>	Averaged WGS84 Longitude, in radians
<b>H84AVR</b>	Averaged altitude above WGS84 ellipsoid, in meters
<b>X84</b>	ECEF WGS84 Position, X coordinate, in meters (**)
<b>Y84</b>	ECEF WGS84 Position, Y coordinate, in meters (**)
<b>Z84</b>	ECEF WGS84 Position, Z coordinate, in meters (**)
<b>X84SD</b>	X component of standard deviation on ECEF WGS84 average position, in meters
<b>Y84SD</b>	Y component of standard deviation on ECEF WGS84 average position, in meters
<b>Z84SD</b>	Z component of standard deviation on ECEF WGS84 average position, in meters

(\*\*) : Extrapolated variable except for accurate solution

## □ Speed Data

<b>COG</b>	Course Over Ground, in radians
<b>P</b>	Clock Offset, in seconds
<b>PS</b>	Clock drift speed, in seconds per second
<b>SOG</b>	Speed Over Ground, in meters/second
<b>XS</b>	Speed East component, in meters/second
<b>YS</b>	Speed North component, in meters/second
<b>ZS</b>	Speed vertical component, in meters/second

## □ Position status

<b>CRE[i]</b>	Residuals, in meters (i: channel number, 1 to 16)				
<b>CRS[i]</b>	Residuals speed, in meters/second (i: channel number, 1 to 16)				
<b>DRMS</b>	Deviation Root Mean Square, in meters (–1: not available)				
<b>DRT</b>	Time elapsed since last fix, in seconds (if <b>MODE=1</b> )				
<b>FIXS</b>	Position status: <table> <tr> <td><b>1</b></td> <td>"GOOD" (computed)</td> </tr> <tr> <td><b>0</b></td> <td>"BAD" (not computed)</td> </tr> </table> <p>The string within quotation marks can be issued using the TXT:FIXS combination</p>	<b>1</b>	"GOOD" (computed)	<b>0</b>	"BAD" (not computed)
<b>1</b>	"GOOD" (computed)				
<b>0</b>	"BAD" (not computed)				
<b>GDOP</b>	Geometrical DOP (–1: not available)				
<b>HDOP</b>	Horizontal DOP (–1: not available)				
<b>TDOP</b>	Time DOP (–1: not available)				
<b>PDOP</b>	Position DOP (–1: not available)				
<b>VDOP</b>	Vertical DOP (–1: not available)				
<b>LPME</b>	Lines of position mean error, in meters (–1: not available)				

**M[ ]** Fix Variance/Covariance Matrix, in meters<sup>2</sup>

- M[1]**= Latitude variance
- M[2]**= Latitude/longitude covariance
- M[3]**= Longitude variance
- M[4]**= Latitude/altitude covariance
- M[5]**= Longitude/altitude covariance
- M[6]**= Altitude variance
- M[7]**= Latitude/clock covariance
- M[8]**= Longitude/clock covariance
- M[9]**= Altitude/clock covariance
- M[10]**= Clock variance

**MODE** Position processing mode:

- 0** "H" (Hold)
- 1** "DR" (Dead Reckoning)
- 2** "T" (Time)
- 3** "3T" (3D+T)
- 4** "3" (3D)
- 5** "2T" (2D+T)
- 6** "2" (2D)

The string within quotation marks can be issued using the  
TXT:MODE combination (operator:variable)

**NSVR** or **NSVR1** Count of SVs received on L1

**NSVR2** Count of SVs received on L2

**NSVU** Count of SVs used (List of PRN numbers of SVs used)

The list can be issued using the TXT:NSVU combination

**QUAL** Fix confidence level

- 0..3**= Straight GPS
- 4..5**= 2D+T DGPS
- 6..9**= 3D+T DGPS
- 10..13**= EDGPS
- 14..19**= KINE

**SA** Selective Availability flag:

**1** "ON" (SA on)

**0** "OFF" (SA off)

The string within quotation marks can be issued using the  
TXT:SA combination

**SVU[i]** PRN of the SVs involved in the position processing (i:  
channel number, 1 to 16).

## □ External Integrity Control

**INTEGAP** Indicates whether External integrity control is used. Must be combined with the TXT operator. The possible output strings are then the following (mentioned within quotation marks):

"YES" (external integrity control used)

"NO" (external integrity control not used)

**INTEGID** Identification of the source of integrity data (GEO PRN if Integrity Control from WAAS, -1 if no integrity control)

**INTEGST[i]** Integrity control result (i: channel number, 1.. 16):

0 (unmonitored)

1 (unhealthy)

2 (healthy)

**UDRE[i]** Value of UDRE for each channel (i: chan. No., 1.. 16).

## □ GNSS Status

**CAZ[i]** SV azimuth, in radians (i: channel number, 1 to 16)

**CEL[i]** SV elevation, in radians (i: channel number, 1 to 16)

**CIO[i]** Ionospheric correction, in meters (i: channel number, 1 to 16)

**CRD[i]** Ascending or descending satellite, in radians (i: channel number, 1 to 16):

0 (descending)

1 (ascending)

**CTR[i]** Tropospheric correction, in meters (i: channel number, 1 to 16)

**CSB[i]** C/N0 level, in dB (i: channel number, 1 to 16)

- CST[i]** Channel status (i: channel number, 1 to 16):
- 0** (free channel)
  - 1** (channel used, SV received on this channel)
  - 2** (channel used, no SV received on this channel or SV lost)
  - 3** (same as **1** + ephemeris received on this channel)
  - 4** (same as **3** + channel involved in fix processing)
  - 5** (channel searching for SV)
  - 6** (channel deselected manually)
  - 7** (channel rejected by WAAS integrity control)
- CSV[i]** PRN of the SV received on that channel (i: channel number, 1 to 16).

#### □ DGPS Status

- CCS[i]** or **CCS1[i]** L1 DGPS corrections availability (i: channel number, 1 to 16)
- 0** (not available)
  - 1** (available)
- CCS2[i]** L2 DGPS corrections availability (i: channel number, 1 to 16)
- 0** (not available)
  - 1** (available)
- DAGE** Age of DGPS corrections, on average, in seconds

- DFT** Type of DGPS used:
- 1 "HOLD"
  - 0 "GPS"
  - 1 "DGPS1"
  - 2 "DGPS2"
  - 3 "DGPS3"
  - 4 "DGPS4"
  - 5 "MDGPS"
  - 6 "EDGPS"
  - 7 "<blank>" (Unassigned)
  - 8 "KINE" (KART)
  - 9 " EDGP1" (KART initialization)
  - 20 "GNOS"
  - 25 "WDGPS"
  - 31 "LRK"
  - 32 "EDGP2" (LRK initialization)
  - 33 "WL" (LRK WL)
  - 34 "EDGP2" (LRK WL initialization)

The string within quotation marks can be issued using the TXT:DFT combination.

**DRCV** DGPS reception quality

**DS** DGPS Status:

- 0 "NOFIX" (no position solution)
- 1 "AUTO" (straight GPS solution)
- 2 "DGPS" (DGPS solution)
- 3 "PREC" (for future use)
- 4 "RTK" (KART, LRK or LRK WL solution)
- 5 "FRTK" (EDGPS solution)
- 6 "ESTIM" (dead reckoning)
- 7 "MANU" (Manual input mode)
- 8 "SIMUL" (Simulation mode)

The string within quotation marks can be issued using the TXT:DS combination

**DSTA** Identification of the DGPS station used

## □ Current Position

<b>DATM</b>	Identification of the transformation system used: <b>0</b> "WGS84" <b>1..9</b> "<datum name>" The string within quotation marks can be issued using the TXT:DATM combination (10 characters max.)
<b>EPAVR</b>	Averaged Easting, from PVT <sup>(1)</sup> processing
<b>EPSD</b>	Standard deviation of average Easting, from PVT <sup>(1)</sup> processing
<b>HPAVR</b>	Averaged user altitude, in the chosen mode, in meters
<b>HPSD</b>	Standard deviation of averaged user altitude, in the chosen mode, in meters.
<b>LAT</b>	Latitude, from PVT <sup>(1)</sup> processing, expressed on the datum of the transformation system used, in radians <sup>(2)</sup>
<b>LON</b>	Longitude, from PVT <sup>(1)</sup> processing, expressed on the datum of the transformation system used, in radians <sup>(2)</sup>
<b>NP</b>	Northing, from PVT <sup>(1)</sup> processing, expressed in the transformation system used <sup>(2)</sup>
<b>EP</b>	Easting, from PVT <sup>(1)</sup> processing, expressed in the transformation system used <sup>(2)</sup>
<b>HP</b>	User altitude, expressed in the chosen mode, in meters <sup>(2)</sup>
<b>NPAVR</b>	Averaged Northing, from PVT <sup>(1)</sup> processing
<b>NPSD</b>	Standard deviation of averaged Northing, from PVT <sup>(1)</sup> processing
<b>PGPSW</b>	GPS week number, from PVT <sup>(1)</sup> processing
<b>PGPST</b>	GPS time in week, from PVT <sup>(1)</sup> processing

<sup>(1)</sup> PVT : French acronym for Position-Speed-Time

<sup>(2)</sup> Extrapolated variable (except if an accurate solution)

□ **Kinematic Data**

<b>AGESOL</b>	Time elapsed since last solution found
<b>EPKASD</b>	Easting uncertainty (DRMS), accurate solution
<b>NPKASD</b>	Northing uncertainty (DRMS), accurate solution
<b>HPKASD</b>	Altitude uncertainty (DRMS), accurate solution
<b>EPKRSD</b>	Easting uncertainty (DRMS), real-time solution
<b>HPKRSD</b>	Altitude uncertainty (DRMS), real-time solution
<b>NPKRSD</b>	Northing uncertainty (DRMS), real-time solution
<b>MKIN</b>	Kinematic Mode: <b>1</b> (EDGPS) <b>2</b> (INIT KART) <b>3</b> (INIT LRK) <b>4</b> (KART) <b>5</b> (LRK)
<b>NBSOL</b>	Count of solutions found
<b>NSVUK</b>	Count of satellites used
<b>TINIT</b>	Time elapsed since initialization was started (in seconds)

## □ Station Data

(i= count of stations, 1 to 4)

<b>DSTSTA[i]</b>	Distance between reference station and mobile, in meters
<b>NIVUHF[i]</b>	UHF reception level, in dB
<b>REFUHF[i]</b>	Station ID
<b>UBUHF[i]</b>	DC voltage delivered by the battery used at the station, in volts
<b>ESTA[i]</b>	Easting of reference station
<b>NSTA[i]</b>	Northing of reference station
<b>HSTA[i]</b>	Altitude of reference station expressed on the user's geodetic system, in meters
<b>GSTA[i]</b>	WGS84 longitude of reference station, in radians
<b>LSTA[i]</b>	WGS84 latitude of reference station, in radians
<b>X84STA[i]</b>	WGS84 ECEF X coordinate of reference station's antenna, in meters
<b>Y84STA[i]</b>	WGS84 ECEF Y coordinate of reference station's antenna, in meters
<b>Z84STA[i]</b>	WGS84 ECEF Z coordinate of reference station's antenna, in meters

## □ "Intermediate" Points Data

<b>DAKA</b>	Age of differential corrections involved in accurate solution, in seconds
<b>DAKR</b>	Age of differential corrections involved in real-time solution, in seconds
<b>DBKA</b>	Beacon ID involved in accurate solution
<b>DBKR</b>	Beacon ID involved in real-time solution
<b>DKA</b>	UTC date of accurate solution (yyyymmdd)
<b>DKR</b>	UTC date of real-time solution (yyyymmdd)
<b>DQKA</b>	Quality of differential reception in accurate solution (0..9)
<b>DQKR</b>	Quality of differential reception in real-time solution (0.. 9)

**DTKA** Accurate solution type:

- 0 (GPS)
- 1 (DGPS1)
- 2 (DGPS2)
- 3 (DGPS3)
- 4 (DGPS4)
- 5 (MDGPS)
- 6 (EDGPS)
- 7 (KINEA)
- 8 (KINER)
- 20 (GNOS)
- 25 (WDGPS)

**DTKR** Real-time solution type

- 0 (GPS)
- 1 (DGPS1)
- 2 (DGPS2)
- 3 (DGPS3)
- 4 (DGPS4)
- 5 (MDGPS)
- 6 (EDGPS)
- 7 (KINEA)
- 8 (KINER)
- 20 (GNOS)
- 25 (WDGPS)

NOTE: DTKA & DTKR cannot be combined with TXT

**FDRKA** DRMS of accurate solution, in meters

**FDRKR** DRMS of real-time solution, in meters

**GKA** WGS84 Longitude, accurate solution, in radians

**LKA** WGS84 Latitude, accurate solution, in radians

**ZKA** Altitude from WGS84 ellipsoid, accurate solution, in meters

**GKR** WGS84 Longitude, real-time solution, in radians

**LKR** WGS84 Latitude, real-time solution, in radians

**ZKR** Altitude from WGS84 ellipsoid, real-time solution, in meters

**HDKA** Accurate solution HDOP

**HDKR** Real-time solution HDOP

**NKA** Count of satellites used in accurate solution

**NKR** Count of satellites used in real-time solution

**QKA** Accurate solution quality figure (0.. 9)

**QKR** Real-time solution quality figure (0.. 9)

<b>SKA</b>	Accurate solution status: 0 (invalid) 1 (valid)
<b>SKR</b>	Real-time solution status: 0 (invalid) 1 (valid)
<b>TKA</b>	UTC time of accurate solution (no extrapolation made)
<b>TKR</b>	UTC time of real-time solution (no extrapolation made)

The following variables are still in use for compatibility with configuration files of the E2 type. The definition of the suffix [i] remains unchanged (compared to the former version of Conf Pack), as recalled below:

i=1→ MDGPS point  
i=2→ EDGPS point  
i=3→ KARTA point  
i=4→ KARTR point

<b>D[i]</b>	UTC Date (yyyymmdd)
<b>DA[i]</b>	Age of differential corrections, in seconds
<b>DT[i]</b>	Type of DGPS used:
	0 (GPS)
	1 (DGPS1)
	2 (DGPS2)
	3 (DGPS3)
	4 (DGPS4)
	5 (MDGPS)
	6 (EDGPS)
	7 (KINEA)
	8 (KINER)
	20 (GNOS)
	25 (WDGPS)

<b>DB[i]</b>	Beacon ID
<b>DQ[i]</b>	Quality of differential reception (0.. 9)
<b>HD[i]</b>	HDOP
<b>FDRM[i]</b>	DRMS, in meters.
<b>L[i]</b>	WGS84 Latitude, in radians
<b>G[i]</b>	WGS84 Longitude, in radians
<b>Z[i]</b>	Altitude from WGS84 ellipsoid, in meters
<b>N[i]</b>	Count of satellites used
<b>Q[i]</b>	Quality figure: <b>Q[1]= 0..9</b> <b>Q[2]= 10..13</b> <b>Q[3]= 14..19</b> <b>Q[4]= 14..19</b>
<b>S[i]</b>	Position solution status: <b>0</b> (invalid) <b>1</b> (valid)
<b>T[i]</b>	UTC Time

## □ Anomalies & Alarms

<b>ALARM[i]</b>	Status of alarm i, where i: alarm number (1 to 128): <ul style="list-style-type: none"> <li><b>0</b> (no alarm or anomaly)</li> <li><b>1</b> (status positioned to "active", alarm or anomaly still persists)</li> <li><b>2</b> (status still "active" but cause of alarm or anomaly has disappeared; alarm not acknowledged yet)</li> </ul>
<b>CALARM[i]</b>	Extra-code pertaining to anomaly or alarm (i: alarm number, 1 to 128)
<b>DALARM[i]</b>	Day when alarm or anomaly first occurred (i: alarm number, 1 to 128) DALARM[i]= 0..31
<b>FALARM[i]</b>	Time when alarm or anomaly first occurred (i: alarm number, 1 to 128) FALARM[i]= 0..86399 seconds
<b>LALARM[i]</b>	Time when alarm or anomaly last occurred (i: alarm number, 1 to 128) LALARM[i]= 0..86399 seconds (current time if alarm or anomaly still persisting)
<b>SALARM</b>	Number of active alarms or anomalies (128 max.) Combined with the TXT operator, provides the status of each of the alarms or anomalies in the form of a string of 32 ASCII-encoded hex characters (the least significant bit corresponds to Alarm No. 1, the most significant bit to Alarm No. 128). Any bit =1 means that the corresponding alarm is active.

- **Families of anomalies & alarms**

Alarms & anomalies are classified into families, depending on the probable origin of error. The table below summarizes the 11 different families

Family number	Origin	Label
00	No errors	NONE
01	Core Module	CM
02	Application Configuration	CONFIG
03	DGPS	DGPS
04	Coordinate system	GEODY
05	Input/Output	I/O
06	User Interface	IHM
07	Power supply/interface	INTRF
08	Navigation	NAVIG
09	Fix processing	POSIT
10	System	SYSTEM
11	Data link	TD

- **Classification**

Alarms & anomalies are classified into four categories depending on gravity:

- Simple information reported to user (code 1)
- Warnings (code 2). The receiver operates correctly but might be disturbed by the reported error.
- Serious errors (code 3). The receiver operates but delivers erroneous results.
- Fatal errors (code 4). The receiver can no longer operate correctly. You should re-initialize the receiver.

- Codes List

No.	Family	Gravity	Meaning	Label (for receivers fitted with display screens)
01	1 - CM	4	GPS not ready	GPS not ready
02	1 - CM	4	RAM error	RAM anomaly
03	1 - CM	3	Processor error	Processor anomaly
04	1 - CM	3	Timing error	Timing anomaly
05	1 - CM	3	Program memory error	Program memory anomaly
06	1 - CM	3	Data memory error	Data memory anomaly
07	1 - CM	3	Reception circuit error	Reception circuit anomaly
08	1 - CM	3	Correlation circuit error	Correlation circuit anom
09	1 - CM	4	C/A-P/YCommunication error	Communication C/A - P/Y
10	1 - CM	2	Non-used output data	Unread output datas
11	1 - CM	2	Non-identified input data	Unknown input datas
12	1 - CM	2	Non-complying input data	Bad input datas
13	1 - CM	1	GPS data error	GPS data anomaly
14	1 - CM	1	DPRAM error	DPRAM anomaly
15	1 - CM	1	Erroneous message length	Bad message length
16	1 - CM	1	EEPROM error	EEPROM anomaly
17	1 - CM	3	Trigger time-tag error	Datation Trigger Error
18	2 - CONFIG	4	Config integrity altered	Bad config integrity
19	2 - CONFIG	3	Config parameter error	Config parameter error
20	3 - DGPS	3	No transmitting station	No sending dtation
21	3 - DGPS	3	CPU-DIFF overflow	CPU-DIFF overflow
22	4 - GEODY	3	Coordinate system error	Geodesy error
23	5 - I/O	2	Unknown remote command	Unknown telecommand
24	5 - I/O	2	Non-complying param. format	Bad parameter format
25	5 - I/O	2	Non-complying format block	Bad block format
26	5 - I/O	3	Command checksum error	Bad telecommand checksum
27	5 - I/O	3	DPR1 Input error	Input error on DPR1
30	5 - I/O	3	Non-complying LRK block	Bad LRK block on port D
31	5 - I/O	3	Port A Overflow	Overflow PortA
32	5 - I/O	3	Port B Overflow	Overflow PortB
33	5 - I/O	3	Port C Overflow	Overflow PortC
34	5 - I/O	3	Port D Overflow	Overflow PortD
35	5 - I/O	2	Format interpretation error	Format interpretation
36	5 - I/O	3	Port A Input error	Input error PortA

37	5 - I/O	3	Port B Input error	Input error PortB
38	5 - I/O	3	Port C Input error	Input error PortC
39	5 - I/O	3	Port D Input error	Input error PortD
40	6 - IHM	2	User Interface error	IHM error
41	7 - INTRF	4	Xilinx Load	Xilinx Load
42	7 - INTRF	4	Low Power Command	Low Power Command
43	7 - INTRF	3	PCMCIA overflow	PCMCIA overflow
44	7 - INTRF	3	File system full	File system full
45	7 - INTRF	2	PC board not recognized	Unknown PC card
46	7 - INTRF	4	Battery voltage too low	Battery voltage
47	7 - INTRF	3	Corrupted file system	Corrupted file system
48	7 - INTRF	4	First antenna error	First antenna error
52	7 - INTRF	3	File-opening error	File open error
53	7 - INTRF	3	File-closing error	File close error
54	7 - INTRF	3	File-writing error	File write error
55	7 - INTRF	3	File-reading error	File read error
56	8 - NAVIG	3	Navigation error	Navigation error
57	9 - POSIT	1	No differential reception	No differential reception
58	9 - POSIT	1	Too few Svs	Too few Svs
59	9 - POSIT	1	GDOP too high	GDOP too high
60	9 - POSIT	3	LPME too high	LPME too high
61	9 - POSIT	1	No fix computation	No fix computation
62	10 - SYSTM	2	Frozen display	Frozen display
63	10 - SYSTM	2	Unknown option code	Unknown option code
64	10 - SYSTM	4	C3 codes checksum error	Bad checksum codes C3
65	10 - SYSTM	2	Log checksum error	Bad log checksum
66	10 - SYSTM	4	Real-time clock	Real Time Clock
67	10 - SYSTM	4	Dual-port RAM	Dual port RAM
68	11 - SYSTM	4	Core module not ready	Core module not ready
69	10 - SYSTM	4	Program checksum error	Bad program checksum
70	10 - SYSTM	4	Data memory test	Data memory test
71	10 - SYSTM	4	Coprocessor test	Coprocessor test
72	10 - SYSTM	4	Serial port error	Error on serial port
73	10 - SYSTM	3	IDE file system mounting error	File system IDE mount err
74	10 - SYSTM	1	Option lending period has now elapsed	Option no more available
75	10 - SYSTM	4	Max. number of tries reached	Max option tries reached
76	10 - SYSTM	1	Journal full	Full anomalies journal
77	10 - SYSTM	3	CMOS date failed	CMOS date Failed

78	11 - TD	4	Selftest error	Autotest error
79	11 - TD	3	Erroneous blocks	Bad blocks
80	11 - TD	1	Count of restarts since selftest	Nb restart since autotest
81	10 - SYSTM	3	Mailbox overflow	Mailbox overflow
82	10 - SYSTM	3	PCMCIA removed	PCMCIA removed
83	5 - I/O	3	DPR1 Overflow	Overflow DPR1
86	POSIT	3	Kinematic initialization	Kinematic initialization
87	10 - SYSTM	3	Line in CM file too long	Line file CM too long
88	10 - SYSTM	3	CM identification error	Identification CM error
89	10 - SYSTM	3	CM card file inconsistency	Incoherence file card CM
90	10 - SYSTM	3	Flash CM clear error	Clear flash CM error
91	10 - SYSTM	3	CM program loading error	CM program file load error
92	6 - IHM	3	Kinematic mode change	Kinematic mode change
93	6 - IHM	3	No position computed	No computed position
94	7 - INTRF	4	Binary file inconsistency	Binary file incoherent
95	10 - SYSTM		RTC send error	RTC send error
96	4 - GEODY		Altimetry error	Altimetry error
97	10 - SYSTM		Application software Re-load error	Appli soft reload error
98	10 - SYSTM	4	Protected memory error	Back memory failure
99	10 - SYSTM	4	Stack overflow	Stack overflow
100	5 - I/O	2	Error on port A in reception	Receiving error on port A
101	5 - I/O	2	Error on port B in reception	Receiving error on port B
102	5 - I/O	2	Error on port C in reception	Receiving error on port C
103	5 - I/O	2	Error on port D in reception	Receiving error on port D
104	10 - SYSTM	1	Unexpected software error	Software error

In case of a reported code number not mentioned in the above list, please contact THALES Navigation for more information.

## ❑ Other Variables

<b>DAVR</b>	Averaging duration
<b>DENR</b>	Time (in s) elapsed since beginning of data recording on PC card ("0" if no recording in progress)
<b>MAVR</b>	Averaging process mode (only relevant to a transmitting station) <b>0</b> At initialization <b>1</b> Averaging process in progress <b>2</b> Averaging process complete
<b>MSL</b>	Mean Sea Level (Distance deviation between user geoid and WGS84 ellipsoid). Forced to 9999.0 m if user altitude cannot be determined)
<b>NBAVR</b>	Count of values involved in the averaging process
<b>NBCOR</b>	Count of computed corrections (only relevant to a station computing corrections)
<b>PCA</b>	Memory space currently available on PC card (PCMCIA), in bytes
<b>PCS</b>	Total memory space on PC card, in bytes
<b>UB</b>	Battery voltage
<b>ULA, ULB</b> <b>ULC, ULD</b>	
<b>ULP</b>	User labels on ports A to D, and P (PC card) (initialized by the TR command). Must be combined with the TXT operator
<b>UV[i]</b>	User variables (i: 1 to 10)

♣



## 7. Review of the Conf Pack Commands

### File menu

The File menu offers the following commands:

- New** Creates a new configuration file or template
- Open..** Opens an existing configuration file or template
- Close** Closes the active configuration file or template
- Save** Saves the active configuration file or template
- Save As...** Saves the active configuration as a .cfg file, a .txt file or a template (.tpl file)
- Print** Prints the content of the currently active pane. If the Select Pane is active, then the configuration file as such is printed (i.e. a list of receiver-interpretable command lines)
- Print Preview** Displays the content of the currently active pane as it would appear printed. If the Select Pane is active, then the configuration file as such is displayed (i.e. a list of receiver-interpretable command lines)
- Print Setup...** Selects a printer and printer connection
- {File list}** Names of the configuration files last opened using Conf Pack
- Exit** Exits Conf Pack

## Edit menu

The Edit menu offers the following commands:

- Cut** Moves the current selection to the clipboard
- Copy** Copies the current selection to the clipboard
- Paste** Pastes the clipboard content where the insertion point is positioned.

## View menu

The **View** menu offers the following commands:

- Toolbar** Shows/hides the toolbar
- Status bar** Shows/hides the status bar

## Transfer menu

The **Transfer** menu offers the following commands:

- Read Current** Reads the current configuration file from the attached receiver
- Read Initial** Reads the initial configuration file from the attached receiver
- Write Initial** Writes an initial configuration into the attached receiver

## Tools menu

The Tools menu offers the following commands:

- Win Comm** Starts the Win Comm software
- Unprotect** Launches the Unprotect Software Component
- Geoids** Launches the Geoids module
- Options** Allows you to display/change the options of Conf Pack

## Window menu

The Window menu offers the following commands:

- Cascade** Arranges all the open windows in cascade configuration
- Tile**
- Horizontally** Places all the open windows side by side in the horizontal direction
- Tile Vertically** Places all the open windows side by side, in the vertical direction
- Close All** Closes all the open configuration files
- {File list}** The names of the currently open configurations are listed here to let the user choose the active configuration directly from this menu

## Help menu

The Help menu offers the following commands, which provide you assistance with this application:

**Contents** Displays the opening screen of Help (first page of PDF help document)

**About**

**Conf Pack** Displays the version number of Conf Pack. ♣

## Index

- "
- "Intermediate" points data (variables),  
6-40
- 3**
- 3SPack, 2-3, 3-6, 3-10
- A**
- Add Request** button, 4-14
- Almanacs**, 5-15
- Altitude computation mode, 5-5
- Altitude, offset, 5-5
- Anomalies & alarms  
list, 6-46
- Appearance, 5-18
- Auto Configure**, 2-15
- Automatic File Name** option, 4-14
- Autonomous QC**, 5-10
- AUTPW**, 5-26
- B**
- Band. 1**, 5-28
- Beacon ID**, 5-28, 5-30
- Beacons, 5-28  
Create, 3-14  
Range, 3-15
- Bearing**, 5-24
- BEARING**, 5-23
- Bin directory, 1-4
- Bit flow, 5-16
- C**
- C3 code**, 5-28
- CAN**, 6-8
- CD-ROM, 1-2
- Central Meridian**, 5-4
- Central or North Lat**, 5-4
- Cfg directory, 1-4
- CHK**, 6-10
- Cmd directory, 1-4
- Command  
Add, 4-7, 4-8  
Delete, 4-8  
Load, 4-8  
Save, 4-8  
Send, 4-6
- Comment**, 5-2
- Communications, port settings, 5-11
- Computed Data, 5-12
- Control characters, 6-5
- Coord. System, waypoints**, 5-19
- Coordinate Systems, 5-3
- CRC**, 6-10
- Create  
Beacons, 3-13  
New configuration file, 3-1  
New template, 3-2  
Routes, 3-11  
Waypoint, 3-9
- Current configuration, 2-1
- Current Coord. System**, 5-5
- Current Position (variables), 6-38
- D**
- DAT**, 6-10

Default configuration, 2-1  
default template, 3-4  
**Delete Request** button, 4-14  
**Deselected SVs**, 5-6  
DGNSS data, 5-31  
DGPS reference station, position, 5-6  
DGPS Status (variables), 6-36  
Display Pane / Window, 4-16  
**Distance Unit**, 5-18  
dongle, 1-5

## E

Edit Pane, 2-5  
Editor table, 2-5  
    Cell types, 2-9  
    cells, 2-8  
    Editing instructions, 2-11  
    Status column, 2-8  
    top row, 2-8

**Encryption**, 5-28

**Ephemerides**, 5-15

Event Edge, 5-17

**External QC**, 5-10

External Quality Control Data  
(variables), 6-35

## F

**False Easting**, 5-4

**False Northing**, 5-4

**File Max Size** option, 4-10, 4-13

**Format**

    Computed data, 5-13  
    Create (for computed data outputs  
    & screens), 6-2  
    DGNSS Data, 5-33  
    GPS data, 5-15, 5-17

**Notation (fixed, free)**, 6-3

Pseudoranges, 5-15

Screen, 5-18

**Freq 1 (Hz)**, 5-28

## G

**GEO**, 5-1, 5-3, 5-9, 5-10, 5-34, 6-35,  
6-45, 6-46, 6-48

GNSS Status (variables), 6-35

**GPS C/P Filter**, 5-15

GPS Data, 5-15

Graphic Pane, 2-6

Grid, 3-5, 3-13

## H

*Hardware* protection, 1-5

**Health & A/S**, 5-15

**HEXA**, 6-10

**HOMING**, 5-23

## I

**IF**, 6-11

Initial configuration, 2-1

**Iono-UTC**, 5-15

## K

**KART\_UHF**, 5-33

Kinematic data (variables), 6-39

## L

**Language**, 5-18

**Lat Long Format**, 5-18

license file, 1-1

Local date, 5-7

Local time, 5-7  
Log data from receiver, 4-9  
**LRK\_UHF, 5-33**

## M

Macros, 6-1, **6-13**

- ALM, 6-15
- DTM, 6-18
- GGA, 6-19
- GLL, 6-21
- GRS, 6-23
- GSA, 6-24
- GST, 6-25
- GSV, 6-26
- RMC, 6-27
- VTG, 6-29
- ZDA, 6-30

**MANPW, 5-26**

**Maximum Dop, 5-10**

**Minimum elevation, 5-6**

Mobile receiver, position for LRK  
initialisation, 5-6

Mode

- Process cell and system cell, 5-8

Mode (DGNSS), 5-30

**Modulation, 5-28**

Move

- Map, 3-8

## N

NMEA0183, 6-1, 6-15, 6-18, 6-19, 6-21, 6-23, 6-24, 6-25, 6-26, 6-27, 6-29, 6-30

**North, 5-18**

## O

Operators, 6-6

Options

- Communications, Automatic, 2-14

- Communications, Manual, 2-15

- Screen type, 2-13

- Timeout, 2-13

- Viewing, on World Map, 3-21

**Output Mode**

- Computed data, 5-12

- DGNSS data, 5-32

- Pseudoranges, 5-14

## P

**Period (XMTR), 5-30**

Position Data (variables), 6-31

Position status (variables), 6-32

**POSITION, Navigation mode, 5-22**

**Power Mode, 5-26**

**PRC Time Out, 5-31**

Process cell, 5-8

**PROFILE, 5-24**

Program folder, 1-3

*Programmable GPS Recorder* option,  
4-12

**Proj. Kind, 5-3**

Pseudoranges, 5-14

## Q

Quality Control, 5-1, **5-10**

Quit Conf Pack, 3-22

## R

**Range, 5-28**

Raw directory, 1-4

- Recording indicator (sessions), 5-25
- Registration, 1-3
- Remove
  - template, 3-4
- Re-size
  - Display pane, 4-16
  - Map, 3-7, 3-8
  - Panes, 2-6
  - world map, 3-18
  - World Map, 3-19
- Restore
  - Port settings, 2-17
- Rotate globe, 3-18
- Routes, **5-21**
  - Create, 3-11
  - Delete, 3-12
- RTCM numeric, 5-33**

## S

- Saving port settings, 2-16**
- Scale or Ref Lat., 5-4**
- Select
  - Region on World Map, 3-20
- Select Pane, 2-5
- Select/unselect
  - modules and submodules, 2-5
  - Modules and submodules, 2-7
- Sessions
  - Description, 5-25
  - Sequencing, 5-26
- Set directory, 1-4
  - shortcut, 1-4
- Show/Hide
  - Modules and submodules, 2-7
- SIGN, 6-11**
- Simple GPS Recorder option, 4-10**
- Simulation, 2-12, 2-17

- Skew or South Lat., 5-4**
- Slot (XMTR), 5-30**
  - Software protection, 1-6
- Spaces (leading), 6-4
- Speed Data (variables), 6-32
- Speed Filter Time Constant, 5-7**
- Stanag, 5-5
- Station ID (RCVR), 5-30**
- Station Type, 5-33**
- SVAR!D, 5-33**
- System cell, 5-9

## T

- Templates, 3-3
- Time Data (variables), 6-31
- Time zone, 5-7
- Tpl directory, 1-4, 3-4
- TXT, 6-12**

## U

- Unit number, 4-2
- Update
  - Edit Pane, 2-5
- USERS\_DATA, 5-33**

## V

- Variable
  - terminology, 6-1
- Variables
  - Anomalies & alarms, 6-44
  - Exhaustive list, 6-31
  - tab, 2-17
- View
  - Open configuration file, 3-22

**W**

WAAS \ EGNOS Data, 5-35

Waypoints, **5-19**

    Create, 3-9

    Delete, 3-10

    Import, 3-10

*Win Comm*, 1-4, 4-1, 4-5, 4-6, 4-9,  
4-16, 7-3

**Working Mode**, 5-22

**Working Mode (sessions)**, 5-26

World Map Editor, 3-17

**Z**

**ZERO**, 6-12



ZAC de la Fleuriaye B.P. 433  
44474 CARQUEFOU Cedex

Tel +33 (0)2 28 09 38 00

Fax +33 (0)2 40 09 39 39

Web site: [www.thales-navigation.com](http://www.thales-navigation.com)

S.A. à Directoire et Conseil de surveillance  
au capital de 5 000 000 F

321 391 237 RCS Nantes